

# PHILIPS



フィリップス マルチグルーミングキット

品番 **QG3352**

**取扱説明書**

**保証書付**

保証書は、この取扱説明書の最終ページについておりますので販売店で記入を受けてください。

フィリップス マルチグルーミングキットをお買い上げいただき、まことにありがとうございます。長い間で愛用いただくために、ご使用前にこの取扱説明書をよくお読みのうえ、正しくお使いください。

また、お読みになった後は、お使いになる方がいつでも見られるところに必ず保管してください。

## 商品のご確認

商品をご確認ください



フルサイズトリマー




フルメタル  
細部トリマー




ミニ網刃  
シェーバー



鼻・耳毛  
トリマー

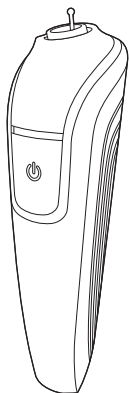

本体



ヒゲトリミング用  
コーム



スタプル用  
コーム




ヘアトリミング用  
コーム




くし



クリーニング  
ブラシ

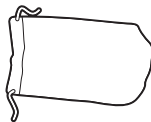

ソフトポーチ

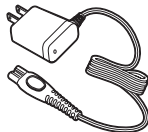

充電アダプタ  
(A00390)

※改良の為、仕様を予告なく変更することがあります。

# 目次

●はじめに	商品のご確認 ..... 1
	目次 ..... 2
	必ずお守りください ..... 3・4
	各部の名称 ..... 5・6
	用途／アタッチメントの組合せ ..... 7・8
●ご使用方法	充電の仕方 ..... 9
	基本的な使い方 ..... 10
	ヒゲトリミングの仕方 ..... 11～13
	ヘアカットの仕方 ..... 14～16
	鼻毛／耳毛カットの仕方 ..... 17
	お手入れ方法 ..... 18・19
●廃棄について	製品を廃棄するとき ..... 20
●英文解説	Guidance in English ..... 21～37
●困ったとき	故障かな?と思ったら ..... 39
●保証	保証とアフターサービス ..... 40
	仕様／お客様情報センター ..... 41
	無料修理規定 ..... 42
	保証書 ..... 最終ページ

# 必ずお守り ください

## 安全上のご注意

- ここに示した注意事項は、安全に関する重要な内容ですので、必ず守ってください。
- 誤った取扱いをしたときに想定される内容を「警告」と「注意」とに区別しています。

### ○絵表示について



記号は、「危険、警告、注意」を示します。  
図の中や近くに具体的な注意内容を示します。



**警告** 人が死亡または重傷を負う可能性が想定される内容。



**注意** 人が傷害を負う可能性及び物的損害のみの発生が想定される内容。

### ○絵表示の例



・記号は、してはいけない「禁止」を示します。図の中や近くに具体的な禁止内容(左図の場合は分解禁止)を示します。



・記号は、必ずしていただく「強制」を示します。図の中や近くに具体的な強制内容(左図の場合は電源プラグをコンセントから抜くこと)を示します。

## 警告



●本製品の電源を入れる前に、充電アダプタに表示されている電圧が、ご使用になる地域の電圧に適しているか確認してください。



●本体・充電アダプタや充電スタンドを水につけたり、水をかけたりしない。故障や、ショート・感電の原因になります。



●本体ならびに充電アダプタは改造しない。また、修理技術者以外の人は、分解したり修理をしない。火災、感電、ケガの原因となります。修理はお買い上げの販売店または小泉成器修理センターにご相談ください。



●充電アダプタを傷付けたり、電源コードを無理に曲げたり、引っ張ったり、ねじったり、たばねたり、重い物を載せたり、挟み込んだり、加工したりしない。電源コードが破損し、火災・感電の原因となります。



●お手入れの際は必ず充電アダプタの電源プラグをコンセントから抜く。また、濡れた手で抜き差ししない。感電やケガをすることがあります。



●乳幼児の手の届くところに本製品を置かないでください。



●充電アダプタが傷んだり、コンセントの差込みが緩いときは使用しない。感電・ショート・発火の原因になります。



●充電アダプタには変圧器が内蔵されています。充電アダプタを切り離して別のプラグに接続するのは危険ですのでおやめください。

## ⚠ 注意



●充電アダプタの電源プラグを抜くときは、電源コード部を持たずに必ず先端の電源プラグ部を持って引き抜く。感電やショートして発火することがあります。



●充電時以外は、充電アダプタをコンセントから抜く。ケガややけど、絶縁劣化による感電・漏電・火災の原因となります。



●刃は強く押さえない。破損して皮膚を傷つけることがあります。



●刃やコームなどの部品が破損または故障した場合は、本製品を使用しないでください。ケガの原因になります。交換の際には必ずフィリップス社製の同型部品と取り替えてください。




●電源コネクタ受部にピンやごみを付着させない。感電・ショート・発火の原因になります。

## 使用上のご注意


1. 本製品は、人の頭髪、ヒゲ、もみあげ、鼻毛、耳毛をカットするためのものです。それ以外の目的で使用しないでください。
2. 本製品の使用、充電、保管は室温5℃～35℃の環境下で行ってください。(尚、低温や高温で充電すると、充電電池の寿命が短くなります。)
3. 室温、気圧、湿度が急激に変化する状況でご使用になる場合は、本製品をその環境下で30分ほど慣らしてからお使いください。
4. 刃は、薄く仕上げてありますので、刃部を強く押さえたり、硬いものに当てないよう、ていねいに扱ってください。
5. 刃の清掃やコームの着脱は必ず電源スイッチを切ってから行ってください。
6. 切れ味が衰えてきたり、刃やコームなどの部品が破損した場合は、使用せず必ず新しい同型部品と交換してください。
7. 極端に高温または低温の場所、直射日光の当たる場所には保管しないでください。夏場、車の中に放置しないでください。
8. 乳幼児の手の届かないところに保管してください。
9. 本製品は、使用の都度、掃除をしてください。
10. 充電するときは、専用の充電アダプタを使用してください。
11. 充電アダプタが破損、故障した場合は、事故を避けるために必ずフィリップス社製の同型部品をお求めください。
12. 本製品は防水加工をしておりますが、水の中に浸けないでください。
13. 本製品をシャワー中に使用しないでください。

# 各部の名称


## 本体

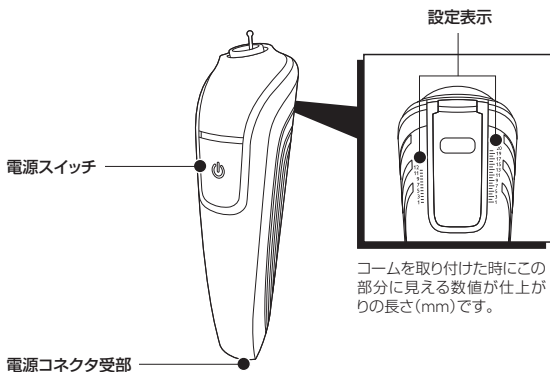

## 充電アダプタ ▶P.9

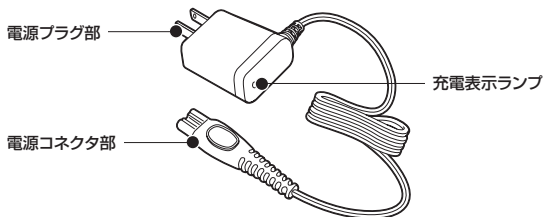

## アタッチメント



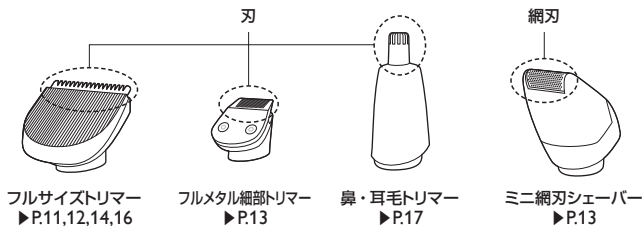


## コーム

ヒゲトリミング用コーム  
▶P.11

スタブル用コーム  
▶P.12


ヘアトリミング用コーム  
▶P.14



設定セレクト

ソフトポーチ ▶P.8

クリーニングブラシ ▶P.18

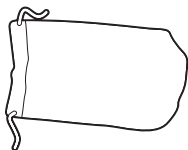


## 用途／アタッチメント の組合せ

本製品は、アタッチメントの組合せで、  
様々な用途にご使用いただけます。

### ヒゲのトリミング ▶ P.11




#### ●ヒゲの長さを整える

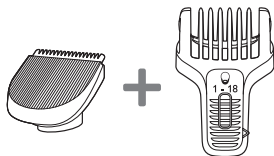

フルサイズトリマー

ヒゲトリミング用  
コーム

#### ●無精ヒゲを作る

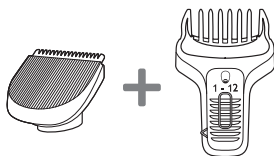

フルサイズトリマー

スタブル用  
コーム

#### ●ヒゲの細部の形を整える



フルメタル細部トリマー

#### ●ヒゲの輪郭を整える



ミニ網刃シェーバー






## 注意

- コームは、フルサイズトリマーにのみ装着可能です。その他のアタッチメントと組み合わせないでください。フルサイズトリマー以外のアタッチメントに装着すると破損の原因となります。

## ヘアカット ▶ P.14




- 髪のをさを整える



ヘアトリミング用  
コーム

- 首すじや、もみあげ、  
耳まわりのラインを  
整える



フルサイズトリマー

フルサイズトリマー

## 鼻毛／耳毛カット ▶ P.17




- 鼻毛や耳毛をカットする



鼻・耳毛トリマー

- 本体、アタッチメント、コームの収納

ソフトポーチを付属品の収納保管に  
お役立てください。

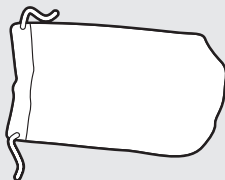


# 充電の仕方

お客様による充電電池の交換はできません。


この商品は通常約10時間充電です。

初めてお使いになるときや、長い間ご使用にならなかったときは、充電しないと使用できません。ご使用前に充電してください。初めての充電時間は約12時間です。本製品は完全に充電した状態で、約35分間で使用になれます。海外(100~240V)でのご使用も可能です。ただし、コンセントの形状や電圧など現地で充分お確かめのうえご使用ください。


- 1 充電する際には、電源スイッチを必ずOFFにしてください。

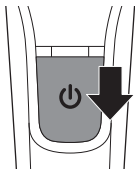

- 3 充電アダプタの電源プラグ部をコンセントに差し込みます。  
(満充電で約35分間使用できます。)

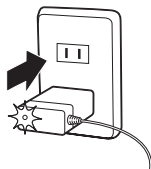

- 2 充電アダプタの電源コネクタ部を、本体の電源コネクタ受部に差し込みます。

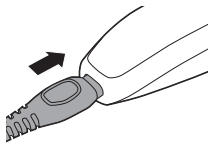

※充電が完了しても充電アダプタの表示ランプは点灯したままです。表示ランプの色は変わらず、点滅もしません。(充電完了表示はありません。)

## ポイント

- 充電中、テレビ等に雑音が入る場合、別のコンセントで充電してください。
- 充電中は本体・充電アダプタが多少熱くなりますが、異常ではありません。
- 充電電池の寿命は使用・保管などの状態により大きく変化します。
- ニッケル水素電池の特性上、電池容量を使い切らずに充電を繰り返すと使用可能時間が減少することがあります。これを避ける為、最後まで充電を使いきってから、充電することをおすすめ致します。



## 注意


- つぎ足し充電を行うと充電電池の寿命が短くなります。
- 当社専用の充電アダプタ以外での充電はしないでください。
- 長期間使用しない場合は、充電電池が過放電や液漏れして使えなくなることがあります。
- 本製品は交流式ではないため、コンセントにつないだまま使用はできません。

本製品は交流式ではないため、コンセント  
につないだまま使用はできません。

## 基本的な使い方

### 電源スイッチのON/OFF

電源スイッチを押し上げるとON、下げるとOFFになります。

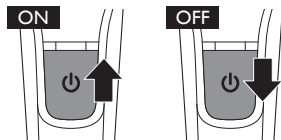

## アタッチメントの使い方

### アタッチメントの取り付け

アタッチメントを本体に差し込み(図①)、時計まわりにまわしてセットします(図②)。



### アタッチメントの取り外し


反時計まわりにまわして(図①)、アタッチメントを本体から引き抜きます(図②)。



## コームの取り付け、取り外し方


### コームの取り付け

本体の両側にあるガイド溝に沿って差し込みます。

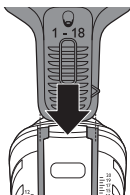

### コームの取り外し

設定セレクタを押し(図①)上に動かし(図②)本体から引き抜きます。

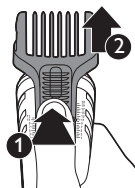

※この商品は、約10時間充電で約35分で使用ができます。

# ヒゲトリミング の仕方

## ヒゲの長さを整える

【使用するもの】




- 1 フルサイズトリマーを本体に差し込み(図①)、時計まわりにまわしてセットします(図②)。



- 4 電源スイッチをONにし、ヒゲの流れに逆らうように動かします。




- 2 ヒゲトリミング用コームを、本体の両側にあるガイド溝に沿って差し込みます。

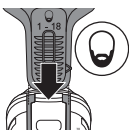

- 5 ヒゲトリミング用コームに多くのヒゲがついた場合は、ヒゲトリミング用コームを本体から取り外し、ヒゲを取り除いてください。

- 3 設定セレクトを押し(図①)上下に動かし(図②)お好みの長さ設定を選びます。本体の裏側にある設定表示に、選んだ設定が表示されます。



### ポイント

- ヒゲは部位によって毛の向きが異なります。毛の向きに合わせて、カットする方向(上下、左右)を変えてみてください。
- カットの仕上がりが均一になるように、ヒゲトリミング用コームの平らな部分を常に皮膚に密着させ、強くおしつけず、すべらずように動かしてください。

以下の表は、仕上がりの長さを設定別に表しました。

本製品を初めてお使いいただく際には、最長(18)の設定から始められる事をお勧めします。

設定	1	-	3	-	5	-	7	-	9	-	11	-	13	-	15	-	17	-
長さ(mm)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18

## 無精ヒゲを作る

【使用するもの】




- 1 フルサイズトリマーを本体に差し込み(図①)、時計まわりにまわしてセットします(図②)。



- 4 電源スイッチをONにし、ヒゲの流れに逆らうように動かします。




- 2 スタブル用コームを、本体の両側にあるガイド溝に沿って差し込みます。

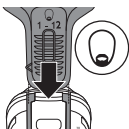

- 5 スタブル用コームに多くのヒゲがついた場合は、スタブル用コームを本体から取り外し、ヒゲを取り除いてください。

- 3 設定セレクトを押し(図①)上下に動かし(図②)お好みの長さ設定を選びます。本体の裏側にある設定表示に、選んだ設定が表示されます。



### ポイント

- ヒゲは部位によって毛の向きが異なります。毛の向きに合わせて、カットする方向(上下、左右)を変えてみてください。
- カットの仕上がりが均一になるように、スタブル用コームの平らな部分を常に皮膚に密着させ、強くおしつけず、すべらすように動かしてください。

以下の表は、仕上がりの長さを設定別に表しました。

本製品を初めてお使いいただく際には、最長(12)の設定から始められる事をお勧めします。

設定	1	-	3	-	5	-	7	-	9	-	11	12
長さ(mm)	1	2	3	4	5	6	7	8	9	10	11	12

## ヒゲの細部の形を整える


【使用するもの】



- 1 フルメタル細部トリマーを本体に差し込み（図①）、時計まわりにまわしてセットします（図②）。



- 2 電源スイッチをONにし、ヒゲの流れに逆らうように動かします。常に刃が皮膚にぴったり接触するようにしてください。



## ヒゲの輪郭を整える

【使用するもの】



- 1 ミニ網刃シェーバーを本体に差し込み（図①）、時計まわりにまわしてセットします（図②）。



- 2 電源スイッチをONにし、軽く皮膚に当てながら輪郭に沿ってシェービングします。



注意

- ミニ網刃シェーバーをご使用になる前に、網刃のやぶれがないか必ず確認してください。けがの原因になりますので、ミニ網刃シェーバーや網刃にやぶれがある場合は、使わないでください。網刃にやぶれが見られる場合は、必ず新しい網刃にお取り替えいただき安全にご使用ください。
- 網刃を皮膚に強く押しつけないでください。破損または故障の原因となります。

# ヘアカットの 仕方

## ヘアカットの準備

- 1 室内でカットするときは、下に新聞紙かビニールクロスなどを敷きます。
- 2 髪をカットしてもらう人の頭部が、カットする人の胸の高さにくるようにします。
- 3 首から肩にタオルをかけて、ケープをとめます。
- 4 髪を毛の流れに沿ってときます。




### 注意

- 洗髪後、髪を乾かした状態で使用してください。髪がぬれた状態でヘアカットしないでください。
- カット時は、整髪剤を使用しないでください。

## 髪を整える

### 【使用するもの】

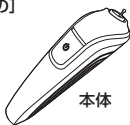

本体




フルサイズトリマー



ヘアトリミング用  
コーム

- 1 フルサイズトリマーを本体に差し込み (図①)、時計まわりにまわしてセットします (図②)。
- 2 ヘアトリミング用コームを、本体の両側にあるガイド溝に沿って差し込みます。

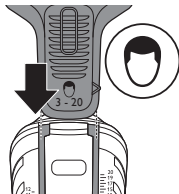


以下の表は、仕上がりの長さを設定別に表しました。


本製品を初めてお使いいただく際には、最長(20)の設定から始められる事をお勧めします。

設定	3	—	5	—	7	—	9	—	11	—	13	—	15	—	17	—	19	20
長さ(mm)	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20


- 3** 設定セレクトを押し(図①)上下に動かし(図②)お好みの長さ設定を選びます。本体の裏側にある設定表示に、選んだ設定が表示されます。

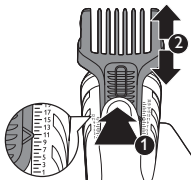

- 5** カットの仕上がりが均一になるように、ヘアトリミング用コームの平らな部分を常に皮膚に密着させ、強くおしつけず、すべらすように動かしてください。

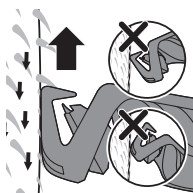

- 4** 電源スイッチをONにし、本体を軽く押えたままゆっくりと、髪の毛の流れに逆らうように動かします。

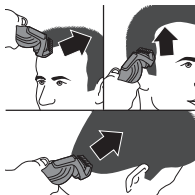

- 6** ヘアトリミング用コームに多くの毛がついた場合は、ヘアトリミング用コームを本体から取り外し、毛を取り除いてください。

**ポイント**

- 頭髪は部位によって毛の向きが異なります。毛の向きに合わせて、カットする方向(上下、左右)を変えてみてください。
- カットした部分と、次にカットする部分が重なるように動かすと、髪の毛の刈り残しがなくなります。





## 注意

- コームをはずして使用する時は、刃に触れた全ての毛がカットされますので、ご注意ください。

## 首すじや、もみあげのラインを整える

[使用するもの]



本体



フルサイズトリマー

- 1 フルサイズトリマーを本体に差し込み (図①)、時計まわりにまわしてセットします (図②)。



- 2 電源スイッチをONにし、下方向へなでるようにカットし、首すじや、もみあげのラインを整えます。



## 耳まわりのラインを整える

[使用するもの]



本体



フルサイズトリマー

- 1 耳にかかっている毛先をくして整えます。

- 2 フルサイズトリマーを本体に差し込み (図①)、時計まわりにまわしてセットします (図②)。



- 3 電源スイッチをONにし、刃の片側だけが毛先に触れるよう本体を傾け、毛先だけをカットします。耳の近くにヘアラインが来るようにします。



# 鼻毛／耳毛 カットの仕方

## 鼻毛／耳毛をカットする

[使用するもの]



+



鼻・耳毛トリマー

### 鼻毛


1 鼻孔内を必ず清潔にしておいてください。

2 鼻・耳毛トリマーを本体に差し込み(図①)、時計まわりにまわしてセットします(図②)。



3 電源スイッチをONにし、鼻・耳毛トリマーの先端を鼻孔内に挿入します。

4 鼻・耳毛トリマーの先端を回転させながら、鼻孔内へゆっくりと出し入れします。先端部分の片側を鼻孔内の皮膚にしっかりと押し当てると、くすぐったい不快感がなくなります。

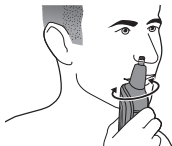

### 耳毛

1 耳を必ず清潔にしておいてください。耳垢も取り除いてください。


2 鼻・耳毛トリマーを本体に差し込み(図①)、時計まわりにまわしてセットします(図②)。



3 電源スイッチをONにし、鼻・耳毛トリマーの先端を耳に沿ってゆっくりと動かし、耳からはみ出している毛を除去します。



4 鼻・耳毛トリマーの先端を注意深く耳に挿入します。

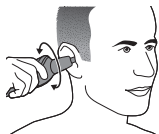

注意

●ケガをする恐れがあるため、鼻・耳毛トリマーの先端は5mm以上挿入しないでください。

※本製品はご使用のたびに掃除をしてください。

## お手入れ方法



### 注意

- 圧縮空気、研磨パッド、研磨洗浄剤、ペトロールやアセトンなどの刺激性の強い液体は絶対に使わないでください。
- 本製品に潤滑剤を使う必要はありません。
- 充電アダプタは絶対に濡らさないでください。
- ミニ網刃シェーバーは非常に精巧な部品のため、他のアタッチメントと同じ方法でお手入れせず、必ずP.19のお手入れ方法で掃除してください。

### 部品の取り替え

アタッチメントやコーム、刃、網刃が破損・摩耗した場合は、必ずフィリップス社製の同型部品とお取り替えください。

## 本体、アタッチメント、コームのお手入れ ※ミニ網刃シェーバー以外


1 掃除をする前に、電源スイッチがOFFになっていることを確かめてください。

5 めるま湯(40℃前後)または水で本体、アタッチメント、コームをそれぞれ洗います。

2 コームを取り外します。

3 アタッチメントを取り外します。

4 アタッチメント、コームにたまった毛をふきはらうかクリーニングブラシで掃除します。

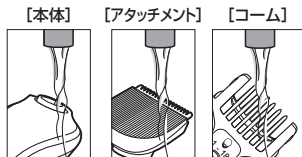



**注意**

●ミニ網刃シェーバーは非常に精巧な部品のため、取扱いには充分ご注意ください。

## ミニ網刃シェーバーのお手入れ


- 1 ミニ網刃シェーバーから上部を取り外します。



- 2 ミニ網刃シェーバー内部にたまった毛をふきはらいます。



- 3 ミニ網刃シェーバー上部をぬるま湯(40℃前後)または水で洗います。網刃を傷つけるおそれがあるため、ブラシを使って掃除しないでください。

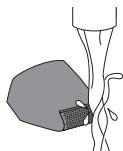

- 4 ミニ網刃シェーバー上部を十分に乾燥させた後、カチッと音がするまでミニ網刃シェーバー下部に押し込み、元の状態に戻します。



※お客様による充電電池の  
修理交換はできません。

## 製品を 廃棄するとき

### ニッケル水素電池のリサイクルについて

本製品はニッケル水素電池を使用しています。  
ニッケル水素電池はリサイクル可能な貴重な資源です。  
ご使用済みの製品の廃棄に際しては、ニッケル水素電池を取り出し、  
各自治体の処理方法に従い、リサイクル協力店にお持ちください。



Ni-MH





注意

- 製品を廃棄するとき以外は、絶対に本体を分解しないでください。
- 本体内部の金具は鋭いので、ご注意ください。

### 充電電池の取り外し方


電源スイッチをONにして、完全に動作しなくなるまで充電電池を放電させてから、行ってください。

- 1 コームとアタッチメントを本体から取り外します。
- 2 マイナスドライバーで電源ボタンを本体から取り外します。
- 3 マイナスドライバーで前面パネルを取り外します。
- 4 くぼみにマイナスドライバーを差し込み角度を変えながら力をかけ(図①)、本体内部を取り出します(図②)。
- 5 両側のフックをはずし、充電電池が見える状態にします。
- 6 ワイヤを切り離し、充電電池を本体から取り外します。



※充電電池を取り外した後は、通電しないでください。



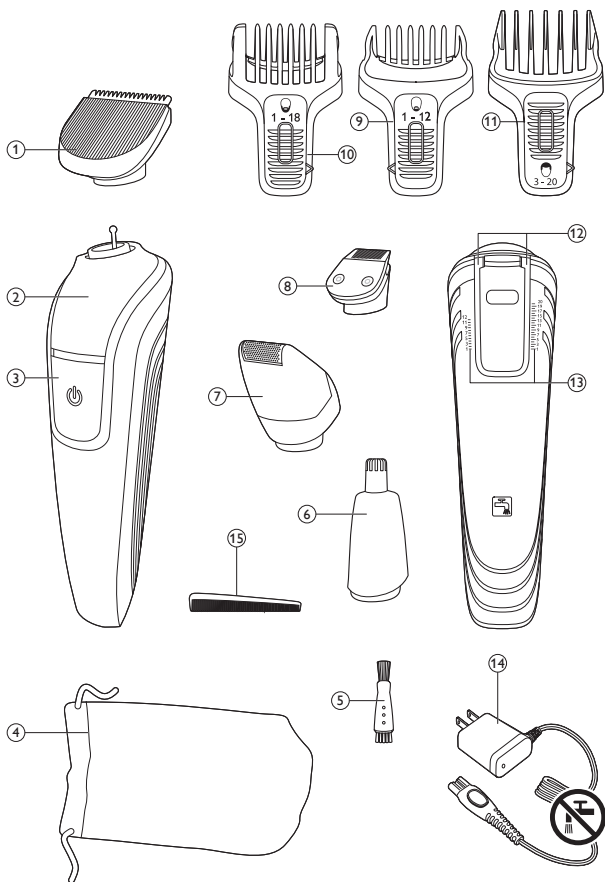

## Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

## General description (Fig. 1)

- 1 Beard trimmer
- 2 Handle
- 3 On/off slide
- 4 Pouch
- 5 Cleaning brush
- 6 Nose/ear trimmer
- 7 Mini-foil shaver
- 8 Full metal precision trimmer
- 9 Stubble comb
- 10 Beard comb
- 11 Hair clipper comb
- 12 Guiding grooves
- 13 Setting indicator
- 14 Adapter
- 15 Styling comb

## Important


Read this user manual carefully before you use the appliance and save it for future reference.

### Danger

- Keep the adapter dry.

### Warning

- Check if the voltage indicated on the adapter corresponds to the local mains voltage before you connect the appliance.

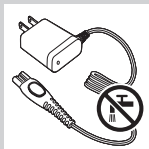



- The adapter contains a transformer. Do not cut off the adapter to replace it with another plug, as this causes a hazardous situation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance is not intended for use by children. Children should be supervised to ensure that they do not play with the appliance.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.
- Do not use the appliance in the bath or in the shower.

**Caution**

- Only use the adapter supplied.
- Use, charge and store the appliance at a temperature between 5°C and 35°C.
- Make sure the appliance is switched off and disconnected from the mains before you clean it under the tap.
- If the adapter is damaged, always have it replaced with one of the original type in order to avoid a hazard.
- If the appliance is subjected to a major change in temperature, pressure or humidity, let the appliance acclimatise for 30 minutes before you use it.
- Do not use the appliance if any of its parts is damaged or broken, as this may cause injury.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.



- Maximum noise level:  $L_c = 75\text{dB(A)}$

### Compliance with standards

- This appliance complies with the internationally approved IEC Safety regulations and can be safely cleaned under the tap.
- This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.


### Charging

Standard charging takes approximately 10 hours. When the appliance is fully charged, it has an operating time of up to 35 minutes.

*Note: You can get 45 minutes of cordless operating time when the appliance is charged overnight for 16 hours.*

- 1** Switch off the appliance before you charge it.
- 2** Insert the appliance plug into the appliance.
- 3** Put the adapter in the wall socket.
  - ▶ The charging light on the adapter goes on to indicate that the appliance is charging.

*Note: The charging light does not change colour and does not go out when the appliance is fully charged.*

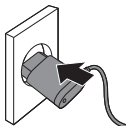

## Using the appliance

### Hair clipping

#### Preparing for hair clipping

- 1 Make sure that the head of the person whose hair you intend to cut is at the same level as your chest. This ensures that all parts of the head are clearly visible and within easy reach.

- 2 Comb the hair in the growth direction.

#### Hair clipping with hair clipping comb





- 1 Place the trimmer on the handle (1) and turn it clockwise to fix it (2).


- 2 Slide the hair clipping comb into the guiding grooves on both sides of the handle.

- 3 Press the setting selector (1) and slide the comb to the desired hair length setting (2). You can choose any setting between 3 and 20mm in steps of 1mm.

*Tip: Write down the hair length settings you selected to create a certain hairstyle as a reminder for future clipping sessions.*


- 4 Switch on the appliance.

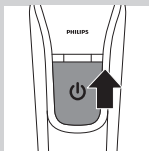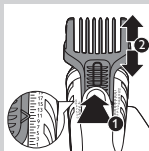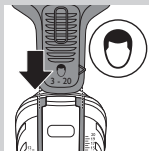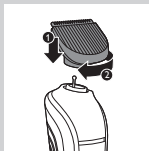

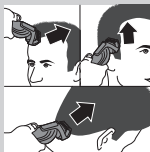

- 5 Move the appliance slowly and against the direction of hair growth. Press lightly.

*Note: Since hair grows in different directions, you need to move the appliance in different directions as well (upward, downward or across).*

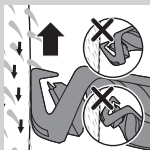

- 6 Always make sure that the flat part of the comb is in full contact with the scalp to obtain an even result.


Make overlapping passes over the head to ensure that you cut all the hair that needs to be cut.

*Note: When you trim for the first time, start at the highest setting (20mm) to familiarise yourself with the appliance.*


### **Hair clipping without hair clipping comb**

You can use the trimmer without comb to clip hair very close to the skin (to a length of 1mm) or to create contours.

Caution: Be careful when you clip without the comb because the trimmer removes every hair it comes in contact with.

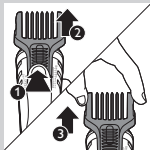


- 1 Press the setting selector (1) and slide the comb upwards (2). Then pull the comb off the appliance (3).
- 2 Before you start to contour the hairline around the ears, comb the hair ends over the ears.

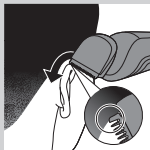

- 3** Tilt the appliance in such a way that only one edge of the trimmer touches the hair.

Only cut the hair ends. The hairline should be close to the ear.

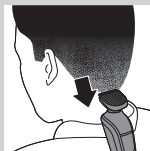

- 4** To contour the neckline and sideburns, turn the appliance and make downward strokes.


- 5** Move the appliance slowly and smoothly. Follow the natural hairline.

## Beard and stubble trimming


When you trim your beard for the first time, be careful. Do not move the trimmer too fast. Make smooth and gentle movements.

### Beard trimming with beard comb


- 1** Place the trimmer onto the handle (1). Turn the trimmer clockwise to fix it (2).

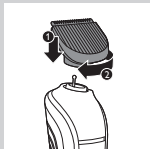


- 2** Slide the beard comb into the guiding grooves on both sides of the handle.

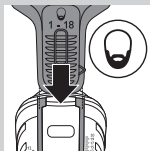

- 3** Press the setting selector (1) and slide the comb to the desired hair length setting (2). You can choose any setting between 1 and 18mm.

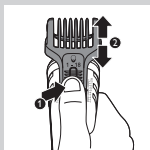

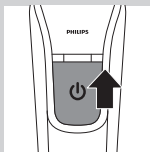


- 4 Switch on the appliance.
- 5 Slowly move the trimmer against the hair growth direction. Press lightly and always make sure the surface of the comb is in full contact with the skin.


*Note: When you trim for the first time, start at the highest setting (18mm) to familiarise yourself with the appliance.*

## Trimming your stubbles


You can use the stubble comb to trim your stubbles.

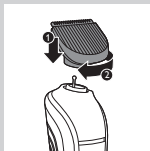


- 1 Place the trimmer onto the handle (1). Turn the trimmer clockwise to fix it (2).

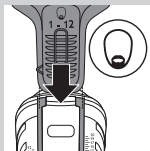

- 2 Slide the stubble comb into the guiding grooves on both sides of the handle.

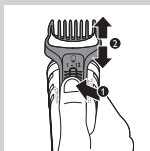

- 3 Press the setting selector (1) and slide the comb to the desired hair length setting (2). You can choose any setting between 1 and 12mm.

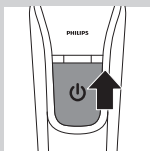

- 4 Switch on the appliance.
- 5 Slowly move the trimmer against the hair growth direction. Press lightly and always make

sure the surface of the comb is in full contact with the skin.


### Styling/contouring your beard

You can use the precision trimmer to contour or cut shapes in beard hair. It cuts hair very close to the skin, at a length of 1mm.

Caution: Be careful when you use the precision trimmer because it removes every hair it comes in contact with.




- 1** Place the precision trimmer onto the handle (1). Turn the precision trimmer clockwise to fix it (2).

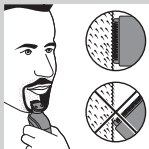

- 2** To achieve a good cutting result, move the precision trimmer against the direction of hair growth. Always make sure the precision trimmer is in full contact with the skin.

- 3** Make careful and controlled movements with the precision trimmer.

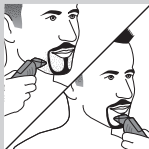

*Tip: For the perfect finish, you can use the mini-foil shaver to make the edges and lines of your beard style even smoother.*

## Trimming nose and ear hair

---




### Trimming nose hair

- 1** Place the nose/ear trimmer onto the handle (1). Turn the nose/ear trimmer clockwise to fix it (2).
- 2** Make sure your nostrils are clean.
- 3** Switch on the appliance and insert the tip of the trimmer into one of your nostrils.

Do not insert the tip more than 0.5cm into your nostril.

- 4** Slowly move the tip in and out while turning it round at the same time to remove unwanted hair.

To reduce the tickling effect, make sure that you press the side of the tip firmly against the skin.


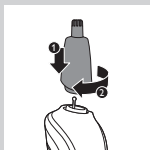


### Trimming ear hair

- 1** Attach the nose/ear trimmer onto the handle.
- 2** Clean the outer ear channel. Make sure it is free from wax.
- 3** Switch on the appliance and move the tip softly round the ear to remove hairs that stick out beyond the rim of the ear.

- 4** Carefully insert the tip into the outer ear channel.

Do not insert the tip more than 0.5cm into the ear channel as this could damage the eardrum.

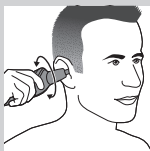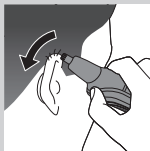



## Cleaning


Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Always keep the adapter dry.

Clean the appliance after each use. The appliance is waterproof therefore the handle, combs and attachments are easily cleaned under the tap.

- 1** Make sure the appliance is switched off and disconnected from the mains.
- 2** Remove any comb and/or attachment from the appliance.
- 3** Blow and/or shake out any hair that has accumulated in the attachments and/or combs or use the cleaning brush.
- 4** Clean the attachments and the combs under a lukewarm tap and/or with the cleaning brush.
- 5** Clean the handle under a lukewarm tap and/or with the cleaning brush.

### Cleaning the mini-foil shaver

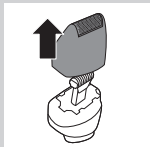


- 1** After each use, pull the top part of the mini-foil shaver off the bottom part.

The shaving foil is very delicate. Handle it carefully. If the shaving foil is damaged, do not use the mini-foil shaver anymore.



Do not clean the shaving foil with the cleaning brush, as this may cause damage.

- 2** Blow and/or shake out any hair that has accumulated inside the mini-foil shaver.

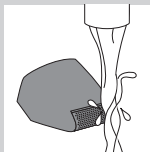

- 3 Clean the top part of the mini-foil shaver under a lukewarm.

### Storage

Store the handle, combs, attachments and adapter in the storage pouch supplied to prevent damage.

### Ordering accessories

To purchase accessories for this appliance, please visit our online shop at **[www.shop.philips.com/service](http://www.shop.philips.com/service)**. If the online shop is not available in your country, go to your Philips dealer or a Philips service centre. If you have any difficulties obtaining accessories for your appliance, please contact the Philips Consumer Care Centre in your country. You find its contact details in the worldwide guarantee leaflet.

If the adapter is damaged, always have it replaced with one of the original type in order to avoid a hazard.

Only replace damaged or worn attachments or combs with original Philips replacement attachments or combs.

### Environment



- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.





- The built-in rechargeable battery contains substances that may pollute the environment. Always remove the battery before you discard and hand in the appliance at an official collection point. Dispose of the battery at an official collection point for batteries. If you have trouble removing the battery, you can also take the appliance to a Philips service centre. The staff of this centre will remove the battery for you and will dispose of it in an environmentally safe way.


### Removing the rechargeable battery

Only remove the rechargeable battery when you discard the appliance. Make sure the battery is completely empty when you remove it.

Be careful, the battery strips and housing parts are very sharp.

- 1 Make sure the appliance is disconnected from the mains.
- 2 Remove the attachment.
- 3 Remove the on/off button of the appliance with a flathead screwdriver.
- 4 Remove the front panel of the appliance with a flathead screwdriver.
- 5 To pull out the inner, apply a tilting force in the indicated hole with a flathead screwdriver. Pull upward on the top cover.
- 6 Separate the inner and the tube.
- 7 Remove the on/off contact.

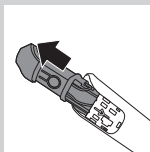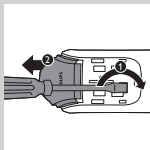

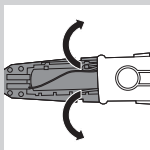

- 8 Unhook and remove the rest of the cover to expose the rechargeable battery.
- 9 Cut the wires to separate the rechargeable battery from the appliance.

### Guarantee and service

If you need service or information or if you have a problem, please visit the Philips website at **www.philips.com/support** or contact the Philips Consumer Care Centre in your country. You find its phone number in the worldwide guarantee leaflet. If there is no Consumer Care Centre in your country, go to your local Philips dealer.

#### Guarantee restrictions

Cutting units are not covered by the terms of the international guarantee because they are subject to wear.

### Troubleshooting

This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit **www.philips.com/support** for a list of frequently asked questions or contact the Consumer Care Centre in your country.

Problem	Possible cause	Solution
The beard comb does not stay attached to the handle.	You do not attach the beard comb correctly.	Slide the beard comb into the guiding grooves on both sides of the handle until you hear a click.
	The guiding grooves are dirty.	Clean the appliance and the guiding grooves thoroughly.
	The comb is broken.	Go to your Philips dealer or contact a Philips service centre to purchase a new comb.
The appliance does not work anymore.	The rechargeable battery is empty.	Charge the appliance (see chapter 'Charging'). Make sure you switch off the appliance before you charge it. During charging, the charging light on the adapter flashes. If the charging light does not flash, check whether there is a power failure or if the wall socket is live. If there is no power failure and the wall socket is live but the charging light still does not flash, take the appliance to your dealer or a Philips service centre.
	The appliance does not work when it is connected to the mains.	The appliance is not designed to work from the mains.

## ENGLISH

Problem	Possible cause	Solution
The appliance does not charge when it is connected to the mains.	The appliance has to be switched off when you charge it.	Switch off the appliance.
The appliance does not trim as well as it used to.	The cutting element of the attachment you are using is dirty.	Remove the attachment from the appliance. Clean the attachment under a lukewarm tap.
The appliance becomes hot.	The cutting element of the attachment you are using is dirty.	Remove the attachment from the appliance. Clean the attachment under a lukewarm tap.



## 故障かな？ と思ったら

故障かな？と思ったら、  
お調べください。

### 充電しても使用時間が極端に短い

- ▶ 刃の掃除はしていますか？
- ▶ 本製品が完全に止まるまで作動させてからもう一度約10時間充電してください。
- ▶ それでも改善されないときは、充電電池の寿命です。

### だんだん切れ味が悪くなった

- ▶ 刃が損傷または摩耗していませんか？  
刃の寿命は1回約30分、月2回の使用で約5年が目安ですが使用時間・回数により異なります。

### 電源スイッチを押しても作動しない

- ▶ 刃の掃除はしていますか？
- ▶ 充電はされていますか？  
約10時間、充電をしてください。
- ▶ 刃と本体が正しくセットされていますか？

### 異常な音がる

- ▶ 刃に傷が付いていませんか？
- ▶ 刃が正しくセットされていますか？

### 充電できない

- ▶ 充電アダプタの電源コードが断線していませんか？  
新しい充電アダプタをお買い求めください。
- ▶ 充電アダプタの電源プラグ部はコンセントにきちんと差し込まれていますか？  
本体に充電アダプタのコネクタ部がきちんと差し込まれていますか？ 確認してください。

以上の点検により、正常な状態に戻らない場合は、  
お買い求めの販売店か小泉成器修理センターへお問い合わせ願います。



## 保証書と修理サービスについて (必ずお読みください)

# 保証と アフターサービス

### 〈保証書・最終ページに付属〉

- 保証書は、必ず「お買い上げ日・販売店名」等の記入をお確かめのうえ、販売店から受け取っていただき内容をよくお読みのあと大切に保管してください。

保証期間	お買い上げ日から2年間
対象部分	本体(コーム、アタッチメント、充電アダプタ、ソフトボーチ、クリーニングブラシ、くしを除く)

### 【補修用性能部品の最低保有期間】

- 補修用性能部品の最低保有期間は製造打ち切り後6年です。
- 性能部品とは、その製品の機能を維持するために必要な部品です。

### 【ご不明な点や修理に関するご相談は】

- 修理に関するご相談ならびにご不明な点は、お買い上げの販売店または、小泉成器修理センターにお問い合わせください。

### 【修理を依頼されるときは】

- 修理をご依頼される前に、この取扱説明書をよくお読みいただき、再度点検ください。尚、異常のあるときはご使用を中止し、お買い上げの販売店へご依頼ください。

### 【保証期間中は】

- 製品に保証書を添えてお買い上げの販売店にご持参ください。保証書の記載内容により無料修理いたします。

### 【保証期間が過ぎているときは】

- 修理によって商品の機能が維持できる場合は、補修用性能部品の保有期間内であれば、ご希望により有料で修理させていただきます。

### 【海外での本製品の保証及びアフターサービスについて】

- 本製品の保証は海外においても有効です。(同シリーズ製品の取り扱いがある国に限ります)
- 日本国外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができますが、この場合多少日数を要することもあります。
- 海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お困りの点がございましたら下記までご連絡ください。

Philips Consumer Lifestyle Service Department P.O.Box 20100 9200 CA DRACHTEN  
The Netherlands Fax:+31 51 259 2785

### 【お客様の個人情報のお取り扱いについて】

- お受けましたお客様の個人情報(は、株式会社フィリップスエレクトロニクスジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

お買い上げ日	年 月 日	お買い上げ店名	TEL. ( )
--------	-------	---------	----------

## ご使用の時、このような症状はありませんか？

- 本体にさわると時々電気を感じる。
- こげくさい臭いがする。
- 電源コード部を動かすと通電したり、しなかったりする。
- その他の異常、故障がある。

このような症状の時は、故障や事故防止のため、電源スイッチを切り、充電アダプタをコンセントから外して、必ず販売店にご相談ください。



愛情点検

## 仕 様


品 番	QG3352
電 源 方 式	充電式(専用充電アダプタ使用)
消 費 電 力	2W
定 格 電 圧	AC100-240V (50/60Hz)
本 体 質 量	約127g
充 電 時 間	約10時間

※改良の為、仕様を予告なく変更することがあります。

- フィリップス製品の修理受付はお買い上げの販売店にお申し出ください。
- 修理サービス等についておわかりにならないことは、下記にお問い合わせください。


フィリップス  
コンシューマー ライフスタイル事業部  
日本販売代理店  
小泉成器株式会社  
〒541-0051 大阪市中央区備後町3-3-7

製品に関するお問い合わせ：  
フィリップスお客様情報センター




**0570(07)6666**  
06(6261)8230

修理に関するお問い合わせ：  
小泉成器修理センター



**0570(09)8888**

部品に関するお問い合わせ：  
小泉成器部品センター



**0570(09)2222**

受付時間：平日9:00~17:30(土・日・祝日・夏期休暇・年末年始を除く)

【ナビダイヤルにかからない時は】

小泉成器東日本修理センター TEL 048(718)3340 〒344-0127 埼玉県春日部市水角1190  
小泉成器西日本修理センター TEL 06(6613)3145 〒559-0033 大阪市住之江区南港中1丁目3番98号

ホームページアドレス <http://www.philips.co.jp/>

### 〈無料修理規定〉

1. 取扱説明書、本体貼付ラベル等の注意書に従った正常な使用状態で保証期間内に故障した場合には、無料修理します。
2. 保証期間内に故障して無料修理をお受けになる場合には、商品と保証書をご持参、ご提示のうえ、お買い上げの販売店にご依頼ください。なお、商品を直接メーカーへ送付した場合の送料等はおお客様の負担となります。
3. ご贈答、ご転居でお買い上げの販売店に修理を依頼できない場合は、小泉成器修理センターにご依頼ください。
4. 保証期間内でも次の場合には有料修理になります。
  - ① 使用上の誤り及び不当な修理や改造による故障及び損傷。
  - ② お買い上げ後の輸送、移動、落下等による故障及び損傷。
  - ③ 火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障及び損傷。
  - ④ 一般家庭以外（例えば、業務用の長時間使用）に使用された場合の故障及び損傷。
  - ⑤ 保証書の提示がない場合。
  - ⑥ 保証書にお買い上げ年月日、お客様名、販売店名の記入のない場合、或は字句を書き換えられた場合。

※保証書は、本書に明示した条件のもとにおいて無料修理をお約束するものです。従って保証書を発行している者（保証責任者）、及びそれ以外の事業者に対するお客様の法律上の権利を制限するものではありません。

保証期間経過後の修理についてご不明の場合は、お買い上げの販売店または小泉成器修理センターにお問い合わせください。

※保証期間経過後の修理・補修用性能部品の保有期間について詳しくは取扱説明書の保証とアフターサービスの項目をご覧ください。

※お客様にご記入いただいた個人情報（保証書の控え）は保証期間内のサービス活動及びその後の安全点検活動のために利用させていただく場合がございます。ご了承ください。また個人情報は、株式会社フィリップスエレクトロニクスジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

# フィリップス マルチグルーミングキット 保証書

持込修理

## CERTIFICATE OF PURCHASE

この保証書は、「無料修理規定」記載内容で無料修理を行うことをお約束するものです。お買い上げの日から下記期間中に故障が発生した場合は、本書をご提示のうえ、お買い上げの販売店に修理をご依頼ください。

お客様にご記入いただいた個人情報(保証書の控え)は、株式会社フィリップスエレクトロニクスジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

品名	マルチグルーミングキット		
品番	QG3352		
保証期間	お買い上げ日より2年		
対象部分	本体(コーム、アタッチメント、充電アダプタ、ソフトポーチ、クリーニングブラシ、くしを除く)		
お買い上げ日	年	月	日
お客様	ご住所 〒		
	ご芳名		
	電話番号		
★ 販売店	販売店名・住所・電話番号		

- ★ 保証書は再発行しませんので、大切に保管してください。
- ★ ご販売店様へ この保証書はお客様へのアフターサービスの実施と責任を明確にするものです。贈答品、記念品の場合も含めて必ず記入捺印してお客様にお渡しください。

### ★ 製品に関するお問い合わせ

フィリップスお客様情報センター  
ナビダイヤル(全国共通)

**0570(07)6666**

ナビダイヤルにかからない時は  
TEL 06(6261)8230 FAX 06(6268)1432  
フィリップスコンシューマーマライフスタイル事業部  
日本販売代理店 小泉成器株式会社  
〒541-0051 大阪市中央区備後町3-3-7

### ★ 修理に関するお問い合わせ

小泉成器修理センター  
ナビダイヤル(全国共通)

**0570(09)8888**

ナビダイヤルにかからない時は  
小泉成器東日本修理センター TEL 048(718)3340  
〒344-0127 埼玉県春日部市水角1190  
小泉成器西日本修理センター TEL 06(6613)3145  
〒559-0033 大阪市住之江区南港中1丁目3番98号

### ★ 部品に関するお問い合わせ

小泉成器部品センター  
ナビダイヤル(全国共通)

**0570(09)2222**

ナビダイヤルにかからない時は  
TEL 06(6613)3211  
〒559-0033 大阪市住之江区南港中1丁目3番98号

受付時間：平日9:00～17:30 (土・日・祝日・夏期休暇・年末年始を除く)