PHILIPS

Shaver

S9000 Prestige

※この写真の製品はSP9860/14です

フィリップス 電動シェーバー

品番 **SP9860/14, SP9863/16, SP9861/13**

取扱説明書

フィリップス シェーバーをお買い上げいただき、まことにありがとうございます。長い間ご愛用いただくために、ご使用前にこの取扱説明書をよくお読みのうえ、正しくお使いください。

また、お読みになった後は、お使いになる方がいつでも見られるところに必ず保管してください。

商品のご確認

商品をご確認ください。

全モデル共通

本体

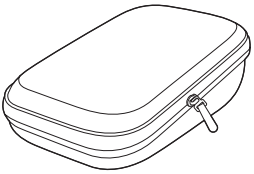

プレミアムポーチ

USB電源アダプタ

ワイヤレス充電パッド
（HQ8510、HQ8509）

SP9860/14,SP9863/16のみ

スタイラーコーム

ヒゲスタイラー
アタッチメント（RQ111/61）

SP9860/14のみ

洗顔ブラシ保護キャップ

洗顔ブラシヘッド

ブラシ台座

SP9861/13のみ



トリマー

※改良の為、仕様を予告なく変更することがあります。

お買い上げのお客様へ

初めてご使用になる際は、ご使用前に充電してください。

■品番別 付属品一覧

お買い上げの商品によって付属品が異なります。
該当する品番を下記の一覧よりお選びいただき、付属品をご確認ください。

品番 / 付属品	SP9860/14	SP9863/16	SP9861/13
プレミアムポーチ	●	●	●
USB電源アダプタ	●	●	●
ワイヤレス充電パッド	●（HQ8510）	●（HQ8509）	●（HQ8509）
ヒゲスタイラーアタッチメント（RQ111/61）	●	●	―
トリマー	―	―	●
洗顔ブラシヘッド（洗顔ブラシ保護キャップ）	●	―	―

目 次

●はじめに
商品のご確認 ……1・2
目次 ……3
必ずお守りください ……4〜6
各部の名称 ……7・8
デジタル表示・LED表示について ……9〜11
充電のしかた ……12

●ご使用方法
シェービングのしかた ……13〜15
ヒゲスタイラーアタッチメントの使いかた…16・17
トリマーの使いかた ……18
洗顔のしかた ……19
お手入れ方法 ……20〜23
刃・洗顔ブラシの交換 ……24
保管のしかた ……25

●廃棄について
シェーバーを廃棄するとき ……26

●困ったとき
故障かな?と思ったら ……27・28

●英文解説
Guidance in English ……29〜62

●保証
保証とアフターサービス ……63
仕様 ……64
無料修理規定 ……66
保証書 ……最終ページ

安全上のご注意

必ずお守りください

- **ここに示した注意事項は、安全に関する重要な内容ですので、必ず守ってください。**
- **誤った取扱いをしたときに想定される内容を「危険」と「警告」と「注意」とに区分けしています。**

○絵表示について

⚠ **危険**	人が死亡または重傷を負う可能性が大きい内容。
⚠ **警告**	人が死亡または重傷を負う可能性が想定される内容。
⚠ **注意**	人が傷害を負う可能性および物的損害のみの発生が想定される内容。

○絵表示の例

△記号は、「危険、警告、注意」を示します。図の中や近くに具体的な注意内容(左図の場合は高温注意)を示します。

⃠記号は、してはいけない「禁止」を示します。図の中や近くに具体的な禁止内容(左図の場合は分解禁止)を示します。

●記号は、必ずしていただく「強制」を示します。図の中や近くに具体的な強制内容(左図の場合は電源プラグをコンセントから抜くこと)を示します。

⚠ 危険

●本製品は充電式電池を内蔵しています。火中投入、加熱、高温での充電・使用・放置をしないでください。発熱・発火・破裂の原因になります。

⚠ 警告

●シェーバー本体・ワイヤレス充電パッドならびにUSB電源アダプタは改造しないでください。また、分解したり修理をしないでください。火災、感電、けがの原因となります。修理はフィリップスサポートセンターにお問い合わせください。

●異常・故障時には、直ちに使用を中止してください。そのまま、使用すると火災・感電・けがに至るおそれがあります。

●電源プラグは、根本まで確実に差し込んでください。スムーズにコンセントに電源プラグが装着できない場合、無理に押し込もうとしないでください。火災や感電の原因になります。

●お手入れの際は必ずUSB電源アダプタの電源プラグをコンセントから抜いてください。感電やけがをすることがあります。

●USB電源アダプタを傷付けたり、ワイヤレス充電パッドの電源コードを無理に曲げたり、引っ張ったり、ねじったり、たばねたり、重い物を載せたり、挟み込んだり、加工したりしないでください。電源コードが破損し、火災・感電の原因となります。

●USB電源アダプタが傷んだり、コンセントの差込みが緩いときは使用しないでください。感電・ショート・発火の原因になります。

⚠ 警 告

●USB電源アダプタは必ず付属の専用アダプタを使用してください。また付属の専用アダプタで他の製品を充電しないでください。ショート、異常発熱による発火の原因になります。破損、故障した場合は、事故を避けるために必ずフィリップス社製の同型USB電源アダプタをお求めください。

●濡れた手でUSB電源アダプタを抜き差ししないでください。感電やけがをすることがあります。

●USB電源アダプタ、ワイヤレス充電パッドを水につけたり、水をかけたりしないでください。故障や、ショート・感電の原因になります。

●水場や浴室での充電は絶対にしないでください。ショート・感電の原因になります。

●乳幼児の手の届くところに本製品を置かないでください。またお子様が本製品で遊ぶことがないように監視してください。

●補助を必要とする人（子どもを含む）に使用させないでください。また、お体の不自由な人だけでは使用しないでください。

●ワイヤレス充電パッドを自動車内で使用しないでください。自動車の電気系統に干渉する可能性があります。

●USB電源アダプタは、完全に乾いていることを確認してからコンセントに差してください。

●刃が破損または故障した場合は、本製品を使用しないでください。けがの原因になります。交換の際には必ずフィリップス社製の同型部品とお取り替えください。

⚠ 注 意

●充電時以外は、USB電源アダプタをコンセントから抜いてください。けがややけど、絶縁劣化による感電・漏電・火災の原因となります。

●刃は強く押さえないでください。破損して皮膚を傷つけることがあります。

●ワイヤレス充電パッドへの接続は必ず付属の専用USB電源アダプタ（HQ87）を使用してください。また付属の専用USB電源アダプタで他の商品を充電しないでください。ショート、異常発熱による発火の原因になります。破損、故障した場合は、事故を避けるために必ずフィリップス社製の同型USB電源アダプタをお求めください。

●衛生上の理由から他の人と共用しないでください。

●安全上の理由から運転中はシェーバーを使用しないでください。

●本製品や部品を食洗機で洗わないでください。故障や破損の原因になります。

●ワイヤレス充電パッドをUSB電源アダプタから抜くときは、電源コード部を持たずに必ず先端のUSBコネクタ部を持って引き抜いてください。ショートして発火することがあります。

使 用 上 の ご 注 意

1. 本製品はヒゲ(あごヒゲ、口ヒゲ、もみあげなど)の長さを整えたり、シェービングする、または洗顔するためのものです。それ以外の目的で使用しないでください。

2. フィリップスシェーバーを初めてお使いの方は、剃りかたに慣れるまで2〜3週間かかることがあります。

3. 60℃以上の水でシェーバーを洗浄しないでください。

4. 本製品の使用、充電、保管は室温5℃〜35℃の環境下で行ってください(尚、低温や高温で充電すると、充電池の寿命が短くなります)。

5. 外刃は、薄く仕上げてありますので、刃部を強く押さえたり、硬いものに当てないよう、ていねいに扱ってください。

6. 洗顔ブラシヘッドをお使いの際は、自分で作った洗顔料、刺激の強い化学物質や粗い粒子を含んだ洗顔料、スクラブ入りまたはピーリング作用のある洗顔料などを使用しないでください。

7. 洗顔ブラシヘッドは、1日に2回以上使用しないでください。

8. シェービングユニット・洗顔ブラシヘッドの清掃や着脱は、必ず電源をOFFにしてから行ってください。

9. 切れ味が衰えてきたり、刃が破損した場合は、使用せず必ず新しいシェービングヘッドと交換してください。

10. 直射日光の当たる場所には保管しないでください。夏場、車の中に放置しないでください。

11. シェービングユニットは、クリーニング表示(蛇口マーク)が表示された場合、お手入れ方法(P20〜21)に従って掃除してください。

12. シェーバー本体は防水加工をしておりますが、水や液体の中に浸けないでください。

13. 肌に傷、はれもの、湿疹などがある場合、またはステロイド系の投薬を受けている場合には製品を使用しないでください。

14. ピアスや宝石、ガラス装飾類を着用している場合は、外してご使用になるか、装飾類の近くにハンドル本体をあてないでください。

15. プラグ式消臭・芳香剤を使用しているコンセント、あるいはその近くのコンセントにUSB電源アダプタを接続しないでください。USB電源アダプタを傷める原因となります。

各部の名称

※付属品は品番により異なります。
品番ごとの付属品はP1、P2をご参照ください。

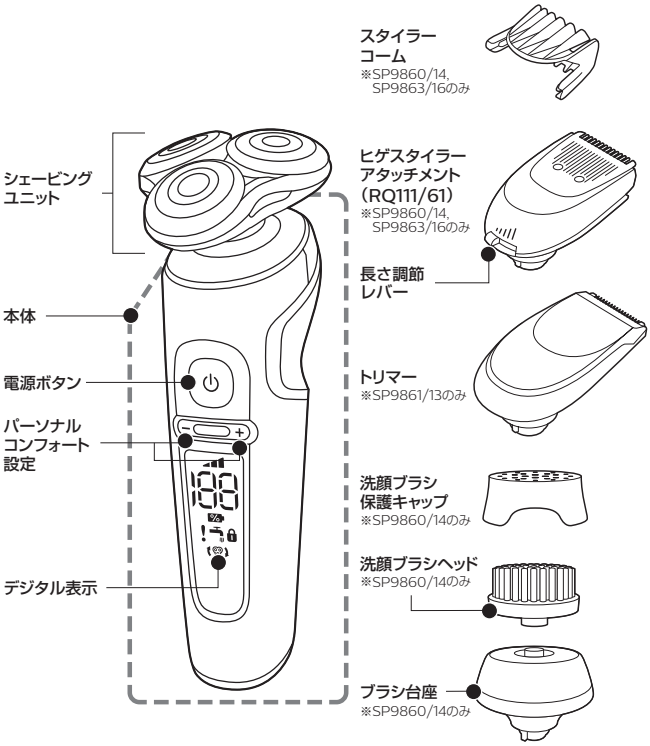

●シェービングユニット

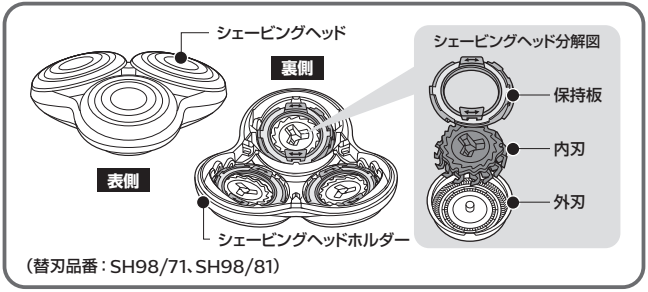

（替刃品番：SH98/71、SH98/81）

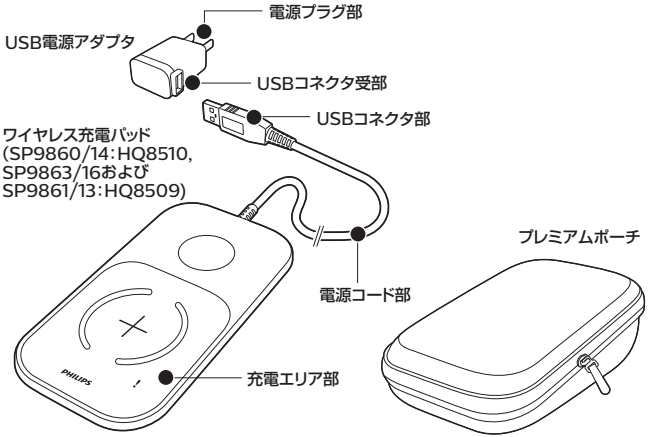

デジタル表示・LED表示について

初めてお使いになるときや、長い間ご使用にならなかったときは、表示が出るまでに時間がかかる場合があります。

本体の主な表示

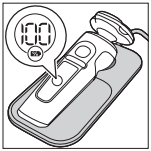

残量表示

充電残量はディスプレイ上に使用可能量(%)として表示されます。電源のON/OFFの際に数秒間点灯します。

充電表示

充電中は、本体の充電残量(%)とバッテリーマークの表示が点滅し、ワイヤレス充電パッドのリングが点灯し続けます。

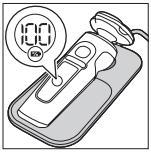

充電完了表示

充電が完了すると、本体の充電残量(%)表示とワイヤレス充電パッドのリングが点灯し続けます。満充電後しばらくすると消えます。

※満充電後に本体を再びワイヤレス充電パッドに置くと充電残量(%)の表示が点灯し続けますが、故障ではありません。

充電催促表示

充電残量が少なくなると、バッテリーマークがオレンジ色に点滅しビープ音が鳴ります(電源をOFFにすると、バッテリーマークが数秒間点滅し、ビープ音が鳴ります)。

クリーニング表示

シェービング後に電源をOFFにすると、クリーニングをうながすために蛇口マークが点滅します。表示されるタイミングは使用時間・状況により異なります。お手入れ方法(P20〜23)をご参照ください。

シェービングヘッド交換表示

シェービングヘッドの交換マークが点滅しビープ音が鳴ると、交換時期です。シェービングヘッドを交換してください（P24参照）。

ブロック表示

シェービングヘッドに長いヒゲがからまっていたりシェービングヘッドが破損していると、「!」マークが赤く点灯し、シェービングヘッドの交換表示、クリーニング表示が同時に点滅しビープ音が鳴ります。この場合、電源をONにすることができません。シェービングヘッドをお手入れするか、交換してください（P20～21参照）。

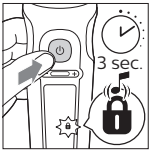

ロック表示（カギマークが表示されていると電源は入りません）

電源ボタンを約3秒長押しするとカギマークが表示されます。さらに電源ボタンを押し続けると、3秒前からカウントダウンが開始され0になるとカギマークが点滅しロックがかかります。再度電源ボタンを約3秒長押しすると解除できます。

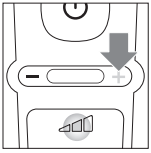

パーソナルコンフォート表示

ヒゲの濃さや肌タイプに合わせて最適な設定を選択可能。電源ボタンの下にある+/−のボタンを押すとパーソナルコンフォート表示が点灯し設定を変更できます（P13参照）。

オーバーヒーティング表示

充電中、万が一シェーバーがオーバーヒートした場合、「!」マークが赤色に点滅します。その場合、充電が自動的に中断し、温度が下がる（およそ10分間）と充電が再開されます。

ワイヤレス充電パッドの主な表示

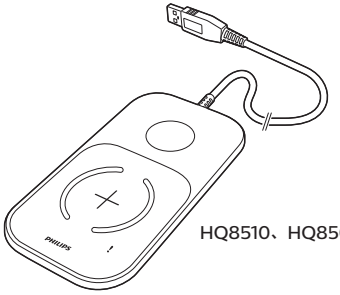

HQ8510、HQ8509

充電表示リング

充電中は、ワイヤレス充電パッドの充電エリア部にあるリングが白く点灯し続けます。

※充電完了後、しばらくすると消えます。

お知らせマーク

充電中にワイヤレス充電パッド上に金属などの異物があると、ワイヤレス充電パッドのお知らせマークが赤く点灯し続けます。その場合充電が自動的に中断し、異物を取り除くと5分後に充電が再開されます。

⚠ 注意

- ワイヤレス充電パッドに金属などの異物を置かないでください。
- ワイヤレス充電パッドはQi規格（Qi 1.2）に対応しています。ワイヤレス充電パッドで他の製品を充電する場合は、Qi規格対応製品であるかどうかをよくお確かめのうえ行ってください。

浴室で充電をしないでください。

充電のしかた

初めてお使いになるときや、長い間ご使用にならなかったとき、または充電残量が少なくなったときは、ご使用前に充電してください。充電時間は約3時間です。充電開始後数分間、充電表示ランプが点滅しないことがありますが、そのまま充電すると充電表示ランプが点滅します。海外(100〜240V)でのご使用も可能です。ただし、コンセントの形状や電圧など現地で充分お確かめのうえご使用ください。

※本製品はリチウムイオン電池を使用しているため、ご使用の都度充電をしても充電池の寿命には影響ありません。

1 ワイヤレス充電パッドのUSBコネクタ部を、USB電源アダプタのUSBコネクタ受け部に差し込みます。

※ワイヤレス充電パッドが完全に乾いていることを確認してからコンセントに差してください。



2 シェーバー本体背面の突起部がワイヤレス充電パッドのくぼみに収まるように、ワイヤレス充電パッドの+マークの上にシェーバー本体を置きます。



3 シェーバー本体がワイヤレス充電パッドに正しく置かれると充電が開始され、ワイヤレス充電パッドからビープ音が鳴り、リングが白く点灯します。充電中はリングが点灯し続け、シェーバー本体の充電表示(%)が白く点滅します。

※充電中は、ワイヤレス充電パッドに金属などの異物を置かないでください。
※通常の目安として満充電で1日3分使用し、約20日間使用できますが、ご使用状況(使用時間・ヒゲの濃さなど)により変わります。

⚠ 注意

- ●専用のUSB電源アダプタ(HQ87)とワイヤレス充電パッド(HQ8510、HQ8509)以外での充電は行わないでください。
- ●長期間使用しない場合は、充電池が過放電や液漏れして使えなくなることがあります。3〜4カ月に一度は充電してください。

クイックチャージ

充電残量が0の状態でワイヤレス充電パッドで充電すると、約18分間でシェービング1回分が急速充電されます。

※クイックチャージ中は本体の充電残量(%)とバッテリーマークがすばやく点滅し、ワイヤレス充電パッドのリングが点灯します。
※クイックチャージが完了すると通常の充電が行われます。その際、本体の充電残量(%)とバッテリーマークがゆっくり点滅し、ワイヤレス充電パッドのリングが点灯し続けます。

シェービングのしかた（ドライ）

肌が乾いた状態でのシェービングのしかたです。

⚠ 警告 シェーバー本体は防水加工をしており、浴室でも使用できますが、水や液体の中に浸けないでください（故障の原因となります）。

- ●モーターの始動時、微弱の振動がシェーバー本体に伝わりますが、問題はありません。
- ●ほこりなどで肌が汚れている場合、ふきとってからご使用ください。
- ●ご使用の前に外刃の破れや変形がないか確認してください（外刃に破れや変形があると肌を傷つける原因になります）。
- ●ヒゲ剃り以外の目的（頭髪など）には、使用しないでください。
- ●静止している本体を手に取るなどすると、本体が振動を感知し、充電残量の表示が白く光ります。

1 電源ボタンを押し、電源をONにします。

※カギマークが表示されている場合はロック機能が ON になっています。ロックを解除してから電源を ON にしてください。

2 刃を肌に軽く押しあて、円を描くように動かしながら剃ります。

3 シェービング後は電源ボタンを押し、電源をOFFにします。

パーソナルコンフォート設定

ヒゲの濃さや肌タイプに合わせて3種類の設定の中から自分の好みに合わせて選択することができます。電源ボタンの下にある+/−のボタンを押すと設定を変更できます。

表示	モード	使用シーン
	センシティブ	肌の敏感な箇所を剃るのに最適なやさしい剃り心地
	ノーマル	普段使いに最適
	ハイスピード	素早いシェービングで時間を節約したい場合

上手に剃るには

肌に強く押しつけるのではなく、軽く押しあてて円を描くように回転させながら剃るのがコツです。

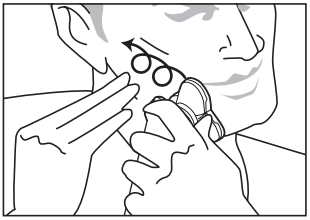

ほお
肌を伸ばし、ヒゲを立たせるように円を描くように小さく回転させながら剃ります。

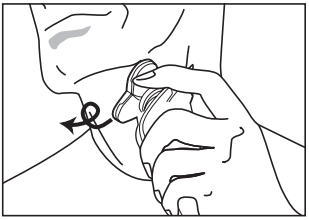

あごの裏側
刃を肌に軽くあて、図のようにあごを上げて円を描くように小さく回転させながら剃ります。

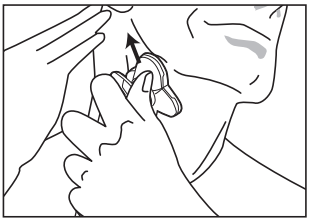

ほおの奥から首筋
片方の手で肌を後ろに引っ張りながら剃ります。

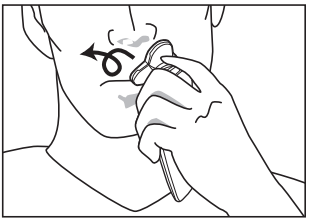

鼻の下
鼻の下を伸ばし、円を描くように小さく回転させながら剃ります。

フィリップスのシェーバーを初めてお使いの方は、剃りかたに慣れるまで2〜3週間かかることがあります。初めてのシェービングで思い通りの結果が得られないことや、少し肌にヒリヒリ感が残る場合がありますが、これは普通のことです。フィリップスのシェーバーに限らずシェービング方法を変える時には、肌もヒゲも新しいシェービング方法に慣れる時間が必要です。新しいシェーバーに肌を慣らす為、まずは3週間このシェーバーを使い続けてみてください（最低でも1週間に3回以上）。この3週間は、あまりシェービング方法を変えたりせず、同じシェーバーで肌を慣らすことが大切です。

シェービングのしかた（ウェット）

シェービングフォームやシェービングジェルを使ったシェービングのしかたです。剃った部分を実感しながら、なめらかなシェービングができます。

⚠ 警告 シェーバー本体は防水加工をしており、浴室でも使用できますが、水や液体の中に浸けないでください（故障の原因となります）。

- モーターの始動時、微弱の振動がシェーバー本体に伝わりますが、問題はありません。
- ご使用の前に外刃の破れや変形がないか確認してください（外刃に破れや変形があると肌を傷つける原因になります）。
- ヒゲ剃り以外の目的（頭髪など）には、使用しないでください。
- 石けんもお使いいただけますが、肌の上での滑りをよくするため、シェービングフォームやジェルの使用をお勧めします。
- 静止している本体を手に取るなどすると、本体が振動を感知し、充電残量の表示が白く光ります。

1 顔を濡らし、市販のシェービングフォームまたはシェービングジェルを付けます。

2 シェービングヘッドを水で濡らし、肌の上でなめらかに動くようにします。

3 電源ボタンを押し、電源をONにします。
※カギマークが表示されている場合はロック機能がONになっています。ロックを解除してから電源をONにしてください。

4 刃を肌に軽く押しあて、円を描くように動かしながら剃ります。シェービングフォームやシェービングジェルにより、鏡を見た時に剃った部分を確認しやすくなります。
※途中、よりなめらかにシェービングするために、シェービングヘッドを水で濡らすと効果的です。

5 シェービング後は電源ボタンを押し、電源をOFFにします。

6 シェーバーをきれいに洗います（P20～21「お手入れ方法」）。

［重要］

シェービング後は、シェービングフォームやシェービングジェルがしっかりと洗い流されているかを確認してください。お手入れが不十分な場合、臭いが出るばかりでなく、故障の原因にもなります。

ヒゲスタイラーはあごヒゲ、口ヒゲ、もみあげなどを整えるのに便利です。
※SP9860/14, SP9863/16のみ

ヒゲスタイラーアタッチメントの使いかた

1 シェービングユニットを本体からはずします。

※シェービングユニットは回さずにまっすぐ引き抜いてください。
※電源がOFFになっていることを確かめてください。

2 ヒゲスタイラーアタッチメントの突起部(図❶)をシェーバー上部の溝(図❷)に合わせ、カチッと音がするまで押し込み(図❸)、本体に取り付けます。

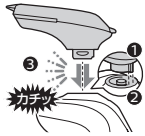

スタイラーコームを取り付けた使いかた

ヒゲスタイラーアタッチメントにコームを取り付けて、カットの仕上がりが均一になるようにしたり、違った長さでそろえたりすることができます。スタイラーコームを使用し、カット後の仕上がりの長さを1~5mmにそろえることができます。

1 スタイラーコームをヒゲスタイラーアタッチメントの両側にある溝にそって、カチッと音がするまでスライドさせて取り付けます。

2 長さ調節レバー(図❶)を押し、左右に動かして(図❷)、好みの長さに調節します。

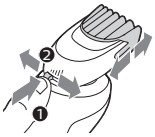

仕上がりの長さ
1mm
2mm
3mm
4mm
5mm

3 電源ボタンを押し、電源をONにします。

4 コームの先を肌に密着させヒゲの流れに逆らうように動かします。

⚠ 注意 ヒゲの長さを整えたり、ヒゲを剃るなど、本来の目的以外で使用しないでください。

スタイラーコームなしでの使いかた

コームなしでもあごヒゲ、口ヒゲ、もみあげの手入れをしたり、輪郭を整えたりすることができます。

1 スタイラーコームをヒゲスタイラーアタッチメントからはずします。

※コームの中心をつかんで、ヒゲスタイラーアタッチメントからはずします。コームの両側を持ってはずさないでください。

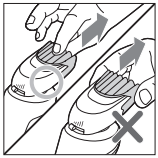

2 電源ボタンを押し、電源をONにします。

3 ヒゲの流れに逆らうように動かします。

コームなしの仕上がりの長さは0.5mmです。

ヒゲスタイル

下記のようなさまざまなヒゲスタイルをお楽しみください。

ちょいワル無精ヒゲ

フルフェイス

ピラミッドヒゲ

ドーナツヒゲ

トリマーの使いかた

トリマーはヘアーライン、もみあげ、ヒゲなどを整えるのに便利です。
※SP9861/13のみ

1 シェービングユニットのはずしかた

シェービングユニットを本体からはずします。

※シェービングユニットは、回さずにまっすぐ引き抜いてください。

※電源がOFFになっていることを確かめてください。

2

トリマーの突起部(図❶)をシェーバー上部の溝(図❷)に合わせ、カチッと音がするまで押し込み(図❸)、本体に取り付けます。電源をONにすると、トリマー先端の刃が往復してカットします。

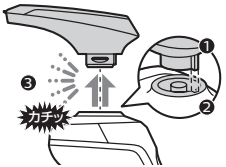

3

鏡を見ながらトリマーをカットしたいところに直角にあたるようにしてください。一度に切らずに、少しずつカットしてください。

4 シェービングユニットのつけかた

トリマーをはずし(図❶)、シェービングユニットの突起部(図❷)をシェーバー上部の溝(図❸)に合わせ、カチッと音がするまで押し込み(図❹)、本体に取りつけます。

※トリマーは、回さずにまっすぐ引き抜いてください。

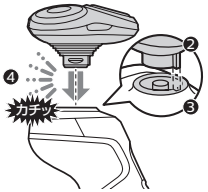

※トリマーの切れ味を保つため、使用後は必ずぬるま湯または水ですすぎ洗いをしてください(P23「トリマーのお手入れ方法」)。

⚠ 注意 あまり押し当て過ぎると肌を傷めますのでご注意ください。

洗顔のしかた

※SP9860/14のみ

⚠ 警告　本体は防水加工をしており、浴室でも使用できますが、水や液体の中に浸けないでください（故障の原因となります）。

アタッチメントを取り付ける

1 シェービングユニットを本体からまっすぐ引き抜きます。

※シェービングユニットは、回さずにまっすぐ引き抜いてください。

※電源がOFFになっていることを確かめてください。

2 洗顔ブラシヘッドの突起部を本体上部の溝に合わせ、カチッと音がするまで押し込み、本体に取り付けます。

洗顔する

1 顔表面と洗顔ブラシをぬるま湯で濡らします。

※シェービング前に洗顔ブラシをお使いいただくと、より効果的・衛生的にシェービングすることができます。

2 顔表面または洗顔ブラシに普段お使いの洗顔料を適量塗布します。

3 電源ボタンを押し、電源をONにします。

4 洗顔ブラシでTゾーン（図で示された箇所）を洗顔します。

※ヘアーバンドなどを使用し、髪が巻き込まれないようにご注意ください。

5 他の箇所も同じように洗顔していきます。

⚠ 注意

- 洗顔以外の目的には、使用しないでください。
- 自分で作った洗顔料、刺激の強い化学物質や粗い粒子を含んだ洗顔料、スクラブ入りまたはピーリング作用のある洗顔料などを使用しないでください。
- 1回のご使用は1分間、1日2回までを目安としてください。
- 肌にそって、円を描くよう洗顔ブラシをやさしく滑らせながら洗浄します。
- 肌の洗い過ぎを防ぐため、ひとつの箇所を20秒以上洗浄しないでください。
- 洗顔ブラシを肌に強く押し付けないように気をつけてください。
- 目の周りの敏感な部分には製品を使用しないでください。
- 肌に異常（傷・はれもの・湿疹等）がある場合は製品を使用しないでください。
- ヘアーバンドなどを使用し、髪が巻き込まれないようにご注意ください。

お手入れ方法

⚠ 注意

- ●お手入れの際は、電源をOFFにしてから水洗いしてください。
- ●シェービングユニットは水洗いできますが、本体は水中に浸けないでください。
- ●シェービングユニットを乾燥させる時に、タオルやティッシュペーパーを使用しないでください。刃を傷める場合があります。

シェービングヘッドのお手入れ方法

※洗剤は使用しないでください。
※ぬるま湯（40℃前後）でのお手入れをおすすめします。臭いのもととなる皮脂や汗などが取れやすくなります。ただし、熱湯はお止めください。故障の原因となります。
※お手入れ中にシェーバーの底から水が漏れてくる場合がありますが、異常ではありません。

1 シェービングユニットを取り付けた状態でシェーバーの電源をONにし、ぬるま湯または水ですすぎ洗いをします。

2 シェービングユニットからシェービングヘッドホルダーを取り外してください。

※電源がOFFになっていることを確認してください。

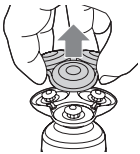

3 シェービングヘッドホルダーおよび受部にたまったヒゲクズをぬるま湯または水で約30秒洗い流します。

4 シェービングヘッドの余分な水を切り、よく乾かします。

※周囲に気をつけてください。

5 乾いたことを確認したら、シェービングヘッドホルダーをシェービングユニット受部に取り付けてください。

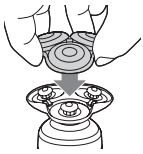

シェービングヘッドのお手入れ方法（分解+水洗い）

※1カ月に1度、またはシェーバーの切れ味が落ちてきたら、シェービングヘッドを分解して水洗いすることをおすすめします。
※お手入れの際は、電源をOFFにしてから分解や水洗いをしてください。

1 シェービングユニットからシェービングヘッドホルダーを取り外し、シェービングヘッドホルダーおよび受部にたまったヒゲクズを、ぬるま湯または水で約30秒洗い流します。

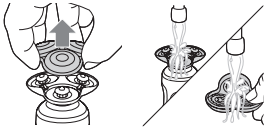

2 保持板を反時計回りに回して（図❶）、シェービングヘッドホルダーから取り外します（図❷）。他の保持板も同様に、反時計回りに回して外します。

※取り外した保持板はなくさないように安全な場所に保管してください。

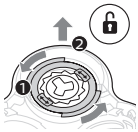

3 シェービングヘッドホルダーから内刃と外刃を取り外します。

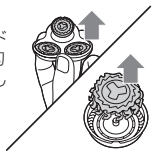

4 内刃と外刃をぬるま湯または水でしっかり洗い流し、余分な水を切ってよく乾かします。

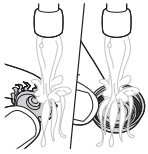

※周囲に気をつけてください。
※内刃と外刃は一組ずつ洗ってください。
※内刃と外刃の組み合わせを変えた場合、シェービング性能が回復するまで数週間かかることがあります。

5 シェービングヘッドホルダーに外刃と内刃を戻します。

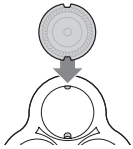

6 保持板をシェービングヘッドホルダーに戻し（図❶）たら、時計回りに回し（図❷）ます。保持板の矢印とシェービングヘッドホルダーの突起が合い、「カチッ」と音がするまで回してください。

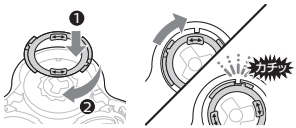

7 シェービングユニットにシェービングヘッドホルダーを取り付けます。

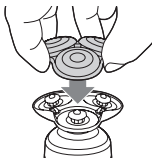

ヒゲスタイラーアタッチメントのお手入れ方法 ※SP9860/14, SP9863/16のみ

※ヒゲスタイラーアタッチメントは、使用後必ずお手入れしてください。

1 コームをヒゲスタイラーアタッチメントからはずします。

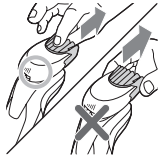

※コームの中心をつかんで、ヒゲスタイラーアタッチメントからはずします。コームの両側を持ってはずさないでください。

2 ヒゲスタイラーアタッチメントとコームを別々にぬるま湯または水で洗います。

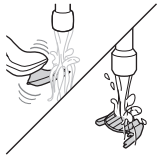

3 カッティングユニットの先端を上方向に持ち上げてヒゲスタイラーアタッチメントからはずしてください。

4 ヒゲスタイラーアタッチメントの内部をぬるま湯または水でしっかり洗い流し、余分な水を切ってよく乾かします。

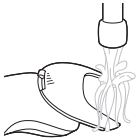

5 カッティングユニットの突起部分を前側の溝に差し込んで(図❶)、先端部を押して本体にはめ込み(図❷)、カッティングユニットをヒゲスタイラーアタッチメントに取り付けます。

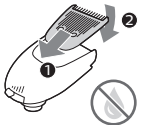

トリマーのお手入れ方法 ※SP9861/13のみ

※トリマーは、使用後必ずお手入れしてください。

1 トリマーを取り付けた状態でシェーバーの電源をONにし、ぬるま湯または水ですすぎ洗いをします。

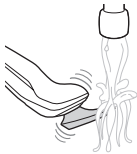

2 シェーバーの電源をOFFにし、トリマーを充分に乾燥させてください。
※トリマーはタオルやティッシュペーパーなどでふかないでください。
刃を傷める原因になります。

洗顔ブラシヘッドのお手入れ方法 ※SP9860/14のみ

※洗顔ブラシヘッドは、使用後必ずお手入れしてください。

1 お手入れする際には、電源を必ずOFFにします。

2 本体からブラシ台座と洗顔ブラシを取り外します。

3 ぬるま湯で洗顔ブラシをしっかり洗います。

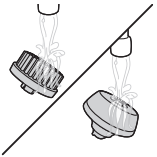

4 洗顔ブラシの水分を乾いたタオルでふき取る、または自然乾燥させてください。

刃・洗顔ブラシの交換

替刃(SH98/71、SH98/81)と交換する場合

※シェービング性能を維持するために、刃は2年ごとに交換することをおすすめします。
※交換する際は、必ずフィリップス社製の替刃にお取り替えください。
※シェービングヘッド交換表示が点灯したら、刃の交換時期です。
専用の替刃(品番：SH98/71、SH98/81)と交換してください。

1 シェービングユニットからシェービングヘッドホルダーを取り外します。

※電源が OFF になっていることを確かめてください。

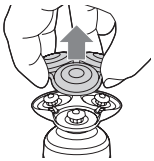

2 新しいシェービングヘッドホルダーを「カチッ」と音がするまで押し込み、シェービングユニット受部に取り付けます。

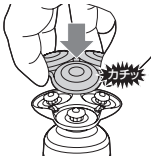

3 電源ボタンを2回目のビープ音が鳴るまで約7秒間押し続けて、シェーバーをリセットしてください。

※リセットを行わない場合、シェービングを９回行うと自動的にリセットされます。

本体品番	替刃品番
SP9860/14	SH98/71
SP9863/16	SH98/81
SP9861/13	SH98/81

洗顔ブラシの交換 ※SP9860/14のみ

洗顔ブラシが摩耗した状態で使用すると肌にダメージを与える恐れがあります。そのため３カ月ごとのブラシ交換をお勧めします(使用頻度、使用方法により変化します)。万が一洗顔ブラシが変形したり破損した場合は、３カ月以内でも交換してください。

[替洗顔ブラシ(1個)：RQ560/51]

1 ブラシ台座から洗顔ブラシを取り外します。



2 新しい洗顔ブラシをブラシ台座に取り付けます。



保管のしかた

シェーバーとワイヤレス充電パッドは保管する前にきちんと乾燥させてください。

本体とワイヤレス充電パッドの保管のしかた

シェーバーとワイヤレス充電パッドおよびアクセサリーをプレミアムポーチに格納して保管します。

※室温5℃～35℃の環境で保管してください。
※直射日光の当たる場所には保管しないでください。
※夏場、車の中には放置しないでください。

[洗顔ブラシ] ※付属モデルのみ

洗顔ブラシ保護キャップを図のように取り付け汚れが付くのを防ぎます。
※取り付ける前に、完全に乾いているか確認してください。

※お客様による充電池の修理交換はできません。

シェーバーを廃棄するとき

リチウムイオン充電池のリサイクルについて

このシェーバーはリチウムイオン充電池を使用しています。
リチウムイオン充電池はリサイクル可能な貴重な資源です。
ご使用済みの製品の廃棄に際しては、リチウムイオン充電池を取り出し、各自治体の処理方法に従い、リサイクル協力店にお持ちください。

Li-ion

⚠ 注意
- ●製品を廃棄するとき以外は、絶対に本体を分解しないでください。
- ●本体内部の金具は鋭いので、ご注意ください。

充電池の取り外しかた

電源をONにして、完全に動作しなくなるまで充電池を放電させてから、行ってください。

1 本体よりシェービングユニットを取り外します。

2 本体上部に空いている穴と銀色のリングのすき間にドライバーをこじ入れてカバーをはずします。



3 ドライバーを使い本体上部のねじ2本をはずし、内側のカバーを取り外します。シェーバー本体のバックカバーをはずし、モーターユニットを取り出します。

4 モーターユニットにある2つのねじをドライバーではずします。

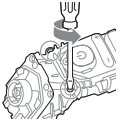

5 モーターユニットにある左右3つずつ、計6つのツメをはずし、カバーを開けます。



6 モーターユニットから充電池ホルダーを持ち上げて取り出します。



7 充電池ホルダーのツメをはずし、充電池を取り出します。

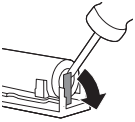

※充電池を取り外した後は、通電しないでください。
※ショートしないように充電池の端子をテープで覆ってください。
※充電池を取り出した後の製品の廃棄については、お住まいの地域の条例などに従って処分してください。

故障かな?と思ったら

故障かな?と思ったら、
お調べください。

だんだん切れ味が悪くなった

▶シェービングヘッド部が汚れていないか確認してください。
▶シェービングヘッド部が損傷または摩耗していないか確認してください。
損傷または摩耗しているときは、シェービングヘッドを交換してください
(替刃品番:SH98/71、SH98/81)。
▶シェービングヘッドに長いヒゲがからまっていないか確認してください。

充電しても使用時間が極端に短い

▶シェーバーが完全に止まるまで作動させてから、もう一度充電してください。
それでも改善されないときは、充電池の寿命です。

シェーバーの電源ボタンを押しても作動しない

▶充電がされていない場合は1時間以上の充電をしてください。
▶カギマーク が表示する場合はロックを解除してください。
▶3つのマーク が一度に点滅する場合は刃が動かなくなるほど汚れているか、破損を示す表示です。
▶シェーバーをワイヤレス充電パッドの上に置いたままの場合は、本製品をワイヤレス充電パッドからはずして、電源を入れてください。
▶刃が破損している場合は交換をしてください。

シェーバー本体のモーターは回転しているが、内刃が回転しない

▶外刃にキズ、ヘコミがある場合はシェービングヘッドを交換してください
(替刃品番:SH98/71、SH98/81)。

充電できない

▶シェーバー本体がワイヤレス充電パッド上の正しい位置に置かれているか確認してください。
▶USB電源アダプタの電源プラグ部はコンセントにきちんと差し込まれて確認してください。また、USB電源アダプタのUSBコネクタ受部にワイヤレス充電パッドのUSBコネクタがきちんと差し込まれているか確認してください。
▶ワイヤレス充電パッドの電源コードが断線している場合は、フィリップスサポートセンターにお問い合わせいただき、同型ワイヤレス充電パッド(品番:HQ8510、HQ8509)をご注文ください。

洗顔中、洗顔後に刺激を感じる

▶肌、洗顔ブラシを濡らしても刺激を感じる場合は、洗顔料を多めにご使用ください。
▶洗顔ブラシを肌に強く当てず、洗顔ブラシの先端が肌にそっと触れる程度当ててください。
▶1日2回よりご利用頻度を低くしてお試しください。
▶肌が乾燥していると肌本来のバリア機能が弱まり刺激を感じることがあります。

洗顔ブラシが汚れている

▶洗顔ブラシはご使用の都度、水ですすいでください。

洗顔ブラシが動かないのにシェーバー本体から音がする、異音がする

▶洗顔ブラシ取付部に、カチッと音がするまで押し付けセットします。

以上の点検により、正常な状態に戻らない場合は、
フィリップスサポートセンターにお問い合わせください。

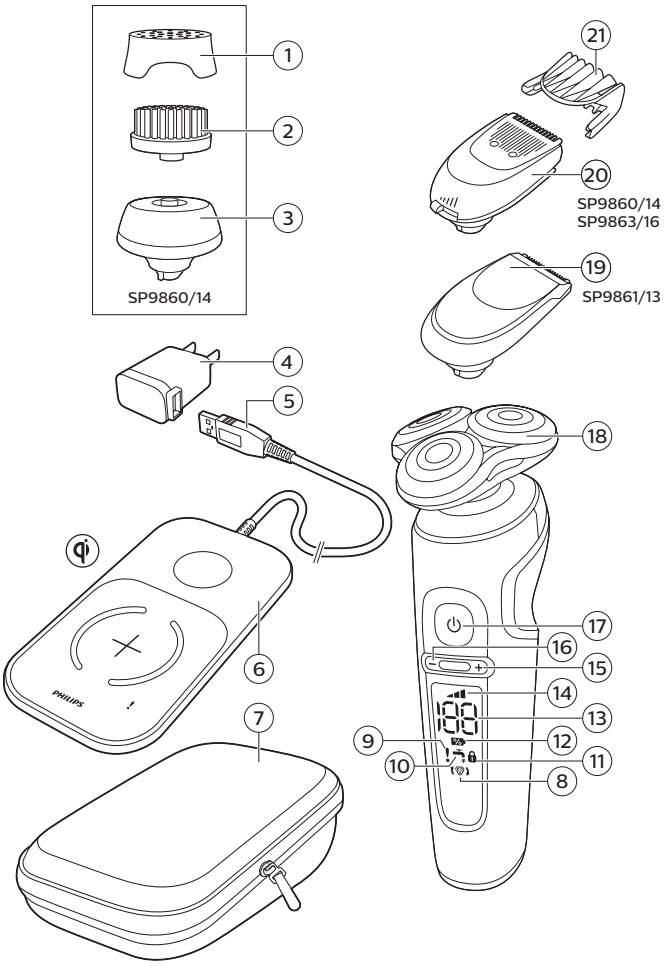
1
2
3
SP9860/14
21
20
SP9860/14
SP9863/16
19
SP9861/13
4
5
18
17
16
15
14
13
12
11
10
9
8
6
7
PHILIPS

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at

www.philips.com/welcome.

Please read this user manual, as it contains information about the features of this shaver as well as some tips to make shaving easier and more enjoyable.

General description (Fig. 1)

1 Protection cap for cleansing brush attachment
2 Click-on cleansing brush attachment
3 Attachment holder
4 Supply unit
5 USB plug
6 Wireless charger
7 Pouch
8 Replacement reminder
9 Notification symbol
10 Cleaning reminder
11 Travel lock symbol
12 Battery charge indicator
13 Battery charge percentage
14 Personal comfort settings bar
15 Personal comfort settings decrease button
16 Personal comfort settings increase button
17 On/off button
18 Shaving unit with hair chamber
19 Click-on precision trimmer attachment
20 Click-on beard styler attachment
21 Comb for beard styler attachment

The accessories supplied may vary for different products. The box shows the accessories that have been supplied with your appliance.

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

Danger

- Keep the supply unit dry.

Warning

- The appliance is a Class III construction.
- To charge the battery, only use the detachable supply unit and charging pad (supply unit, type HQ87. Charging pad, type HQ8509 or HQ8510) provided with the appliance.
- Do not use an USB extension cord.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always check the appliance and its attachments before you use it. Do not use the appliance or its attachments if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

- Do not open the appliance to replace the rechargeable battery.
- The charging pad is not intended for use in a car. It may interfere with the automotive electronic systems.

Caution

- Never immerse the charging pad in water, nor rinse it under the tap.
- Always make sure the charging pad is completely dry before you connect it to the wall socket.
- Never use water hotter than 60°C to rinse the shaver.
- Only use this appliance for its intended purpose as shown in the user manual.
- For safety reasons, do not use the shaver while you drive a car.
- For hygienic reasons, the appliance should only be used by one person.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive

liquids such as petrol or acetone to clean the appliance.
- Do not put the appliance or any part in the dishwasher.
- Water may trickle out of the shaver after you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.
- Do not use the appliance on chapped skin, open wounds, healing wounds, skin recovering from surgery or if you suffer from a skin disease or skin irritation, such as severe acne, sunburn, skin infection, skin cancer, inflammation, eczema, psoriasis, nylon allergy etc.
- Do not use the appliance if you are taking steroid-based medication.
- If you wear piercings on your face, remove the piercings before you use the click-on attachments or make sure that you do not use the appliance on or near the piercing.

- If you wear jewelry, contact lenses or glasses, remove them before you use the click-on attachments, or make sure that you do not use the appliance on or near jewelry or glasses.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General

- This shaver is waterproof. It is suitable for use in the bath or shower and for cleaning under the tap.
- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.
- The supply unit transforms 100-240 volts to a safe low voltage of less than 24 volts.

The display

Note: Remove any sticker or protective foil from the display before using the product.

Charging

When the shaver is charging, the ring on the pad lights up and the battery charge indicator on the shaver flashes white.The battery charge is indicated by the battery charge percentage flashing on the display, which is shown when the shaver is moved.Quick charge: After approx. 18 minutes charging, the appliance contains enough energy for one shave.

Battery fully charged

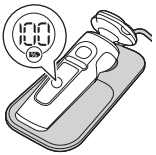

When the battery is fully charged, the battery charge indicator and the ring on the pad light up white continuously.

Note: Both lights switch off automatically after 15 minutes.

The battery charge percentage lights up white continuously, which is shown when the shaver is moved.

Battery low

When the battery is almost empty, the battery charge indicator flashes orange and the shaver beeps. At this point there is enough energy left for one shave..

Remaining battery charge

The remaining battery charge is indicated by the battery charge percentage shown on the display.

Personal comfort settings

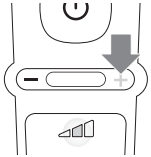

The shaver has a feature that allows you to personalize your settings. Depending on your personal shaving needs, choose between three settings, from low to high: comfort, dynamic or efficiency. When you press the button on the left or right of the display, the segment of the personal comfort settings bar lights up to indicate the selected setting. To select a lower or higher setting, press the button on the left or right of the display.

Cleaning reminder

Clean the shaver after every shave for optimal performance (see 'Cleaning and maintenance'). When you switch off the shaver, the cleaning reminder flashes to remind you to clean the shaver.

Travel lock

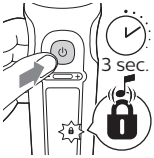

When you are going to travel, you can lock the shaver to prevent it from turning on accidentally.

Replacement reminder

For maximum shaving performance, replace the shaving heads every two years. The shaver is equipped with a replacement reminder which reminds you to replace the shaving heads. The shaver beeps, the replacement reminder lights up and the arrows flash to indicate that you have to replace the shaving heads.
Note: After replacing the shaving heads, you can reset the replacement reminder by pressing the on/off button for 7 seconds. If you do not reset the replacement reminder, the shaver resets automatically after 9 shaves.

Notification symbol

Overheating

If the shaver overheats during charging, the exclamation mark flashes. When this happens, the shaver stops charging automatically. Charging continues once the temperature of the shaver has decreased to the normal level after approx. 10 minutes.

Blocked shaving heads

If the shaving heads are blocked, the notification symbol lights up red continuously. The replacement reminder and the cleaning reminder flash white alternately and the shaver beeps.
In this case, the motor cannot run because the shaving heads are soiled or damaged. If the shaving heads are soiled, you have to clean them. If the shaving heads are damaged, you have to replace them.

Foreign object on Wireless charger

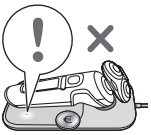

If there is a foreign (metal) object on the Wireless charger during charging, the notification symbol on the Wireless charger lights up. The Wireless charger switches off automatically and restarts 5 minutes after the foreign object has been removed.

Do not place any foreign (metal) objects on the Wireless charger. Only use the Wireless charger to charge the shaver or another device (e.g. smartphone) compliant with Qi charging.

Charging

Charge the shaver before you use it for the first time and when the display indicates that the battery is almost empty.

Charging takes approx. 3 hours. A fully charged shaver has a shaving time of up to 60 minutes.

Note: You cannot use the shaver while it is charging.

Quick charge

After approx. 18 minutes of charging the shaver contains enough power for one shave.

Charging with the Wireless charger

Note: The Wireless charger is Qi compliant. Only charge the Qi compatible shaver or other Qi charging compliant appliances on the Wireless charger provided.

Note: Carefully shake off excess water before placing the shaver on the Wireless charger.

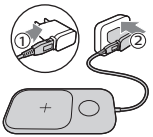

1 Put the USB plug in the supply unit supplied.

2 Put the supply unit in the wall socket.

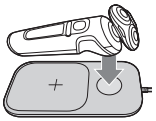

3 Place the shaver on the cross mark of the Wireless charger. Make sure the shaver fits into the cavity of the Wireless charger.

Only charge the shaver on the provided Wireless charger.

- The Wireless charger beeps and the ring on the pad lights up when the shaver is correctly placed and connected for charging.

- When the shaver is charging, the ring on the pad lights up and the battery charge indicator on the shaver flashes white. The battery charge is indicated by the battery charge percentage flashing on the display, which is shown when the shaver is moved.

4 When the battery is fully charged, the battery charge indicator and the ring on the pad light up white continuously. Both lights switch off automatically after 15 minutes.

Using the shaver

Always check the shaver and all accessories before use. Do not use the shaver or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

This symbol indicates that the shaver can be used in the bath or shower.

- Use this shaver for its intended household use as described in this manual.
- For hygienic reasons, the shaver should only be used by one person.
- Trimming is easier when the skin and hair are dry.

Note: This shaver is waterproof. It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the shaver can therefore only be used without charging cord.

Switching the shaver on and off

1 To switch on the shaver, press the on/off button once.The battery charge percentage lights up for a few seconds.

2 To switch off the shaver, press the on/off button once.The battery charge percentage lights up for a few seconds and shows the remaining battery charge.

Shaving

Skin adaptation period

Your first shaves may not bring you the result you expect and your skin may even become slightly irritated. This is normal. Your skin and beard need time to adapt to any new shaving system. To allow your skin to adapt to this new appliance, we advise you to shave regularly (at least 3 times a week) and exclusively with this appliance for a period of 3 weeks.

Shaving tips

- For the best results on skin comfort, pre-trim your beard if you have not shaved for 3 days or longer.
- Select your personal comfort setting (see 'Personal comfort settings').

Dry shaving

1 Switch on the shaver.

2 Move the shaving heads over your skin in circular movements to catch all hairs growing in different directions. Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: Do not press too hard, this can cause skin irritation.

3 Switch off and clean the shaver after each use. The display lights up for a few seconds to show the remaining battery charge.

Wet shaving

For a more comfortable shave, you can also use this shaver on a wet face with shaving foam or shaving gel.

1 Apply some water to your skin.

2 Apply shaving foam or shaving gel to your skin.

3 Rinse the shaving unit under the tap to ensure that the shaving unit glides smoothly over your skin.

4 Switch on the shaver.

5 Move the shaving heads over your skin in circular movements to catch all hairs growing in different directions. Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: Do not press too hard, this can cause skin irritation.

Note: Rinse the shaving unit regularly to ensure that it continues to glide smoothly over your skin.

6 Dry your face.

7 Switch off the shaver and clean it after each use.

Note: Make sure that you rinse all foam or shaving gel off the shaver.

Using click-on attachments

It is recommended not to use the click-on cleansing brush attachment directly after shaving to prevent skin irritation.

Removing or attaching click-on attachments

1 Make sure the shaver is switched off.

2 Pull the attachment straight off the shaver.

Note:Do not twist the attachment while you pull it off the shaver.

3 Insert the lug of the attachment into the slot in the top of the shaver. Then press down the attachment to attach it to the shaver(‘click’).

Attachment holder

Note: Attach the click-on cleansing brush attachment on the attachment holder first, before you place the attachment onto the appliance.



1 Place the click-on attachment onto the attachment holder until it locks into position with a click.

Using the precision trimmer attachment

You can use the precision trimmer attachment to touch up your beard, sideburns and moustache.

1 Attach the attachment to the appliance ('click').

2 Switch on the appliance.

3 Hold the precision trimmer perpendicular to the skin and move it downwards while exerting gentle pressure.

4 Switch off the appliance and clean the attachment after use (see 'Deactivating the travel lock').

Using the beard styler attachment with comb

You can use the beard styler with the comb attached to style your beard at one fixed setting, but also at different length settings. You can also use it to pre-trim any long hairs before shaving for a more comfortable shave.

Note: The beard styler is only intended for trimming facial hair. Do not use on areas below the neck.

The length settings on the beard styler attachment correspond to the remaining hair length after cutting and range from 1 to 5mm (3/64 - 3/16in).

1 Attach the attachment to the appliance ('click').

2 Slide the comb straight into the guiding grooves on both sides of the beard styler attachment ('click').

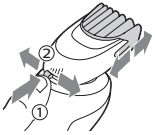

3 Press the length selector and then push it to the left or right to select the desired hair length setting.

4 Switch on the appliance.

5 Move the appliance upwards while you exert gentle pressure. Make sure the front of the comb is in full contact with the skin.

6 Clean the attachment after use.

Using the beard styler attachment without comb

You can use the beard styler attachment without the comb to contour your beard, moustache, sideburns or neckline to a length of 0.5mm (1/32 in).

Note: The beard styler is only intended for trimming facial hair. Do not use on areas below the neck.

1 Pull the comb off the beard styler attachment.

Note: Grab the comb in the center to pull it off the beard styler attachment. Do not pull at the sides of the comb.

2 Switch on the appliance.

3 Hold the beard styler attachment perpendicular to the skin and move the appliance downwards while you exert gentle pressure.

4 Clean the attachment after use.

Using the cleansing brush attachment

Note: For better shaving results, use the click-on cleansing brush attachment before shaving.

Use the rotating cleansing brush with your daily cleansing cream. The cleansing brush removes oil and dirt, contributing to a healthy and oil-free skin. We advise you to use it no more than twice a day. Start with the lowest personal comfort setting to familiarize yourself with the attachment.

Do not use the appliance on damaged or irritated skin or on wounds.

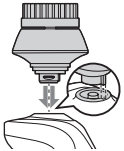

1 Place the attachment on the attachment holder.

2 Attach the attachment to the appliance (‘click’).

3 Moisten the attachment with water.

Note: Do not use the appliance with a dry cleansing brush attachment, as this can irritate the skin.

4 Moisten your face with water and apply a cleanser to your face.

5 Place the attachment on your cheek.

6 Switch on the appliance.

7 Gently move the brush across your skin from the nose towards the ear. Do not push too hard onto the skin to make sure that the treatment remains comfortable.

Note: Do not cleanse the sensitive area around your eyes.

8 After approx. 20 seconds, move the appliance to your other cheek and start cleansing this part of your face.

9 After approx. 20 seconds, move the appliance to your forehead and start cleansing this part of your face. Gently move the brush head from left to right.

Note: We advise you to not overdo the cleansing and to not cleanse any zone longer than 20 seconds.

10 Switch off the appliance and clean the attachment after use.

11 After the treatment, rinse and dry your face. Your face is now ready for the next step of your daily skincare routine.

Travel lock

You can lock the shaver when you are going to travel to prevent it from turning on accidentally.

Activating the travel lock

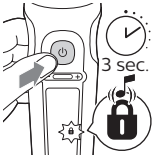

1 Press the on/off button for 3 seconds to enter the travel lock mode.
While you activate the travel lock, the travel lock symbol lights up briefly and the shaver produces a short sound. When the travel lock is activated, the travel lock symbol flashes.

If you try to switch on the shaver while the travel lock is active, the travel lock symbol flashes.

Deactivating the travel lock

1 Press the on/off button for 3 seconds.
While you deactivate the travel lock, the travel lock symbol lights up briefly and the shaver produces a short sound. The shaver switches on and is now ready for use again.
Note: The shaver unlocks automatically when it is placed on the Wireless charger.

Cleaning and maintenance

Regular cleaning guarantees better shaving results.

Never clean, remove or replace the shaving unit while the shaver is switched on.

Do not apply pressure to shaving head guards.

Do not touch shaving heads with hard objects as this may dent or damage the precision-made slotted guards.

Do not use abrasives, scourers or aggressive liquids such as petrol or acetone to clean the shaver.

Cleaning the shaver under the tap

Clean the shaver after every shave for optimal performance.

Always check if the water is too hot, to prevent burning your hands.

Never dry the shaving unit with a towel or tissue, as this may damage the shaving heads.

While rinsing the shaving unit, water may drip out of the bottom of the shaver. This is a normal occurrence.

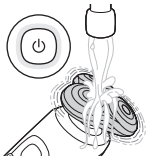

1 Switch on the shaver.

2 Rinse the shaving unit under a warm tap.

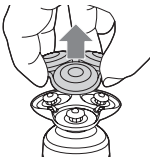

3 Switch off the shaver. Pull the shaving head holder off the bottom part of the shaving unit.

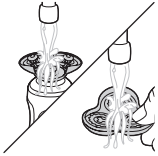

4 Rinse the hair chamber and shaving head holder under the tap.

While rinsing the shaving unit, water may drip out of the bottom of the shaver. This is a normal occurrence.

5 Carefully shake off excess water and let the shaving head holder air-dry completely.

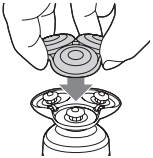

6 Attach the shaving head holder to the bottom part of the shaving unit ('click').

Thorough cleaning

We advise you to clean the shaving heads thoroughly once a month or when the shaver does not shave as well as it used to.

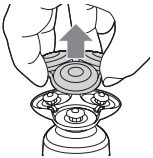

1 Switch off the shaver.

2 Pull the shaving head holder off the bottom part of the shaving unit.

3 Rinse the hair chamber and shaving head holder under the tap.

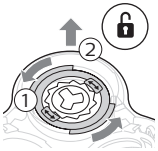

4 Turn the retaining ring anticlockwise and lift it off the shaving head.Repeat this process for the other retaining rings. Place them aside in a safe place.

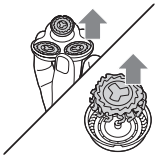

5 Remove the shaving heads from the shaving head holder. Each shaving head consists of a cutter and guard.

Note: Do not clean more than one cutter and guard at a time, since they are all matching sets. If you accidentally put a cutter in the wrong shaving guard, it may take several weeks before optimal shaving performance is restored.

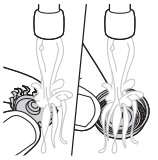

6 Clean the cutter and guard under the tap.

7 Shake off excess water.

8 Put the cutter back into the guard.

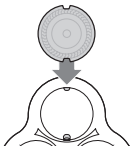

9 Place the shaving heads in the shaving head holder.

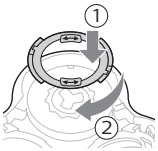

10 Place the retaining ring on the shaving head.

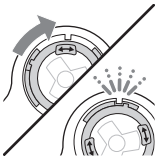

11 Align the arrows on the retaining ring with the projections in the shaving head holder. Turn the ring clockwise until it clicks to indicate that the ring is fixed.

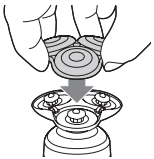

12 Attach the shaving head holder to the bottom part of the shaving unit ('click').

Cleaning the trimmer attachment

Never dry the trimmer with a towel or tissue, as this may damage the trimming teeth.

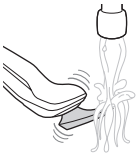

Clean the trimmer attachment after each use.

1. Switch on the appliance with the precision trimmer attachment attached.
2. Rinse the attachment under a warm tap.
3. After cleaning, switch off the appliance.
4. Carefully shake off excess water and let the attachment air-dry completely.

Tip: For optimal performance, lubricate the teeth of the attachment with a drop of sewing machine oil regularly.

Cleaning the beard styler attachment

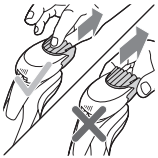

Clean the beard styler attachment after each use.

1 Pull the comb off the beard styler attachment.

Note: Grab the comb in the center to pull it off the beard styler attachment . Do not pull at the sides of the comb.

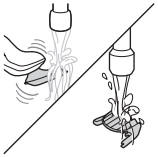

2 Rinse cut hairs off the cutting unit with lukewarm water.

3 Rinse cut hairs off the comb.

4 Remove the cutting unit from the beard styler attachment. By pushing the cutting unit off the beard styler attachment, you can remove any hairs that have accumulated inside the beard styler attachment. You can also rinse the bottom of the cutting unit.

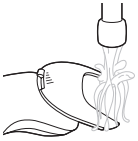

5 Rinse cut hairs out of the beard styler attachment.

6 Carefully shake off excess water and leave the comb, cutting unit and beard styler attachment to air-dry before you use them again.

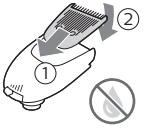

7 When the cutting unit is dry, attach it to the beard styler attachment.

8 When the comb is dry, attach it to the beard styler attachment.

9 For optimal performance, lubricate the teeth of the attachment with a drop of sewing machine oil regularly.

Cleaning the cleansing brush

Clean the attachment after each use.



1 Switch off the appliance.

2 Remove the attachment from the attachment holder.

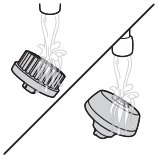

3 Clean the parts thoroughly with warm water.

4 Dry the attachment with a towel.

Replacement

Replacing the shaving heads

For maximum shaving performance, we advise you to replace the shaving heads every two years. Replace damaged shaving heads immediately.

Always replace the shaving heads with original Philips shaving heads (see 'Ordering accessories').

Replacement reminder

The replacement reminder indicates that the shaving heads need to be replaced. The shaving unit symbol lights up continuously, the arrows flash white and you hear a beep when you switch the shaver on or off.

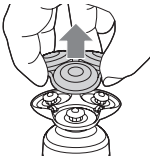

1 Switch off the shaver. Pull the shaving head holder off the bottom part of the shaving unit.

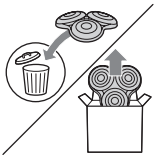

2 Discard the old shaving head holder and attach the new shaving head holder to the bottom part of the shaving unit (‘click’).

3 After replacing the shaving heads, you can reset the replacement reminder by pressing the on/off button for 7 seconds. Wait until your hear 3 beeps.

If you do not reset the replacement reminder, the shaver resets automatically after 9 shaves.

Replacing the cleansing brush attachment (FC)



The cleansing brush attachment should be replaced every 3 months or earlier if the brush hairs are bent or damaged (see 'Ordering accessories').

Storage

Store the shaver in the pouch.

Note: Always let the shaver dry completely before you store it in the pouch.

Ordering accessories

To buy accessories or spare parts, visit **www.shop.philips.com/service** or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

The following accessories and spare parts are available:

- SH98 Philips shaving heads
- HQ110 Philips shaving head cleaning spray
- RQ111 Philips beard styler attachment
- RQ585 Philips cleansing brush attachment
- RQ560 Philips cleansing brush attachment
- RQ563 Philips cleansing brush attachment 3-pack
- HQ87 USB supply unit
- HQ8509, HQ8510 Wireless charger

Note: The availability of the accessories may differ by country.

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- This product contains a built-in rechargeable battery which shall not be disposed of with normal household waste. Please take your product to an official collection point or a Philips service center to have a professional remove the rechargeable battery.
- Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposal helps prevent negative consequences for the environment and human health.

Removing the rechargeable shaver battery

Only remove the rechargeable battery when you discard the shaver. Before you remove the battery, make sure that the shaver is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the shaver and when you dispose of the rechargeable battery.

1 Remove the click-on attachment from the appliance.

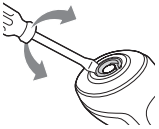

2 On top of the appliance insert a screwdriver between the black cylinder and silver ring. Force the silver ring up off the appliance and remove the top panel.

3 Unscrew the two screws and remove the frame.

4 Remove the two back black covers and slide the front housing off the appliance.

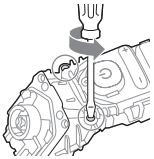

5 Unscrew the two screws at the top of the inner panel.

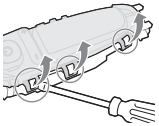

6 Place a screwdriver between the lips of the inner panel and bend them aside. Then remove the inner panel.



7 Lift out the printed circuit board with the rechargeable battery.

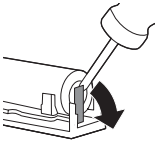

8 Bend the battery tags aside with a screwdriver.

9 Remove the rechargeable battery.

Warranty and support

If you need information or support, please visit **www.philips.com/support** or read the international warranty leaflet.

Warranty restrictions

The shaving heads (cutters and guards) are not covered by the terms of the international warranty because they are subject to wear.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit **www.philips.com/support** for a list of frequently asked questions or contact the Consumer Care Center in your country.

Shaver

Problem	Possible cause	Solution
The appliance does not work when I press the on/off button.	The appliance is still placed on the Wireless charger.	Remove the appliance from the Wireless charger and press the on/off button to switch on the appliance.
	The rechargeable battery is empty.	Recharge the battery (see 'Charging').
	The travel lock is activated.	Press the on/off button for 3 seconds to deactivate the travel lock.
	The shaving unit is soiled or damaged to such an extent that the motor cannot run.	Clean the shaving heads thoroughly or replace them.

Problem	Possible cause	Solution
The appliance does not shave as well as it used to.	The shaving heads are damaged or worn.	Replace the shaving heads (see 'Replacement').
	Hairs or dirt obstruct the shaving heads.	Clean the shaving heads in the regular way or clean them thoroughly.
I replaced the shaving heads, but the display still shows the replacement reminder.	You have not reset the appliance.	Reset the appliance by pressing the on/ off button for approx. 7 seconds.
A shaving unit symbol has suddenly appeared on the display.	This symbol reminds you to replace the shaving heads.	Replace the shaving heads (see 'Replacement').
The notification symbol flashes and the shaver beeps while the shaver is charging.	The appliance is overheated.	When this happens, the shaver stops charging automatically. Charging continues once the temperature of the shaver has decreased to the normal level after approx. 10 minutes.
The notification symbol flashes and the shaver beeps when I try to shave.	The shaving heads are soiled.	Clean the shaving heads (see 'Cleaning and maintenance').
The notification symbol flashes and the shaver beeps after cleaning the shaving heads.	The shaving heads are damaged.	Replace the shaving heads (see 'Replacement').

Problem	Possible cause	Solution
Water is leaking from the bottom of the appliance.	During cleaning, water may collect between the inner body and the outer shell of the appliance.	This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the appliance.

Click-on attachments

Problem	Possible cause	Solution
I do not know if the appliance is suitable for use on my skin.		Do not use the appliance on dry, chapped skin, open wounds, healing wounds, skin recovering from surgery or if you suffer from a skin disease or skin irritation, such as severe acne, sunburn, skin infection, skin cancer, inflammation, eczema, psoriasis etc. Do not use the appliance if you are taking steroid-based medication.

Problem	Possible cause	Solution
I don't know which facial attachments I can use with the appliance.		All attachments provided with this appliance can be used with this appliance. To find out more about the range of attachments, consult our website www.shop.philips.com or the shop where you purchased your Philips appliance. If you have any difficulties obtaining information, please contact the Philips Consumer Care Center in your country. You find its contact details in the international warranty leaflet. You can also visit www.philips.com/support.
The cleansing brush attachment feels too harsh on my skin.		Start with the lowest personal comfort setting to familiarize yourself with the attachment.
I don't know with which cleansing products I can use the cleansing brush attachment.		We advise you to cleanse your skin with your favorite cleanser. You can use cleansing gel, foam, oil, milk or lotions. Please do not use scrub cream or gel with particles.
The click-on attachment do not fit on the appliance.		Attach the cleansing brush attachment on the attachment holder, before placing it on the appliance.

保証と アフターサービス

保証書と修理サービスについて（必ずお読みください）

〈保証書・最終ページに付属〉

- 保証書は、必ず「お買い上げ日・販売店名」等の記入をお確かめのうえ、販売店から受け取っていただき内容をよくお読みのあと大切に保管してください。

保証期間	お買い上げ日から2年間
対象部分	本体、USB電源アダプタ、ワイヤレス充電パッド（シェービングユニット、ヒゲスタイラーアタッチメント、トリマー、洗顔ブラシヘッドを除く）

【補修用性能部品の保有期間】

- 補修用性能部品の保有期間は製造打ち切り後6年です。
- 性能部品とは、その製品の機能を維持するために必要な部品です。

【ご不明な点や修理に関するご相談は】

- 修理に関するご相談ならびにご不明な点は、フィリップスサポートセンターにお問い合わせください。

【修理を依頼されるときは】

- 修理をご依頼される前に、この取扱説明書をよくお読みいただき、再度点検ください。尚、異常のあるときはご使用を中止し、フィリップスサポートセンターにお問い合わせください。

【保証期間中は】

- 製品と保証書をご用意いただき、フィリップスサポートセンターにお問い合わせください。保証書の記載内容により無料修理いたします。

【保証期間が過ぎているときは】

- 修理によって商品の機能が維持できる場合は、補修用性能部品の保有期間内であれば、ご希望により有料で修理させていただきます。

【海外での本製品の保証及びアフターサービスについて】

- 本製品の保証は海外においても有効です。（同シリーズ製品の取り扱いがある国に限ります）
- 日本国以外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができますが、この場合多少日数を要することもあります。
- 海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お困りの点がございましたら下記までご連絡ください。

  Philips Service Department P.O.Box20100, 9200 CA DRACHTEN, The Netherlands,
  Fax+31 512 594316 For email visit:www.philips.com/support

【お客様の個人情報のお取り扱いについて】

- お受けしましたお客様の個人情報は、株式会社フィリップス・ジャパンのホームページ http://www.philips.co.jp/ に掲載されている「プライバシーに関する通知」に基づき適切に管理いたします。

便利メモ

お買い上げ日	年　月　日	お買い上げ店名	TEL.　(　　)

ご使用の時、このような症状はありませんか?

- 本体にさわると時々電気を感じる。
- こげくさい臭いがする。
- 電源コード部を動かすと通電したり、しなかったりする。
- その他の異常、故障がある。

このような症状の時は、故障や事故防止のため、電源をOFFにし、充電アダプタをコンセントから外して、必ずフィリップスサポートセンターにお問い合わせください。

仕　様

品番	SP9860/14	SP9863/16	SP9861/13
ハンドル品番	SP9860	SP9863	SP9861
替刃品番	SH98/71	SH98/81	
USB電源アダプタ品番	HQ87		
ワイヤレス充電パッド品番	HQ8510	HQ8509	
本体寸法（高さ×幅×奥行）	約169×60×69mm		
質量	約187g		
電源方式	充電式（専用ワイヤレス充電パッド使用）		
定格電圧	AC100-240V (50/60Hz)		
充電時間	約3時間		
使用時間	約60分		
使用充電池	リチウムイオン充電池 (Li-ion)		
消費電力	11W (AC100V充電時)		
ヒゲスタイラーアタッチメント	RQ111/61		—
替洗顔ブラシ品番	RQ560/51	—	

※改良の為、仕様を予告なく変更することがあります。

株式会社 フィリップス・ジャパン

〒108-8507 東京都港区港南 2-13-37 フィリップスビル

PHILIPS

キリトリ線

無料修理規定

〈無料修理規定〉

1. 取扱説明書、本体貼付ラベル等の注意書に従った正常な使用状態で保証期間内に故障した場合には、無料修理します。
2. 保証期間内に故障して無料修理をお受けになる場合には、フィリップスサポートセンターにお問い合わせください。
3. ご贈答品の修理に関するご相談は、フィリップスサポートセンターにお問い合わせください。
4. 保証期間内でも次の場合には有料修理になります。
   ① 使用上の誤り及び不当な修理や改造による故障及び損傷。
   ② お買い上げ後の輸送、移動、落下等による故障及び損傷。
   ③ 火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障及び損傷。
   ④ 一般家庭以外(例えば、業務用の長時間使用)に使用された場合の故障及び損傷。
   ⑤ 保証書の提示がない場合。
   ⑥ 保証書にお買い上げ年月日、お客様名、販売店名の記入のない場合、或は字句を書き換えられた場合。

※ 保証書は、本書に明示した条件のもとにおいて無料修理をお約束するものです。従って保証書を発行している者(保証責任者)、及びそれ以外の事業者に対するお客様の法律上の権利を制限するものではありません。
保証期間経過後の修理についてご不明の場合は、フィリップスサポートセンターにお問い合わせください。

※ 保証期間経過後の修理・補修用性能部品の保有期間について詳しくは取扱説明書の保証とアフターサービスの項目をご覧ください。

※ お客様にご記入いただいた個人情報(保証書の控え)は保証期間内のサービス活動及びその後の安全点検活動のために利用させていただく場合がございます。ご了承ください。また個人情報は、株式会社フィリップス・ジャパンのホームページ http://www.philips.co.jp/ に掲載されている「プライバシーに関する通知」に基づき適切に管理いたします。

キリトリ線

フィリップス 電動シェーバー 保証書

CERTIFICATE OF PURCHASE

この保証書は、「無料修理規定」記載内容で無料修理を行うことをお約束するものです。お買い上げの日から下記期間中に故障が発生した場合は、フィリップスサポートセンターにお問い合わせください。
お客様にご記入いただいた個人情報（保証書の控え）は、株式会社フィリップス・ジャパンのホームページ http://www.philips.co.jp/に掲載されている「プライバシーに関する通知」に基づき適切に管理いたします。

品　　名	電動シェーバー
品　　番	SP9860/14, SP9863/16, SP9861/13
保 証 期 間	お買い上げ日より2年
対 象 部 分	本体、USB電源アダプタ、ワイヤレス充電パッド（シェービングユニット、ヒゲスタイラーアタッチメント、トリマー、洗顔ブラシヘッドを除く）
お買い上げ日	年　　月　　日
お 客 様	ご住所 〒
	ご芳名
	電話番号
★ 販 売 店	販売店名・住所・電話番号

★ 保証書は再発行しませんので、大切に保管してください。
★ ご販売店様へ この保証書はお客様へのアフターサービスの実施と責任を明確にするものです。贈答品、記念品の場合も含めて必ず記入捺印してお客様にお渡しください。

★ 製品の使用方法や修理に関するお問い合わせ

フィリップスサポートセンター

0120（944）859

受付時間:9:00～18:00（年末年始除く）

Webからのお問い合わせ

MyPhilips 登録のご案内

フィリップスでは、製品をより快適にご使用いただくために製品登録をおすすめしております。
MyPhilipsでは製品の保証書や購入証明書の写真も保管でき、万が一購入証明書を紛失された場合にも安心です。

URL http://www.philips.co.jp/myphilips-about

この印刷物は再生紙を使用しております。

3000.054.3178.1(05/21)

©2021 Philips Japan, Ltd.

キリトリ線

キリトリ線