



フィリップス 鼻毛・耳毛トリマー
品番 NT1120/15


取扱説明書
保証書付

保証書は、この取扱説明書と併せてお読みください。お読みになった後は、お使いになる方がいつでも見られるところに必ず保管してください。



●商品のご確認

商品をご確認ください。

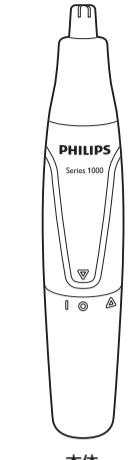

本体

目次

- ① 必ずお守りください
- ② 各部の名称
- ③ 乾電池の入れ方
- ④ トリミングヘッドの取り付け・取り外し
- ⑤ 基本的な使い方
- ⑥ トリミングの仕方
- ⑦ お手入れ方法
- ⑧ 保管の仕方
- ⑨ 製品を廃棄するとき
- ⑩ 故障かな?と思ったら
- ⑪ 保証とアフターサービス
- ⑫ 仕様
- ⑬ 無料修理規定
- Guidance in English

©2018 Philips Japan, Ltd.
4222.002.8906.1 (02/18)

① 必ずお守りください

安全上のご注意

●ここに示した注意事項は、安全に関する重要な内容ですので、必ず守ってください。

○絞表示について

記号は、「注意」を示します。
図の中や近くに具体的な注意内容を示します。

△注意

人が傷害を負う可能性及び物的損害のみの発生が想定される内容。

○絞表示の例

- 記号は、してはいけない「禁止」を示します。図の中や近くに具体的な禁止内容(左図の場合は分解禁止)を示します。
- 記号は、必ずしていただく「強制」を示します。図の中や近くに具体的な強制内容(右図の場合は電源プラグをコンセントから抜くこと)を示します。

△ 注意

- 炎症やアレルギー症状が見られた場合は、直ちにご使用をおやめください。過敏肌や炎症肌の方はご使用にならないでください。
- 乳幼児の手の届くところに本製品を置かないでください。
- 本製品は、鼻毛・耳毛をカットするためのものです。それ以外の目的で使用しないでください。
- 本体を改造しないでください。また、修理技術者以外の人は、分解したり修理しないでください。火災、感電、ケガの原因となります。修理はお買い上げの販売店または小泉成器修理センターにご相談ください。
- 自分で意思表示できない人(幼児を含む)に使用させないでください。また、お体の不由自らなだけでは使用しないでください。
- 刃は強く押さえないでください。破損して皮膚を傷つけることがあります。
- 本体を落としたり、ぶつけたりしないでください。ケガや故障の原因になります。
- 使用の前に刃の形状や破損がないか確認してください。肌を傷つけることがあります。
- 本体が破損または故障した場合は、本製品を使用しないでください。ケガの原因になります。交換の際には必ずフィリップス社製の同型部品とお取り替えください。
- 乾電池を表示している注意内容は必ずお守りください。
乾電池は、電子子の働きを止め、正しく入れてください。
- 使用しないときは、乾電池を取り出してください。
- 長期間使用しない場合は、乾電池の寿命が短くなります。
- 使用済み乾電池の内乾電池を使用してください。
- 乾電池を火の中に投入したり、ショートしないでください。
乾電池の発熱、破裂、漏液によるケガや周囲汚損の原因になります。


④ トリミングヘッドの取り付け・取り外し

使用上のご注意


- 1 本製品の使用、保管は室温15℃～35℃の環境下で行ってください(尚、低温や高温で使用すると、乾電池の寿命が短くなります)。
- 2 室温、気圧、湿度が急激に変化する状況でご使用になる場合は、本製品をその環境下で30分ほど慣らしてからお使いください。
- 3 直射日光の当たる場所には保管しないでください。夏場、車の中には放置しないでください。
- 4 刃は、薄く仕上げてありますので、刃部を強く押さえたり、硬いものに当たらないよう、ていねいに扱ってください。
- 5 トリミングヘッドの着脱は必ずスイッチを切ってから行ってください。
- 6 切れ味が衰えてきた場合は、必ず新しい同型部品と交換してください。
- 7 本製品は、使用的度数、掃除をしてください。
- 8 本製品は防水加工をしておりますが、水や液体の中に漬けないでください。

⑤ 基本的な使い方


- 1 電源をONにする
電池ホルダーを右に回し、設定マーク(▼)を「ON」マーク(↑)の位置に合わせると、電源がONになります。




- 2 電源をOFFにする
電池ホルダーを左に回し、設定マーク(▼)を「OFF」マーク(○)の位置に合わせると、電源がOFFになります。



- 3 使用後について
ご使用の都度、掃除をしてください。(⑦「お手入れ方法」)。



② 各部の名称

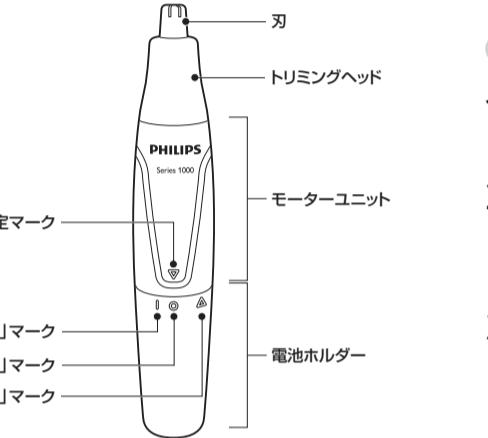


③ 乾電池の入れ方

新品の単3形アルカリ乾電池(別売)1本で最長約2時間使用できます。

単3形アルカリ乾電池以外は使用しないでください。


本製品は乾電池式です。ご使用前に本体に乾電池がセットされているか確認してください。新品の単3形アルカリ乾電池(別売)1本で、最長約2時間ご使用になります。

- 1 電池ホルダーを左へ回し、「OPEN」マーク(△)を設定マーク(▼)の位置に合わせ(図①)、電池ホルダーを引き抜きます(図②)。

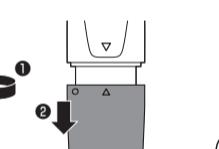


- 2 電池ホルダーに乾電池を挿入します。
※+端子と-端子の向きにご注意ください。

※本製品は、単3形アルカリ乾電池(別売)1本で動作します。新品の単3形アルカリ乾電池では、最長約2時間の使用ができます。




- 3 電源をONにし、トリミングヘッドの先端を鼻孔内に注意深く挿入します。また、トリミングヘッドの先端を耳に沿ってゆっくりと動かし、耳からはみ出ている毛を除去します。

⑥ トリミングの仕方



鼻毛のトリミングをする

- 1 鼻孔内を必ず清潔にしておいてください。

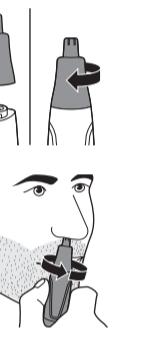

- 2 トリミングヘッドを本体に取り付けます。
※電源がOFFになっていることを確かめてください。

- 3 電源をONにし、トリミングヘッドの先端を鼻孔内に注意深く挿入し、鼻の粘膜を傷つけないように、ゆっくり出し入れします。

耳毛のトリミングをする

- 1 耳を必ず清潔にしておいてください。耳垢も取り除いてください。




- 2 トリミングヘッドを本体に取り付けます。
※電源がOFFになっていることを確かめてください。

- 3 電源をONにし、トリミングヘッドの先端を耳に注意深く挿入します。また、トリミングヘッドの先端を耳に沿ってゆっくりと動かし、耳からはみ出ている毛を除去します。

⑦ お手入れ方法

*本製品はご使用のたびに掃除をしてください。



部品の取り替え

刃が破損・摩耗した場合は、必ずフィリップス社製の同型部品とお取り替えください。

ご使用の都度、必ずぬるま湯または水でお手入れしてください。お手入れを怠りますと、故障の原因となる場合があります。

*洗剤は使用しないでください。

*60℃前後のぬるま湯でのお手入れをおすすめします。(熱湯はおやめください。故障の原因となります。)

- 1 電源をONにし、トリミングヘッド先端の刃をぬるま湯または水ですすぎ、付着した汚れを洗い流します。

*刃を洗るま湯または水ですすぎても汚れがとれない場合、トリミングヘッドを取外し、トリミングヘッド内部で洗浄してください。刃に付いた水はよく振り落してください。

*トリミングヘッドを取り外す際は電源がOFFになっていることを確かめてください。



- 2 電源をOFFにして、乾かします。

- 3 すべての部品を完全に乾かしてください。

⑧ 保管の仕方

- 室温15℃～35℃の環境下で保管してください。

- 直射日光の当たる場所には保管しないでください。

⑨ 製品を廃棄するとき

●古くなった製品を廃棄するときは、乾電池を取り出してください。乾電池には環境を汚染するおそれのある物質が含まれています。各自治体の指示に従って処理してください。

⑩ 故障かな?と思ったら

故障かな?と思ったら、お調べください。

使用時間が極端に短い

- ▶刃の掃除はしていますか?
それでも改善されないと、乾電池の寿命です。
新しい乾電池に取り替えてください。

- ▶だんだん切れ味が悪くなっていますか?

- ▶刃が損傷または摩耗していませんか?
損傷または摩耗している時は、新しい同型部品とお取り替えください。

電源を入れても作動しない

- ▶乾電池が逆方向に入っていますか?

- 乾電池の方向を確認してください。

- ▶乾電池が切れていますか?

- 新しい乾電池に取り替えてください。

- *乾電池を取り替えていない場合は、乾電池の寿命です。

- ※保証書に記載された修理料金を支払った場合は、修理料金を返却していただけます。

- ※お客様がご購入いただいた個人情報(保証書の控え)は保証期間内のサービス活動のために利用させていただきます。また個人情報は、株式会社フィリップス・ジャパンのホームページ http://www.philips.co.jp/ に掲載されている「お客様の個人情報の取り扱い」についての当社の方針に基づき適切に管理いたします。

⑪ 保証とアフターサービス

保証書と修理サービスについて(必ずお読みください。)

〈保証書〉表面左側に付属

●

保証書は、必ずお買い上げ日・販売店名等の記入をお確かめのうえ、販売店から受け取っていただきたい内容をよくお読みのあと大切に保管してください。

保証期間

お買い上げ日から2年間

対象部分

本体(トリミングヘッドを除く)

補修用性能部品の保有期間

- 補修用性能部品の保有期間は製造打ち切り後 6 年です。

- 性能部品とは、その製品の機能を維持するために必要な部品です。

ご不明な点や修理に関するご相談は

- 修理に関するご相談ならびにご不明な点は、お買い上げの販売店または、小泉成器修理センターにお問い合わせください。

修理を依頼されるときは

- 修理をご依頼される前に、この取扱説明書をよくお読みいただき、再度点検ください。尚、異常のあるときはご使用を中止し、お買い上げの販売店へご依頼ください。

【保証期間が過ぎているときは】

- 修理によって商品の機能が持てる場合は、補修用性能部品の保有期間にあります。

【海外での本製品の保証及びアフターサービスについて】

- 本製品の保証は海外においても有効です。(同シリーズ製品の取り扱いがある国に限ります)

- 日本国外へのフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができますが、この場合多少日数を要する場合があります。

- 海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お困りの点がございましたら下記までご連絡ください。

Philips Consumer Lifestyle Service Department P.O.Box 20100 9200 CA DRACHEN
The Netherlands Fax +31 51 259 785

【お客様の個人情報のお取り扱いについて】

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

General description (Fig. 1)

- 1 Cutting element
- 2 Trimming head
- 3 Handle
- 4 Setting indicator
- 5 'On' indication
- 6 'Off' indication
- 7 'Open' indication
- 8 Battery compartment cover

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

Warning

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

Caution

- Never immerse the appliance in water. Do not use the appliance in the bath or shower.
- Never use water hotter than 60°C to rinse the appliance.
- Only use this appliance for its intended purpose as shown in the user manual.
- Use and store the appliance at a temperature between 15°C and 35°C.
- For hygienic reasons, the appliance should only be used by one person.
- Do not expose the appliance to direct sunlight.
- Only operate the appliance on 1.5V AA alkaline batteries.
- Do not mix different types of batteries or new and used batteries.
- Do not recharge non-rechargeable batteries.
- Insert batteries with the + and - poles pointing in the right direction.
- Do not short-circuit the supply terminals of batteries.
- Remove batteries from the appliance if you are not going to use it for some time.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Electromagnetic fields (EMF)

- This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General

- This appliance can be safely cleaned under the tap (Fig. 2).

Preparing for use

Placing the battery

- 1 To remove the battery compartment cover, turn it clockwise until the setting indicator points to the 'open' indication (^) (Fig. 3).
- 2 Pull the battery compartment cover off the handle (Fig. 4).
- 3 Put the battery in the battery compartment (Fig. 5). Make sure the + and - poles of the battery point in the right direction.
- Note: The appliance operates on one R6 AA 1.5-volt battery. Preferably use Philips alkaline batteries. A new AA alkaline battery has an operating time of up to 2 hours.
- 4 Slide the battery compartment cover back onto the handle (Fig. 6).
- 5 Turn the battery compartment cover anticlockwise until the setting indicator points to the 'off' indication (0) (Fig. 7).

Using the appliance

You can use the appliance for the following purposes:

- Trim your nose hair with the trimming head.
- Trim your ear hair with the trimming head.

Switching the appliance on and off

- To switch on the appliance, turn the battery compartment cover to the 'on' indication (1) (Fig. 9).
- To switch off the appliance, turn the battery compartment cover to the 'off' indication (0) (Fig. 8).

Trimming nose hair

Make sure your nostrils are clean.

- 1 Switch on the appliance.
- 2 Carefully insert the trimming head into one of your nostrils.

Do not insert the trimming head more than 0.5 cm into your nostrils.

- 3 Slowly move the trimming head around to remove all unwanted hairs in your nostrils (Fig. 10).
- 4 Clean the appliance after every use.

Trimming ear hair

Make sure your outer ear channels are clean and free from wax.

- 1 Switch on the appliance.
- 2 Slowly move the trimming head along the rim of the ear to remove hairs that stick out beyond the rim.

Do not insert the trimming head more than 0.5 cm into your ear channel, as this could damage the eardrum.

- 3 Carefully insert the trimming head into the outer ear channel.
- 4 Slowly turn the trimming head around to remove all unwanted hairs from your outer ear channel (Fig. 11).
- 5 Clean the appliance after every use.

Cleaning

Clean the appliance immediately after use and when hair or dirt has accumulated on the cutting elements.

Do not immerse the motor unit in water or any other liquid, or rinse it under the tap.

Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Do not tap on the cutting elements.

Do not use any sharp objects to clean the cutting elements.

- 1 Make sure the appliance is switched off (Fig. 12).

- 2 Rinse the cutting element of the trimming head with hot water (Fig. 13).

- 3 Switch on the appliance (Fig. 7) and rinse the cutting element once more to remove any remaining hairs (Fig. 14). Then switch off the appliance again.

If rinsing the trimming head under the tap is not sufficient, remove the cutting element (Fig. 15) and then immerse the cutting element under a running tap (Fig. 16). Shake the water out of the cutting element (Fig. 17) and leave it to dry before attaching it to the appliance (Fig. 18).

- 4 Let all parts dry completely before you use the appliance again.

Replacement

Replace damaged parts immediately. Always replace them with original Philips parts.

Ordering accessories

To buy accessories or spare parts, visit www.shop.philips.com/service or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- This product contains disposable batteries which shall not be disposed of with normal household waste.
- Follow your country's rules for the separate collection of electrical and electronic products and batteries. Correct disposal helps prevent negative consequences for the environment and human health.

Removing the disposable batteries

To remove the disposable batteries, see chapter 'Preparing for use'.

Warranty and support

If you need information or support, please visit www.philips.com/support or read the international warranty leaflet.

Warranty restrictions

Cutting units are not covered by the terms of the international warranty because they are subject to wear.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country.

Problem	Possible cause	Solution
The appliance pulls at the hairs.	You move the appliance too fast.	Slowly move the trimming head around to remove all unwanted hairs in your nostrils.
Hairs or dirt obstruct the cutting element.		Clean the cutting element after each use.
The disposable battery is empty.		Insert a new battery.
The appliance does not work.	The disposable battery is empty or has been inserted incorrectly.	Replace the battery or insert it correctly.
	The cutting element of the nose/ear/eyebrow trimming head is blocked, for instance because some nasal mucus has dried inside the cutting element.	Clean the cutting element thoroughly, immerse it in a bowl with warm water for a few minutes. Then switch on the appliance and rinse it under a hot tap (see 'Cleaning').

