



フィリップス ヘアーカッター

品番 HC3508/15,
HC3507/15

取扱説明書



改良の為、仕様を予告なく変更することがあります。

目次

- ① 必ずお守りください
- ② 各部の名称
- ③ 電源の入れ方
- ④ 基本的な使い方
- ⑤ ヘアーカットの準備
- ⑥ コームの使い方
- ⑦ カットの仕方
- ⑧ お手入れ方法
- ⑨ 刃の交換
- ⑩ 製品を廃棄するとき
- ⑪ 故障かな?と思ったら
- ⑫ 保証とアフターサービス
- ⑬ 仕様
- ⑭ 無料修理規定
- Guidance in English

©2019 Philips Japan, Ltd.
4222.002.9215.1(04/19)

〈フィリップス ヘアーカッター 保証書〉

CERTIFICATE OF PURCHASE

この保証書は、「無料修理規定」記載内容で無料修理を行なうことをお約束するものです。お買い上げ日から下記期間内に故障が発生した場合は、フィリップスサポートセンターにお問い合わせください。お客様にて記入いただいた個人情報(保証書の控え)は、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「お客様の個人情報の取り扱いについて」の当社の方針に基づき適切に管理いたします。

品名	ヘアーカッター
品番	HC3508/15,HC3507/15
保証期間	お買い上げ日より2年
対象部分	本体、電源アダプタ(コーム、クリーニングブラシを除く)
お買い上げ日	年月日
お客様	ご住所 ご姓名 電話番号 販売店名・住所・電話番号
★販売店	

* 保証書は再発行しませんので、大切に保管してください。
★ ご販売店へ、この保証書はお客様へのアフターサービスの実施と責任を明確にするものであります。商品名、記念品の場合も必ず記入捺印してお客様にお渡しください。

★ 製品の使用方法や修理に関するお問い合わせ

フィリップスサポートセンター
0120(944)859
受付時間:9:00~18:00(年末年始除く)

Webからの
お問い合わせ

MyPhilips登録のご案内



フィリップスでは、製品をより快適にご利用いただくために
製品登録をおすすめしております。
MyPhilipsの登録写真も保管でき、
万が一購入證明書を紛失された場合にも安心です。

URL <http://www.philips.co.jp/myphilips-about>

この印刷物は再生紙を使用しております。

① 必ずお守りください

安全上の注意

- ここに示した注意事項は、安全に関する重要な内容ですので、必ず守ってください。
- 誤った取扱いをしたときに想定される内容を「警告」と「注意」とに分けています。

○絵表示について

- 記号は、「警告、注意」を示します。
図の中や近くに具体的な注意内容を示します。

- 警告 人が死亡または重傷を負う可能性が想定される内容。

- 注意 人が傷害を負う可能性及び物的損害の発生が想定される内容。

○絵表示の例

- 記号は、してはいけない「禁止」を示します。図の中や近くに具体的な禁止内容(左図の場合は分解禁止)を示します。
- 記号は、必ずしていただく「強制」を示します。図の中や近くに具体的な強制内容(左図の場合は電源プラグをコンセントから抜くことを示します)を示します。

△ 警告

●本体ならびに電源アダプタは改造しないでください。また、分解したり修理しないでください。火災、感電、ケガの原因になります。修理は、フィリップスサポートセンターにお問い合わせください。

●お手入れの際は必ず電源アダプタの電源コードをコンセントから抜いてください。また、濡れた手で抜き差ししないでください。感電や、ショート発火の原因になります。

●電源アダプタが壊れたり、コンセントの差込みが緩いときは使用しないでください。感電、ショート発火の原因になります。

●本体・電源アダプタを水につけていた、水をかけたりしないでください。故障や、ショート・感電の原因になります。

●電源アダプタの電源コネクタ部を本体の電源コネクタ部に差し込み、電源アダプタの電源プラグ部をコンセントに差し込みます。(図①)。仕上がりの長さは本体の矢印による位置までスライドさせます。(図②)。仕上がりの長さは約0.5mmです。

●電源アダプタが壊れたり、加工したりしないでください。電源コードが破損し、火災の原因となります。

●電源アダプタには変圧器が内蔵されています。電源アダプタを机の上に置く場合は、必ず机の裏面に差し込むようにして毛先だけをカットする、きれいに仕立たせます。

●乳幼児の手の届くところに本製品を置かないでください。


●自分で意思表示ができない人(幼児を含む)に使用しないでください。また、お体の不自由な人だけでは使用しないでください。

●必ずお守りください

●刃を傷つけないでください。刃が傷ついた状態でヘアーカッターを使用しないでください。刃がぬれた状態でヘアーカッターを使用しないでください。

●カット時は、整髪器は使用しないでください。

●刃を傷つけないように、刃を傷めないようにしてカットしてください。

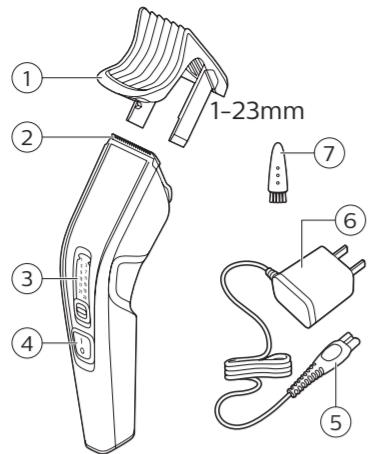

- Note:** When you trim for the first time, start at the highest length setting to familiarise yourself with the appliance.
- 3 Switch on the appliance (Fig. 5).
 - 4 Move the appliance slowly and with light pressure against the direction of hair growth (Fig. 9).
- Note:** Make sure that the flat part of the comb always stays in contact with the skin to obtain an even result (Fig. 10).
- Trimming without comb**
- Use the trimmer without the trimming comb to trim hair close to the skin (0.5 mm) or to contour the neckline and sideburns.
- Caution:** Be careful when you trim without comb because the cutting unit removes every hair it touches.
- 1 Pull the comb off the appliance (Fig. 11).
 - 2 Switch on the appliance (Fig. 5).
 - 3 Touch the hair lightly with the trimmer. Make well-controlled movements (Fig. 12).

Warranty restrictions
Cutting units are not covered by the terms of the international warranty because they are subject to wear.

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

Cleaning

Warning: Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Warning: Never immerse the appliance in water, or rinse it under the tap.

Note: Only the cutting element and the comb can be cleaned with water.

- 1 Make sure that the appliance is switched off and disconnected from the mains.
- 2 Wipe the housing of the appliance with a dry cloth.
- 3 Remove the comb. Clean it with the cleaning brush and rinse with water (Fig. 13).
- 4 Press the release button. The cutting unit comes off the appliance (Fig. 14).
- 5 Clean the cutting unit with the cleaning brush or rinse it under the tap (Fig. 15).
- 6 Clean the inside of the appliance with the cleaning brush (Fig. 16).
- 7 Shake off excess water. To reattach the cutting unit, insert the lug of the cutting unit into the guiding slot.
- 8 Insert the lug of the cutting unit into the guiding slot and push the cutting unit back onto the appliance (Fig. 17).

Replacement

Only replace a worn or damaged cutting unit with an original Philips cutting unit, available from authorised Philips service centre.

- 1 Press the release button. The cutting unit comes off the appliance (Fig. 14).
- 2 Insert the lug of the new cutting unit into the guiding slot and push the cutting unit onto the appliance (Fig. 17).

Ordering accessories

To buy accessories or spare parts, visit www.shop.philips.com/service or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the International warranty leaflet for contact details).

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country.

Problem	Possible cause	Solution
The appliance produces an uneven cutting result.	The comb does not touch the skin when you move the appliance through the hair.	Make sure the comb is always fully in contact with the skin when you move the appliance through the hair.
You only move the appliance in one direction.	Because not all hairs grow in the same direction, move the appliance in different directions (upwards, downwards and across).	Move the appliance in different directions (upwards, downwards and across).
The setting of the comb has changed during trimming.	Check the setting of the comb. If you push the appliance too hard onto the scalp, you may accidentally change the setting of the comb.	Check the setting of the comb. If you push the appliance too hard onto the scalp, you may accidentally change the setting of the comb.
The comb is not assembled correctly.	Detach the comb and reattach it.	Detach the comb and reattach it.
The cutting performance decreases when the cutting unit and the comb are dirty.	Clean the cutting unit and the comb (see 'Cleaning').	Clean the cutting unit and the comb (see 'Cleaning').
The appliance does not work when I switch it on.	The appliance is not connected to the wall socket.	Insert the small plug into the appliance and put the supply unit in the wall socket (Fig. 4).

Warranty and support

If you need information or support, please visit www.philips.com/support or read the International warranty leaflet.



Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

General description (Fig. 1)

- General description (Fig. 1)**
- 1 Trimming comb 1-23mm
 - 2 Cutting unit
 - 3 Length setting adjustment slider
 - 4 On/off button
 - 5 Small plug
 - 6 Supply unit
 - 7 Brush

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

Danger

- Keep the appliance and the mains cord dry (Fig. 2).

Warning

- This symbol means that the appliance is double-insulated (Fig. 3).
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- If the mains cord is damaged, you must have it replaced by Philips, a service center authorized by Philips or similarly qualified persons in order to avoid a hazard.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

Caution

- Only use this appliance for its intended purpose as shown in the user manual.
- For hygienic reasons, the appliance should only be used by one person.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General

- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.

Using the appliance

The hair length settings are indicated in millimeters. The comb cuts the hair to a length of 1mm to 23mm. The settings correspond to the remaining hair length after trimming.

Warning: Be careful when you trim for the first time. Do not move the trimmer too fast. Make smooth and gentle movements.

Tip: Start trimming at a high length setting and reduce the length setting gradually until you have reached the desired hair length.

Switching the appliance on and off

Note: You can only use the appliance when it is connected to the wall socket.

- 1 Insert the small plug into the appliance and put the supply unit in the wall socket (Fig. 4).
- 2 Switch on the appliance by sliding the power switch upwards (Fig. 5).
- 3 Switch the appliance off by sliding the power switch downwards (Fig. 6).

Trimming with comb

- 1 Attach the trimming comb to the appliance (Fig. 7).
- 2 slide the length setting adjustment slider to the desired length setting (Fig. 8).