



EN User manual
MS-MY Manual pengguna
ZH-HK 使用手册

ZH-CN 用户手册
AR دليل المستخدم
FA راهنمای کاربر

PHILIPS



mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

• Children should be supervised to ensure that they do not play with the appliance.

• If the mains cord is damaged, you must have it replaced by Philips, a service centre authorized by Philips or similarly qualified persons in order to avoid a hazard.

• **WARNING:** Keep this appliance away from water: Do not use it near or over water contained in baths, washbasins, sinks etc.



All registered and unregistered trademarks are property of their respective owners.

© 2012 Koninklijke Philips Electronics N.V.

All rights reserved.

3140 035 28812



English

1 Congratulations

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.



2 Introduction

CurlControl with 25mm barrel for natural looking curls features a protective ceramic coating and 8 heat settings to suit your hair type. Create the curls that are easy to manage, look natural and feel sexy without the damage and dryness. We hope you will enjoy using your CurlControl.

3 Important

Read this user manual carefully before you use the appliance and save it for future reference.

• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or

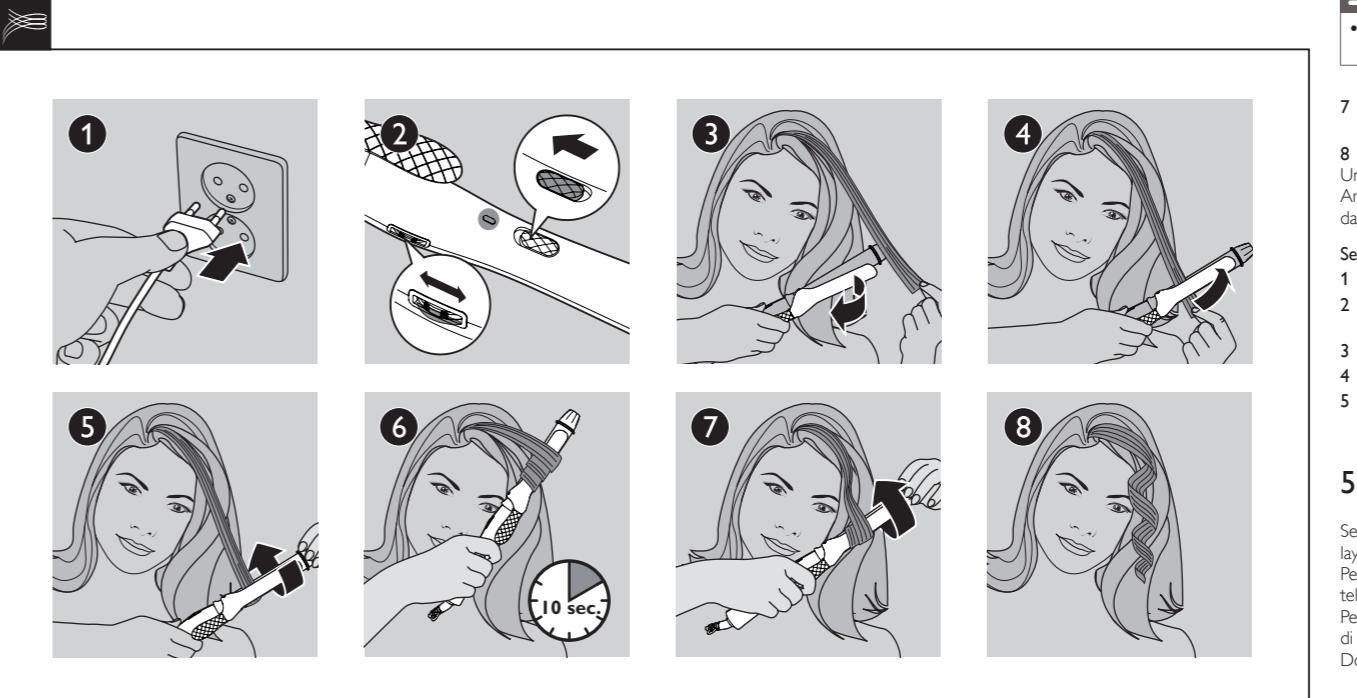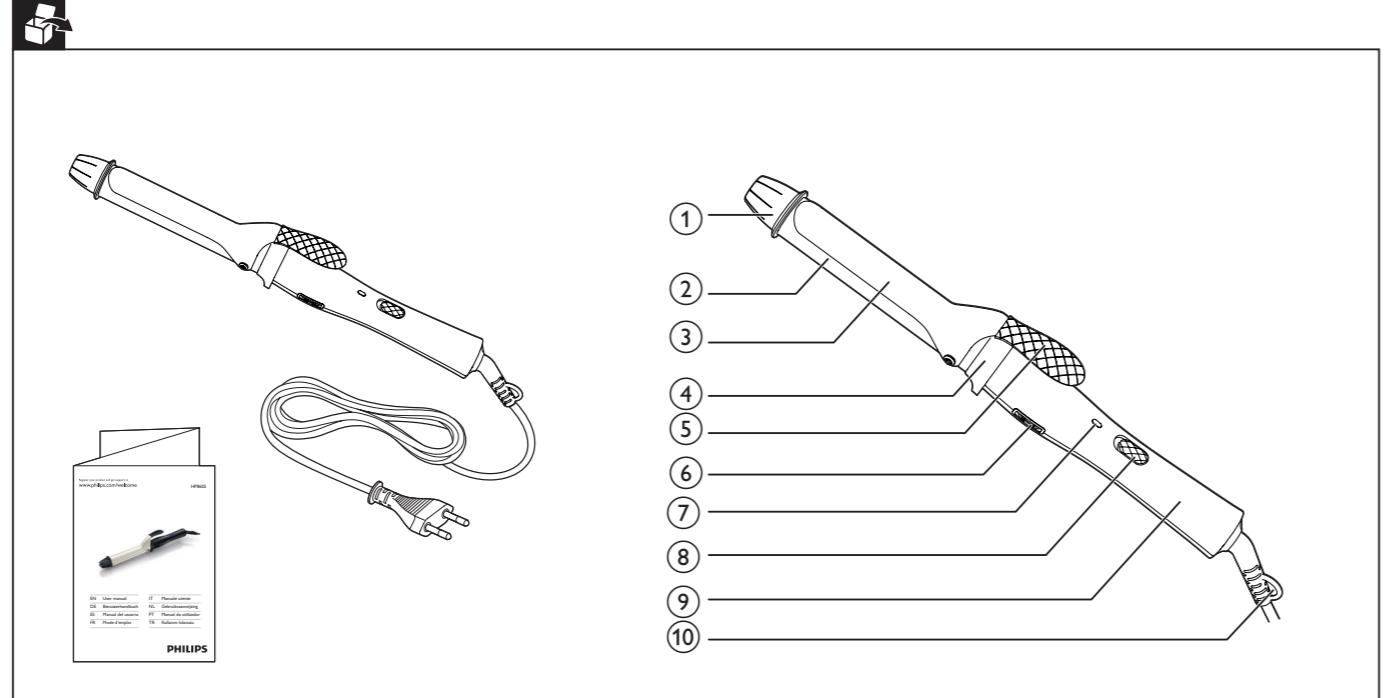

• Check the condition of the mains cord regularly. Do not use the appliance if the plug, the cord or the appliance itself is damaged.

• For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.

• The barrel of this appliance becomes hot during use. Prevent contact with the skin.

• Prevent the mains cord from coming into contact with the hot parts of the appliance.

• Only use the appliance on dry hair.

• Always unplug the appliance after use.

• Wait until the appliance has cooled down before you store it.

• Keep the barrel clean and free of dust and styling products such as mousse, spray and gel. Never use the appliance in combination with styling products.

• Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could cause an extremely hazardous situation for the user.

• The barrel has a ceramic coating. This coating slowly wears away over time. This does not affect the performance of the appliance.

• Keep the appliance away from flammable objects and materials when it is switched on.

• Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.

• Never leave the appliance unattended when it is plugged in.

• If the appliance is used on colour-treated hair, the barrel may stain.

• This appliance is extremely hot, pay full attention when using this appliance.

• Only hold the handle while the unit is plugged in, other parts are hot.

• Before use in artificial hair, always consult your distributor.

• Do not operate the appliance with wet hands.

• Always place the appliance with the stand on a heat-resistance, stable flat surface. The hot barrel should never touch the surface or other flammable material.

Electromagnetic fields (EMF)

This appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Environment

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in an official collection point for recycling. By doing this, you help to preserve the environment.

4 Curl your hair

Ensure that you select a temperature setting that is suitable for your hair. Always select a low setting when you use the curler for the first time.

Hair Type	Temperature Setting
Coarse, curly, hard-to-curl	Mid to High (setting 4-8)
Fine, medium-textured or softly straightened	Low to Mid (setting 1-5)
Pale, blonde, bleached or color-treated	Low (setting 1-3)

The mains cord of the appliance may be damaged.	If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
-------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------

Bahasa Melayu

1 Tahniah

Tahniah atas pembelian anda dan selamat menggunakan Philips! Untuk mendapatkan manfaat sepenuhnya daripada sokongan yang ditawarkan oleh Philips, daftar produk anda di www.philips.com/welcome.

2 Pengenalan

CurlControl dengan cerompong 25mm untuk mendapatkan keriting semula jadi mengetepahkan salutan pelindung seramik dan 8 tetapan haba untuk disesuaikan dengan jenis rambut anda. Reka keriting yang senang dirusur, kelihatan semula jadi dan terasa seksi, tanpa kerosakan dan kekeringan. Kami harap anda akan gembira menggunakan CurlControl anda.

Note

• Do not pull at the curler when you unwind the section, otherwise you would straighten the curl.

7

Unwind the section of hair until you can open the clip again with the lever.

8

Release the curled hair.

To curl the rest of your hair, repeat steps 3 to 8.

You may curl your hair both from inside out or from outside in as you like.

After use:

1

Switch off the appliance and unplug it.

2

Place it on the resting stand (④) until it cools down. To place it on a heat-resistant surface is highly recommended.

3

Remove hairs and dust from the barrel and clip.

4

Clean the barrel and the clip with damp cloth.

5

Keep it in a safe and dry place, free of dust. You can also hang it with the hanging loop (⑩).

3 Penting

Baca manual pengguna ini dengan teliti sebelum anda menggunakan perkakas dan simpan ia untuk rujukan masa depan.

• Perkakas ini boleh digunakan oleh kanak-kanak berumur 8 tahun dan ke atas dan orang yang kurang keupayaan fizikal, deria atau mental, atau kekurangan pengalaman dan pengetahuan jika mereka diberi pengawasan dan arahan berkaitan penggunaan perkakas secara selamat dan memahami bahaya yang mungkin berlaku. Kanak-kanak tidak sepertinya bermain dengan perkakas ini. Pemberian dan penyenggaraan oleh pengguna tidak sepertinya dilakukan oleh kanak-kanak tanpa pengawasan.

• Kanak-kanak hendaklah diawasi untuk memastikan bahawa mereka tidak bermain dengan perkakas ini.

• Jika kord sesalur kuasa rosak, ia mestig diantara oleh Philips, pusat servis yang dibenarkan oleh Philips ataupun pihak lain seumpamanya yang layak bagi mengelakkan bahaya.

• AMARAN: Jauhi perkakas ini dari air: Jangan gunakannya berhampiran atau di atas air yang terkandung di dalam tab mandi, sink cuci tangan, sink dsb. Apabila anda menggunakan perkakas ini di bilik mandi, cabut perkakas selesaikan penggunaannya. Kehampiran air membawa risiko, walaupun ketika perkakas dimatikan.

• Pastikan bahawa voltan yang dinyatakan pada perkakas adalah dengan voltan sesalur kuasa tempatan anda.

• Periksa keadaan kord sesalur kuasa dengan kerang. Gunakan perkakas jika plag, kord atau perkakas itu sendiri rosak.

• Untuk perlindungan tambahan, kami menganjurkan agar anda memasang peranti arus baki (RCD) dalam litar elektrik yang membekali bilik air tersebut. RCD ini mesti mempunyai arus operasi baki berkadar yang tidak melebihi 30mA. Tanya pemasang anda untuk mendapat nasihat.

• Batang perkakas ini akan menjadi panas ketika ia digunakan. Elkannya daripada bersentuhan dengan kulit anda.

• Jauhi kord sesalur utama daripada tersentuh pada bahagian panas perkakas.

• Gunakan perkakas hanya pada rambut yang kering.

• Cabut plag perkakas setiap kali selepas digunakan.

• Tunjuk sehingga perkakas sekujur sebenarnya menyimpangnya.

• Pastikan cerompong sentiasa bersih dan bebas daripada habuk dan produk pendandal seperti mus, semburan dan gel. Jangan gunakan perkakas ini bersama-sama dengan produk pendandal.

• Sambungkan plag kepada soket bekalan kuasa.

• Luncurkan suis hidup/mati (⑥) ke I untuk menghidupkan perkakas.

• Putar roestat (⑤) untuk memilih tetapan suhu yang anda kehendaki seperti yang disyorkan dalam jadual di atas.

• Apabila perkakas sedang digunakan, penunjuk (⑦) berhenti berkilip.

• Sebelum anda mula mengeringkan sikit rambut anda dan bahagian rambut anda kepada bahagian-bahagian kecil. Tekan tuin (③) dan letakkan satu bahagian rambut di antara cerompong (②) dan klip (⑩).

• Tutup Klip dengan melepaskan Tuin dan lurcurkan Cerompong ke hujung rambut.

• Pegang hujung yang sejuk (①) dan pemegang (⑨) batang pengeringan, dan kemudian lihatkan bahagian rambut di sekeliling cerompong dari hujung ke akhirnya dengan memutar pengeringan.

• 6 Tahan lama batang pengeringan pada tempatnya untuk maksimum. 10 saat.

4 Keritingkan rambut anda.

Pastikan anda memilih tetapan suhu yang sesuai bagi rambut anda. Pastikan anda memilih tetapan rendah apabila anda menggunakan pengeringan rambut buat kali pertama.

Jenis Rambut

Tetapan Suhu

Kasar; keriting, susah untuk dikenakan

Sederhana hingga Tinggi (tetapan 4-8)

Halus, tektur sederhana atau lurus lembut

Rendah hingga Sederhana (tetapan 1-5)

Cerah, perang, diluntur atau diwari warna

Rendah (tetapan 1-3)

• Anak-anak yang berada di bawah umur 8 tahun tidak boleh menggunakan perkakas ini.

• Produk ini dibuat untuk penggunaan di dalam rumah sahaja.

• Produk ini tidak boleh digunakan di luar ruang.

• Produk ini tidak boleh digunakan untuk tujuan komersial.

• Produk ini tidak boleh digunakan untuk tujuan profesional.

• Produk ini tidak boleh digunakan untuk tujuan profesional.

• Produk ini tidak boleh digunakan untuk tujuan profesional.

• Produk ini tidak boleh digunakan untuk tujuan profesional.

• Produk ini tidak boleh digunakan untuk tujuan profesional.

• Produk ini tidak boleh digunakan untuk tujuan profesional.

• Produk ini tidak boleh digunakan untuk tujuan profesional.

• Produk ini tidak boleh digunakan untuk tujuan profesional.

• Produk ini tidak boleh digunakan untuk tujuan profesional.

• Produk ini tidak boleh digunakan untuk tujuan profesional.

• Produk ini tidak boleh digunakan untuk tujuan profesional.

• Produk ini tidak boleh digunakan untuk tujuan profesional.

• Produk ini tidak boleh digunakan untuk tujuan profesional.

• Produk ini tidak boleh digunakan untuk tujuan profesional.

• Produk ini tidak boleh digunakan untuk tujuan profesional.

• Produk ini tidak boleh digunakan untuk tujuan profesional.

• Produk ini tidak boleh digunakan untuk tujuan profesional.

