



フィリップス ボディーグリーマー
品番 **BG105/15**

取扱説明書
保証書は、この取扱説明書の表裏の左欄について取り出すので乾電池で記入を受けてください。



©2017 Philips Electronics Japan, Ltd.
4222.002.8905.1(12/17)

フィリップス ボディーグリーマー 保証書

CERTIFICATE OF PURCHASE 持込修理

この保証書は、「無料修理規定」記載内容で無料修理を行うことをお約束するものです。お買い上げの日から下記期間中に故障が発生した場合は、本書をご提示のうえ、お買い上げの販売店に修理をご依頼ください。お客様にご記入いただいた個人情報(保証書の控え)は、株式会社フィリップスエレクトロニクスジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

品名	ボディーグリーマー		
品番	BG105/15		
保証期間	お買い上げ日より2年		
対象部分	本体(トリミングヘッド・コーム・スキンプロテクターを除く)		
お買い上げ日	年	月	日
お客様	ご住所 〒		
	ご氏名		
	電話番号		
	販売店名、住所、電話番号		
★販売店			

★保証書は再発行しませんので、大切に保管してください。
★ご購入店舗へ この保証書はお客様へのアフターサービスの実施と責任を明確にするものです。贈答品、記念品の場合も含めて必ず記入捺印してお客様にお渡しください。

★ 製品に関するお問い合わせ

フィリップスお客様情報センターナビダイヤル (全国共通)
0570 (07) 6666
ナビダイヤルにかからない時は
TEL 06 (6261) 8230 FAX 06 (6268) 1432
日本成器西日本修理センター TEL 06 (6613) 3145
〒541-0051 大阪市住之江区南港中1丁目3番98号

★ 修理に関するお問い合わせ

小泉成器修理センターナビダイヤル (全国共通)
0570 (09) 8888
ナビダイヤルにかからない時は
小泉成器東日本修理センター TEL 048 (718) 3340
〒344-0127 埼玉県春日部市水戸1190
小泉成器西日本修理センター TEL 06 (6613) 3145
〒559-0033 大阪市住之江区南港中1丁目3番98号

★ 部品に関するお問い合わせ

小泉成器部品センターナビダイヤル (全国共通)
0570 (09) 2222
ナビダイヤルにかからない時は
TEL 06 (6613) 3211
〒559-0033 大阪市住之江区南港中1丁目3番98号

受付時間:平日9:00~17:30
(土・日・祝日・夏期休暇・年末年始を除く)

この印刷物は再生紙を使用しております。

フィリップス ボディーグリーマーをお買い上げいただき、まことにありがとうございます。長い間ご愛用いただくために、ご使用前にこの取扱説明書をよくお読みのうえ、正しくお使いください。また、お読みになった後は、お使いになる方がいつでも見られるところに必ず保管してください。



目次

- 必ずお守りください
- 各部の名称
- 乾電池の入れ方
- 基本的な使い方
- トリミングの仕方
- お手入れ方法
- 製品を廃棄するとき
- 故障かな?と思ったら
- 保証とアフターサービス
- 仕様
- 無料修理規定

Guidance in English

① 必ずお守りください

安全上のご注意

●ここに示した注意事項は、安全に関する重要な内容ですので、必ず守ってください。

- 絵表示について
- 記号は、「注意」を示します。図の中や近くに具体的な注意内容を示します。
- 注意 人が傷害を負う可能性及び物的損害のみの発生が想定される内容。
- 絵表示の例
- 記号は、してはいけない「禁止」を示します。図の中や近くに具体的な禁止内容(左図の場合は分解禁止)を示します。
- 記号は、必ずしていただく「強制」を示します。図の中や近くに具体的な強制内容(左図の場合は電源プラグをコンセントから抜くこと)を示します。


注意

- 炎症やアレルギー症状が見られた場合は、直ちに使用をやめください。過敏肌や炎症肌の方はご使用にならないでください。
- 乳幼児の手の届くところに本製品を置かないでください。
- 本製品は、人の首から下のムダ毛を処理するためのものです。それ以外の目的で使用しないでください。
- 本体を改造しないでください。また、修理技術者以外の人には、分解したり修理をしないでください。火災、感電、ケガの原因となります。修理はお買い上げの販売店または小泉成器修理センターにご相談ください。
- 自分で意思表示できない人(幼児を含む)にご使用させないでください。また、お体の不自由な人だけでは使用しないでください。
- 刃は強く押さえないでください。破損して皮膚を傷つけることがあります。
- 本体を落としたり、ぶつたりしないでください。ケガや故障の原因になります。
- ご使用前に刃の変形や破損がないか確認してください。肌を傷つけることがあります。
- 本体や付属品が破損または故障した場合は、本製品を使用しないでください。ケガの原因になります。交換の際には必ずフィリップス社製の同型部品とお取り替えください。
- 乾電池に表示してある注意内容は必ずお守りください。
 - 乾電池は「端子」と「極子」の向きを確かめ、正しく入れてください。
 - 使い切った乾電池は、すぐに取り出してください。
 - 長期使用しないときは、乾電池を取り出しておいてください。
 - 使用推奨期間内の乾電池を使用してください。
 - 乾電池を火の中に入れてたり、シヨト分解しないでください。
 - 乾電池の発熱、破裂、液漏れによるケガや周囲汚損の原因になります。


使用上のご注意

- 本製品を使用する際には必ずコームまたはスキンプロテクターを付けてください。
- 本製品の使用、保管は室温15℃～35℃の環境下で行ってください(尚、低温や高温で使用すると、乾電池の寿命が短くなります)。
- 室温、気圧、湿度が急激に変化する状況でご使用になる場合は、本製品をその環境下で30分ほど慣らしてからお使いください。
- 直射日光の当たる場所には保管しないでください。夏場、車の中に放置しないでください。
- 刃は、薄く仕上げてありますので、刃部を強く押さえたり、硬いものに当てないよう、ていねいに扱ってください。
- 付属品の箱蓋、清掃は必ずスイッチを切ってから行ってください。
- 切れ味が衰えてきた場合は、必ず新しい同型部品と交換してください。
- 本製品は防水加工をしておりますが、水や液体の中に濡れしないでください。

② 各部の名称

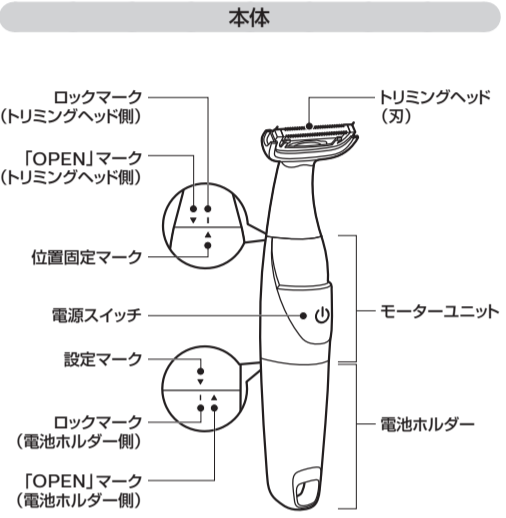

コーム スキンプロテクター

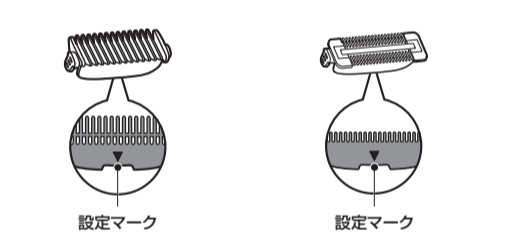

クリーニングブラシ



③ 乾電池の入れ方

新品の単3形アルカリ乾電池(別売)1本で最長約45分間使用できます。
単3形アルカリ乾電池以外は使用しないでください。

本製品は乾電池式です。ご使用前に本体に乾電池がセットされているか確認してください。新品の単3形アルカリ乾電池(別売)1本で、最長約45分間ご使用になれます。

- 電池ホルダーを左へ回し、「OPEN」マーク(▲)を設定マークの位置に合わせて(図①)、電池ホルダーを引き抜きます(図②)。
●本製品は、単3形アルカリ乾電池(別売)1本で動作します。新品の単3形アルカリ乾電池では、最長約45分間の使用が可能です。
 - 電池ホルダーに乾電池を挿入します。
※+端子と-端子の向きにご注意ください。
●乾電池を取り出す場合は同様の手順で電池ホルダーから乾電池を取り出してください。
 - モーターユニットに電池ホルダーを差し込み(図③)、ロックマーク(■)を設定マークの位置に合わせて(図④)。
- 注意 乾電池の液漏れによる故障を防ぐために、次のことをお守りください。
・本製品を直射日光の当たる場所に放置しないでください。
・本製品の使用、保管は室温15℃～35℃の環境下で行ってください。(尚、低温や高温で使用すると、乾電池の寿命が短くなります)。
・長期にご使用にならない場合は、本製品から乾電池を取り外してください。
・消耗した乾電池を本製品に入れたままにしないでください。また、ご使用済みの乾電池は、各自体の指示に従って処理してください。


④ 基本的な使い方

- 電源をONにする
電源スイッチを上をスライドさせると電源がONになります。
- 電源をOFFにする
電源スイッチを下をスライドさせると電源がOFFになります。
- 使用後について
ご使用の都度、必ずお手入れしてください(○「お手入れ方法」)。

注意 ●ヒゲを削ったり頭髪を刈るなど、本来の目的以外で使用しないでください。
●炎症やアレルギー症状が見られた場合は、直ちに使用をやめください。
●過敏肌や炎症肌の方はご使用にならないでください。
●ご使用の都度、必ずトリミングヘッドやコーム・スキンプロテクターをクリーニングブラシか、ぬるま湯または水でお手入れしてください。お手入れを怠りますと、故障の原因となる場合があります。

⑤ トリミングの仕方

●ボディーグリーマーは、首から下の体毛(腕、足、ワキ、脚など)の長さを整えることができます。
●本製品を使用する際には必ずコームまたはスキンプロテクターを付けてください。

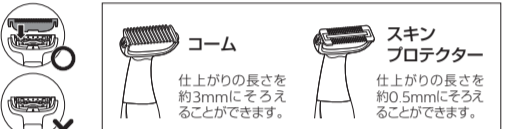

- コームまたは、スキンプロテクターの設定マーク(▼)がトリミングヘッドの設定マーク(▲)に合うようにして装着します。
●電源がOFFになっていることを確かめてください。

- 電源スイッチを上をスライドさせ、電源をONにします。
●毛が濃い場所をトリミングする時はボディーグリーマーをゆっくりと動かしてください。

- ボディーグリーマーを前に密着するようにあててください。体毛の流れに逆らうようにしてボディーグリーマーの鋸刃を皮膚に強く押しつけず、すべらせるように動かします。
●皮膚に強く押しつけないでください。破損または故障の原因となります。

注意 ●本製品を使用する際には必ずコームまたはスキンプロテクターを付けてください。
●コーム・スキンプロテクターの取り外しの際は、過度に力を加えないようご注意ください。
●コーム・スキンプロテクターの鋸刃を外し取り付けの際は、コーム・スキンプロテクターが刃にあたらぬようご注意ください。破損の原因になります。
●衛生上、他の人と共有しないでください。

ポイント ●使い始めは、3mmでカットし、本製品の取り扱いに慣れてからスキンプロテクターを使用してカットすることをおすすめします。
●カットの仕上がりが均一になるように、コームまたは、スキンプロテクターの平らな部分を常に皮膚に密着させ、強く押しつけず、すべらせるように動かしてください。
●皮膚や体毛は、濡れている状態でもお使いいただけますが、乾いている方がよりスムーズにトリミングできます。
●デリケートな部分の毛をカットする際には空いている方の手で皮膚をのばし、毛がまっすぐ立つようにします。

⑥ お手入れ方法

●本製品はご使用のたびに掃除をしてください。
注意 ●近所空気、排塵/パッド、掃除機、洗剤、ペトロールやアセトンなどの刺激性の強い液体を絶対に使わないでください。
●トリミングヘッドやコーム・スキンプロテクターに強い衝撃を与えないでください。
●お手入れの際は、先の尖ったものを使わないでください。

部品の取り替え
刃やコーム・スキンプロテクターが破損・摩耗した場合は、必ずフィリップス社製の同型部品とお取り替えください。

ご使用の都度、必ずクリーニングブラシか、ぬるま湯または水でお手入れしてください。お手入れを怠りますと、故障の原因となる場合があります。
※洗剤は使用しないでください。
※40℃前後のぬるま湯でのお手入れをおすすめします。(熱湯はおやめください。故障の原因となります。)

- 掃除をする前に、電源がOFFになっていることを確かめてください。
- コームまたはスキンプロテクターを取り外します。
- コームとスキンプロテクターをクリーニングブラシで掃除し、ぬるま湯または水ですすぎます。
- トリミングヘッドの中をクリーニングブラシで掃除し、ぬるま湯または水ですすぎます。
- 刃と本体を十分に乾燥させてください。

⑦ 製品を廃棄するとき

●古くなった製品を廃棄するときには、乾電池を取り出してください。乾電池には環境を汚染するおそれのある物質が含まれています。各自治体の指示に従って処理してください。

⑧ 故障かな?と思ったら

故障かな?と思ったら、お調べください。

使用時間が極端に短い
▶刃の掃除はしていますか?
刃の掃除は、必ずトリミングヘッドやコーム・スキンプロテクターをクリーニングブラシか、ぬるま湯または水でお手入れしてください。お手入れを怠りますと、故障の原因となる場合があります。

だんだん切れ味が悪くなった
▶刃が損傷または摩耗していませんか?
損傷または摩耗している時は、新しい同型部品とお取り替えください。

電源を入れても作動しない
▶乾電池が逆方向に入っていないですか?
乾電池の方向を確認してください。
▶乾電池が切れていませんか?
新しい乾電池に取り替えてください。
●乾電池を取り替えても作動しない場合は、絶対にご自身で分解したり修理したりせずに、お買い求めの販売店にご相談ください。
▶刃が動かなくなるほど汚れているか、刃にキズがあるか、または刃が破損していませんか?
刃をお手入れするが、トリミングヘッドを交換してください。

異常な音がする
▶刃に傷が付いていませんか?
▶トリミングヘッドやコーム・スキンプロテクターが正しくセットされていますか?

使用中、本体が熱くなる
▶トリミングヘッドが汚れていたり、長い毛が入り込んでいませんか?
トリミングヘッドは、必ずご使用の都度お手入れしてください。

以上の点検により、正常な状態に戻らない場合は、お買い求めの販売店か小泉成器修理センターへお問い合わせ願います。

⑨ 保証とアフターサービス

保証書と修理サービスについて(必ずお読みください。)

〈保証書・表面左側に付属〉

- 保証書は、必ず「お買い上げ日・販売店名」等の記入をお確かめのうえ、販売店から受け取っていただき内容をよくお読みのことと大切に保管してください。

保証期間	お買い上げ日から2年間
対象部分	本体(トリミングヘッド・コーム・スキンプロテクターを除く)

【補修性能部品の保有期間】

- 補修性能部品の保有期間は製造打ち切り後6年です。
- 性能部品とは、その製品の機能を維持するために必要な部品です。

【ご不明な点や修理に関するご相談は】

- 修理に関するご相談ならびにご不明な点は、お買い上げの販売店または、小泉成器修理センターにお問い合わせください。

【修理を依頼されるときは】

- 修理をご依頼される前に、この取扱説明書をよくお読みいただき、再度点検ください。尚、異常のあるときはご使用を中止し、お買い上げの販売店へ依頼してください。

【保証期間中は】

- 製品に保証書を添えてお買い上げの販売店にご持参ください。保証書の記載内容により無料修理いたします。

【保証期間が過ぎているときは】

- 修理によって商品の機能が維持できる場合は、補修性能部品の保有期間内であれば、ご希望により有料で修理させていただきます。

【海外での本製品の保証及びアフターサービスについて】

- 本製品の保証は海外においても有効です。(同シリーズ製品の取り扱いがある国に限ります)
- 日本国外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けられることができますが、この場合多少日数を要することもあります。
- 海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お困りの点がございましたら下記までご連絡ください。
Philips Consumer Lifestyle Service Department P.O.Box 20100 9200 CA DRACHTEN The Netherlands Fax:+31 51 259 2785

【お客様の個人情報のお取り扱いについて】

- お受けましたお客様の個人情報は、株式会社フィリップスエレクトロニクスジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

便利メモ	
お買い上げ日	年 月 日
お買い上げ店名	TEL. ()

ご使用の時、このような症状はありませんか?

- 本体にさわる時時々電気を感ずる。
 - こげくさい臭いがする。
 - その他の異常、故障がある。
- このような症状の時は、故障や事故防止のため、電源をOFFにし、必ず販売店にご相談ください。

⑩ 仕様

品番	BG105/15
電源方式	単3形アルカリ乾電池1本(別売)
本体質量	約82g (スキンプロテクター装着時、乾電池含まず)

※改良の為、仕様を予告なく変更することがあります。
●フィリップス製品の修理受付はお買い上げの販売店にお申し出ください。
●修理サービス等についてわかりならないことは、下記にお問い合わせください。

株式会社 フィリップス エレクトロニクス ジャパン
日本販売代理店 小泉成器株式会社
〒641-0051 大阪府中央区備後町3-3-7

⑪ 無料修理規定

【無料修理規定】

- 取扱い説明書、本体貼付ラベル等の注意事項に従った正常な使用状態で保証期間内に故障した場合には、無料修理します。
- 保証期間内に故障して無料修理をお受けになる場合には、商品と保証書をご持参、ご提示のうえ、お買い上げの販売店にご依頼ください。なお、商品を直接メーカーへ送付した場合の送料等はおお客様の負担となります。
- ご贈答、ご転居でお買い上げの販売店に修理を依頼できない場合は、小泉成器修理センターにご依頼ください。
- 保証期間内で多次の場合には有料修理となります。
 - ①使用上の誤り及び不当な修理や改造による故障及び損傷。
 - ②お買い上げ後の輸送、移動、落下等による故障及び損傷。
 - ③火災、地震、水害、落雷、その他の天災他家、公害や異常電圧による故障及び損傷。
 - ④一般家庭以外(例えば、業務用の長時間使用)に使用された場合の故障及び損傷。
 - ⑤保証書の提示がない場合。
 - ⑥保証書にお買い上げ年月日、お客様名、販売店名の記入のない場合、或は字句を書き換えられた場合。

※保証書は、本書に明示した条件のもとにおいて無料修理をお約束するものです。従って保証書を発行している者(保証責任者)、及びそれ以外の事業者に対するお客様の法律上の権利を制限するものではありません。
保証期間経過後の修理についてご不明の場合は、お買い上げの販売店または小泉成器修理センターにお問い合わせください。
※保証期間経過後の修理・補修性能部品の保有期間について詳しくは取扱説明書の保証とアフターサービスの項目をご覧ください。
※お客様にご記入いただいた個人情報(保証書の控え)は保証期間内のサービス活動及びその後の安全点検活動のために利用させていただきます。ご了承ください。また個人情報(株式会社フィリップスエレクトロニクスジャパンのホームページ <http://www.philips.co.jp/>)に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。



Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

General description

- 1 Trimming head
- 2 Locked position of the trimming head
- 3 On/off slide
- 4 Unlocked position of the battery compartment cover
- 5 3mm trimming comb
- 6 0.5mm skin protector
- 7 Cleaning brush

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

Warning

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

Caution

- Never immerse the charging stand in water and do not rinse it under the tap.
- Never use water hotter than 60°C to rinse the appliance.
- Only use this appliance for its intended purpose as shown in the user manual.
- Use and store the appliance at a temperature between 15°C and 35°C.
- For hygienic reasons, the appliance should only be used by one person.
- Do not expose the appliance to direct sunlight.
- Only operate the appliance on 1.5V AA alkaline batteries.
- Do not mix different types of batteries or new and used batteries.
- Do not recharge non-rechargeable batteries.
- Insert batteries with the + and - poles pointing in the right direction.
- Do not short-circuit the supply terminals of batteries.
- Remove batteries from the appliance if you are not going to use it for some time.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Electromagnetic fields (EMF)

- This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General

- This appliance is waterproof. It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the appliance can therefore only be used without cord.

Placing the battery

- 1 To remove the battery compartment cover, turn it clockwise until the setting indicator points to the 'open' indication (^) (Fig. 1).
- 2 Pull the battery compartment cover off the handle (Fig. 2).
- 3 Put a battery in the battery compartment (Fig. 3).

Note: The appliance operates on one R6 AA 1.5-volt battery (not included). Preferably use Philips alkaline batteries. A new AA alkaline battery has an operating time of up to 45 minutes.

- 4 Make sure the + and - poles of the battery point in the right direction.
- 5 Slide the battery compartment cover back onto the handle (Fig. 4).
- 6 Turn the battery compartment cover anticlockwise until the setting indicator points to the 'off' indication (O) (Fig. 5).

To avoid damages due to battery leakage:

- Do not expose the appliance to direct sunlight or UV light.
- Do not expose the appliance to temperatures higher than 35 °C.
- Remove the battery if you are not going to use the appliance for a month or more.
- Do not leave an empty battery in the appliance.

Using the appliance

Take your time when you first start to shave sensitive areas. You have to acquire practice with the appliance. Your skin also needs some time to adjust to the procedure. You can use the appliance wet or dry to shave or trim hair on all parts of the body below the neckline. Do not use this appliance to shave or trim facial hair or scalp hair.

Do not use the appliance without the 0.05mm skin protector or the 3mm trimming comb (Fig. 6).

Trimming

The appliance comes with two trimming combs that allow you to cut hair to two different lengths. Start with the 3mm trimming comb to acquire practice with this appliance.

Comb	Hair length after trimming.
0.5 mm skin protector	0.5mm/0.02 inch
3mm trimming comb	3mm/0.11inch

- 1 Snap the trimming comb into place. Make sure that the indication of the comb is aligned with the indication of the trimming head (Fig. 7).

Place the appliance at an angle of 45° onto the skin.

- 2 Push the on/off slide upwards to switch on the appliance (Fig. 8).

When you trim dense hair, make slow and well controlled movements.

- 3 Move the appliance against the direction of hair growth (Fig. 9).

Note: Make sure that the flat part of the trimming comb is always fully in contact with the skin

Note: Do not apply too much pressure.

Trimming tips

- If the hairs are longer than 10 mm, you can trim them first with trimming comb 1 to a length of 3 mm to make shaving easier.
- The appliance works best under dry conditions. Dry your skins with e.g. a towel when using on moist areas, such as underarms.
- Stretch the skin in sensitive areas as the chest and the scrotum (Fig. 10).

Cleaning

Switch off and clean the product after each use.

Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

- 1 Push the on/off slide downwards to switch off the appliance (Fig. 11)
- 2 Remove the 3mm trimming comb or 0.5mm skin protector if it is still attached.
- 3 Use the cleaning brushed supplied to clean the 3mm trimming comb or the 0.5mm skin protector (Fig. 12).
- 4 Use the cleaning brush supplied to clean the inside of the trimming head (Fig. 13).
- 5 Rinse the 3mm trimming comb and the 0.5mm skin protector under the tap (Fig. 14).
- 6 Rinse the inside of the trimming head under the tap (Fig. 15).
- 7 Carefully shake off excess water and let all parts air dry completely.

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- This product contains disposable batteries which shall not be disposed of with normal household waste.
- Follow your country's rules for the separate collection of electrical and electronic products and batteries. Correct disposal helps prevent negative consequences for the environment and human health.

Ordering accessories

To buy accessories or spare parts, visit www.shop.philips.com/service or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

Warranty and support

If you need information or support, please visit www.philips.com/support or read the international warranty leaflet.

Warranty restrictions

Cutting units are not covered by the terms of the international warranty because they are subject to wear.

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country.

Problem	Cause	Solution
The appliance does not work	The battery is empty	Replace the battery.
The appliance makes more noise and/or vibrates more strongly than usual.	One or more parts are broken, perhaps because you dropped the appliance.	Take the appliance to your dealer or to an authorized Philips service center for examination or repair.
	If this appliance is used professionally it will reach the end of its life earlier.	Do not use the appliance professionally.
	The trimming head is dirty.	Clean the trimming head.
Reduced trimming performance.	You use the appliance in the wrong way.	Follow the instructions in chapter 'Using the appliance'.

	The trimming head is dirty.	Clean the trimming head.
	The battery is running low.	Replace the battery.
	You have not attached the trimming comb properly.	Remove the trimming comb and reattach it properly.
	Your skin may be moist.	Dry your skin with e.g. a towel before use.

