PHILIPS



フィリップス ミニスタイリングシェーバー


MG1100/16







フィリップス ミニスタイリングシェーバーをお買い上げいただき、 まことにありがとうございます。長い間ご愛用いただくために、ご使 用前にこの取扱説明書をよくお読みのうえ、正しくお使いください。 また、お読みになった後は、お使いになる方がいつでも見られる ところに必ず保管してください。

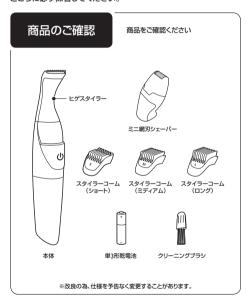

目 次

商品のご確認 -----1

	必ずお守りください 3・4
	各部の名称 5・6
●ご使用方法	乾電池の入れ方7
	アタッチメントの取り付け・取り外し8
	基本的な使い方9
	ミニ網刃シェーバーの使い方10
	ヒゲスタイラーの使い方 11・12
	お手入れ方法13
	製品を廃棄するとき
●英 文 解 説	Guidance in English15~34
●困ったとき	故障かな?と思ったら35
●保 証	保証とアフターサービス36
	仕様/お客様情報センター 37
	無料修理規定 38
	保証書 最終ページ
	2

●はじめに

MG1100-16_JP_A7_cs6.indd 2 15/04/30 17:05



安全上のご注意

- ●ここに示した注意事項は、安全に関する重要 な内容ですので、必ず守ってください。
- 誤った取扱いをしたときに想定される内容を 「警告」と「注意」とに区分けしています。

○絵表示について

記号は、「危険、警告、注意」を示します。 図の中や近くに具体的な注意内容を示します。



警告 人が死亡または重傷を負う可能性が想定される内容。



人が傷害を負う可能性及び物的損害のみの発生が想

○絵表示の例



記号は、してはいけない「禁止」を示します。図の中や近くに具 体的な禁止内容(左図の場合は分解禁止)を示します。



記号は、必ずしていただく「強制」を示します。図の中や近くに 具体的な強制内容(左図の場合は電源プラグをコンセントから 抜くこと)を示します。

▲ 警



●炎症やアレルギー症状が見られた場 合は、直ちにご使用をおやめくださ い。過敏肌や炎症肌の方はご使用に ならないでください。



●本体を改造しないでください。また、 修理技術者以外の人は、分解したり 修理をしないでください。火災、感 電、ケガの原因となります。修理はお 買い上げの販売店または小泉成器 修理センターにご相談ください。



■乳幼児の手の届くところでの放置、 使用はしないでください。やけど、感 電、ケガをすることがあります。





↑ 注 意





●本製品でまつげをお手入れすること は、絶対にしないでください。

●本体を落としたり、ぶつけたりしないでください。ケガや故障の原因になります。

●ご使用の前に刃の変形や破損がないか確認してください。肌を傷つけることがあります。

9 •#

●本体や付属品が破損または故障した場合は、本製品を使用しないでください。ケガの原因になります。交換の際には必ずフィリップス社製の同型部品とお取り替えください。

●乾電池に表示してある注意内容は 必ずお守りください。 ・乾電池は + 端子と - 端子の向きを 確かめ、正しく入れてください。 ・使い切った乾電池は、すぐに取り出 してください。 ・長期間使用しないときは、乾電池

乾電池の発熱、破裂、液漏れによる ケガや周囲汚損の原因になります。


使用上のご注意

- 本製品の使用、保管は室温15℃~35℃の環境下で行ってください。(尚、低温や高温で使用すると、乾電池の寿命が短くなります。)
- 室温、気圧、湿度が急激に変化する状況でご使用になる場合は、本製品をその環境下で30 分ほど慣らしてからお使いください。
- 極端に高温または低温の場所、直射日光の当たる場所には保管しないでください。夏場、 車の中に放置しないでください。
- 4. 刃は、薄く仕上げてありますので、刃部を強く押さえたり、硬いものに当てないよう、ていねいに扱ってください。
- 5. 付属品やコームの着脱、清掃は必ずスイッチを切ってから行ってください。
 - 6. 切れ味が衰えてきた場合は、必ず新しい同型部品と交換してください。
- 本製品は、使用の都度、掃除をしてください。
- 長期間で使用にならない場合は、本製品から乾電池を取り外してください。
- 9. 本製品は防水加工をしておりますが、水や液体の中に浸けないでください。



各部の名称

本体

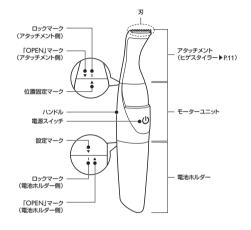







ミニ網刃シェーバー ▶P.10 網刃 コーム(ヒゲスタイラー用) ▶P.12 スタイラーコーム スタイラーコーム スタイラーコーム (ショート・1mm) (ミディアム・3mm) (ロング・5mm) クリーニングブラシ ▶P.13 単3形乾電池 ▶P.7

MG1100-16_JP_A7_cs6.indd 6

15/04/30 17:05





新品の単3形アルカリ乾電池1本で 約2時間使用できます。

単3形アルカリ乾電池以外は 使用しないでください。

本製品は乾電池式です。ご使用前に本体に乾電池がセットされているか確認してください。 新品の単3形アルカリ乾電池1本で、約2時間ご使用になれます。

- 1 電池ホルダーを左へ回し、「OPEN」 マーク(▲)を設定マークの位置に合 わせ(図●)、電池ホルダーを引き抜き ます(図●)。
- 3 モーターユニットに電池ホルダーを差し込み(図●)、ロックマーク(■)を設定マークの位置に合わせます(図●)。





2 電池ホルダーに乾電池を挿入します。 ※+端子と-端子の向きにご注意ください。



乾電池を取り出す場合は同様の手順で電池 ホルダーから乾電池を取り出してください。



※本製品は、単3形アルカリ乾電池(付属品)1本で作動します。新品の単3形アルカリ乾電池では、最長約2時間の使用が可能です。



乾電池の液漏れによる故障を防ぐために、次のことをお守りください。
・本製品を直射日光の当たる場所に放置しないでください。

 本製品の使用、保管は室温15℃~35℃の環境下で行ってください。 (尚、低温や高温で使用すると、乾電池の寿命が短くなります。)

(尚、低温や高温で使用すると、乾電池の寿命が短くなります。)長期間ご使用にならない場合は、本製品から乾電池を取り外してください。

・長期間ご使用にならない場合は、本製品から乾電池を取り外しくください。消耗した乾電池を本製品に入れたままにしないでください。

・ 洞託して乾竜池を本製品に入れてままにしないでください。また、ご使用済みの乾竜池は、各自治体の指示に従って処理してください。



7



MG1100-16_JP_A7_cs6.indd 7

アタッチメントの 取り付け・取り外し


アタッチメント (ミニ網刃シェーバー/ヒゲスタイラー) を取り付ける

アタッチメントを取り付けるには、アタッ チメントの「OPEN」マーク (▼) を、位 置固定マークに合わせて差し込み(図 ●)、左へ回してロックマーク(【)を位置 固定マークに合わせます(図②)。



アタッチメント (ミニ網刃シェーバー/ヒゲスタイラー) を取り外す

アタッチメントを取り外すには、アタッチ メントを右へ回し(図●)、「OPEN」マー ク (▼) を位置固定マークの位置に合わ せ、引き抜きます(図●)。





基本的な使い方

1 電源をONにする 電源スイッチを上にスライドさせると 電源がONになります。



2 電源をOFFにする

電源スイッチを下にスライドさせると 電源がOFFになります。




3 使用後について

ご使用の都度、必ずお手入れしてください(P13「お手入れ方法」)。



- ●本製品を初めてお使いになる場合は、腕または脚などでお試しください。 ●炎症やアレルギー症状が見られた場合は、直ちにご使用をおやめください。

 - → ベル・ノ・レルイー 無人が見るいて場合は、直写にご使用を含わめください。
 ご使用の態度、必ずアタッチメントやコームをグリーニングブラシか、めるま憲でお手入れしてください。お手入れを怠りますと、故障の原因となる場合があります。



ヒゲの輪郭・細部を整える

1 本体にミニ網刃シェーバーを取り付けます (P8「アタッチメントを取り付ける」)。



2 電源スイッチをONにしたら、軽く皮膚に当てながら輪郭に沿ってシェービングします。





- ●三二網刃シェーパーをご使用になる前に、網刃のやぶれがないか必ず確認 してください。ケガの原因になりますので、三二網刃シェーパーの網刃にや ぶれがある場合は、使わないでください。網刃にやぶれが見られる場合は、 必ず新しい網刃にお取り替えいただき安全にご使用ください。
- ●網刃を皮膚に強く押しつけないでください。破損または故障の原因となります。
- ●衛生上、他の人とは共有しないでください。







初めてヒゲスタイラーを使う時は、ス タイラーコームを取り付けてご使用く ださい。



★ 注意

ヒゲスタイラー・スタイラーコームの表面を常に皮膚に密着させ、強く押 し付けず、すべらせるように動かしてください。

ヒゲのトリミングをする

ヒゲスタイラーでトリミングをすると、無精ヒゲに適した0.5mmの長さにすることができます。

本体にヒゲスタイラーを取り付けます (P8「アタッチメントを取り付ける」)。



2 電源スイッチをONにしたら、トリミン グします。効率よくトリミングするには、 毛の流れに逆らって本体を動かしてく ださい。





スタイラーコームを付けてトリミングする

ヒゲスタイラーに、スタイラーコームを取り付けると、 1mm、3mm、5mmの長さにトリミングできます。







本体に取り付けたヒゲスタイラーにスタイラーコームを装着します。
 ※装着時にカチッと音がします。



2 電源スイッチをONにしたら、トリミン グします。効率よくトリミングするには、 毛の流れに逆らって本体を動かしてく ださい。







※本製品はご使用の都度、掃除をしてください。



●圧縮空気、研磨パッド、研磨洗浄剤、ペトロールやアセトンなどの刺激性 の強い液体を絶対に使わないでください。

本製品に潤滑剤を使う必要はありません。

●アタッチメントやコームに強い衝撃を与えないでください。

●お手入れの際には、先の尖ったものを使わないでください。

●モーターユニットと電池ホルダーを水や液体の中に浸したり、水道水ですすいだりしないでください。

ご使用の都度、必ずクリーニングブラシか、ぬるま湯でお手入れしてください。お手入れを怠りますと、故障の原因となる場合があります。

※洗剤は使用しないでください。

※40°C前後のぬるま湯でのお手入れをおすすめします(熱湯はおやめください。故障の原因となります)。

掃除をする前に電源スイッチがOFFになって いることを確かめてください。



2 ヒゲスタイラー、スタイラーコーム、ミニ網 刃シェーバーは、それぞれぬるま湯で付着した汚れを洗い流します。

※クリーニングブラシを使用することもできますが、ヒゲスタイラーのお取り扱いには十分ご注意ください。 ※ミニ網刃シェーバーは、網刃を傷つける恐れがあるため、クリーニングブラシを使用いないでください。



3 すべてのパーツを完全に乾かしてください。

部品の取り替え

付属品が破損、消耗した場合は、お買い上げの販売店または小泉成器部品センターで取扱いしているフィリップス社製の同型部品をご注文していただき、交換してください。











●古くなった製品を廃棄するときは、乾電池を取り出してください。乾電池には環境を汚染するおそれのある物質が含まれています。各自治体の指示に従って処理してください。






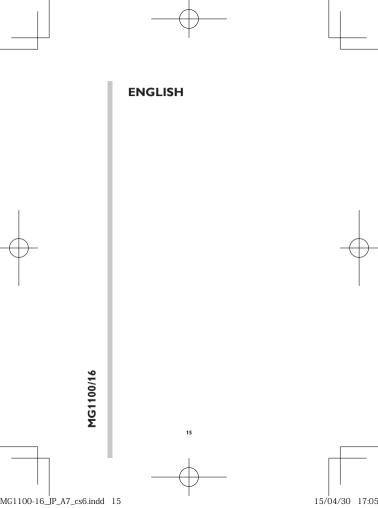








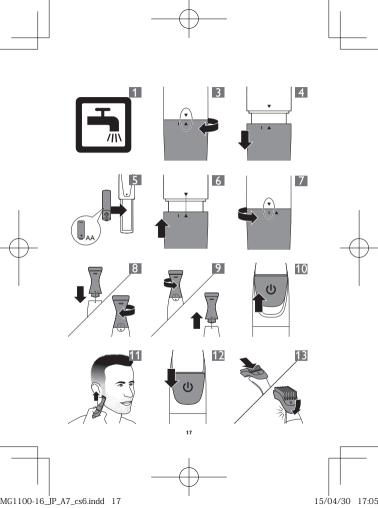

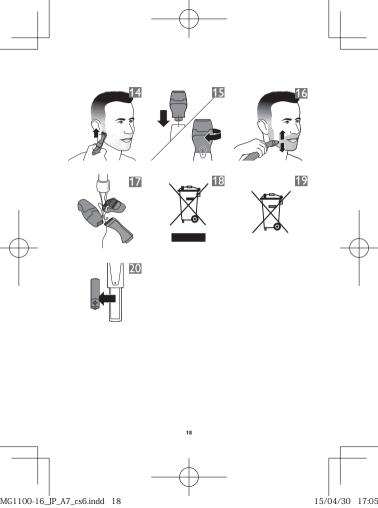

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at **www.philips. com/welcome**

Importanti

Read this user manual carefully before you use the appliance and save it for future reference.

Warning

- This appliance can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Caution

 Always check the appliance before you use it.
 Do not use the appliance if any of its parts is damaged or broken, as this may cause injury.







- Only use this appliance for its intended purpose as shown in the user manual.
- If the appliance is subjected to a major change in temperature, pressure or humidity, let the appliance acclimatise for 30 minutes before you use it
- For hygienic reasons, the appliance should only be used by one person.
- Be careful with hot water when you clean the attachments. Always check if the water is not too hot, to prevent your hands from getting hurnt
- Never use compressed air scouring pads. abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
 - Only operate the appliance on one nonrechargeable 1.5V R6 AA battery.
- Use and store the appliance at a temperature between 15°C and 35°C.
- Do not expose the appliance to direct sunlight.
- Remove the battery from the appliance if you are not going to use it for some time.
- Maximum noise level: Lc= 75 dB(A).







Compliance with standards

- This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.
- This appliance complies with the internationally approved IEC safety regulations and can be safely cleaned under the tap (Fig. 1).

■General description (Fig. 2)

- Precision trimming head
- Handle
- On/off slide
- Locking indicator
 - 'Locked' indication 'Unlocked' indication
- Battery compartment cover
- Precision shaving head Long trimming comb (L)
- 10 Medium trimming comb (M)
- 11 Short trimming comb (S)
- 12 Cleaning brush
- 13 Disposable AA alkaline battery



Preparing for use Placing the batteries

- To remove the battery compartment cover, turn it clockwise until the locking indicator points to the 'unlocked' indication. (Fig. 3)
- Pull the battery compartment cover off the handle (Fig. 4).
- Put the battery in the battery compartment (Fig. 5).

Make sure the + and - poles of the battery point in the right direction.

Note:The appliance runs on one R6 AA 1.5-volt battery (included). Preferably use Philips alkaline batteries. A new AA alkaline battery has an operating time of up to 2 hours.

- 4 Slide the battery compartment cover back onto the handle. (Fig. 6)
- 5 Turn the battery compartment cover anticlockwise until the locking indicator points to the 'locked' indication. (Fig. 7)







To avoid damage due to battery leakage:

- do not expose the appliance to direct sunlight.
- do not expose the appliance to temperatures higher than 35°C.
- remove the battery if you are not going to use the appliance for a month or more.
- do not leave an empty battery in the appliance.

Attaching and detaching attachments

Note:The precision trimming head and precision shaving head can be attached and detached in the same way.

- 1 To attach one of the attachments, align the locking indicator with the 'unlocked' indication and put the attachment on the handle. Then turn the attachment clockwise until the locking indicator points to the 'locked' indication (l). (Fig. 8)
- 2 To detach the attachment turn it anticlockwise until the locking indicator points to the 'unlocked' indication. Then pull the attachment off the handle. (Fig. 9)





Using the appliance

When you trim your beard for the first time, be careful and test the appliance on a small part of your arm or leg. Do not move the trimmer too fast. Make smooth and gentle movements.

If any irritation or allergic reaction occurs, discontinue use immediately. Do no use the appliance on sensitive or irritated skin.

Trimming with the precision trimming head

With the precision trimming head without trimming comb, you can trim hairs to a length of 0.5mm, the so-called 'stubble look'.

- 1 Put the precision trimming head on the appliance (see section 'Attaching and detaching the attachments' in chapter 'Preparing for use'). (Fig. 8)
- 2 Switch on the appliance. (Fig. 10)
- 3 Touch the hairs lightly with the precision trimming head and move it against the direction of hair growth. (Fig. 11)





Note:You can use the precision trimming head with the trimmer teeth pointing towards the skin.You can also use it with the flat part touching the skin and the teeth pointing in the direction in which you move the appliance.

4 Switch off the appliance (Fig. 12).

Trimming with precision trimming head with precision trimming comb

- 1 Put the precision trimming head on the appliance (see section 'Attaching and detaching the attachments' in chapter 'Preparing for use'). (Fig. 8)
- 2 Choose the short, medium or long trimming comb, depending on the desired hair length. The indications 'S', 'M' and 'L' are on the combs.
- Short trimming comb (S): 1mm
- Medium trimming comb (M): 3mm
- Long trimming comb (L): 5mm

Tip:We advise you to start trimming with the long comb.





- 3 Slide the trimming comb onto the front of the precision trimming head and push it onto the back until it locks into place ('click'). (Fig. 13)
- 4 Switch on the appliance. (Fig. 10)
- Move the appliance slowly and with light pressure against the direction of hair growth. (Fig. 14)

Note:To make trimming easier, stretch the skin with your free hand during trimming.

Note: Make sure that the flat part of the comb always touches the skin to obtain an even result.

Note: Do not press the appliance with the comb onto the skin too hard. This may cause the appliance to trim the hairs shorter than the length indicated on the comb.

Note: In areas where the hair grows in different directions, move the appliance upwards, downwards and sideways.

6 Regularly remove cut hairs from the comb. If a lot of hairs have accumulated in the comb, detach the comb from the appliance and blow and/or shake the hairs out of it.



7 Switch off the appliance (Fig. 12).

Shaving with the precision shaving head

- 1 Put the precision shaving head on the appliance (see section 'Attaching and detaching the attachments' in chapter 'Preparing for use'). (Fig. 15)
- 2 Place the precision shaving head at a 90° angle onto the skin and move the appliance slowly and smoothly against the direction of hair growth. (Fig. 16)
- Make sure that the whole shaving head is in contact with the skin. As hairs grow in different directions, move the appliance in different directions (upwards, downwards and sideways).
- 4 Switch off the appliance (Fig. 12).

Cleaning

MG1100-16_JP_A7_cs6.indd 27

Clean the appliance immediately after use and when a lot of hair or dirt has accumulated on the cutting elements.

15/04/30

Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Do not tap on the cutting elements.

Do not use any sharp objects to clean the cutting elements.

- 1 Switch off the appliance.
- Rinse the precision trimming head, the trimming combs and the precision shaving head with lukewarm water (Fig. 17).

Note: You can also use the cleaning brush to clean the precision trimming head, the trimming combs and the precision shaving head.

3 Let all parts dry completely before you use the appliance again.

Ordering accessories

If the trimming combs are damaged or worn, always replace them with original Philips trimming combs. If the cutting element of the precision trimming head or precision shaving head is damaged or worn, replace it.





To buy accessories or spare parts, visit **www. shop.philips.com/servic**e or go to your Philips dealer. You can also contact the Philips Consumer Care Centre in your country (see the worldwide guarantee leaflet for contact details).

Environment

- This symbol on a product means that the product is covered by European Directive 2012/19/EU (Fig. 18).
- This symbol means that the product contains batteries covered by European Directive 2006/66/EC which cannot be disposed of with normal household waste (Fig. 19).
- Inform yourself about the local separate collection system for electrical and electronic products and batteries. Follow local rules and never dispose of the product and batteries with normal household waste. Correct disposal of old products and batteries helps prevent negative consequences for the environment and human health.





Removing the disposable batteries

- 1 To remove the battery compartment cover, turn it clockwise until the locking indicator points to the 'unlocked' indication (Fig. 3).
- 2 Pull the battery compartment cover off the handle (Fig. 4).
- 3 Remove the battery from the battery compartment (Fig. 20).

■Guarantee and support

If you need information or support, please visit the Philips website at **www.philips.com/support** or read the worldwide guarantee leaflet.

Guarantee restrictions

Cutting units are not covered by the terms of the international guarantee because they are subject to wear

Troubleshooting

This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit **www.philips.**





com/support for a list of frequently asked questions or contact the Consumer Care Centre in your country.

Problem	Cause	Solution
The appliance does not shave long hairs.	The hairs are too long.	Pre-trim long hairs with the precision trimming head and move the appliance against the direction of hair growth. Make sure that the appliance is fully in contact with the skin.
The appliance does not work as well as it should.	Hairs may be stuck in the precision trimming head or precision shaving head.	Clean the precision trimming head or the precision shaving head (see chapter 'Cleaning').







Problem	Cause	Solution
The appliance pulls at the hairs.	You move the appliance too fast.	Do not move the appliance too fast.
	The disposable battery is empty.	Insert a new battery.
The appliance works, but the result is uneven.	You press the appliance onto the skin too hard.	Do not press the appliance onto the skin too hard, as this may cause the hair length after trimming to be shorter than the indicated hair lengths.





Problem	Cause	Solution
	The trimming comb is not in full contact with the skin.	When you use one of the combs, always make sure it is fully in contact with the skin.
		Always move the appliance against the direction of hair growth. As not all hairs grow in the same direction, this means that you have to move the appliance up, down and sideways.





Problem	Cause	Solution
The appliance does not work.	The disposable battery is empty or has been inserted incorrectly.	Replace the battery or insert it correctly.









故障かな?と思ったら、 お調べください。

使用時間が極端に短い

▶刃の掃除はしていますか? それでも改善されないときは、乾電池の寿命です。 新しい乾電池に取り替えてください。

だんだん切れ味が悪くなった

▶刃が損傷または摩耗していませんか? 損傷または摩耗している時は、新しい同型部品とお取り替えください。

電源スイッチを入れても作動しない

- ▶電池ホルダーが開いていませんか? 電池ホルダーは、しっかり閉じてください。
- ▶乾電池が逆方向に入っていませんか?
- 乾電池の方向を確認してください。
 ▶乾電池が切れていませんか?
- 新しい乾電池に取り替えてください。 ※乾電池を取り替えても作動しない場合は、絶対にご自身で分解したり修理したりせずに、お買い求めの 新売店にお持ちください。
- ▶刃が動かなくなるほど汚れているか、刃にキズがあるか、または刃が破損していませんか? アタッチメントをお手入れするか、刃を交換してください。

異常な音がする

- ▶刃に傷が付いていませんか?
- ▶アタッチメントやコームが正しくセットされていますか?

使用中、本体が熱くなる

▶アタッチメントが汚れていたり、長い毛が入り込んでいませんか? アタッチメントは、みずご使用の郵度お手入れしてください。

> 以上の点検により、正常な状態に戻らない場合は、 お買い求めの販売店か小泉成器修理センターへお問い合わせ願います。

保証書と修理サービスについて (必ずお読みください)

保証と アフターサービス

〈保証書・最終ページに付属〉

●保証書は、必ず「お買い上げ日・販売店名」等の記入 をお確かめのうえ、販売店から受け取っていただき 内容をよくお読みのあと大切に保管してください。

保証 期間	お買い上げ日から2年間
対象部分	本体(ヒゲスタイラー・ミニ網 刃シェーバー・その他各コー ム・付属品を除く)

【補修用性能部品の最低保有期間】

- ●補修用性能部品の最低保有期間は製造打ち切り後6年です。
- ●性能部品とは、その製品の機能を維持するために必要な部品です。

【ご不明な点や修理に関するご相談は】

●修理に関するご相談ならびにご不明な点は、お買い上げの販売店または、 小泉成器修理センターにお問い合わせください。

【修理を依頼されるときは】

●修理をご依頼される前に、この取扱説明書をよくお読みいただき、再度点検ください。 尚、異常のあるときはご使用を中止し、お買い上げの販売店へご依頼ください。

【保証期間中は】

●製品に保証書を添えてお買い上げの販売店にご持参ください。 保証書の記載内容により無料修理いたします。

【保証期間が過ぎているときは】

●修理によって製品の機能が維持できる場合は、補修用性能部品の保有期間内であれば、 ご希望により有料で修理させていただきます。

【海外での本製品の保証及びアフターサービスについて】

- ◆本製品の保証は海外においても有効です。(同シリーズ製品の取り扱いがある国に限ります)●日本国以外のフィリップスサービス部門においても保証期間内及び保証期間の経過後の
- アフターサービスを受けることができますが、この場合多少日数を要することもあります。
- ●海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門に お問い合わせください。尚、お因りの点がございましたら下記までご連絡ください。 Philips Consumer Lifestyle Service Department PO.Box 20100 9200 CA DRACHTEN The Neberhands Fax+11 51 29 785

【お客様の個人情報のお取り扱いについて】

●お受けしましたお客様の個人情報は、株式会社フィリップスエレクトロニクスジャパンのホームページ http://www.philips.coj.p/ に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

便利メモ

お買い上げ日	年	月 日	お買い上げ 店名	TEL.	()	
--------	---	-----	-------------	------	---	---	--

で使用の時、このような症状はありませんか?

- ●本体にさわると時々電気を感じる。
- ●こげくさい臭いがする。
- ●その他の異常、故障がある。

このような症状の時は、故障や事故防止のため、 スイッチを切り、必ず販売店にご相談ください。



仕 様

品 番	MG1100/16
電源方式	乾電池式(単3形 1本)
定格電圧	1.5V
本 体 質 量	約78g (ヒゲスタイラー装着時、乾電池含ます)

※改良の為、仕様を予告なく変更することがあります。

- ●フィリップス製品の修理受付はお買い上げの 販売店にお申し出ください。
- 販売店にお申し出ください。 ●修理サービス等についておわかりにならない ことは、下記にお問い合わせください。

株式会社 フィリップス エレクトロニクス ジャバン 日本販売代理店 小泉成器株式会社 〒541-0051 大阪市中央区備後町3-3-7

製品に関するお問い合わせ: フィリップスお客様情報センター

修理に関するお問い合わせ: 小泉成器修理センター

部品に関するお問い合わせ:

小泉成器部品センター

せ: ナビダイ

型。 ナビダイヤル 0570(07)6666 06(6261)8230 ナビダイヤル 0570(00)8888

型 かどダイヤル 0570(09)8888

(全国共通報告) 0570(09)2222 受付時間: 平日9: 00~17: 30(土・日・祝日・夏期休暇・年末年始を除く)

▶ナビダイヤルにかからない時は小泉成器東日本修理センター TEL 048(718)3340 〒344-0127 埼玉県春日部市水角1190

小泉成器在日本修理センター TEL 046(718)3340 1344-0127 埼玉宗春日かけ水舟1790 小泉成器西日本修理センター TEL 06(6613)3145 〒559-0033 大阪市住之江区南港中1丁目3番98号

ホームページアドレス http://www.philips.co.jp/



〈無料修理規定〉

- 取扱説明書、本体貼付ラベル等の注意書に従った正常な使用状態で保証期間内に故障した場合には、無料修理します。
- 2. 保証期間内に故障して無料修理をお受けになる場合には、商品と保証書をご 持参、ご提示のうえ、お買い上げの販売店にご依頼ください。なお、商品を直接 メーカーへ送付した場合の送料等はお客様の負担となります。
- ご贈答、ご転居でお買い上げの販売店に修理を依頼できない場合は、小泉成 器修理ヤンターにご依頼ください。
- 4. 保証期間内でも次の場合には有料修理になります。
 - ① 使用 Fの誤り及び不当な修理や改造による故障及び損傷。
 - お買い上げ後の輸送、移動、落下等による故障及び指傷。
 - ③ 火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障及び損傷。
- ④ 一般家庭以外(例えば、業務用の長時間使用)に使用された場合の故障及び損傷。
 - ⑤ 保証書の提示がない場合。
 - 係証書にお買い上げ年月日、お客様名、販売店名の記入のない場合、或は字句を書き 換えられた場合。
- ※保証書は、本書に明示した条件のもとにおいて無料修理をお約束するものです。従って保証書を発行している者(保証責任者)、及びそれ以外の事業者に対するお客様の法律上の権利を制限するものではありません。
- 保証期間経過後の修理についてご不明の場合は、お買い上げの販売店または 小泉成器修理センターにお問い合わせください。
- ※保証期間経過後の修理・補修用性能部品の保有期間について詳しくは取扱 説明書の保証とアフターサービスの項目をご覧ください。
- ※お客様にご記入いただいた個人情報(保証書の控え)は保証期間内のサービス 活動及びその後の安全点検活動のために利用させていただく場合がございます。ご了承ください。また個人情報は、株式会社フィリップスエレクトロニクス ジャパンのホームページ http://www.philips.co.jp/ に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。







〈 フィリップス ミニスタイリングシェーバー 保証書 БЫ

CERTIFICATE OF PURCHASE

この保証書は、「無料修理規定」記載内容で無料修理を行うことをお約束するものです。 お扱い上げの日から下記期間中に故障が発生した場合は、本書をご提示のうえ、お買い 上げの販売店に修理をご依頼ください。

お客様にご記入いただいた個人情報(保証書の控え)は、株式会社フィリップスエレクトロニクスジャパンのホームページ http://www.philips.co.jp/ に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

品 名	ミニスタイリングシェーバー
品 番	MG1100/16
保証期間	お買い上げ日より2年
対 象 部 分	本体(ヒゲスタイラー・ミニ網刃シェーバー・その他各コーム・付属品を除く)
お買い上げ日	年 月 日
	ご住所 〒
お 客 様	ご芳名
	電話番号
	販売店名·住所·電話番号
★ 販 売 店	

- ★ 保証書は再発行しませんので、大切に保管してください。
- ★ ご販売店様へ この保証書はお客様へのアフターサービスの実施と責任を明確にする ものです。贈答品、記念品の場合も含めて必ず記入捺印してお客様にお渡しください。
- ★ 製品に関するお問い合わせ

フィリップスお客様情報センターナビダイヤル(全国共通)

0570(07)6666

★ 修理に関するお問い合わせ

小泉成器修理センター ナビダイヤル(全国共通)

0570(09)8888

★ 部品に関するお問い合わせ

小泉成器部品センター ナビダイヤル(全国共通)

0570(09)2222

ナビダイヤルにかからない時は 小泉成器東日本修理センター TEL 048(718)3340 〒340(718)3340 小泉成器西日本修理センター TEL 06(6613)3145 〒559-0033 大阪市住之江区南港中1丁目3番98号

ナビダイヤルにかからない時は TEL 06(6613)3211 〒559-0033 大阪市住之江区南港中1丁目3番98号

)2222

ナビダイヤルにかからない時は

日本販売代理店 小泉成器株式会社 〒541-0051 大阪市中央区備後町3-3-7

TEL 06(6261)8230 FAX 06(6268)1432

受付時間: 平日9:00~17:30 (土・日・祝日・夏期休暇・年末年始を除く)

この印刷物は再生紙を使用しております。

4222.002.8508.1 (09/15)

©2015 Philips Electronics Japan, Ltd.

