

BHD827

EN	Important Information Leaflet
KO	중요 정보 책자

PHILIPS

English

Congratulations on your purchase, and welcome to Philips!
To fully benefit from the support that Philips offers, register
your product at www.philips.com/welcome.

1 Important

Read this user manual carefully before you use the
appliance and keep it for future reference.

- **WARNING:** Do not use this appliance near water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



Specifications are subject to change without notice
© 2019 Koninklijke Philips N.V.
All rights reserved.



3140 035 44741

- Always unplug the appliance after use.
- If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.
- If the main cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Do not insert metal objects into the air grilles to avoid electric shock.
- Never block the air grilles.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- Do not use the appliance on artificial hair.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the main cord round the appliance.
- Wait until the appliance has cooled down before you store it.
- Do not pull on the power cord after using. Always unplug the appliance by holding the plug.
- Do not operate the appliance with wet hands.
- Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.
- The styling nozzle could be hot to touch after use. Highly recommend to cool down this accessory before removing.

- Only use the scalp massager on the head but not other parts of the body.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.



한국어

필립스 제품을 구입해 주셔서 감사합니다! 필립스가 드리는 모든 지원 혜택을 받으실 수 있도록 www.Philips.com/welcome에서 제품을 등록하십시오.

1 중요 사항


본 제품을 사용하기 전에 이 사용 설명서를 주의 깊게 읽고 나중에 참조할 수 있도록 잘 보관하십시오.

- 경고: 본 제품은 물이 없는 곳에서 사용하십시오.
- 욕실에서 사용할 경우 사용 후에는 반드시 전원 플러그를 뽑으십시오. 전원이 꺼져 있더라도 물에 닿으면 위험할 수 있습니다.
- 경고: 본 제품을 욕조, 샤워기, 대야 또는 기타 물이 있는 용기 근처에서 사용하지 마십시오.
- 사용 후에는 반드시 제품의 전원 코드를 뽑으십시오.
- 제품이 과열되면 자동으로 전원이 꺼집니다. 제품의 전원을 뽑은 후 몇 분 동안 열기가 식도록 두십시오. 제품의 전원을 다시 켜기 전에 그릴이 잔털, 머리카락 등으로 막혀 있지 않은지 확인하십시오.
- 전원 코드가 손상된 경우, 안전을 위해 필립스 공인 서비스 센터



- 또는 필립스 서비스 지정점에 의뢰하여 교체하십시오.
- 8세 이상의 아이들과 신체적인 감각 및 정서적인 능력이 떨어지거나 경험과 지식이 풍부하지 않은 성인이 이 제품을 사용하려면 제품 사용과 관련하여 안전하게 사용할 수 있도록 지시사항을 충분히 숙지한 사람의 도움을 받아야 합니다. 어린이가 제품을 가지고 놀지 않도록 하십시오. 어린이가 혼자 제품 청소나 정비를 하지 않도록 하십시오.
- 추가 안전을 위하여 잔여 전류 소멸 장치(RCD)를 욕실 전원에 설치할 것을 권장합니다. 이 RCD의 정격 잔여 전류는 30mA 이하여야 합니다. 자세한 설치 방법은 전기 설비업체에 문의하십시오.
- 감전 사고를 막으려면 공기 흡입망에 금속 물질을 삽입하지 마십시오.
- 절대로 공기 흡입망을 막지 마십시오.
- 제품에 전원을 연결하기 전에 제품에 표시된 전압과 해당 사용 지역의 전압이 일치하는지 확인하십시오.
- 이 설명서에 나와있는 이외의 용도로 제품을 사용하지 마십시오.
- 본 제품을 가발에 사용하지 마십시오.
- 제품이 전원에 연결된 상태로 외출하거나 자리를 비우지 마십시오.
- 다른 제조업체에서 만들었거나 필립스에서 권장하지 않은 제품 액세서리 또는 부품은 절대 사용하지 마십시오.

- 이러한 액세서리나 부품을 사용했을 경우에는 품질 보증이 무효화됩니다.
- 전원 코드를 제품에 감지 마십시오.
- 제품이 충분히 식은 다음 보관하십시오.
- 사용 후 전원 코드를 당기지 마십시오. 항상 플러그를 잡고 제품의 전원 코드를 뽑으십시오.
- 젖은 손으로 제품을 작동하지 마십시오.
- 검사 또는 수리가 필요한 경우에는 항상 필립스 서비스 지정점으로 문의하십시오. 비공인업체에서 수리하는 경우 제품 사용자에게 심각한 상황을 초래할 수 있습니다.
- 사용 후 스타일링 노즐이 뜨거울 수 있으므로 함부로 만져서는 안 됩니다. 이 액세서리를 제거하기 전에 열기를 식힐 것을 적극 권장합니다.
- 두피 마사지는 머리 이외의 다른 신체 부위에는 사용하지 마십시오.
- 제품 코드를 제품이나 팔 주변에 말거나 감지 마십시오.

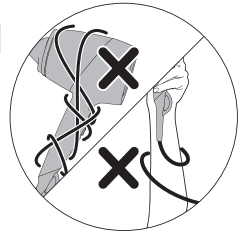

EMF(전자기장)

이 필립스 제품은 EMF(전자기장)와 관련된 모든 기준 및 규정을 준수합니다.


재활용

- 수명이 다 된 제품은 일반 가정용 쓰레기와 함께 버리지 말고 지정된 재활용품 수거 장소에 버리십시오. 이런 방법으로 환경 보호에 동참하실 수 있습니다.
- 해당 국가의 전기/전자 제품 분리 수거 규칙에 따라 버리십시오. 올바른 제품 폐기를 통해 환경 및 인류의 건강을 유해한 영향으로부터 보호할 수 있습니다.




PHILIPS










BHD827

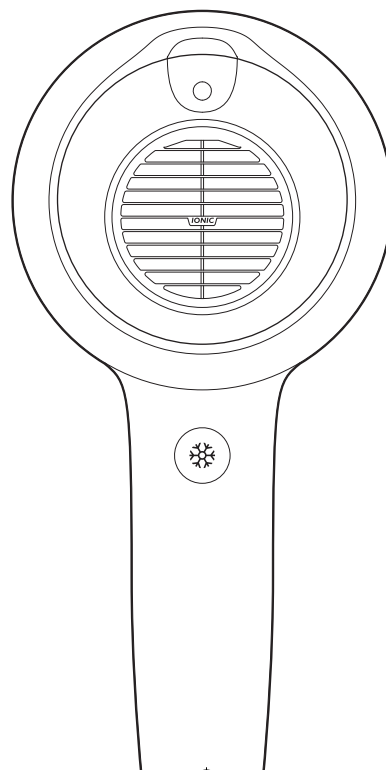

Specifications are subject to change without notice
© 2019 Koninklijke Philips N.V.
All rights reserved.

3000 048 13721

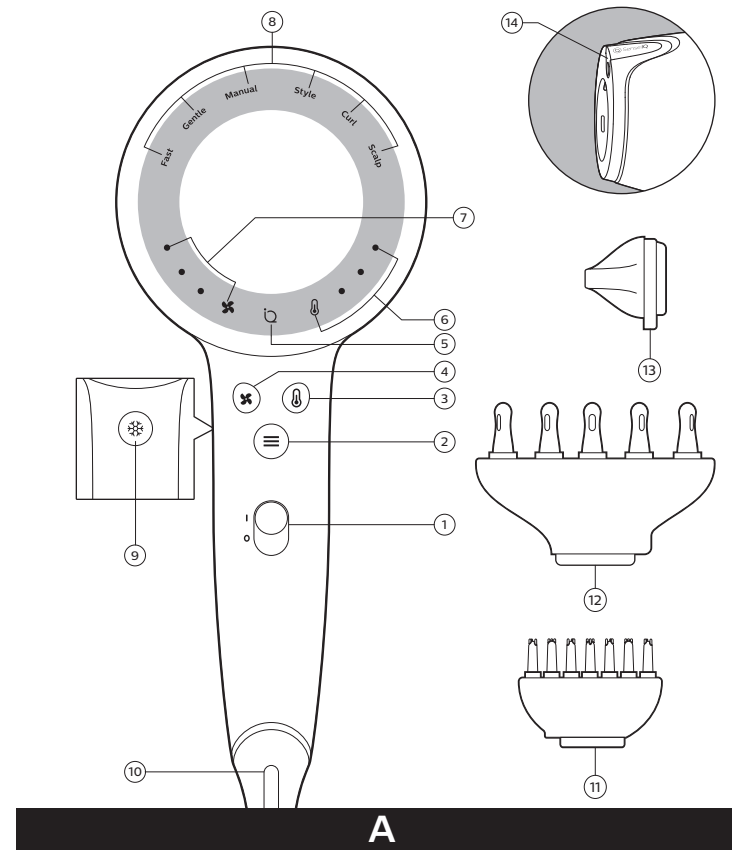

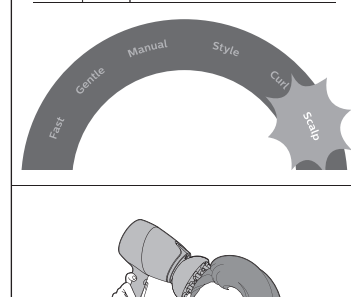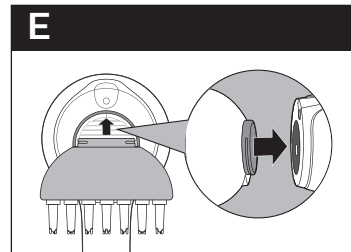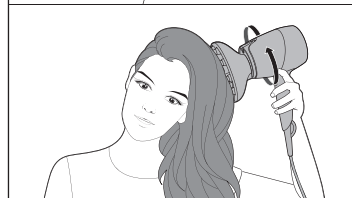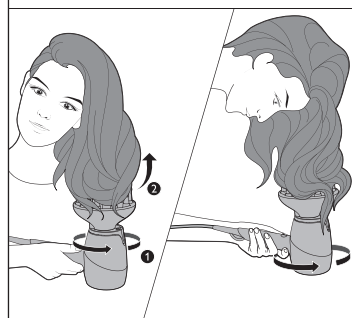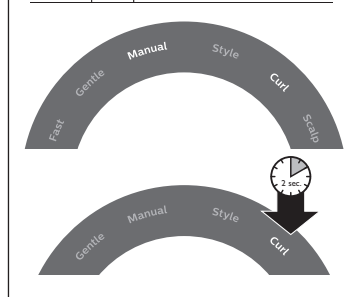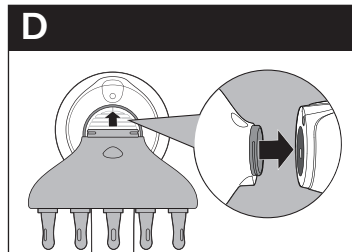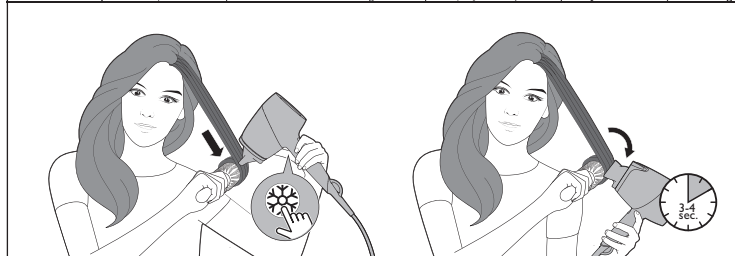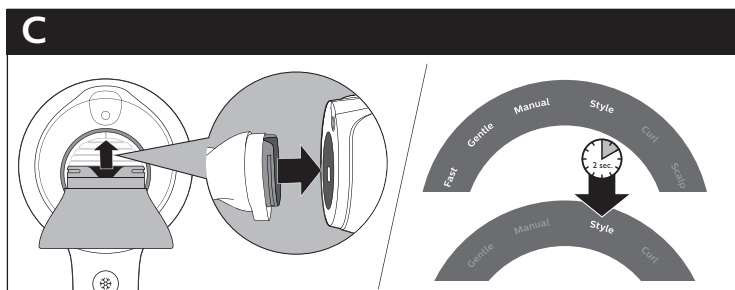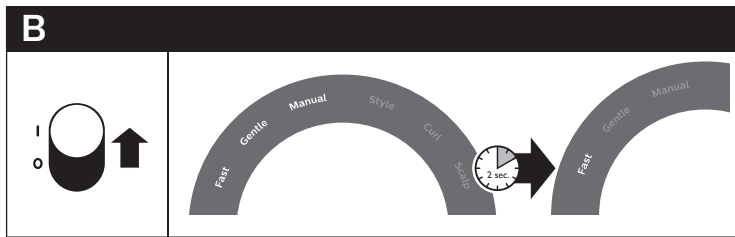

English	1
한국어	5

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Overview (Fig.A)

- ① On/Off switch
- ② Mode button
- ③ Heat button
- ④ Speed button
- ⑤ *SenseIQ* indicator (Back)
- ⑥ Heat indicator (Manual mode only)
- ⑦ Speed indicator (Manual mode only)
- ⑧ Mode Indicator
- ⑨ Cool Shot button
- ⑩ Hanging loop
- ⑪ Scalp massager
- ⑫ Curl diffuser
- ⑬ Styling nozzle
- ⑭ *SenseIQ* indicator (Top)

Mode	<i>SenseIQ</i>
Fast	Yes
Gentle	Yes
Manual	No
Style	Yes
Curl	Yes
Scalp	No

2 How to Use Your Hairdryer Without Any Accessories

- 1 Connect the plug to a power supply outlet and switch on the appliance (①).
- ↳ (Fig.B) Fast, Gentle, and Manual modes will indicate in the mode indicator (⑧) momentarily. Then, it will go to the default mode, i.e. Fast.
- 2 Press Mode ⌂ button (②) to change between Fast, Gentle and Manual modes.

Mode	Function
Fast	Dry your wet hair in a short time with its powerful performance.
Gentle	Dry hair at a caring temperature with gentle airflow.
Manual	<p>Dry your hair with your desired Heat 🔧 and Speed ⚡ settings.</p> <p>Tips:</p> <ul style="list-style-type: none"> • To activate Manual mode, you can press either the Mode ⌂ button, Heat 🔧 or Speed ⚡ button. • Manual mode has memory function which saves your selected Heat and Speed settings for future use.

- 3 Press the Cool Shot button ❄️ (⑨) **ONCE** for cool airflow to fix your style. To deactivate this function, press the Cool Shot ❄️, Heat 🔧 or Mode ⌂ button. At the back side of the dryer, the LEDs of Heat Indicator will be switched off as well. Only the LEDs of the Speed Indicator will be lit up.

Note

- You do not need to press AND hold the Cool Shot button for cool airflow.
- Cool Shot (❄️) is applicable to all modes. If you would like to change the speed in the Cool Shot setting, we recommend that you select Manual mode and change to Temperature 1.

3 How to Style Your Hair (Fig.C)

- 1 Attach the styling nozzle (⑬) and the Style mode will activate automatically.
- ↳ If you attach the styling nozzle and then switch on the dryer, you will see Fast, Gentle, Manual and Style modes in the mode indicator momentarily. Then, it will go to Style mode.

Note:

You can change to Gentle, Fast, Manual and Style mode as desired.

- 2 Select one section of hair (not wider than 5cm) and place the brush underneath the hair near the roots. With the styling nozzle facing downward on your hair, move the brush and hairdryer in a single movement until it reaches the end of your hair. Repeat on other sections of hair.
- 3 To fix your style, press the Cool Shot button ✳ **ONCE** (⑨) to get cool airflow.
- 4 To create soft flicks: Slightly turn the brush inward when you reach the hair ends. Press the Cool Shot button ✳ **ONCE** and keep it in the position for 3-4 seconds with cool airflow.
- 5 To remove the styling nozzle, simply take it off and the mode will switch to the previous setting.

4 How to Use Curl Diffuser (Fig.D)

A curl diffuser is helpful for drying curly hair. If you have natural curly hair or permed curls, you can use a curl diffuser to enhance your curls. There is a hole on top of the curl diffuser, which allows *SenseIQ* to detect your hair temperature when drying or styling the hair.

Note: You can change between Curl and Manual mode as desired.

- 1 Attach the curl diffuser (⑫) on the dryer and the Curl mode will activate.
- 2 Hold the hairdryer vertically and place the hair in a circular motion in between pins and move toward the scalp slowly.
- 3 Put the curl diffuser on your scalp and make rotating movements. It helps to dry your scalp and enhance volume at the roots of your hair.
- 4 To fix your style, press the Cool Shot button ✳ **ONCE** (⑨) to get cool airflow.

- 5 To remove curl diffuser, simply take it off and the mode will switch to the previous setting.

5 How to Massage Your Scalp (Fig.E)

The scalp massager attachment with the soft pins stimulates your scalp with vibration and gentle heat.

- 1 Attach the scalp massager attachment (⑪) on the dryer to activate the Scalp mode.
- 2 Gently place the massaging pins on your scalp for relaxation.

Note: The massager pins should touch the scalp. Do not press them hard on your scalp since this will reduce the effectiveness of the massager.

- 3 Move the scalp diffuser across different parts of your scalp in circular motion to dry your hair and massaging your scalp at the same time.

Note: Scalp mode can only be used with the scalp massager attachment. You cannot change to a different mode when this attachment is on the dryer.

6 After Use

Note: Do not immerse any attachments in water for cleaning.

- 1 Switch off the appliance and unplug it.
- 2 Place it on a heat-resistance surface until it cools down.
- 3 Use a vacuum cleaner to clear the dust at the grilles.
- 4 Clean the dryer with a damp cloth.
- 5 Keep it in a safe and dry place, free of dust. You can also hang it with the hanging loop (⑩).

7 Guarantee and Service

If you need information or if you have a problem, please visit the Philips website at www.philips.com/support or contact the Philips Customer Care Centre in your country (you find this phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

필립스 제품을 구입해 주셔서 감사합니다! 필립스가 드리는 지원 혜택을 받으실 수 있도록 www.philips.com/welcome에서 제품을 등록하십시오.

1 개요(그림A)





- | | |
|--------------------|-------------------|
| ① 전원 스위치 | ⑧ 모드 표시등 |
| ② 모드 버튼 | ⑨ 쿨샷 버튼 |
| ③ 예열 버튼 | ⑩ 걸고리 |
| ④ 속도 버튼 | ⑪ 두피 마사지기 |
| ⑤ SenseIQ 표시등(후면) | ⑫ 컬 디퓨저 |
| ⑥ 열기 표시등(수동 모드 전용) | ⑬ 스타일링 노즐 |
| ⑦ 속도 표시등(수동 모드 전용) | ⑭ SenseIQ 표시등(상단) |

모드	SenseIQ
고속	예
저자극	예
수동	아니요
스타일	예
컬	예
두피	아니요


2 액세서리 없이 헤어 드라이어 사용 방법

- 콘센트에 전원 플러그를 연결하고 제품의 전원을 켭니다(①).
- ↳ (그림B) 잠깐 동안 고속, 저자극, 수동 모드가 모드 표시등에(⑧) 표시됩니다. 그런 다음 기본 모드(고속)로 설정됩니다.
- 2 모드 ㉹버튼(②)을 누르면 고속, 저자극, 수동 모드 간 전환됩니다.


모드	기능
고속	강력한 성능으로 짧은 시간 내에 젖은 머리를 말립니다.
저자극	부드러운 공기 흐름과 높지 않은 온도로 머리를 말립니다.
수동	원하는 열기 ㉹와 속도 ✖ 설정으로 머리를 말립니다. 도움말: <ul style="list-style-type: none"> 수동 모드를 작동시키려면 모드 ㉹버튼, 열기 ㉹ 또는 속도 ✖ 버튼 중 하나를 누르면 됩니다. 수동 모드에는 메모리 기능이 있기 때문에 선택한 열기 및 속도를 저장하여 다음에 사용할 수 있습니다.

- 3 스타일 고정을 위한 시원한 바람을 원할 경우 쿨샷 버튼  (㉑)을 한 번 누릅니다. 이 기능을 끄려면 쿨샷 , 열기  또는 모드  버튼을 누릅니다. 드라이어 뒷면에 있는 열기 표시등의 LED도 꺼집니다. 속도 표시등의 LED에만 불이 들어옵니다.

참고



- 시원한 바람을 위해 쿨샷 버튼을 길게 누를 필요는 없습니다.
- 쿨샷()은 모든 모드에서 사용할 수 있습니다. 쿨샷 설정의 속도를 변경하려면 수동 모드를 선택한 다음 온도 1로 변경하는 것이 좋습니다.

3 머리 스타일링 방법(그림C)

- 1 스타일링 노즐()을 장착하면 스타일링 모드가 자동으로 켜집니다.
- 스타일링 노즐을 장착하고 드라이어를 켜면 잠시 동안 모드 표시등에 고속, 저자극, 수동, 스타일링 모드가 표시됩니다. 그런 다음 스타일링 모드로 설정됩니다.

참고:


원하는 대로 저자극, 고속, 수동, 스타일링 모드를 전환할 수 있습니다.

- 2 머리카락의 한 부분을 (폭이 5cm가 넘지 않게) 선택하고 브러시를 모근 근처 머리카락 아래에 위치합니다. 스타일링 노즐을 아래쪽으로 향하게 하여 브러시와 헤어드라이어를 한 번에 머리카락 끝까지 움직입니다. 머리카락 다른 부분에 이를 반복합니다.
- 3 스타일을 고정하려면 쿨샷 버튼을  한 번 (㉑) 눌러 시원한 바람이 나오게 합니다.
- 4 부드럽게 넘기려면, 머리카락 끝에 도달했을 때 브러시를 살짝 안쪽으로 돌립니다. 쿨샷 버튼을  한 번 누르고 그 자리에서 시원한 바람을 3~4초간 불어줍니다.
- 5 스타일링 노즐을 제거하려면 그냥 빼면 됩니다. 그러면 이전 설정으로 모드가 전환됩니다.

4 컬 디퓨저 사용 방법(그림D)

컬 디퓨저는 컬이 있는 머리를 말리는 데 유용합니다. 자연적인 곱슬머리이든 파마로 컬을 만들었든, 컬 디퓨저를 사용하여 컬을 살릴 수 있습니다. 컬 디퓨저 상단의 구멍은 머리를 말리거나 스타일링할 때 SenseIQ의 머리카락 온도 측정을 돕습니다.

참고: 원하는 대로 컬 모드와 수동 모드 간에 전환할 수 있습니다.

- 1 드라이어에 컬 디퓨저()를 장착하면 컬 모드가 켜집니다.
- 2 헤어 드라이어를 세로로 잡고 핀 사이에 모발을 놓은 다음 원을 그리듯 움직이며 두피 쪽으로 천천히 다가갑니다.

- 3 컬 디퓨저를 두피 위에 올려 두고 원을 그리듯 움직입니다. 두피를 건조하고 머리카락 뿌리의 볼륨을 살리는 데 도움이 됩니다.
- 4 스타일을 고정하려면 콜샷 버튼을 **한 번** (9) 눌러 시원한 바람이 나오게 합니다.
- 5 컬 디퓨저를 제거하려면 그냥 빼면 됩니다. 그러면 이전 설정으로 모드가 전환됩니다.

5 두피 마사지 방법(그림E)

부드러운 핀이 있는 두피 마사지기 액세서리는 진동과 부드러운 열기를 통해 두피를 자극합니다.

- 1 두피 마사지기 액세서리 (11)를 드라이어에 장착하면 두피 모드가 켜집니다.
- 2 편안함을 위해 부드럽게 마사지 핀을 두피에 올립니다.

참고: 마사지 핀이 두피에 닿아야 합니다. 마사지의 효과가 줄어 들 수 있으니 핀을 강하게 두피에 누르지 마십시오.

- 3 두피 디퓨저를 원을 그리며 두피 여러 부위로 움직여 머리를 말리는 동시에 두피를 마사지합니다.

참고: 두피 모드는 두피 마사지기 액세서리를 장착해야만 사용할 수 있습니다. 이 액세서리를 드라이어에 장착한 상태에서는 다른 모드로 전환할 수 없습니다.

6 사용 후

참고: 세척하기 위해 액세서리를 물에 담그지 마십시오.

- 1 제품 전원을 끄고 전원 코드를 뽑으십시오.
- 2 제품을 내열 표면 위에 올려놓고 식히십시오.
- 3 그릴 부분의 먼지는 진공청소기를 사용하여 청소하십시오.
- 4 젖은 천을 사용하여 드라이어를 닦으십시오.
- 5 안전하고 건조한 장소에 먼지가 묻지 않은 상태로 보관하십시오. 본 제품은 걸고리 (10)에 걸어서 보관할 수 있습니다.

7 품질 보증 및 서비스

보다 자세한 정보가 필요하시거나, 사용상의 문제가 있을 경우에는 필립스전자 홈페이지(www.philips.com/support)를 방문하시거나 필립스 고객 상담실로 문의하십시오. 전국 서비스 센터 안내는 제품 보증서를 참조하십시오. 해당 지역에 서비스 센터가 없는 경우 필립스 대리점에 문의하십시오.