

BHS378

English

Congratulations on your purchase, and welcome to Philips!
To fully benefit from the support that Philips offers, register
your product at www.philips.com/welcome.

1 Important


Read this user manual carefully before you use the
appliance and keep it for future reference.

- **WARNING:** Do not use this appliance near water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Always unplug the appliance after use.
- If the main cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the



EN User manual PT-BR Manual do Usuário

PHILIPS

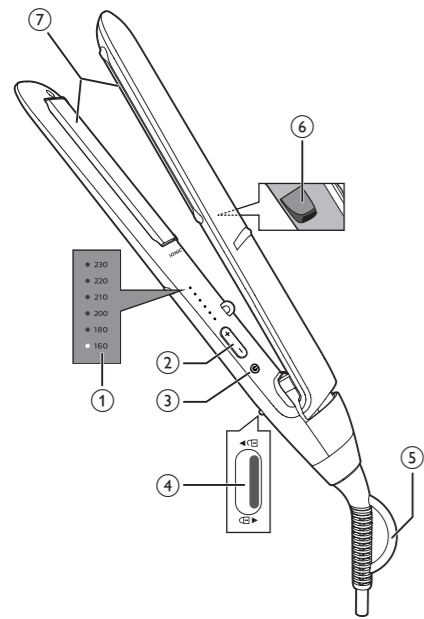

appliance. Cleaning and user maintenance shall not be made by children without supervision.

- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Do not pull on the power cord after using. Always unplug the appliance by holding the plug.
- Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- Do not use the appliance on artificial hair.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.

- Do not wind the main cord round the appliance.
- Wait until the appliance has cooled down before you store it.
- Pay full attention when using the appliance since it could be extremely hot. Only hold the handle as other parts are hot and avoid contact with the skin.
- Always place the appliance with the stand on a heat-resistant, stable flat surface. The hot heating plates should never touch the surface or other flammable material.
- Avoid the main cord from coming into contact with the hot parts of the appliance.
- Keep the appliance away from flammable objects and material when it is switched on.
- Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.
- Only use the appliance on dry hair.
- Do not operate the appliance with wet hands.
- Keep the heating plates clean and free of dust and styling products such as mousse, spray and gel. Never use the appliance in combination with styling products.

- The heating plates have coating. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.
- Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.
- Do not insert metal objects into the ionizer outlet to avoid electric shock.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Recycling

– Do not throw away the appliance with the normal household waste at the end of its life, but hand it in an official collection point for recycling. By doing this, you help to preserve the environment.



– Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

2 Preparation for use

- Wash hair with shampoo and conditioner and blow dry it.
- Use heat protection product and comb your hair with large-toothed comb.
- Use the straightener only when your hair is dry.
- Frequent users are recommended to use heat protection products when straightening.
- Ensure that you select a temperature setting that is suitable for your hair. Please refer to the below table. Always select a lower setting when you use the straightener for the first time.

Hair Type	Temperature Setting
Thick	210° - 230°
Normal	180° - 200°
Fine	160°

3 Straighten your hair

- 1 Connect the plug to a power supply socket.
 - 2 Slide the closing lock (4) to unlock the appliance.
 - 3 Press and hold the Ψ (3) button until the LED light (1) lights up and starts blinking.
 - The ion function activates when the appliance is switched on. The function provides additional shine and reduces frizz. When the function is on, a special odor may be smelt and a sizzling sound may be heard, which is normal and caused by the ions that are generated (6).
 - 4 Press + or – (2) to select a suitable temperature setting for your hair.
 - When the appliance is heating up to the selected temperature, the LED light next to the temperature setting will continue to blink until it is ready for use.
 - After about 30 seconds, the appliance is heated up and ready for use.
 - 5 Comb your hair and take a section that is not wider than 5cm for straightening.
- Note:** For thicker hair, it is suggested to create more sections.
- 6 Place it between the straightening plates (7) and press the handles firmly together.
 - 7 Slide the straightener down the length of the hair slowly in a single motion (max. 5 seconds) from root to end, without stopping to prevent overheating.
 - To create flicks, turn the straightener half-circle inwards (or outwards) when it reaches the hair ends and let the hair glide off the plates.


- 8 To straighten the rest of your hair, repeat steps 5 to 7.
- Note:** The appliance is equipped with an auto-shut off function. After 60 minutes, the appliance switches off automatically.

After use:

- 1 Switch off the appliance and unplug it.
- 2 Place it on a heat-resistant surface until it cools down.
- 3 Clean the appliance and straightening plates by damp cloth.
- 4 Lock the straightening plates (4).
- 5 Keep it in a safe and dry place, free of dust. You can also hang it with the hanging loop (5).

4 Guarantee and service

If you need information e.g. about replacement of an attachment or if you have a problem, please visit the Philips website at www.philips.com/support or contact the Philips Customer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

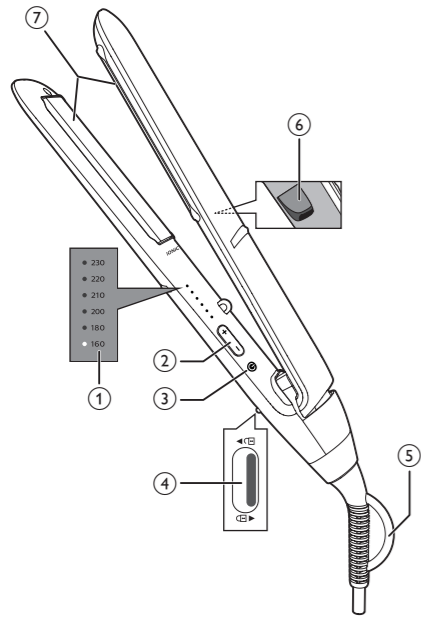

Português

Parabéns pela aquisição e seja bem-vindo à Philips! Para aproveitar ao máximo o suporte oferecido pela Philips, registre seu produto em www.philips.com/welcome.

1 Importante

Leia este manual atentamente antes de usar o aparelho e guarde-o para consultas futuras.

- **AVISO:** não use este aparelho próximo à água.
- Quando usar o aparelho no banheiro, tire-o da tomada após o uso, pois a proximidade da água é um risco, mesmo com o aparelho desligado.
- **AVISO:** não use este aparelho próximo a banheiras, chuveiros, pias ou outros recipientes que contenham água.



- Sempre desligue o aparelho após o uso.
- Se o fio de energia estiver danificado, deverá ser substituído pela Philips, por uma assistência técnica autorizada da Philips ou por técnicos igualmente qualificados para evitar situações de risco.
- Este aparelho pode ser usado por crianças a partir de 8 anos e pessoas com capacidades físicas, mentais ou sensoriais reduzidas ou com pouca experiência e conhecimento, desde que sejam supervisionadas ou instruídas sobre o uso e os riscos. Não deixe o aparelho ao alcance de crianças. Crianças não devem realizar limpeza ou manutenção sem a supervisão de um adulto.
- Para obter proteção adicional, recomendamos instalar um dispositivo de proteção contra corrente residual (RCD) no circuito elétrico do banheiro. O RCD deve ter uma corrente de operação residual de até 30 mA. Peça informações a um instalador profissional.
- Não retire o cabo de alimentação após o uso. Sempre desligue o aparelho segurando o plugue.
- Risco de queimadura. Mantenha aparelho fora do

- alcance de crianças pequenas, principalmente enquanto ele estiver em uso ou esfriando.
- Antes de conectar o aparelho à tomada elétrica, verifique se a voltagem indicada no aparelho corresponde à voltagem da rede elétrica local.
- Não use o aparelho para nenhum outro fim a não ser o descrito neste manual.
- Não use o aparelho em cabelos artificiais.
- Nunca deixe o aparelho conectado à tomada elétrica sem vigilância.
- Nunca use acessórios ou peças de outros fabricantes ou que não sejam especificamente recomendados pela Philips. Caso contrário, a garantia será anulada.
- Não enrole o fio de energia em volta do aparelho.
- Deixe-o esfriar antes de guardá-lo.
- Tenha muito cuidado ao usar o aparelho, pois ele pode estar extremamente quente. Segure somente o cabo já que as outras partes estão quentes e evite o contato com a pele.
- Sempre coloque o aparelho com o suporte em uma superfície plana e resistente a calor. Não deixe que as placas de aquecimento entrem em

- contato com a superfície ou outro material inflamável.
- Não deixe que o fio de energia entre em contato com as partes quentes do aparelho.
- Quando o aparelho estiver ligado, mantenha-o longe de objetos e materiais inflamáveis.
- Nunca cubra o aparelho (por exemplo, com toalhas ou roupas) enquanto ele estiver quente.
- Só utilize o aparelho em cabelos secos.
- Não use o aparelho com as mãos molhadas.
- Mantenha as placas de aquecimento limpas e sem poeira e produtos de modelagem, como mousse, gel e spray. Nunca use o aparelho com produtos de modelagem.
- As placas de aquecimento possuem revestimento. O revestimento desgasta lentamente conforme o uso. Isso não afeta o desempenho do aparelho.
- Para avaliações ou consertos, dirija-se a uma das assistências técnicas autorizadas da Philips. O conserto realizado por pessoas não qualificadas poderá causar situações de risco.
- Não insira objetos metálicos na saída do ionizador para evitar choque elétrico.

Campos eletromagnéticos

Este aparelho Philips está em conformidade com todos os padrões aplicáveis e regulamentos relacionados à exposição a campos eletromagnéticos.

Reciclagem

- Não descarte o aparelho com o lixo doméstico no final de sua vida útil. Leve-o a um posto de coleta oficial para que possa ser reciclado. Ao fazer isso, você ajuda a preservar o meio ambiente.



- Siga as regras de seu país referentes à coleta seletiva de produtos elétricos e eletrônicos. O descarte correto ajuda a prevenir consequências negativas para o meio ambiente e para a saúde humana.

2 Preparação para uso

- Lave o cabelo com xampu e condicionador e seque-o com secador.
- Utilize a proteção contra o calor e penteie o cabelo com o pente grande.
- Utilize a chapa alisadora apenas com o cabelo seco.
- Caso você utilize o produto com muita frequência, é aconselhável sempre usar produtos de proteção contra o calor ao alisar o cabelo.
- Certifique-se de selecionar um ajuste de temperatura adequado ao seu cabelo. Consulte a tabela abaixo. Sempre selecione um ajuste de temperatura mais baixo quando usar a chapa alisadora pela primeira vez.

Tipo de cabelo	Ajuste de temperatura
Grosso	210° - 230°
Normal	180° - 200°
Fino	160°

3 Alisamento do cabelo

- 1 Conecte o plugue à tomada de alimentação.
- 2 Deslize a trava de bloqueio (4) para destravar o aparelho.
- 3 Mantenha pressionado o botão (3) até que a luz LED (1) se acenda e comece a piscar.
 - ↳ A função de condicionamento iônico é ativada quando o aparelho é ligado. Ela dá aos cabelos um brilho extra e reduz o frizz. Quando essa função estiver ativada, você poderá sentir um cheiro característico e ouvir um som crepitante, decorrentes dos íons gerados. Isso é normal (6).
- 4 Pressione + ou - (2) para selecionar um ajuste de temperatura adequado para o seu cabelo.
 - ↳ Quando o aparelho estiver aquecendo até a temperatura selecionada, a luz LED ao lado do ajuste de temperatura continuará a piscar até estar pronto para uso.
 - ↳ Após cerca de 30 segundos, o aparelho está aquecido e pronto para uso.
- 5 Penteie o cabelo e separe uma mecha com menos de 5 cm para o alisamento.

Observação: ao usar em cabelos mais grossos, separe-os em mais mechas.

- 6 Coloque-a entre as chapas alisadoras (7) e pressione as alças firmemente.
 - 7 Deslize lentamente a chapa alisadora para baixo ao longo do comprimento dos cabelos, fazendo um único movimento (no máx. 5 segundos), da raiz até as pontas, sem parar, para evitar o superaquecimento.
 - Para dar movimento ao cabelo, gire a chapa alisadora meio círculo para dentro (ou para fora) até chegar às pontas do cabelo e deixe-o deslizar naturalmente.
 - 8 Para alisar o restante do cabelo, repita as etapas de 5 a 7.
- Observação:** o aparelho é equipado com uma função de desligamento automático. Depois de 1 hora, o aparelho desliga automaticamente.

Após o uso:

- 1 Desligue e desconecte o aparelho da tomada.
- 2 Deixe o aparelho esfriar sobre uma superfície resistente ao calor.
- 3 Limpe o aparelho e as placas alisadoras com um pano úmido.
- 4 Trave as chapas alisadoras (4).
- 5 Guarde o aparelho em local seguro e seco, livre de poeira. Você também pode pendurá-la pela argola para pendurar (5).

4 Garantia e manutenção

Se precisar de informações, por exemplo, sobre a substituição de um acessório, ou se tiver algum problema, visite o site da Philips em www.philips.com/support ou entre em contato com a Central de Atendimento ao Cliente Philips do seu país (o número de telefone encontra-se no folheto da garantia mundial). Se não existir um Centro de Atendimento ao Cliente no seu país, dirija-se a um representante local da Philips.