



フィリップス 電動シェーバー
S1040/04, S1041/03, S1031/04, S1035/04, S1045/04
取扱説明書



©2019 Philips Japan, Ltd.
 3000.037.3032.1(04/19)

フィリップス 電動シェーバー 保証書
 CERTIFICATE OF PURCHASE

この保証書は、「無料修理規定」記載内容で無料修理を行うことを約束するものです。お買い上げの日から下記期間中に故障が発生した場合は、フィリップスサポートセンターにお問い合わせください。お客様にご記入いただいた個人情報(保証書の控え)は、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「お客様の個人情報の取扱いについて」の当社の方針」に基づき適切に管理いたします。

品名	電動シェーバー
品番	S1040/04, S1041/03, S1031/04, S1035/04, S1045/04
保証期間	お買い上げ日より2年
対象部分	本体、充電アダプタ(シェービングユニット、保護キャップ、収納ポーチを除く)
お買い上げ日	年 月 日
お客様	ご氏名 ご住所 電話番号
販売店	販売店名・住所・電話番号

★保証書は再発行しませんので、大切に保管してください。
 ※ご返送の際は、この保証書はお客様へのアフターサービスの実施と責任を明確にするものです。商品名、記念日の場合も含めて必ず捺印し印してお客様へお返しください。

★ 製品の使用方法や修理に関するお問い合わせ

フィリップスサポートセンター
0120(944)859
 受付時間:9:00~18:00(年末年始除く)



MyPhilips 登録のご案内

フィリップスでは、製品をより快適にご使用いただくために製品登録をすすめています。MyPhilipsでは製品の保証書や購入証明書の写真も保管でき、万一購入証明書を紛失した場合にも安心です。

URL <http://www.philips.co.jp/myphilips-about>

この印刷物は再生紙を使用しております。

フィリップス シェーバーをお買い上げいただき、まことにありがとうございます。長い間ご愛用いただくために、ご使用前にこの取扱説明書をよくお読みください。正しくお使いください。また、お読みになった後は、お使いになる方がいつでも見られるところに必ず保管してください。

●商品のご確認 商品をご確認ください。

※改良の為、仕様を予告なく変更することがあります。

●お買い上げのお客様へ 初めてご使用になる際は、ご使用前に充電してください。

目次

- 必ずお守りください
- 各部の名称
- 充電の仕方
- シェービングの仕方(ドライ)
- シェービングの仕方(ウェット)
- お手入れ方法
- 分解掃除の仕方
- 保護キャップの取り付け方
- 刃の交換
- シェーバーを廃棄するとき
- 故障かな?と思ったら
- 保証とアフターサービス
- 仕様
- 無料修理規定

Guidance in English

① 必ずお守りください

安全上のご注意

●ここに示した注意事項は、安全に関する重要な内容ですので、必ず守ってください。

●誤った取扱いをしたときに想定される内容を「警告」と「注意」とに区別しています。

○総表示について

▲ 記号は、「警告、注意」を示します。図の中や近くに具体的な禁止内容(左図の場合は分解禁止)を示します。

▲ 警告 人が死亡または重傷を負う可能性が想定される内容。

▲ 注意 人が傷害を負う可能性及び物的損害の発生が想定される内容。

○総表示の例

● 記号は、してはならない「禁止」を示します。図の中や近くに具体的な禁止内容(左図の場合は分解禁止)を示します。

● 記号は、必ずしていただく「強制」を示します。図の中や近くに具体的な強制内容(左図の場合は電源プラグをコンセントから抜くこと)を示します。

③ 充電の仕方

浴室で充電をしないでください。
お客様による充電電池の交換はできません。
この商品は通常約10時間充電です。
満充電で約40分充電できます。

※充電をしながらシェービングはできません。
 初めてお使いになるときや、長い間ご使用にならなかったときは、ご使用前に充電してください。充電時間は約10時間です。海外(100~240V)でのご使用も可能です。ただし、コンセントの形状や電圧など現地で充分お確かめのうえご使用ください。

- シェーバー本体・充電アダプタは改造しないでください。また、修理技術者以外の方は、分解したり修理をしないでください。火災、感電、ケガの原因となります。修理はフィリップスサポートセンターにお問い合わせください。
- 充電アダプタが熱んだり、コンセントの差込みが緩いときは使用しないでください。感電・ショート・発火の原因になります。
- 充電アダプタを水につけたら、水をかけたらしなさないでください。
- 充電アダプタを傷付けたら、電源コードを無理に曲げたり、引っ張ったり、ねじったり、たばねたり、重い物を載せたり、挟み込んだり、加工したりしないでください。電源コードが破損し、火災・感電の原因となります。
- 乳幼児の手の届くところに本製品を置かないでください。
- 充電アダプタには変圧器が内蔵されています。充電アダプタを切離して別のプラグに接続する場合は危険ですのでおやめください。
- 自分で意思表示ができない人(幼児を含む)にご使用させないでください。また、お体の不自由な人だけでは使用しないでください。



⚠ 注意

- 充電アダプタの電源プラグを抜くときは、電源コードを持たずに必ず先端の充電アダプタ部を持って引き抜いてください。感電やショートし、発火することがあります。
- 充電時以外は、充電アダプタコンセントから抜いてください。ケガややけど、絶縁劣化による感電・漏電・火災の原因となります。
- 刃が破損または故障した場合は、本製品を使用しないでください。ケガの原因になります。交換の際には必ずフィリップス社製の同等品と取り替えてください。
- 電源コネクタ受部にピンやこみを付着させないでください。感電・ショート・発火の原因になります。
- 刃は強く押さえないでください。破損して皮膚を傷つけることがあります。
- 充電アダプタは付属の専用アダプタを使用してください。また付属の専用アダプタで他の商品を充電しないでください。ショート、異常発熱による発火の原因になります。破損、故障した場合は、事故を避けるために必ずフィリップス社製の同等充電アダプタをお求めください。

使用上のご注意

- 本製品はヒゲ(あごヒゲ、口ヒゲ)をシェービングするためのものです。それ以外の目的で使用しないでください。
- フィリップスシェーバーを初めてお使いの方は、剃り方に慣れるまで2~3週間かかることがあります。
- 60℃以上の水でシェーバーを洗淨しないでください。
- 本製品の使用、充電、保管は室温5~35℃の環境下で行ってください(高温、低温や湿度で充電すると、充電電池の寿命が短くなります)。
- 外刃は、濡く仕上げてありますので、刃端を強く押さえたり、硬いものに当たらないよう、ていねいに扱ってください。
- シェービングユニットの清掃や磨耗は、必ず電源をOFFにしてから行ってください。
- 切れ味が悪えきたり、刃が破損した場合は、使用せず必ず新しい刃と交換してください。
- 直射日光の当たる場所には保管しないでください。夏場、車の中に放置しないでください。
- 乳幼児の手の届かないところに保管してください。
- シェーバー本体は防水加工をしておりますが、水や液体の中に入れてください。
- プラグ式消臭・芳香剤を使用しているコンセント、あるいはその近くのコンセントに充電アダプタを接続しないでください。充電アダプタを傷める原因となります。

② 各部の名称

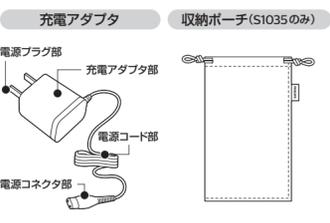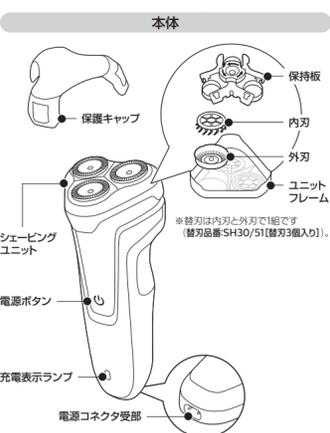

③ 充電の仕方

浴室で充電をしないでください。
お客様による充電電池の交換はできません。
この商品は通常約10時間充電です。
満充電で約40分充電できます。

※充電をしながらシェービングはできません。
 初めてお使いになるときや、長い間ご使用にならなかったときは、ご使用前に充電してください。充電時間は約10時間です。海外(100~240V)でのご使用も可能です。ただし、コンセントの形状や電圧など現地で充分お確かめのうえご使用ください。

- 顔を濡らし、市販のシェービングフォームまたはシェービングジェルを付けます。
- 充電アダプタの電源コネクタ部をシェーバー本体の電源コネクタ受部に差し込みます。
- ご家庭のコンセントに充電アダプタの電源プラグ部を差し込みます。
 ※通常の目安として満充電で約13分使用し、約13日間使用できますが、ご使用状況(使用時間・ヒゲの濃さなど)により変わります。
- 充電表示ランプが白色に点灯し、充電中であることを示します。
 ※充電が完了しても充電表示ランプは点灯し続けます。表示ランプの色が変わらず、点滅を止めます。
 ※充電は約10時間を目安に充電アダプタをはずしてください。

ポイント

- 充電中、テレビ等に雑音が入る場合、別のコンセントで充電してください。
- 充電中は本体・充電アダプタが多少熱くなりますが、異常ではありません。
- 充電電池の寿命は使用・保管などの状態により異なります。
- ニッケル水素電池の特性上、電池容量を使い切らずに充電を繰り返すと使用可能容量が減少することがあります。これを避ける為、最後まで充電を使いきってから、充電することをすすめます。

注意

- 必ず湿し充電を行うと充電電池の寿命が短くなります。
- 専用の充電アダプタ以外の充電はしないでください。
- 長時間使用しない場合は、充電電池が過放電や過熱し、使用不能になることがあります。3~4か月に一度は充電してください。
- 本製品を2時間以上コンセントに接続したままにしないでください。

④ シェービングの仕方(ドライ)

製品本体に充電アダプタを差したまま使用はできません。

肌が乾いた状態でのシェービングの仕方です。

警告 シェーバー本体は防水加工をしており、浴室でも使用できますが、水や液体の中に入れてはいけません(故障の原因となります)。

●モーターの始動時、微弱な振動がシェーバー本体に伝わりますが、問題はありません。
- ご使用の前に外刃の破れや変形がないか確認してください。(外刃に破れや変形があるときは刃を替える原因になります)。
- ヒゲ剃り以外の目的(顔剃りなど)には、使用しないでください。



1 電源ボタンを押し、電源をONにします。

2 刃を前に軽く押しあて、円を描くように動かしながら剃ります。

3 シェービング後は電源ボタンを押し、電源をOFFにします。

上手に剃るには

肌を強く押しつけるのではなく、軽く押しあてて円を描くように回転させながら剃るのがコツです。

ほお 肌を伸ばし、ヒゲを立てるよう円を描くように小さく回転させながら剃ります。

あごの裏側 刃を前に軽くあて、図のようにあごを上げて円を描くように小さく回転させながら剃ります。

ほおの隅から首筋 片方の手で刃を後ろに引っ張りながら剃ります。

鼻の下 鼻の下を伸ばし、円を描くように小さく回転させながら剃ります。

フィリップスのシェーバーを初めてお使いの方は、剃り方に慣れるまで2~3週間かかることがあります。初めてのシェービングで思い通りの結果が得られないことや、少し剃りにじりじり感がある場合がありますが、これは普通のことです。フィリップスのシェーバーには専用シェービング方法を覚えるには、最初こそ難しいシェービング法に慣れる時間が必要です。新しいシェーバーに肌を慣らす為、まずは3週間このシェーバーを使い続けてみてください(最後でも通常に図1上)。この習慣は、あらゆるシェービング方法を覚えたりせず、同じシェーバーで前を慣らすことが大切です。

⑤ シェービングの仕方(ウェット)

シェービングフォームやシェービングジェルを使ったシェービングの仕方です。剃った部分を蒸気しながら、なめらかなシェービングができます。

警告 シェーバー本体は防水加工をしており、浴室でも使用できますが、水や液体の中に入れてはいけません(故障の原因となります)。

●モーターの始動時、微弱な振動がシェーバー本体に伝わりますが、問題はありません。
- ご使用の前に外刃の破れや変形がないか確認してください。(外刃に破れや変形があるときは刃を替える原因になります)。
- ヒゲ剃り以外の目的(顔剃りなど)には、使用しないでください。
- 剃り後もお肌を冷やしますが、前の上での剃りやすいため、シェービングフォームやジェルの使用をお勧めします。

フィリップスのシェーバーを初めてお使いの方は、剃り方に慣れるまで2~3週間かかることがあります。初めてのシェービングで思い通りの結果が得られないことや、少し剃りにじりじり感がある場合がありますが、これは普通のことです。フィリップスのシェーバーには専用シェービング方法を覚えるには、最初こそ難しいシェービング法に慣れる時間が必要です。新しいシェーバーに肌を慣らす為、まずは3週間このシェーバーを使い続けてみてください(最後でも通常に図1上)。この習慣は、あらゆるシェービング方法を覚えたりせず、同じシェーバーで前を慣らすことが大切です。

⑤ シェービングの仕方(ウェット)

シェービングフォームやシェービングジェルを使ったシェービングの仕方です。剃った部分を蒸気しながら、なめらかなシェービングができます。

警告 シェーバー本体は防水加工をしており、浴室でも使用できますが、水や液体の中に入れてはいけません(故障の原因となります)。

●モーターの始動時、微弱な振動がシェーバー本体に伝わりますが、問題はありません。
- ご使用の前に外刃の破れや変形がないか確認してください。(外刃に破れや変形があるときは刃を替える原因になります)。
- ヒゲ剃り以外の目的(顔剃りなど)には、使用しないでください。
- 剃り後もお肌を冷やしますが、前の上での剃りやすいため、シェービングフォームやジェルの使用をお勧めします。

●モーターの始動時、微弱な振動がシェーバー本体に伝わりますが、問題はありません。
- ご使用の前に外刃の破れや変形がないか確認してください。(外刃に破れや変形があるときは刃を替える原因になります)。
- ヒゲ剃り以外の目的(顔剃りなど)には、使用しないでください。
- 剃り後もお肌を冷やしますが、前の上での剃りやすいため、シェービングフォームやジェルの使用をお勧めします。

③ 充電の仕方

浴室で充電をしないでください。
お客様による充電電池の交換はできません。
この商品は通常約10時間充電です。
満充電で約40分充電できます。

※充電をしながらシェービングはできません。
 初めてお使いになるときや、長い間ご使用にならなかったときは、ご使用前に充電してください。充電時間は約10時間です。海外(100~240V)でのご使用も可能です。ただし、コンセントの形状や電圧など現地で充分お確かめのうえご使用ください。

- 顔を濡らし、市販のシェービングフォームまたはシェービングジェルを付けます。
- 充電アダプタの電源コネクタ部をシェーバー本体の電源コネクタ受部に差し込みます。
- ご家庭のコンセントに充電アダプタの電源プラグ部を差し込みます。
 ※通常の目安として満充電で約13分使用し、約13日間使用できますが、ご使用状況(使用時間・ヒゲの濃さなど)により変わります。
- 充電表示ランプが白色に点灯し、充電中であることを示します。
 ※充電が完了しても充電表示ランプは点灯し続けます。表示ランプの色が変わらず、点滅を止めます。
 ※充電は約10時間を目安に充電アダプタをはずしてください。

5 シェービング後は電源ボタンを押し、電源をOFFにします。

6 シェーバーをきれいに洗います。

【重要】シェービング後は、シェービングフォームやシェービングジェルがしっかりと洗い流されているかを確認してください。お手入れが不十分な場合、臭いが出るばかりでなく、故障の原因にもなります。

⑥ お手入れ方法

シェービングユニットはご使用の都度、水洗いによるお手入れをしてください。

水洗いによるお手入れ方法

注意

- お手入れの際は、電源をOFFにしてから水洗いしてください。
- シェービングユニットは水洗いできますが、本体は水中に浸けしないでください。
- シェービングユニットを乾燥させる時に、タールやティッシュペーパーを使用しないでください。刃を傷める場合があります。

※洗剤は使用しないでください。
 ※ぬるま湯(40℃前後)でのお手入れをおすすめします。臭いのもととなる皮膚や汗などの汚れがすすぎやすくなります。熱湯はお肌を傷めたり故障の原因となります。お手入れ中にシェーバーの蓋が水が濡れる場合がありますが、異常ではありません。

シェービングユニットのお手入れ方法

1 シェービングユニットの前面を上を持ち上げてから背面を上を持ち上げ、本体からシェービングユニットを取り出すことができます。

2 シェービングユニット受部、シェービングユニットの裏と裏を、ぬるま湯または水でよくすすいでください。

3 シェービングユニットの余分な毛を切り、よく乾かします。

4 乾いたことを確認したら、シェービングユニットを閉じてください。

5 シェービングユニットの前面のフックをシェービングユニット受部に引っかけて、カチッと音がするまで押し込みます。
 ※シェービングユニットが正しくセットされていない場合や、保持板がロックされていない場合は、シェービングユニットがきちんと閉まりません。

⑩ シェーバーを廃棄するとき

※お客様による充電電池の修理交換はできません。

ニッケル水素電池のリサイクルについて

本製品はニッケル水素電池を使用しています。ニッケル水素電池はリサイクル可能な貴重な資源です。ご使用済み製品の廃棄に際しては、ニッケル水素電池を取り出し、各自自治体の処理方法に従い、リサイクル協力店へお持ちください。

刃の取り外し方

1 シェービングユニットの前面を上を持ち上げてから背面を上を持ち上げ、本体からシェービングユニットを取り出します。

2 保持板の中央のつまみを矢印の方向(反時計回り)に回し(図①)、上を持ち上げて取り外します(図②)。内刃と外刃を組直すユニットフレームより取り外します。

3 取り外した内刃と外刃を1つずつぬるま湯または水ですすぎます。

刃の取り付け方

1 内刃と外刃を正しい組み合わせにセットし、ユニットフレームに戻します(図①)。時計回りに回してセットします(図②)。

2 モーターユニットにある左右のツメを外し、カバーを取り外します。

3 充電電池ホルダーを持ち上げて工具でワイヤーを切断し、取り出します。

4 充電電池と基板の間にドライバーの先を入れてひねり、基板から充電電池を取り外します。

⑪ 故障かな?と思ったら

故障かな?と思ったら、お調べください。

⑧ 保護キャップの取り付け方

保護キャップを取り付ける前にシェーバーをきちんと乾燥させてください。

●保護キャップを図のように、シェービングユニットに取り付け、保護します。

⑨ 刃の交換

専用の替刃番番はSH30/S1です。

1 シェービングユニットの前面を上を持ち上げてから背面を上を持ち上げ、本体からシェービングユニットを取り出します。

2 保持板の中央のつまみを矢印の方向(反時計回り)に回し(図①)、上を持ち上げて取り外します(図②)。内刃と外刃を組直すユニットフレームより取り外します。

3 新しい内刃と外刃を正しい組み合わせにセットします。外刃の突起部分をユニットフレームの切り込み部分に合わせて戻します。

4 保持板をユニットフレームに戻し(図③)、時計回りに回してセットします(図④)。

5 シェービングユニットの前面のフックをシェービングユニット受部に引っかけて、カチッと音がするまで押し込みます。
 ※シェービングユニットが正しくセットされていない場合や、保持板がロックされていない場合は、シェービングユニットがきちんと閉まりません。

6 シェーバー本体のモーターは回転しているが、内刃が回転しない

▶外刃にキズ、ヘコミはありませんか?
 充電アダプタの電源コードが断線していませんか?
 充電アダプタの電源コードが断線している場合は、フィリップスサポートセンターにお問い合わせください。両極充電アダプタ(品番:A00390)をご注文ください。

▶充電できない

▶充電アダプタの電源プラグ部はコンセントにきちんと差し込まれていますか?
 シェーバー本体の電源コネクタ受部に充電アダプタのコードがきちんと差し込まれていますか?確認してください。

▶充電アダプタの電源コードが断線していませんか?
 充電アダプタの電源コードが断線している場合は、フィリップスサポートセンターにお問い合わせください。両極充電アダプタ(品番:A00390)をご注文ください。

▶充電できない

▶充電アダプタの電源プラグ部はコンセントにきちんと差し込まれていますか?
 シェーバー本体の電源コネクタ受部に充電アダプタのコードがきちんと差し込まれていますか?確認してください。

充電電池の取り外し方

電源をONにして、完全に動作しなくなるまで充電電池を放電させてから、行ってください。

1 ドライバーを使いシェービングユニット受部のねじ2本と、本体背面のねじ1本を外し、背面カバーを取り外します。

2 モーターユニットにある左右のツメを外し、カバーを取り外します。

3 充電電池ホルダーを持ち上げて工具でワイヤーを切断し、取り出します。

4 充電電池と基板の間にドライバーの先を入れてひねり、基板から充電電池を取り外します。

※充電電池を取り外した後は、通電しないでください。
 ※ショートしないように充電電池の端子をテープで覆ってください。

⑪ 故障かな?と思ったら

故障かな?と思ったら、お調べください。

⑧ 保護キャップの取り付け方

保護キャップを取り付ける前にシェーバーをきちんと乾燥させてください。

●保護キャップを図のように、シェービングユニットに取り付け、保護します。

⑧ 保護キャップの取り付け方

保護キャップを取り付ける前にシェーバーをきちんと乾燥させてください。

⑨ 刃の交換

専用の替刃番番はSH30/S1です。

⑩ シェーバーを廃棄するとき

※お客様による充電電池の修理交換はできません。

充電しても使用時間が極端に短い

▶シェーバーが完全に止まるまで充電させてから、もう一度充電してください。
 それでも改善されないときは、充電電池の寿命です。

シェーバーの電源ボタンを押しても作動しない

▶シェーバーに充電アダプタが接続されていませんか?
 充電アダプタがはずしてください。

▶充電はしましたか?
 約10時間、充電をしてください。

▶刃が動かないか確認しているが、破損していませんか?
 シェービングユニットをお手入れするが、刃を交換してください。

シェーバー本体のモーターは回転しているが、内刃が回転しない

▶外刃にキズ、ヘコミはありませんか?
 充電アダプタの電源コードが断線していませんか?
 充電アダプタの電源コードが断線している場合は、フィリップスサポートセンターにお問い合わせください。両極充電アダプタ(品番:A00390)をご注文ください。

▶充電できない

▶充電アダプタの電源プラグ部はコンセントにきちんと差し込まれていますか?
 シェーバー本体の電源コネクタ受部に充電アダプタのコードがきちんと差し込まれていますか?確認してください。

▶充電アダプタの電源コードが断線していませんか?
 充電アダプタの電源コードが断線している場合は、フィリップスサポートセンターにお問い合わせください。両極充電アダプタ(品番:A00390)をご注文ください。

▶充電できない

▶充電アダプタの電源プラグ部はコンセントにきちんと差し込まれていますか?
 シェーバー本体の電源コネクタ受部に充電アダプタのコードがきちんと差し込まれていますか?確認してください。

▶充電アダプタの電源コードが断線していませんか?
 充電アダプタの電源コードが断線している場合は、フィリップスサポートセンターにお問い合わせください。両極充電アダプタ(品番:A00390)をご注文ください。

▶充電できない

▶充電アダプタの電源プラグ部はコンセントにきちんと差し込まれていますか?
 シェーバー本体の電源コネクタ受部に充電アダプタのコードがきちんと差し込まれていますか?確認してください。

▶充電できない

▶充電アダプタの電源プラグ部はコンセントにきちんと差し込まれていますか?
 シェーバー本体の電源コネクタ受部に充電アダプタのコードがきちんと差し込まれていますか?確認してください。

⑫ 保証とアフターサービス

保証書と修理サービスについて(必ずお読みください)。

＜保証書・表面左側に付属＞

- 保証書は、必ずお買い上げ日(販売店名)毎の記入をお確かめのうえ、販売店から受け取ったとき内容をよくお読みのことと大切に保管してください。

保証期間	お買い上げ日から2年間
対象部分	本体、充電アダプタ(シェービングユニット、保護キャップ、収納ポーチを除く)

【補修用性能部品の保有期間】

- 補修用性能部品の保有期間は製造日切りの後 6年です。
- 性能部品とは、その製品の機能を維持するために必要な部品です。

【ご不明な点や修理に関するご相談は】

- 修理に関するご相談ならびにご不明な場合は、フィリップスサポートセンターにお問い合わせください。

【修理を依頼されるときは】


- 修理をご依頼される前に、この取扱説明書をよくお読みいただき、再度点検ください。尚、異常のあるときはご使用を中止し、フィリップスサポートセンターにお問い合わせください。

【保証期間中は】

- 製品に保証書をご用意いただき、フィリップスサポートセンターにお問い合わせください。保証書の記載内容により無料修理いたします。

【保証期間が過ぎているときは】

- 修理によって活動の機能が維持できる場合は、補修用性能部品の保有期間内であれば、ご希望により有料で

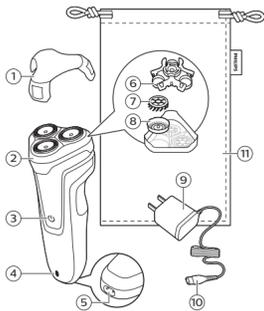

General description (Fig. 1)

- 1 Protection cap
- 2 Shaving unit
- 3 On/off button
- 4 Charging light
- 5 Socket for small plug
- 6 Retaining frame
- 7 Cutter
- 8 Guard
- 9 Supply unit
- 10 Small plug
- 11 Pouch (S1035 only)

Note: You can find the type number on the back of the shaver.

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome

Please read this user manual, as it contains information about the features of this shaver as well as some tips to make shaving easier and more enjoyable.

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

Danger

- Keep the supply unit dry (Fig. 2).

Warning

- To charge the battery, only use the detachable supply unit (A00390) provided with the appliance.
- The supply unit contains a transformer. Do not cut off the supply unit to replace it with another plug, as this causes a hazardous situation.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always unplug the shaver before you clean it under the tap.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.
- Do not open the appliance to replace the rechargeable battery.

Caution

- Never immerse the cleaning system or the charging stand in water and do not rinse it under the tap (Fig. 2).
- Never use water hotter than 60°C to rinse the shaver.
- Only use this appliance for its intended purpose as shown in the user manual.
- For hygienic reasons, the appliance should only be used by one person.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- If your shaver comes with a cleaning system always use the original Philips cleaning fluid (cartridge or bottle, depending on the type of cleaning system).
- Always place the cleaning system on a stable, level and horizontal surface to prevent leakage.
- If your cleaning system uses a cleaning cartridge, always make sure the cartridge compartment is closed before you use the cleaning system to clean or charge the shaver.
- When the cleaning system is ready for use, do not move it to prevent leakage of cleaning fluid.
- Water may drip from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General

- This shaver is waterproof (Fig. 3). It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the shaver can therefore only be used without cord.
- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.
- The supply unit transforms 100–240 volts to a safe low voltage of less than 24 volts.

Charging

Note: This appliance can only be used without cord.

When you charge the appliance for the first time or after a long period of disuse, let it charge for at least 10 hours.

A fully charged appliance provides up to 40 minutes of shaving time.

The shaving time may be less as a result of your shaving behavior, your cleaning habits or your beard type.

Charging with the supply unit

- 1 Make sure the shaver is switched off.
- 2 Put the small plug in the shaver and put the supply unit in the wall socket.

The display of the shaver indicates that the shaver is charging.

- 3 After charging, remove the supply unit from the wall socket and pull the small plug out of the appliance.

Charge indications

Battery low

When the battery is almost empty, the appliance starts working more slowly.

Charging

When the appliance is charging, the charging light lights up white continuously (Fig. 4).

- The charging light will keep lighting up white when the appliance is fully charged.

Note: After charging, remove the supply unit from the wall socket and pull the small plug out of the appliance.

Using the appliance

Note: This appliance can only be used without cord.

Switching the appliance on and off

- 1 To switch the appliance on or off, press the on/off button once (Fig. 5).

Shaving tips

- Use the shaver with shaving gel or foam for extra skin comfort, or use the shaver dry for extra convenience.
 - We advise you to use the shaver with shaving gel or foam when you use it for a wet shave. Do not use thick shaving cream or shaving oil with this shaver.
 - When you use the shaver for dry shaving, we advise you to make sure your skin is fully dry so that the shaver glides smoothly over your skin.
- For best results on skin comfort, pre-trim your beard if you have not shaved for 3 days or longer.
- For optimal shaving results, make circular movements during use.
- The shaver is waterproof and can be used in the bath or shower.
- Your skin may need 2 or 3 weeks to get accustomed to the Philips shaving system.

Wet shaving

For a more comfortable shave, you can also use this appliance on a wet face with shaving foam or shaving gel.

To shave with shaving foam or shaving gel, follow the steps below:

- 1 Apply some water to your skin (Fig. 6).
- 2 Apply shaving foam or shaving gel to your skin (Fig. 7).
- 3 Rinse the shaving unit under the tap to ensure that the shaving unit glides smoothly over your skin (Fig. 8).
- 4 Switch on the appliance.
- 5 Move the shaving heads over your skin in circular movements to catch all hairs growing in different directions (Fig. 9). Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: Rinse the shaving unit regularly to ensure that it continues to glide smoothly over your skin.

- 6 Dry your face.
- 7 Clean the appliance after use (see 'Cleaning and maintenance').

Note: Make sure you rinse all foam or shaving gel off the appliance.

Dry shaving

- 1 Switch on the appliance.
- 2 Move the shaving heads over your skin in circular movements to catch all hairs growing in different directions (Fig. 9). Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: Do not press too hard, this can cause skin irritation.

- 3 Clean the appliance after use (see 'Cleaning and maintenance').

Cleaning and maintenance

Cleaning the shaver under the tap

Clean the shaver after every shave for optimal performance.

Always unplug and switch off the appliance before you clean it.

Note: Water may leak from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.

Be careful with hot water. Always check if the water is not too hot, to prevent burning your hands.

Never dry the shaving unit with a towel or tissue, as this may damage the shaving heads.

- 1 Hold the shaving unit and first lift the front, then the back upwards of the appliance (Fig. 10).

Note: Make sure to hold the shaving unit while doing so.

- 2 Rinse the hair chamber under the tap (Fig. 11).
- 3 Rinse the inside of the shaving unit under a warm tap (Fig. 12).
- 4 Rinse the outside of the shaving unit under a warm tap (Fig. 13).

Thorough cleaning

- 5 Turn the lock anticlockwise and remove the retaining frame from the shaving unit (Fig. 14).
- 6 Remove and clean one shaving head at a time (Fig. 15). Each shaving head consists of a cutter and a guard.

Do not clean more than one cutter and guard at a time, since they are all matching sets. If you accidentally mix up the cutters and guards, it may take several weeks before optimal shaving performance is restored.

- 7 Remove the cutter from the shaving guard and rinse it with water (Fig. 16).
- 8 Rinse the inside and outside of the shaving guard with water (Fig. 17).
- 9 Put the shaving heads back into the shaving unit (Fig. 18). Make sure that the projections of the shaving heads fit exactly into the recesses.
- 10 Put the retaining frame back into the shaving unit and turn the lock clockwise (Fig. 19).
- 11 Reattach the shaving unit (Fig. 20).

Note: If you cannot reattach the shaving unit properly, check if you have inserted the shaving heads properly and if the retaining frame is locked.

- 12 Carefully shake off excess water, open the shaving unit again and leave it open to let the shaving unit air dry completely.

Caution: Be careful not to hit the shaving unit against anything while you shake off excess water.

Storage

Protection cap

We advise you to let the appliance dry before you put the protection cap on it.

- 1 Switch off the appliance.
- 2 Put the protection cap on the shaving unit after use to prevent damage and to avoid dirt accumulation in the shaving heads (Fig. 21).

Pouch (S1035 only)

Note: Make sure the appliance is dry before you store it in the pouch.

- 1 Switch off the appliance.
- 2 Store the appliance in the pouch.

Replacement

Replacing the shaving heads

For maximum shaving performance, we advise you to replace the shaving heads every two years. Replace damaged shaving heads immediately. Always replace the shaving heads with original Philips shaving heads' (see 'Ordering accessories').

- 1 Switch off the appliance and disconnect it from the power outlet.
- 2 Hold the shaving unit and first lift the front, then the back upwards of the appliance.

Note: Make sure to hold the shaving unit while doing so.

- 3 Turn the lock anticlockwise and remove the retaining frame.
- 4 Remove the shaving heads and place new ones in the shaving unit. Make sure that the projections of the shaving heads fit exactly into the recesses.
- 5 Put the retaining frame back into the shaving unit and turn the lock clockwise (Fig. 19).
- 6 Reattach the shaving unit.

Note: If you cannot reattach the shaving unit properly, check if you have inserted the shaving heads properly and if the retaining frame is locked.

Ordering accessories

To buy accessories or spare parts, visit www.shop.philips.com/service or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details). The following accessories and spare parts are available:

- SH30/51 Philips shaving heads

Note: Availability of the accessories may differ by country.

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- This product contains a built-in rechargeable battery which shall not be disposed of with normal household waste. Please take your product to an official collection point or a Philips service center to have a professional remove the rechargeable battery.
- Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposal helps prevent negative consequences for the environment and human health.

Removing the rechargeable battery

Only remove the rechargeable battery when you discard the shaver. Before you remove the battery, make sure that the shaver is disconnected from the mains and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the shaver.

Be careful, the battery strips are sharp.

- 1 Disconnect the shaver from the wall socket.
 - 2 Let the shaver operate until it stops.
 - 3 Remove the screws in the back of the shaver and in the hair chamber (Fig. 22).
 - 4 Remove the top part of the shaver (Fig. 23).
 - 5 Remove the front panel and the back panel (Fig. 23).
 - 6 Take out the power unit (Fig. 24).
- Be careful, the hooks are sharp.
- 7 Bend the snap hooks aside and remove the transparent cover of the power unit (Fig. 24).
 - 8 Lift out the battery holder and cut the wires with a pair of cutting pliers or scissors (Fig. 25).
 - 9 Bend the battery tags aside with a screwdriver (Fig. 26).
 - 10 Remove the rechargeable batteries.

Warranty and support

If you need information or support, please visit www.philips.com/support or read the international warranty leaflet.

Warranty restrictions

The shaving heads (cutters and guards) are not covered by the terms of the international warranty because they are subject to wear.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country.

Problem	Possible cause	Solution
The shaver does not shave as well as it used to.	The shaving heads are damaged or worn.	Replace the shaving heads.
	Foam or gel residues clog up the shaving heads.	Rinse the shaving unit under a hot tap.
	You have not inserted the shaving heads properly.	Make sure that the projections of the shaving heads fit exactly into the recesses.
The shaver does not work when I press the on/off button.	The rechargeable battery is empty.	Recharge the battery.
The shaver does not work, although it is connected to the mains.	This shaver is not designed to be used directly from the mains.	Recharge the battery and disconnect the shaver from the mains.
My skin is slightly irritated after shaving.	Your skin has not yet adapted to the new shaving system.	Wait at least three weeks to allow your skin to adapt to the shaver. Do not use different shaving methods during this period, it will be easier for your skin to adapt.
	Your skin is sensitive to dry shaving.	Use the shaver with shaving gel or shaving foam and with plenty of water for extra skin comfort.
	You are only shaving with water.	Use the shaver with shaving gel or shaving foam and with plenty of water for extra skin comfort.
	Your skin is irritated by the type of foam you use.	Use the shaver with shaving gel or shaving foam and with plenty of water for extra skin comfort.