

PHILIPS



フィリップス 電動シェーバー

品番 **PT762E3/14**

取扱説明書

保証書付


保証書は、この取扱説明書の最終ページについておりますので販売店で記入を受けてください。

フィリップス シェーバーをお買い上げいただき、まことにありがとうございます。
長い間ご愛用いただくために、ご使用前にこの取扱説明書をよくお読みのうえ、正しくお使いください。

また、お読みになった後は、お使いになる方がいつでも見られる
ところに必ず保管してください。

商品のご確認

商品をご確認ください

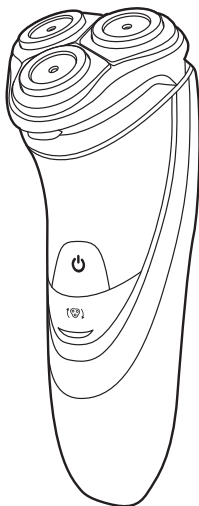


本体



保護キャップ



クリーニングブラシ

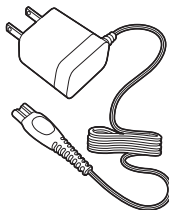

充電アダプタ(HQ8505)

※改良の為、仕様を予告なく変更することがあります。

目次

● はじめに	商品のご確認 1
	目次 2
	必ずお守りください 3・4
	各部の名称／保護キャップの取り付け方 5・6
	充電の仕方 7
● ご使用方法	シェービングの仕方 8・9
	お手入れ方法 10
	分解掃除の仕方 11・12
	刃の交換 13
	シェーバーを廃棄するとき 14
● 困ったとき	故障かな?と思ったら 15
● 英文解説	Guidance in English 17～31
● 保証	保証とアフターサービス 32
	仕様 33
	無料修理規定 34
	保証書 最終ページ

必ずお守り ください

安全上のご注意

- ここに示した注意事項は、安全に関する重要な内容ですので、必ず守ってください。
- 誤った取扱いをしたときに想定される内容を「警告」と「注意」とに区分けしています。

○絵表示について



記号は、「危険、警告、注意」を示します。
図の中や近くに具体的な注意内容を示します。



警告 人が死亡または重傷を負う可能性が想定される内容。



注意 人が傷害を負う可能性及び物的損害のみの発生が想定される内容。

○絵表示の例



・記号は、してはいけない「禁止」を示します。図の中や近くに具体的な禁止内容(左図の場合は分解禁止)を示します。



・記号は、必ずしていただく「強制」を示します。図の中や近くに具体的な強制内容(左図の場合は電源プラグをコンセントから抜くこと)を示します。

警告



●シェーバー本体ならびに充電アダプタは改造しないでください。また、分解したり修理をしないでください。火災、感電、ケガの原因となります。修理はお買い上げの販売店または小泉成器修理センターにご相談ください。



●お手入れの際は必ず充電アダプタの電源プラグをコンセントから抜いてください。また、濡れた手で抜き差ししないでください。感電やケガをすることがあります。



●充電アダプタが傷んだり、コンセントの差込みが緩いときは使用しないでください。感電・ショート・発火の原因となります。



●充電アダプタを水につけたり、水をかけたりしないでください。故障や、ショート・感電の原因となります。



●充電アダプタを傷付けたり、電源コードを無理に曲げたり、引っ張ったり、ねじったり、たばねたり、重い物を載せたり、挟み込んだり、加工したりしないでください。電源コードが破損し、火災・感電の原因となります。



●乳幼児の手の届くところに本製品を置かないでください。



●充電アダプタには変圧器が内蔵されています。充電アダプタを切り離して別のプラグに接続するのは危険です。おやめください。

⚠ 注 意



●充電アダプタの電源プラグを抜くときは、電源コード部を持たずに必ず先端の電源プラグ部を持って引き抜いてください。感電やショートして発火することがあります。



●充電時または交流での使用時以外は、充電アダプタをコンセントから抜いてください。ケガややけど、絶縁劣化による感電・漏電・火災の原因となります。



●刃は強く押さえなくてください。破損して皮膚を傷つけることがあります。



●刃が破損または故障した場合は、本製品を使用しないでください。ケガの原因になります。交換の際には必ずフィリップス社製の同型部品と取り替えてください。




●電源コネクタ受部にピンやごみを付着させないでください。感電・ショート・発火の原因になります。

使 用 上 の ご 注 意

1. 本製品はヒゲ(あごヒゲ、口ヒゲ、もみあげなど)の長さを整えたり、シェービングするためのものです。それ以外の目的で使用しないでください。
2. フィリップスシェーバーを初めてお使いの方は、剃り方に慣れるまで2〜3週間かかることがあります。
3. 80℃以上の熱湯でシェーバーを洗浄しないでください。製品を傷める原因となります。
4. 本製品の使用、充電、保管は室温5℃〜35℃の環境下で行ってください。(尚、低温や高温で充電すると、充電電池の寿命が短くなります。)
5. 外刃は、薄く仕上げてありますので、刃部を強く押さえたり、硬いものに当てないように、ていねいに扱ってください。
6. シェービングユニットの清掃や着脱は、必ずスイッチを切ってから行ってください。
7. 切れ味が衰えてきたり、刃が破損した場合は、使用せず必ず新しいシェービングヘッドと交換してください。
8. 極端に高温または低温の場所、直射日光の当たる場所には保管しないでください。夏場、車の中に放置しないでください。
9. 乳幼児の手の届かないところに保管してください。
10. シェービングユニットは、使用の都度、クリーニングブラシを使って掃除をしてください。
11. 充電アダプタは付属の専用アダプタを使用してください。
12. プラグ式消臭・芳香剤を使用しているコンセントあるいはその近くのコンセントに充電アダプタを接続しないでください。充電アダプタを傷める原因となります。
13. 充電アダプタが破損、故障した場合は、事故を避けるために必ずフィリップス社製の同型充電アダプタをお求めください。
14. シェーバーは水や液体の中に浸けないでください。

各部の名称

本体

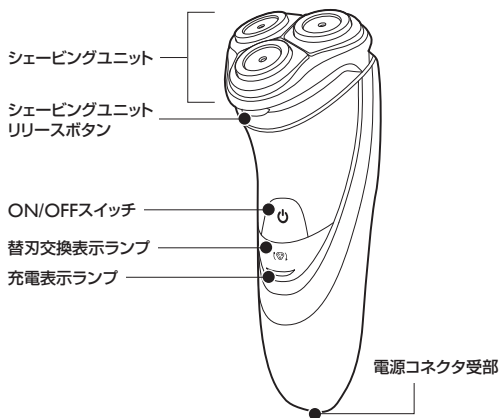

●シェービングユニット分解部品 ▶P.11




ユニットフレーム



内刃



外刃

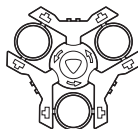


保持板

※分解掃除する場合は、内刃と外刃の組み合わせを変えないようご注意ください。
 ※替刃は内刃と外刃で1組です(替刃品番SH50/51【替刃3個入り】)。

保護キャップ
▶P.6

充電アダプタ
▶P.7

クリーニングブラシ
▶P.10

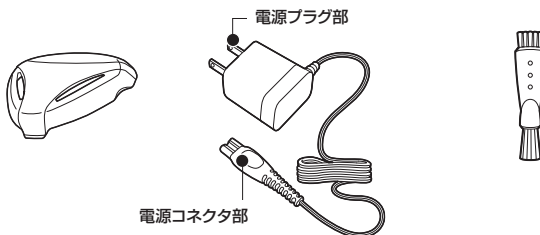

保護キャップを取り付ける前に
シェーバーをきちんと乾燥させてく
ださい。

保護キャップの 取り付け方

保護キャップを図のようにはめ込み、シェービング
ユニットに取り付け、保護します。



充電の仕方

お客様による充電電池の交換はできません。

この商品は通常8時間充電です。

満充電で約45分使用できます。

初めてお使いになるときや、長い間ご使用にならなかったときは、充電しないで使用できません。ご使用前に充電してください。充電時間は約8時間です。本製品は完全に充電した状態で、約45分ご使用になれます。海外(100~240V)でのご使用も可能です。ただし、コンセントの形状や電圧など現地で充分お確かめのうえご使用ください。


※本製品はリチウムイオン電池を使用していますが、ご使用の都度充電をしても充電電池の寿命には影響ありません。

- 1 充電表示ランプがオレンジ色に点滅したら、充電が少なくなっています(残りの使用時間は約5分です)ので、本製品を充電する必要があります。


※本製品はリチウムイオン電池を使用していますので、継ぎ足し充電をしても充電電池の寿命には影響ありません。

- 2 充電する際には、スイッチを必ずOFFにしてください。動作中はスイッチを1回押すとOFFになります。

※ONの状態では充電できません。



- 3 充電アダプタの電源コネクタ部を、本体の電源コネクタ受部に差し込みます。



- 4 充電アダプタの電源プラグ部をコンセントに差し込むと、充電表示ランプがオレンジ色と緑色に交互点滅し、クイックチャージが始まります。(クイックチャージ:3分の充電で、約5分のシェービングが可能です。)クイックチャージが終わると充電表示ランプが緑色に点滅し、充電中であることを示します。(満充電になると充電表示ランプが緑色に点灯し、約45分使用できます。)



※通常の目安として満充電で1日3分使用し、約15日間使用できますが、ご使用状況(使用頻度、ヒゲの質等)により変わります。

※満充電後、約30分経過すると節電のため充電表示ランプが消えます。

※本体を水洗いした場合は、水分をふき取ってから充電してください。

※充電完了後は充電アダプタをコンセントから抜いてください。



注意

- 専用の充電アダプタ以外での充電はしないでください。
- 長期間使用しない場合や、使ったり使わなかったりして保管しておくと、充電電池が過放電や液漏れして使えなくなります。

シェービングの 仕方

- 本製品は充電交流式です。充電アダプタをつなげたままでもお使いいただけます。
※ご使用後は都度コンセントから抜いてください。
- 交流式でご使用の場合は充電アダプタの電源コネクタ部を、本体の電源コネクタ受部に差し込み、充電アダプタの電源プラグ部をコンセントに差し込んでご使用ください。




警告

浴室やシャワー中に使用しないでください(感電することがあります)。
シェーバー本体は水や液体の中に浸けないでください(故障の原因となります)。

- ほこりなどで肌が汚れている場合、ふきとってからご使用ください。
- ご使用前に外刃の破れや変形がないか確認してください
(外刃に破れや変形があると肌を傷つける原因になります)。
- ヒゲ剃り以外の目的(頭髪など)には、使用しないでください。
- 肌が乾いた状態でご使用ください。
- シェービングフォーム、ジェル、石けん等はお使いいただけません。

- 1 スイッチを押して電源をONにします。

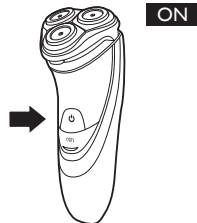

- 2 刃を肌に軽く押しあて、円を描くように動かしながら剃ります。



- 3 シェービング後はスイッチを押して、電源をOFFにします。


**上手に
剃るには**

肌に強く押しつけるのではなく、軽く押しあてるのがコツです。




ほお

肌を伸ばしながらヒゲを立たせるように剃ります。

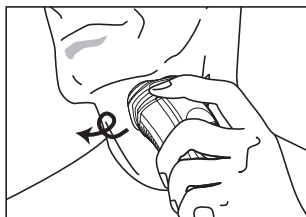


あごの裏側

刃を肌に軽くあて、図のようにあごを上げて回転させながら剃ります。

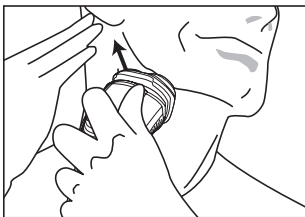

ほおの奥から首筋

片方の手で肌を後ろに引っ張りながら剃ります。

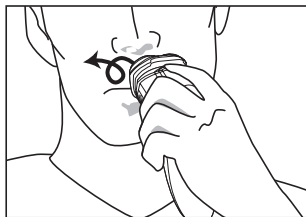

鼻の下

鼻の下を伸ばし、小さく回しながら剃ります。

フィリップスのシェーバーを初めてお使いの方は、剃り方に慣れるまで2～3週間かかることがあります。

シェービングユニットについてはなるべく使用の都度クリーニングブラシで掃除をしてください。

お手入れ方法



警告

お手入れの際は必ず充電アダプタの電源プラグをコンセントから抜いてください。また、濡れた手で抜き差ししないでください。感電やケガをすることがあります。

水洗いによるお手入れ方法

※洗剤は使用しないでください。

※ぬるま湯(40℃前後)でのお手入れをおすすめします。臭いのもととなる皮脂や汗などが取れやすくなります。ただし、熱湯(80℃以上)はお止めください。故障の原因となります。

※お手入れ中にシェーバーの底から水が漏れてくる場合がありますが、これは正常な状態です。電子部品はすべてシェーバー内部の密閉された部分に内蔵されているので、危険はありません。




注意

- お手入れの際は、スイッチをOFFにしてから水洗いしてください。
- 本体は水洗いできますが、水中に浸けないでください。
- シェービングユニットを乾燥させる時に、タオルやティッシュペーパーを使用しないでください。刃を傷める場合があります。
- 圧縮空気、研磨パッド、研磨洗浄剤、ペトリロールやアセトンなどの刺激性の強い液体は絶対に使わないでください。

- 1 シェービングユニットリリースボタンを押し、シェービングユニットを開きます。



- 2 シェービングユニットの表と裏をぬるま湯または水で約30秒洗います。

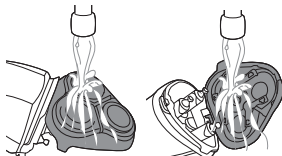

- 3 シェービングユニットがはずれないように指で押さえて水を切ります。

水洗いの後は充分乾燥させてからシェービングユニットを閉めてください。乾燥が不十分な場合、臭いが出る原因となります。



- 4 細かい部分は、シェービングユニット受部とシェービングユニットが乾いてからクリーニングブラシで掃除してください。より細かいお手入れ方法は、P11をご参照ください。

- 5 シェービングユニットを閉めます。




分解掃除の仕方


- 分解掃除は約1カ月に1回が目安です。
- 分解掃除する場合は、内刃と外刃の組み合わせを変えないようにご注意ください。組み合わせが変わると、刃の状態が元通りになるまで数週間かかる場合があります。

刃の取り外し方


- 1 シェービングユニットリリースボタン(図①)を押し、シェービングユニットを開けます。シェービングユニットを図②の方向に動かすと本体からはずすことができます。

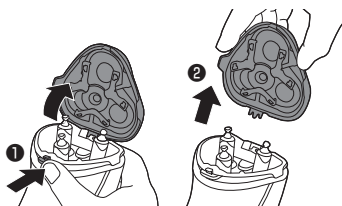


- 3 取り外した回転刃を内刃・外刃1組ずつお湯(40℃前後)に浸して皮脂やヒゲくずを落とします。

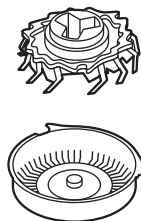

- 2 保持板は中央のつまみを図①矢印の方向(反時計回り)に回し、図②の方向に持ち上げるとはずれます。回転刃を1組ずつユニットフレームより取り外します(図③)。

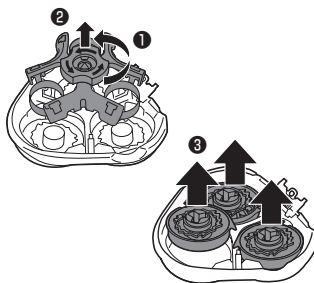


- 4 内刃と外刃を充分乾燥させてからクリーニングブラシで掃除をします。

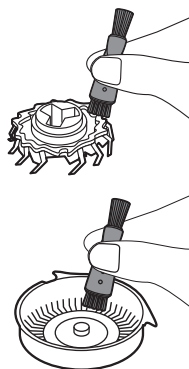


刃の取り付け方


- 1 内刃と外刃を正しい組み合わせにセットし、外刃をユニットフレームに戻します。

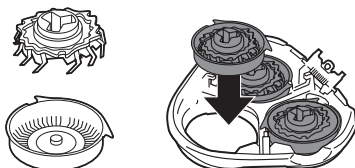

- 2 保持板をユニットフレームに戻し(図①)、中央のつまみを時計回りに回して(図②)セットしてください。

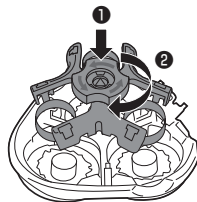

- 3 シェービングユニットの金具を本体のくぼみに差し込み(図①)、本体にセットします(図②)。

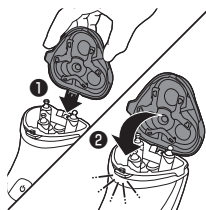

刃の交換

お買い上げ時に装着されている
刃と形状は異なりますが、
替刃はSH50/51となります。

替刃SH50/51と交換する場合



刃の交換表示

電源を切った後に替刃交換表示ランプが点灯したら、刃の交換目安です。替刃交換表示ランプが点灯したら、刃を交換し、本体をリセットしてください。(リセット方法は下記「刃の交換」6をご参照ください)なお、お客様ご自身でリセットされない場合は、1回15秒以上、合計9回のご使用の間、この表示が続き、9回目のご使用が終わると自動的にリセットされます。


●外刃の向きが異なると正しくセットできませんのでご注意ください。

3 新しい内刃と外刃を正しい組み合わせにセットし、外刃の突起部分をユニットフレームの切り込み部分に合わせて戻します。




刃は3つとも○印の位置に外刃の突起部がくるようにセットしてください。


4 保持板をユニットフレームに戻し(図①)、中央のつまみを時計回りに回して(図②)セットしてください。

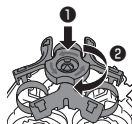


5 シェービングユニットの金具を本体のくぼみに差し込み(図①)、本体にセットします(図②)。

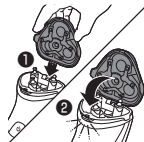

1 シェービングユニットリリースボタン(図①)を押し、シェービングユニットを開けます。シェービングユニットを図②の方向に動かすと本体からはずすことができます。

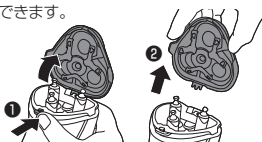

2 保持板は中央のつまみを図①矢印の方向(反時計回り)に回し、図②の方向に持ち上げるとはずれます。回転刃を1組ずつユニットフレームより取り外します(図③)。

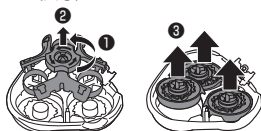

6 スイッチを押し電源をONにします。刃の交換マークが点灯中にシェーバーをリセット(ON/OFFスイッチを5秒間押し続ける)してください。

※お客様による充電電池の
修理交換はできません。

シェーバーを 廃棄するとき

リチウムイオン電池のリサイクルについて

このシェーバーはリチウムイオン電池を使用しています。
リチウムイオン電池はリサイクル可能な貴重な資源です。
ご使用済みの製品の廃棄に際しては、リチウムイオン電池を
取り出し、各自治体の処理方法に従い、リサイクル協力店に
お持ちください。




注意

- 製品を廃棄するとき以外は、絶対に本体を分解しないでください。
- 本体内部の金具は鋭いので、ご注意ください。


充電電池の取り外し方

スイッチをONにして、完全に動作しなくなるまで充電電池を放電させてから、行ってください。


- 1** ドライバーを使いシェービングユニット
受部のねじ2本と、本体背面のねじ1本
を外し、背面カバーを取り外します。

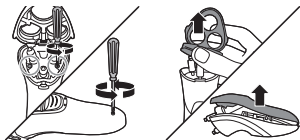


- 3** 透明カバーを取り外し、充電電池ホル
ダーを持ち上げます。

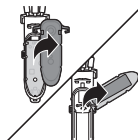

- 2** モーターユニットにある左右3つずつ、
計6つのツメを外し、カバーを開けます。

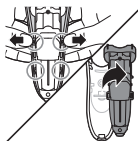

- 4** 工具でワイヤーを切断し充電電池を取り
出します。

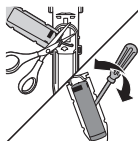

※充電電池を取り外した後は、通電しないでください。

故障かな？ と思ったら

故障かな？と思ったら、
お調べください。

だんだん切れ味が悪くなった

- ▶シェービングユニット部が汚れていませんか？
- ▶刃が損傷または摩耗していませんか？
損傷または摩耗しているときは、刃を交換してください。(替刃品番：SH50/S1)
- ▶シェービングユニットに長いヒゲがからまっていませんか？
P11～12「分解掃除の仕方」の項をお読みください。

充電しても使用時間が極端に短い

- ▶シェーバーが完全に止まるまで作動させてからもう一度充電してください。


シェーバーのスイッチを押しても作動しない

- ▶充電はしましたか？
8時間以上、充電をしてください。
- ▶刃が動かなくなるほど汚れているか、刃にキズがあるか、または刃が破損していませんか？
シェービングユニットをお手入れするか、刃を交換してください。

充電できない


- ▶充電アダプタの電源プラグ部はコンセントにきちんと差し込まれていますか？
本体の電源コネクタ受部に充電アダプタのコードがきちんと差し込まれていますか？確認してください。
- ▶充電アダプタの電源コードが断線していませんか？
新しい充電アダプタ(品番：HQB505)をお買い求めください。

以上の点検により、正常な状態に戻らない場合は、
お買い求めの販売店か小泉成器修理センターにお問い合わせ願います。

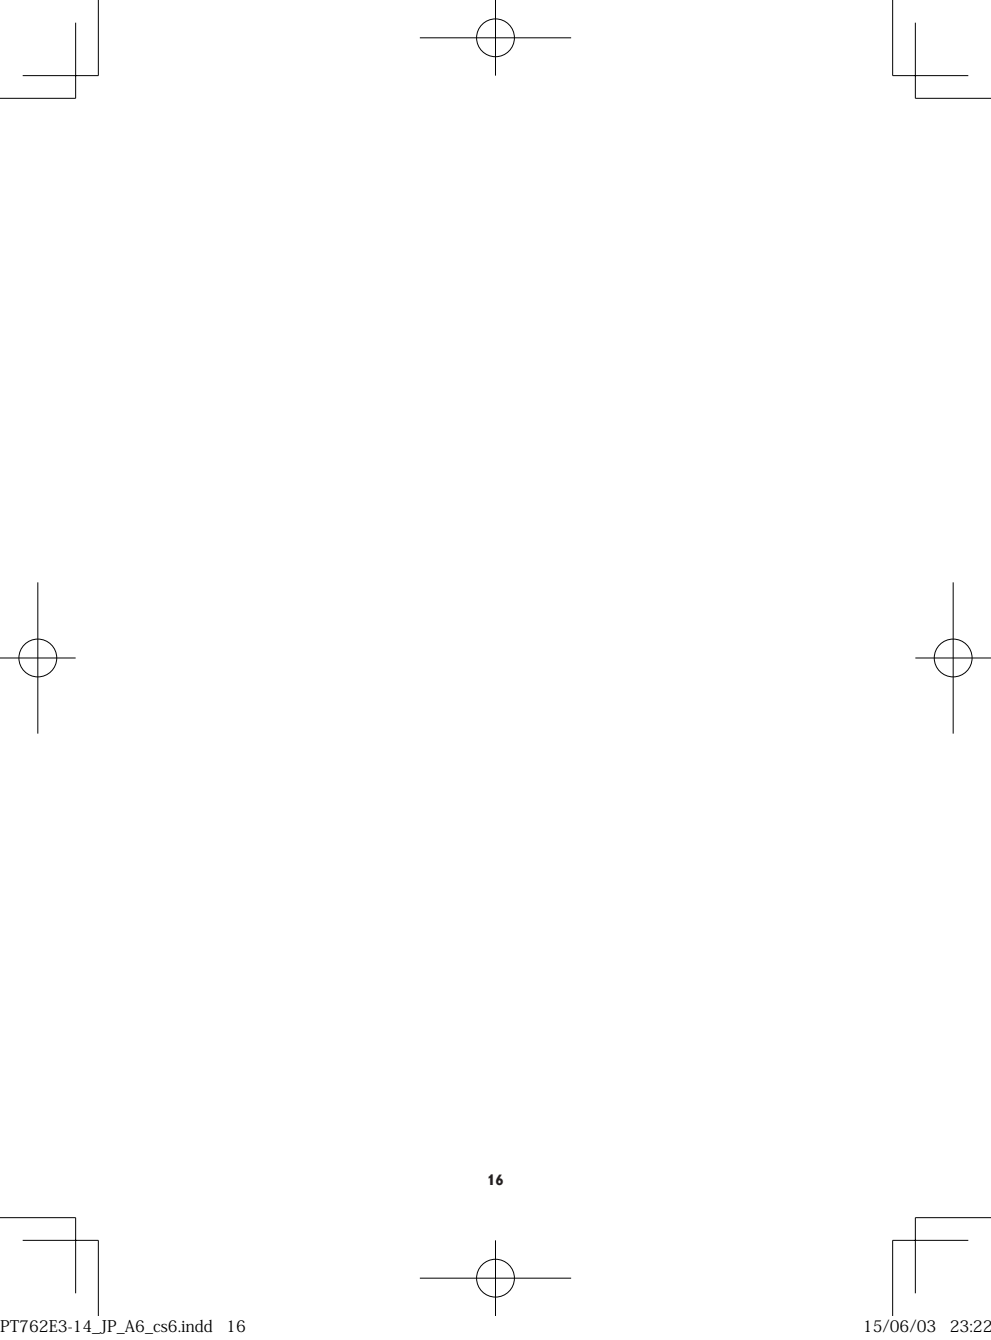

ENGLISH

PT762E3/14

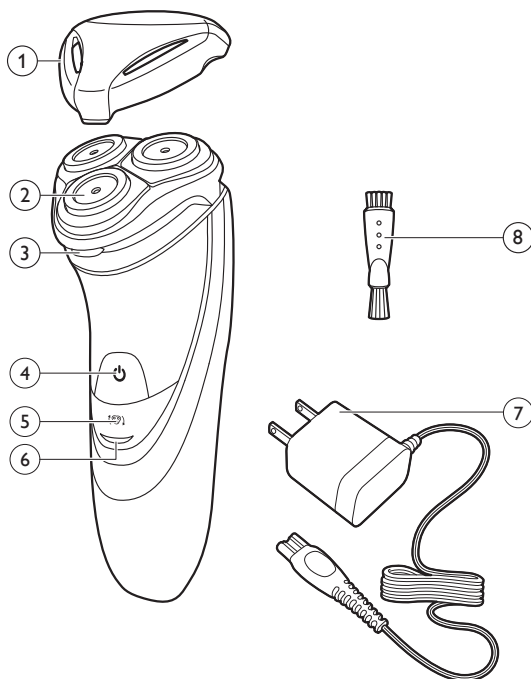

ENGLISH

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at **www.philips.com/welcome**.

Please read this user manual, as it contains information about the wonderful features of this shaver as well as some tips to make shaving easier and more enjoyable.

General description (Fig. 1)

- 1 Protection cap
- 2 Shaving unit
- 3 Shaving unit release button
- 4 Shaver on/off button
- 5 Shaving head symbol
- 6 Charging light
- 7 Adapter
- 8 Cleaning brush

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

Danger

- Keep the adapter dry.

Warning

- The adapter contains a transformer. Do not cut off the adapter to replace it with another plug, as this causes a hazardous situation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience



ENGLISH

and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- Always unplug the shaver before you clean it under the tap.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.



Caution

- Never immerse the cleaning system or the charging stand in water and do not rinse it under the tap.
- Never immerse the shaver in water. Do not use the shaver in the bath or in the shower.
- Never use water hotter than 80°C to rinse the shaver.
- Only use this appliance for its intended purpose as shown in the user manual.
- For hygienic reasons, the appliance should only be used by one person.
- Do not use the adapter in or near wall sockets that contain or have contained an electric air freshener to prevent irreparable damage to the adapter.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- If your shaver comes with a cleaning system, always use the original Philips cleaning fluid (cartridge or bottle, depending on the type of cleaning system).
- Always place the cleaning system on a stable, level and horizontal surface to prevent leakage.

ENGLISH

- If your cleaning system uses a cleaning cartridge, always make sure that the cartridge compartment is closed before you use the cleaning system to clean or charge the shaver.
- When the cleaning system is ready for use, do not move it to prevent leakage of cleaning fluid.
- Water may drip from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.

Electromagnetic fields (EMF)

- This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.



General

- This shaver can be safely cleaned under the tap.
- The appliance is suitable for mains voltages ranging from 100 to 240 volts.
- The adapter transforms 100-240 volts to a safe low voltage of less than 24 volts.

Charging

It takes approx. 8 hours to fully charge the shaver. When you charge the shaver for the first time or after a long period of disuse, let it charge until the charging light lights up continuously. A fully charged shaver provides up to 45 minutes of shaving time.

The shaving time may be less than 45 minutes as a result of your shaving behaviour, your cleaning habits or your beard type.


Charging with the adapter

- 1** Put the small plug in the shaver.

2 Put the adapter in the wall socket.


- The charging light shows the charging status of the shaver (see section 'Charge indications' in this chapter).

Charge indications

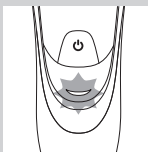


Battery low

- When the battery is almost empty (when there are only 5 or fewer shaving minutes left), the charging light starts to flash orange.
- When you switch off the shaver, the charging light continues to flash orange for a few seconds.

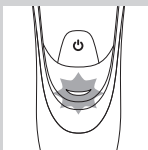

Quick charging

- When you start charging the empty battery, the charging light alternately flashes orange and green. After approx. 3 minutes, the charging light starts flashing green only. The shaver now contains enough energy for a 5-minute shave.

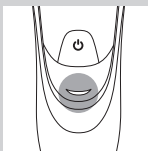

Charging

- When the shaver is charging, the charging light flashes green.

Battery fully charged

- When the battery is fully charged, the charging light lights up green continuously.

Note: After approx. 30 minutes, the charging light goes out to save energy.

Using the shaver

Note: You can also use the shaver directly from the mains.

ENGLISH


Shaving tips and tricks

- This shaver can be used without cord or directly from the mains.
- Make circular movements during use.
- Your skin may need 2 or 3 weeks to get accustomed to the Philips shaving system.

Switching the shaver on and off

- 1** To switch on the shaver, press the on/off button once.
- 2** To switch off the shaver, press the on/off button once.

Shaving

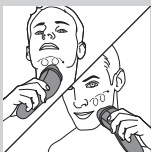

- 1** Switch on the shaver.
- 2** Move the shaving heads in circular movements over your skin.
- 3** After shaving, switch off the shaver.
- 4** Clean the shaver (see chapter 'Cleaning and maintenance').

Cleaning and maintenance

Remove the detachable cord from the handheld part before cleaning the shaving unit under the tap.

Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

- Clean the shaver after every shave for optimal shaving performance.
- Regular cleaning guarantees better shaving performance.

ENGLISH

- For the best cleaning results, we advise you to use the Philips Cleaning spray (HQ110).
- Be careful with hot water. Always check if the water is not too hot, to prevent your hands from getting burnt.

Note: Water may leak from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.


Cleaning the shaving unit under the tap



- 1** Switch off the shaver and disconnect it from the mains.

- 2** Press the release button to open the shaving unit.

- 3** Rinse the shaving unit and hair chamber under a hot tap for 30 seconds.

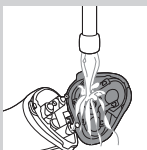

Be careful with hot water. Always check if the water is not too hot, to prevent your hands from getting burnt.

- Rinse the hair chamber and the inside of the shaving unit.
- Rinse the outside of the shaving unit.



- 4** Close the shaving unit and shake off excess water.

Be careful not to hit the shaving unit against anything while shaking off excess water.

Never dry the shaving unit and the hair chamber with a towel or tissue, as this may damage the shaving heads and the coupling spindles.


ENGLISH

- 5** Open the shaving unit again and leave it open to let the shaver dry completely.


Cleaning the shaving unit with the cleaning brush




- 1** Switch off the shaver and disconnect it from the mains.
- 2** Press the release button to open the shaving unit.

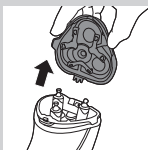

- 3** Pull the shaving unit off the shaver.

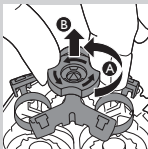

- 4** Turn the lock anticlockwise (1) and remove the retaining frame (2).

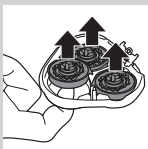


- 5** Remove and clean one shaving head at a time. Each shaving head consists of a cutter and a guard.


Note: Do not clean more than one cutter and guard at a time, since they are all matching sets. If you accidentally mix up the cutters and guards, it may take several weeks before optimal shaving performance is restored.

- Remove the cutter from the shaving guard and clean it with the brush.


ENGLISH

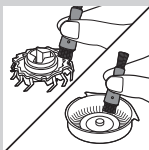

- Clean the inside and outside of the shaving guard with the brush.

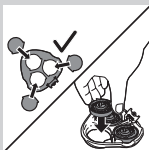


- 6** Put the shaving heads back into the shaving unit.

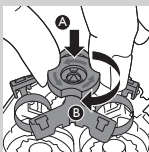

Make sure that the projections of the shaving heads fit exactly into the recesses.

- 7** Put the retaining frame back into the shaving unit and turn the lock clockwise.

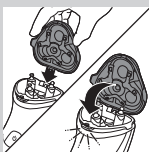


- 8** Insert the lug of the shaving unit into the slot in the top of the shaver (1). Then close the shaving unit (2).

Note: If the shaving unit does not close smoothly, check if you have inserted the shaving heads properly and if the retaining frame is locked.

Storage

Note: We advise you to let the appliance dry before you put the protection cap on it.

ENGLISH

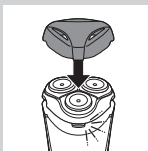




- Put the protection cap on the shaver to prevent damage.

Replacement


For maximum shaving performance, we advise you to replace the shaving heads every two years. Replace damaged shaving heads right away. Only replace the shaving heads with original SH50/51 Philips Shaving Heads.

Replacement reminder

The shaving head symbol will light up to indicate that the shaving heads need to be replaced. Replace damaged shaving heads right away.

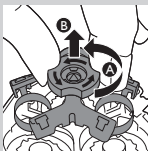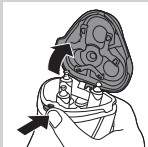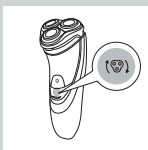


- 1** The shaving head symbol lights up orange continuously.
- 2** Switch off the shaver. Disconnect the shaver from the mains and remove it from the Jet Clean System.
- 3** Press the release button to open the shaving unit.
- 4** Pull the shaving unit off the shaver.
- 5** Turn the lock anticlockwise (A) and remove the retaining frame (B).

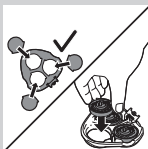


- 6** Remove the shaving heads and place new ones in the shaving unit.

Note: Make sure that the projections of the shaving heads fit exactly into the recesses.

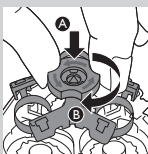


- 7** Put the retaining frame back into the shaving unit (A) and turn the lock clockwise (B).

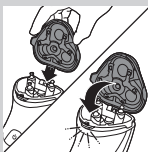

- 8** Insert the lug of the new shaving unit into the slot in the top of the shaver. Then close the shaving unit.

Note: If the shaving unit does not close smoothly, check if you have inserted the shaving heads properly and if the retaining frame is locked.

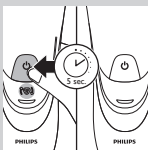

- 9** Press and hold the on/off button for 5 seconds to reset the replacement reminder on the shaver. The orange light goes out.

Ordering accessories

To buy accessories or spare parts, visit **www.shop.philips.com/service** or go to your Philips dealer. You can also contact the Philips Consumer Care Centre in your country (see the worldwide guarantee leaflet for contact details).

ENGLISH



Shaving heads

- We advise you to replace your shaving heads every two years. Always replace them with SH50/51 Philips Shaving Heads.

Cleaning


- Use Cleaning spray (HQ110) to clean the shaving heads thoroughly.

Recycling


Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Removing the rechargeable shaver battery


Only remove the rechargeable battery when you discard the shaver. Make sure the rechargeable battery is completely empty when you remove it.

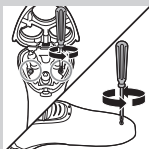

- 1** Disconnect the shaver from the mains and let the shaver run until it stops.

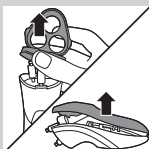


- 2** Undo the screws in the back of the shaver and in the hair chamber.

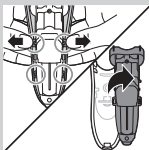


- 3** Take off the top part and remove the back panel.

- 4** Bend the 6 snap hooks aside and take out the power unit.

Be careful, the hooks are sharp.

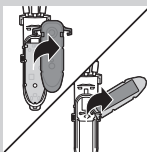

- 5** Remove the transparent cover of the power unit and take out the battery holder.

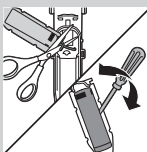

- 6** Cut the wires and remove the battery.

Be careful, the battery strips are sharp.

Do not connect the shaver to the mains again after you have removed the rechargeable battery.

Guarantee and support

If you need information or support, please visit **www.philips.com/support** or read the separate worldwide guarantee leaflet.

Guarantee restrictions

The shaving heads (cutters and guards) are not covered by the terms of the international guarantee because they are subject to wear.

Troubleshooting

This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit **www.philips.com/support** for a list of frequently asked questions or contact the Consumer Care Centre in your country.

ENGLISH

Problem	Possible cause	Solution
The shaver does not shave as well as it used to.	The shaving heads are damaged or worn.	Replace the shaving heads (see chapter 'Replacement').
	Long hairs obstruct the shaving heads.	Clean the shaving heads one by one (see chapter 'Cleaning and maintenance').
	You have not inserted the shaving heads properly.	Make sure that the projections of the shaving heads fit exactly into the recesses (see chapter 'Cleaning and maintenance').
The shaver does not work when I press the on/off button.	The rechargeable battery is empty.	Recharge the battery (see chapter 'Charging') or connect the shaver to the mains.
	The temperature of the shaver is too high. In this case, the shaver does not work.	As soon as the temperature of the shaver has dropped sufficiently, you can switch on the shaver again.

保証書と修理サービスについて
(必ずお読みください)

保証と
アフターサービス

〈保証書・最終ページに付属〉

- 保証書は、必ず「お買い上げ日・販売店名」等の記入をお確かめのうえ、販売店から受け取っていただき内容をよくお読みのと大切に保管してください。

保証 期間	お買い上げ日から2年間
対象 部分	本体、充電アダプタ（シェービングユニット、保護キャップ、クリーニングブラシを除く）

【補修用性能部品の最低保有期間】

- 補修用性能部品の最低保有期間は製造打ち切り後6年です。
- 性能部品とは、その製品の機能を維持するために必要な部品です。

【ご不明な点や修理に関するご相談は】

- 修理に関するご相談ならびにご不明な点は、お買い上げの販売店または、小泉成器修理センターにお問い合わせください。

【修理を依頼されるときは】

- 修理をご依頼される前に、この取扱説明書をよくお読みいただき、再度点検ください。尚、異常のあるときはご使用を中止し、お買い上げの販売店へご相談ください。

【保証期間中は】

- 製品に保証書を添えてお買い上げの販売店にご持参ください。保証書の記載内容により無料修理いたします。

【保証期間が過ぎているときは】

- 修理によって製品の機能が維持できる場合は、補修用性能部品の保有期間内であれば、ご希望により有料で修理させていただきます。

【海外での本製品の保証及びアフターサービスについて】

- 本製品の保証は海外においても有効です。（同シリーズ製品の取り扱いがある国に限ります）
- 日本国以外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができますが、この場合多少日数を要することもあります。
- 海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お困りの点がございましたら下記までご連絡ください。

Philips Consumer Lifestyle Service Department P.O.Box 20100 9200 CA DRACHTEN
The Netherlands Fax:+31 51 259 2785

【お客様の個人情報のお取り扱いについて】

- お受けましたお客様の個人情報は、株式会社フィリップスエレクトロニクスジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

便 利 メ モ

お買い上げ日	年 月 日	お買い上げ 店名	TEL. ()
--------	-------	-------------	----------

ご使用の時、このような症状はありませんか？

- 本体にさわると時々電気を感じる。
- こげくさい臭いがする。
- 電源コード部を動かすと通電したり、しなかったりする。
- その他の異常、故障がある。

このような症状の時は、故障や事故防止のため、スイッチを切り、充電アダプタをコンセントから外して、必ず販売店にご相談ください。



愛情点検

仕 様

品 番	PT762E3/14
電 源 方 式	充電交流式 (専用充電アダプタ使用)
消 費 電 力	約9W (AC100V充電時)
定 格 電 圧	AC100-240V (50/60Hz)
本 体 質 量	174g
充 電 時 間	約8時間
替 刃	SH50/S1

※改良の為、仕様を予告なく変更することがあります。

株式会社 フィリップス エレクトロニクス ジャパン

日本販売代理店 小泉成器株式会社 〒541-0051 大阪市中央区備後町3-3-7

無料修理規定

〈無料修理規定〉

1. 取扱説明書、本体貼付ラベル等の注意書に従った正常な使用状態で保証期間内に故障した場合には、無料修理します。
2. 保証期間内に故障して無料修理をお受けになる場合には、商品と保証書をご持参、ご提示のうえ、お買い上げの販売店にご依頼ください。なお、商品を直接メーカーへ送付した場合の送料等はお客様の負担となります。
3. ご贈答、ご転居でお買い上げの販売店に修理を依頼できない場合は、小泉成器修理センターにご依頼ください。
4. 保証期間内で次の場合には有料修理になります。
 - ① 使用上の誤り及び不当な修理や改造による故障及び損傷。
 - ② お買い上げ後の輸送、移動、落下等による故障及び損傷。
 - ③ 火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障及び損傷。
 - ④ 一般家庭以外（例えば、業務用の長時間使用）に使用された場合の故障及び損傷。
 - ⑤ 保証書の提示がない場合。
 - ⑥ 保証書にお買い上げ年月日、お客様名、販売店名の記入のない場合、或は字句を書き換えられた場合。

※保証書は、本書に明示した条件のもとにおいて無料修理をお約束するものです。従って保証書を発行している者（保証責任者）、及びそれ以外の事業者に対するお客様の法律上の権利を制限するものではありません。
保証期間経過後の修理についてご不明の場合は、お買い上げの販売店または小泉成器修理センターにお問い合わせください。

※保証期間経過後の修理・補修用性能部品の保有期間について詳しくは取扱説明書の保証とアフターサービスの項目をご覧ください。

※お客様にご記入いただいた個人情報（保証書の控え）は保証期間内のサービス活動及びその後の安全点検活動のために利用させていただく場合がございます。ご了承ください。また個人情報は、株式会社フィリップスエレクトロニクスジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

＜ フィリップス 電動シェーバー 保証書 持込修理 ＞

CERTIFICATE OF PURCHASE

この保証書は、「無料修理規定」記載内容で無料修理を行うことをお約束するものです。
お買い上げの日から下記期間中に故障が発生した場合は、本書をご提示のうえ、お買い
上げの販売店に修理をご依頼ください。
お客様にご記入いただいた個人情報(保証書の控え)は、株式会社フィリップスエレクトロ
ニクスジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「お客様
の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

品 名	電動シェーバー
品 番	PT762E3/14
保 証 期 間	お買い上げ日より2年
対 象 部 分	本体、充電アダプタ(シェービングユニット、保護キャップ、クリーニングブラシを除く)
お 買 い 上 げ 日	年 月 日
お 客 様	ご住所 〒
	ご芳名
	電話番号
★ 販 売 店	販売店名・住所・電話番号

- ★ 保証書は再発行しませんので、大切に保管してください。
- ★ ご販売店様へ この保証書はお客様へのアフターサービスの実施と責任を明確にする
ものです。贈答品、記念品の場合も含めて必ず記入捺印してお客様にお渡しください。

★ 製品に関するお問い合わせ

フィリップスお客様情報センター
ナビダイヤル(全国共通)

0570(07)6666

ナビダイヤルにかけられない時は
TEL 06(6261)8230 FAX 06(6268)1432
日本販売代理店 小泉成器株式会社
〒541-0051 大阪市中央区備後町3-3-7

★ 修理に関するお問い合わせ

小泉成器修理センター
ナビダイヤル(全国共通)

0570(09)8888

ナビダイヤルにかけられない時は
小泉成器東日本修理センター TEL 048(718)3340
〒344-0127 埼玉県春日部市水角1190
小泉成器西日本修理センター TEL 06(6613)3145
〒559-0033 大阪市住之江区南港中1丁目3番98号

★ 部品に関するお問い合わせ

小泉成器部品センター
ナビダイヤル(全国共通)

0570(09)2222

ナビダイヤルにかけられない時は
TEL 06(6613)3211
〒559-0033 大阪市住之江区南港中1丁目3番98号

受付時間：平日9：00～17：30 (土・日・祝日・夏期休暇・年末年始を除く)

この印刷物は再生紙を使用しております。



4222.002.5797.1

©2015 Philips Electronics Japan, Ltd.