

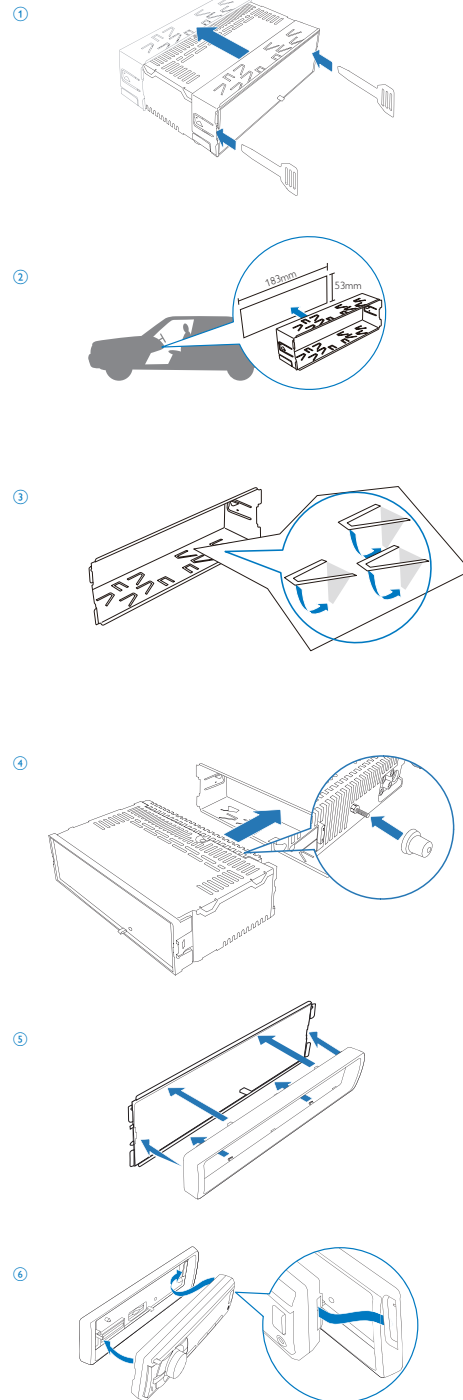





## Quick start guide

### What's in the box

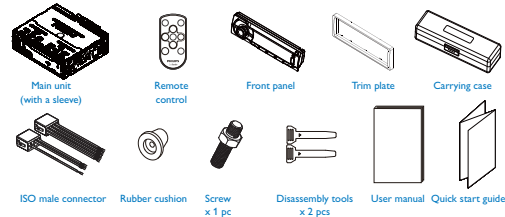

### Connect wires: ISO male connectors

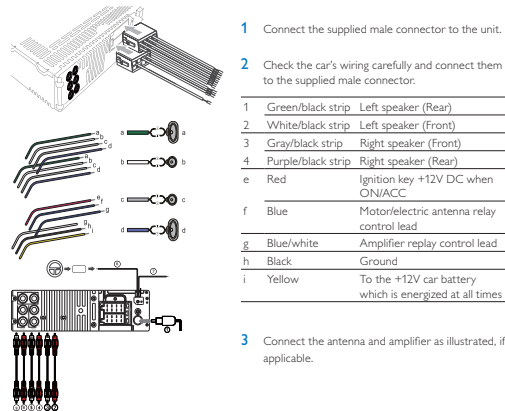


## Guia de início rápido

### Conteúdo da caixa



### Conectar os fios: conectores macho ISO

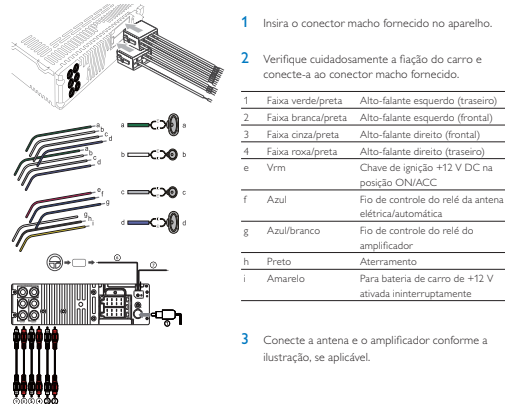

### Turn on

- To turn on the unit,
- Press **0**.
- To turn off the unit,
- press and hold **0** until the unit is turned off.

### Select country/region

- Press **0** to turn on the unit.  
↳ **[SELECT OPERATING REGION]** is displayed.
- Rotate **0** to select an option:
  - [USA]** (United States)
  - [LATIN]** (Latin America)
  - [EUROPE]** (Western Europe)
  - [M-EAST]** (Middle East)
  - [ASIA]** (Asia Pacific)
  - [JAP]** (Japan)
  - [AUST]** (Australia)
- Press **0** to confirm.

### Set clock

- Press **MENU** repeatedly until current time is flashed.
- Rotate **0** to set hour.
- Press **0** to confirm.
- Rotate **0** to set minute.
- Press **0** to confirm.

### Listen to radio

- Press **SOURCE** repeatedly to select radio mode.
- Press **BAND** or **▲ / ▼** repeatedly to select band: **[FM1]**, **[FM2]**, **[FM3]**, **[AM1]**, or **[AM2]**.
- Press and hold **◀▶** until the frequency digit is flashed.
- Press **◀▶** or **▶▶** to tune to a radio station manually.  
↳ The radio station is broadcast.
  - To search for a radio station automatically, press **◀◀** or **▶▶**.

### Ligar

- Para ligar o aparelho,
- Pressione **0**.
- Para desligar o aparelho,
- Mantenha pressionado **0** até desligar o aparelho.

### Selecionar país/região

- Pressione **0** para ligar o aparelho.  
↳ **[SELECT OPERATING REGION]** é exibido.
- Gire **0** para selecionar uma opção:
  - [USA]** (Estados Unidos)
  - [LATIN]** (América Latina)
  - [EUROPE]** (Europa Ocidental)
  - [M-EAST]** (Oriente Médio)
  - [ASIA]** (Pacífico Asiático)
  - [JAP]** (Japão)
  - [AUST]** (Austrália)
- Pressione **0** para confirmar.

### Ajustar o relógio

- Pressione várias vezes **MENU** até que a hora atual seja exibida.
- Gire **0** para ajustar a hora.
- Pressione **0** para confirmar.
- Gire **0** para ajustar os minutos.
- Pressione **0** para confirmar.

### Ouvir rádio

- Pressione **SOURCE** várias vezes para selecionar o modo de rádio.
- Pressione várias vezes **BAND** ou **▲ / ▼** para selecionar a frequência: **[FM1]**, **[FM2]**, **[FM3]**, **[AM1]** ou **[AM2]**.
- Pressione e segure **◀▶** ou **▶▶** até que o número da frequência seja exibido.
- Pressione **◀▶** ou **▶▶** para sintonizar manualmente uma estação de rádio.  
↳ A estação de rádio é transmitida.
  - Para procurar uma estação de rádio automaticamente, pressione **◀◀** ou **▶▶**.

### Store stations automatically

- In Radio mode, press and hold **DBB** until **[STORE -- ]** is displayed.
- Press **0** to confirm.  
↳ The six strongest stations of the selected band are saved in preset channel automatically.

### Store stations manually

- Tune to a station that you want to store.
- Press a numeric button for 3 seconds.  
↳ The station is saved in the selected channel.


### Play from USB

- Slide the USB socket cover marked **▶▶** to the left.
- Insert the USB device into the USB socket.  
↳ The unit starts playing from the USB device automatically.




### Insert a card

- Press **▶** to release the panel.
- Insert the card into the card slot.
- Close the front panel.  
↳ The unit starts playing from the card automatically.



### Reset

- You can reset the unit to its default setting.
- Detach the front panel.
  - Press the reset button by using a ball-point pen or a similar tool.  
↳ Preset adjustments such as preset channels and sound adjustments are erased.



### Armazenar estações automaticamente

- No modo de rádio, mantenha pressionado **DBB** até que a mensagem **[STORE -- ]** (ARMAZENAMENTO) seja exibida.
- Pressione **0** para confirmar.  
↳ As seis estações mais fortes da banda selecionada são salvas automaticamente nos canais pré-sintonizados.

### Armazenar estações manualmente

- Sintonize uma estação que você queira armazenar.
- Pressione um botão numérico por três segundos.  
↳ A estação é salva no canal selecionado.


### Reproduzir a partir de um dispositivo USB

- Deslize a tampa da entrada USB com o símbolo **▶▶** para a esquerda.
- Insira o dispositivo USB na entrada USB.  
↳ O aparelho inicia automaticamente a reprodução do dispositivo USB.



### Inserir um cartão

- Pressione **▶** para liberar o painel.
- Insira o cartão no slot de cartão.
- Feche o painel frontal.  
↳ O aparelho inicia automaticamente a reprodução do cartão.



### Reinicializar

- Você pode restaurar os ajustes padrão de fábrica do aparelho.
- Destaque o painel frontal.
  - Pressione o botão de reinicialização usando uma caneta de ponta redonda ou uma ferramenta semelhante.  
↳ Ajustes predefinidos, como canais pré-sintonizados e ajustes sonoros, serão apagados.

