Register your product and get support at

www.philips.com/welcome

HTS5110

EN User manual

DA Brugervejledning

DE Benutzerhandbuch

EL Εγχειρίδιο χρήσης

FI Käyttöopas

FR Mode d'emploi

IT Manuale utente

NL Gebruiksaanwijzing

PT Manual do utilizador

SV Användarhandbok

TR Kullanım kılavuzu

PHILIPS

Contents

1 Notice 2
Copyright 2
Compliance 2
Mains fuse (UK only) 2
Trademarks 2

2 Important 3
Safety 3
Product care 3
Disposal of your old product and batteries 3

3 Your home theater 4
Main unit 4
Remote control 5

4 Connect your home theater 6
Connectors 6
Connect to the TV 7
Connect audio from TV or other devices 8

5 Use your home theater 9
Before you start 9
Choose your sound 9
Synchronize audio with video 10
Play from a USB storage device 10
More play features for USB 10
Play from radio 11
Play from an MP3 player 11
Use Philips EasyLink 11

6 Change settings 12
Access the setup menu 12
Change general settings 13
Change audio settings 13
Change video settings 13
Change preference settings 13

7 Update software 14
Check software version 14
Update software from a USB storage device 14

8 Product specifications 14

9 Troubleshooting 15

10 Index 16

1 Notice

Copyright

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

Copyright in the UK

Recording and playback of material may require consent. See Copyright Act 1956 and The Performers Protection Acts 1958 to 1972.

Compliance

CE

This product is in compliance with the essential requirements and other relevant provisions of Directives 2006/95/EC (Low Voltage), 2004/108/EC (EMC).

Hereby, Philips Consumer Lifestyle, declares that this Home Theater System HTS5110 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Mains fuse (UK only)

This product is fitted with an approved moulded plug. Should it become necessary to replace the mains fuse, this must be replaced with a fuse of the same value as indicated on the plug (example 10A).

1. Remove fuse cover and fuse.
2. The replacement fuse must comply with BS 1362 and have the ASTA approval mark. If the fuse is lost, contact your dealer in order to verify the correct type.
3. Refit the fuse cover.

Note

- To conform with the EMC directive (2004/108/EC), the mains plug on this product must not be detached from the mains cord.

Trademarks

dts™ Digital Surround

Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks & DTS Digital Surround and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

DOLBY DIGITAL VIRTUAL SPEAKER PRO LOGIC II

Manufactured under license from Dolby Laboratories. Dolby, Pro Logic and the double-D symbol are trademarks of Dolby Laboratories.

HDMI HIGH-DEFINITION MULTIMEDIA INTERFACE

HDMI, and HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC.

HI-SPEED CERTIFIED USB

The USB-IF Logos are trademarks of Universal Serial Bus Implementers Forum, inc.

Plays Windows Media™

Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

2 Important

Read and understand all instructions before you use your home theater. If damage is caused by failure to follow instructions, the warranty does not apply.

Safety

Risk of electric shock or fire!

- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power outlet immediately. Contact Philips Consumer Care to have the product checked before use.
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.

Risk of short circuit or fire!

- Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back or bottom of the product. Never connect the product to the power outlet if the voltage is different.

Risk of injury or damage to the home theater!

- For wall-mountable products, use only the supplied wall mount bracket. Secure the wall mount to a wall that can support the combined weight of the product and the wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that results in accident, injury or damage.
- For speakers with stands, use only the supplied stands. Secure the stands to the speakers tightly. Place the assembled stands on flat, level surfaces that can support the combined weight of the speaker and stand.
- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.

Risk of overheating!

- Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.

Risk of contamination!

- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances, they should be disposed of properly.

Product care

Only use microfiber cloth to clean the product.

Disposal of your old product and batteries

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

3 Your home theater

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your home theater at www.philips.com/welcome.

Main unit

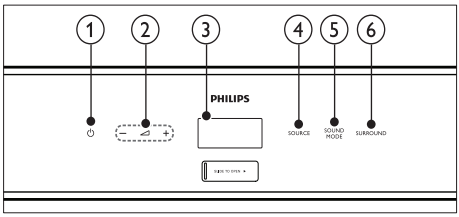

1. ⏻ (Standby-On)
2. +/- (Volume)
   Increases or decreases volume.
3. Display panel
4. SOURCE
   Selects an audio/video source for the home theater.
5. SOUND MODE
   Selects a sound mode.
6. SURROUND
   Switches to surround sound or stereo sound.

Remote control

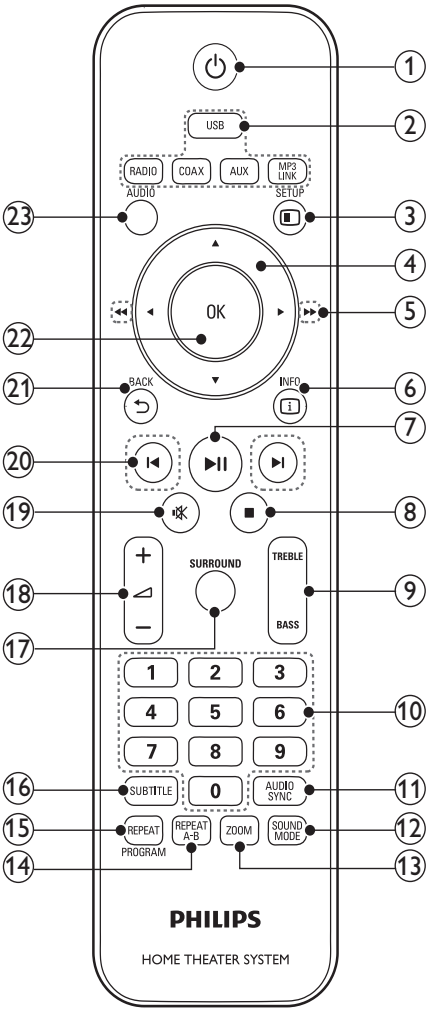

① ⏻ (Standby-On)
- Switches the home theater on or to standby.
- When EasyLink is enabled, press and hold for at least three seconds to switch all connected HDMI CEC compliant devices to standby.

② Audio Source
- **USB**: Switches to USB storage device.
- **RADIO**: Switches to FM radio.
- **COAX**: Switches to coaxial digital input or HDMI ARC source.
- **AUX**: Switches to auxiliary input source.
- **MP3 LINK**: Switches to MP3 Link input source.

③ SETUP
Accesses or exits the setup menu.

④ ▲▼◀▶ (Navigation buttons)
- Navigate menus.
- In radio mode, press left or right to search a radio station; press up or down to fine tune a radio frequency.

⑤ ◀◀ (Fast Backward) ▶▶ (Fast Forward)
Fast backwards or fast forwards. Press repeatedly to change the search speed.

⑥ INFO
Displays information about what is playing.

⑦ ▶❚❚ (Play/Pause)
Starts, pauses or resumes playback.

⑧ ■ (Stop)
- Stops playback.
- In radio mode, erases the current preset radio station.

⑨ TREBLE / BASS
Changes treble or bass. Use with +/-.

⑩ Numeric buttons
Selects an item to play.

⑪ AUDIO SYNC
Synchronize audio with video. Use with +/-.

⑫ SOUND MODE
Selects a predefined sound effect.

⑬ ZOOM
Zooms into a picture.

⑭ REPEAT A-B
Marks two points within a track for repeat play, or turns off repeat mode.

⑮ REPEAT / PROGRAM
- Selects a repeat or shuffle mode.
- In radio mode, programs radio stations.

⑯ SUBTITLE

Note

- This button is not applicable for HTS5110.

⑰ SURROUND
Selects Dolby Virtual Speaker surround sound.

⑱ +/-
Increases or decreases volume.

⑲ (Mute)
Mutes or restores volume.

⑳ / (Previous/Next)
Skips to the previous or next track or file.

㉑ BACK
Returns to a previous menu screen.

㉒ OK
Confirms an entry or selection.

㉓ AUDIO
Selects an audio language or channel.

4 Connect your home theater

This section helps you connect your home theater to a TV and other devices. The basic connections of the home theater with its accessories are provided in the Quick Start. For a comprehensive interactive guide, see www.connectivityguide.philips.com.

Note

- Refer to the type plate at the back or bottom of the product for identification and supply ratings.
- Before you make or change any connections, ensure that all devices are disconnected from the power outlet.

Connectors

Front connectors

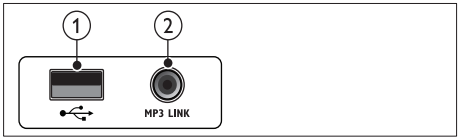

① (USB)
Audio or picture input from a USB storage device.

② MP3 LINK
Audio input from an MP3 player.

Back connectors

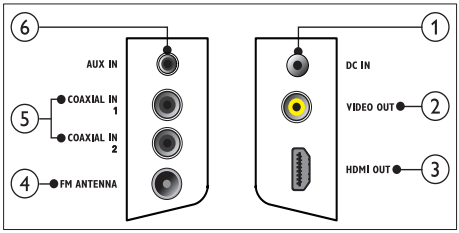

① DC IN
Connects to the AC-DC adapter. (Model: PHILIPS G721DA-270250)

② VIDEO OUT
Connects to the composite video input on the TV.

③ HDMI OUT
Connects to the HDMI input on the TV.

④ FM ANTENNA
Connects the FM antenna for radio reception.

⑤ COAXIAL IN
Connects to the coaxial audio output on the TV or a digital device.

⑥ AUX IN
Connects to the analog audio output on the TV or an analog device.

Connect to the TV

Connect your home theater directly to a TV through one of the following connectors (from highest to basic quality video):

① HDMI
② Composite video
③ SCART

Option 1: Connect to the TV through HDMI

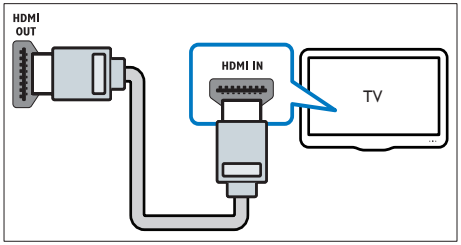

Note

- If the HDTV has a DVI connector, connect using an HDMI/DVI adapter.
- If the TV supports EasyLink HDMI CEC, control the home theater and TV with one remote control (see 'Use Philips EasyLink' on page 11).

Option 2: Connect to the TV through composite video (CVBS)

Note

- The composite video cable or connector might be labeled **AV IN**, **VIDEO IN**, **COMPOSITE** or **BASEBAND**.

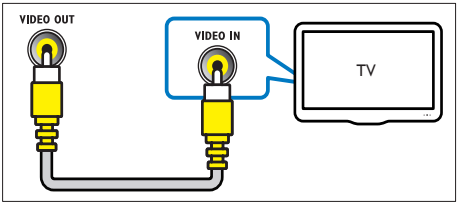

Option 3: Connect to the TV through SCART

Use the supplied scart adapter.

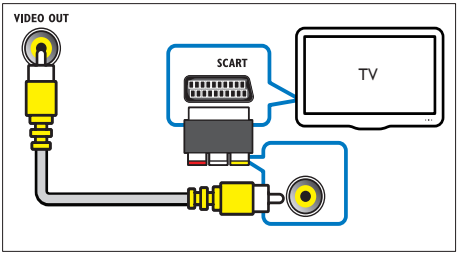

Connect audio from TV or other devices

Use your home theater to play audio from the TV or other devices such as a cable box. Choose from the following connectors.

Option 1: Connect audio through a digital coaxial cable

Note

- The digital coaxial cable or connector might be labeled **COAXIAL DIGITAL OUT** or **SPDIF OUT**.

(Cable not supplied)

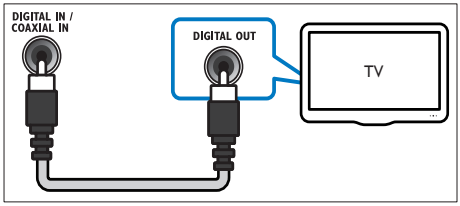

Option 2: Connect audio through analog audio cables

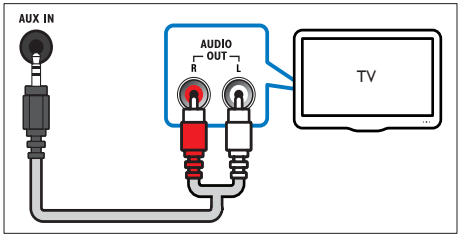

Option 3: Connect audio through an HDMI cable

Note

- The **HDMI** connector on the TV might be labeled **HDMI 1** or **HDMI ARC.** This feature works with Audio Return Channel (ARC) compatible devices only.

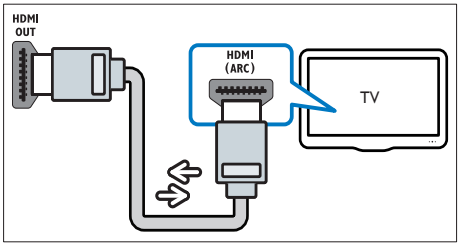

5 Use your home theater

This section helps you use the home theater to play media from a wide range of sources.

Before you start

Check that you:

- Make the necessary connections and complete the setup as described in the Quick Start.
- Switch the TV to the correct source for the home theater.

Choose your sound

This section helps you choose the ideal sound for your video or music.

Change treble or bass

Change the high frequency (treble) or low frequency (bass) settings of the home theater to suit your video or music.

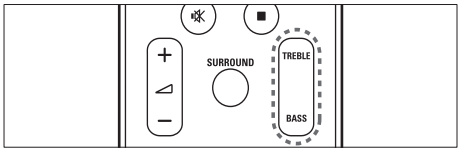

1 Press **TREBLE** or **BASS**.
2 Press **+/-** within five seconds to increase or decrease treble or bass.

Change sound mode

Select predefined sound modes to suit your video or music.



Press **SOUND MODE** repeatedly to cycle through the available sound modes.

Sound mode	Description
ROCK	Enhanced low and high-range. Ideal for action movies and rock or pop music.
JAZZ	Clear mid and high-range. Ideal for drama movies and jazz music.
CLASSIC	Neutral sound. Ideal for live concerts and classical music.
SPORTS	Moderate mid-range and surround effects for clear vocals and the atmosphere of a live sport venue.
NIGHT	Dynamically controlled sound mode suitable for watching movies at night or for non-intrusive background music.

Change virtual surround mode

DVS (Dolby Virtual Speaker) technology creates a highly compelling 5.1-channel listening experience from as few as two speakers.

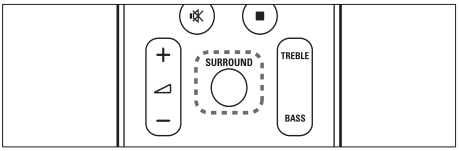

During play, press **SURROUND** to switch on or off the surround sound effect.

Synchronize audio with video

If the audio and video are not synchronized, you can delay the audio to match the video.

1 Press **AUDIO SYNC**.
   ↳ The audio sync message appears on the display panel.

2 Press **+/-** within five seconds to sync the audio with your video.

Note

- This feature is applicable only if the audio/ video source is connected through the TV.

Play from a USB storage device

The home theater is fitted with a USB connector that allows you to view pictures or listen to music stored on a USB storage device.

1 Connect the USB storage device to the home theater.

2 Press **USB**.
   ↳ A content browser appears.

3 Press the **Navigation buttons** to select a file, then press **OK**.

4 Use the following buttons to control play:

Button	Action
Navigation buttons	Navigate menus.
OK	Confirms an entry or selection.
▶II	Starts, pauses or resumes play.
■	Stops play.
I◀ / ▶I	Skips to the previous or next track, or file.
◀◀ / ▶▶	Fast backwards or fast forwards. Press repeatedly to change the search speed.
ZOOM	Zooms into a picture.

Use picture options

Access several useful features while viewing pictures.

Button	Action
▲ / ▼	Rotates the picture counter-clockwise or clockwise.
◀ / ▶	Skips to the previous or next picture.
REPEAT	Repeats a single file in the folder or repeats the entire folder. Shuffles files in a folder.
INFO	Displays photo albums in a thumbnail overview.

Use audio options

Press the following button to access more features while audio is played.

Button	Action
REPEAT	Selects or turns off repeat mode.

Note

- If the USB storage device does not fit into the connector, use a USB extension cable.
- The home theater does not support digital cameras that need a computer program to display photos.
- The USB storage device must be FAT or DOS-formatted, and Mass Storage Class compliant.

More play features for USB

Several advanced features are available for picture playback from a USB storage device.

Play a musical slideshow

Play music and pictures simultaneously to create a musical slideshow. The files must be stored on the same USB storage device.

1 Select a music track, then press **OK**.

2 Press ⮌ **BACK** and go to the picture folder.

3 Select a picture, then press **OK** to start slideshow.

4 Press ■ to stop slideshow.

5 Press ■ again to stop music.

Repeat play a specific section

Select sections of audio for repeat playback.

1 During playback, press **REPEAT A-B** to mark the start point.
2 Press **REPEAT A-B** again to mark the end point.
   ↳ Repeat play starts.
   ↳ To cancel repeat A-B, press **REPEAT A-B** again.

Note

- Repeat play is only possible within a track.

Play from radio

1 Check that the FM antenna is connected.
2 Press **RADIO**.
   ↳ "**AUTO INSTALL...PRESS PLAY**" appears on the display panel if you have not installed any radio stations. Press ▶II.
3 Press the following buttons to control play:

Button	Action
I◀ / ▶I	Selects a preset radio station.
◀◀ / ▶▶	Searches for a radio station.
▲▼	Fine tunes a radio frequency.
■	Press and hold to erase the preset radio station.
PROGRAM	Manual: Press once to access program mode, press I◀ / ▶I to assign a number to the radio station, then press again to store the radio station. Automatic: Press and hold for three seconds to reinstall radio stations.

Note

- The home theater can store up to 40 radio stations.
- Press ■ to stop the installation.
- AM and digital radio are not supported.
- If no stereo signal is detected, or if fewer than five stations are found, you are prompted to install the radio stations again.
- For the best reception, place the antenna away from the TV or other sources of radiation.

Play from an MP3 player

Connect and play audio files from an MP3 player or other external audio devices.

1 Connect the MP3 player to the home theater.
2 Press **MP3 LINK**.
   ↳ '**MP3 LINK**' appears on the display panel.
3 Press the buttons on the MP3 player to select and play audio files.

Use Philips EasyLink

The home theater supports Philips EasyLink, which uses the HDMI CEC (Consumer Electronics Control) protocol. EasyLink-compliant devices that are connected through HDMI connectors can be controlled by a single remote control.

Note

- Philips does not guarantee 100% interoperability with all HDMI CEC devices.

1 Switch on the HDMI CEC operations on the TV and other connected devices. See the manual of the TV or other devices for details.
2 Press **SETUP**.
3 Select **[General Setup]**, then press **OK**.
4 Select **[EasyLink Setup]**, then press **OK**.
5 Select and adjust the following settings:
   - **[EasyLink]** : Enables or disables EasyLink.
   - **[One Touch Play]** : Enables or disables One Touch Play.

     If enabled, you can use the remote control to start USB play in the home theater and the TV switches automatically to the correct channel.
   - **[One Touch Standby]** : Enables or disables One Touch Standby.

     If enabled, the home theater can be switched off to standby by a remote control from the TV or other connected HDMI CEC devices.

- **[System Audio Control]** :Enables or disables System audio control.

  If enabled, follow the instructions on the TV to map the connected devices correctly to the audio connectors of the home theater. The home theater switches automatically to the audio source of the connected device.
- **[Audio Input Mapping]** : Updates audio input mapping if there are new devices connected.

6 Press **OK** to confirm your choice.

Note

- The connected devices must be connected through HDMI and switched on.

6 Change settings

This section helps you to change the settings of your home theater.

Caution

- Most of the settings are already configured with the best value for the home theater. Unless you have a specific reason to change a setting, it is best to leave it at the default value.

Access the setup menu

1 Press **SETUP**.
↳ The following menu appears.

Symbol	Description
	[General Setup]
	[Audio Setup]
	[Video Setup]
	[Preference Setup]

2 Select a setup menu, then press **OK**.
See the following sections for information about how to change the settings of your home theater.

3 Press **BACK** to return to the previous menu, or press **SETUP** to exit.

Note

- You cannot change a setting that is grayed out.

Change general settings

1 Press SETUP.
2 Select **[General Setup]**, then press **OK**.
3 Select and adjust the following settings:
- **[EasyLink Setup]** : Sets up EasyLink to enjoy easy controls of all the HDMI CEC compliant devices using a single remote control (see 'Use Philips EasyLink' on page 11).
- **[Display Dim]** : Changes the brightness of the display panel.
- **[OSD Language]** : Selects the on-screen display menu language.
- **[Screen Saver]** : Enables or disables screen saver mode. If enabled, the screen enters idle mode after 10 minutes of inactivity (for example, in pause or stop mode).
- **[Sleep Timer]** : Sets a sleep timer to switch the home theater to standby after a specific time.

4 Press **OK** to confirm your choice.

Change audio settings

1 Press SETUP.
2 Select **[Audio Setup]**, then press **OK**.
3 Select and adjust the following setting:
[HDMI Audio] : Enables or disables HDMI audio output for the TV.For settings related to HDMI, the TV must be connected through HDMI.
4 Press **OK** to confirm your choice.

Change video settings

1 Press SETUP.
2 Select **[Video Setup]**, then press **OK**.
3 Select and adjust the following settings:
- **[TV System]** : Selects a TV system that is compatible with the TV.
- **[TV Display]** : Selects a picture display format to fit the TV screen.
- **[Picture Settings]** : Selects a predefined color setting.
- **[HDMI Setup]** : Selects HDMI video resolution and the wide screen display format for the TV. The Wide Screen Display option is only available for 16:9 wide screen TV display setting.

4 Press **OK** to confirm your choice.

Note

- The best setting is automatically selected for the TV. If you need to change the setting, ensure that the TV supports the new setting.
- Some video settings depend on the video source, ensure that the TV supports the setting or feature.
- For settings related to HDMI, the TV must be connected through HDMI.

Change preference settings

1 Press SETUP.
2 Select **[Preference Setup]**, then press **OK**.
3 Select and adjust the following settings:
- **[MP3/JPEG Display]** : Displays the MP3/JPEG folders or all the files.
- **[Version Info.]** : Displays the software version for the home theater.
- **[Default]** : Resets the home theater to the default settings programmed at the factory.

4 Press **OK** to confirm your choice.

7 Update software

To check for new updates, compare the current software version of your home theater with the latest software version (if available) on the Philips web site.

Check software version

1 Press SETUP.
2 Select **[Preference Setup]** > **[Version Info.]**, then press **OK**.
   ↳ The software version is displayed.

Update software from a USB storage device

1 Check for the latest software version on www.philips.com/support.
   • Search for your model and click on 'software&drivers'.
2 Download the software onto a USB storage device.
3 Connect the USB storage device to the home theater.
4 Follow the instructions on the TV to confirm the update.
   ↳ When the update is complete, the home theater automatically switches to standby.
5 Disconnect the power cord for a few seconds and then reconnect it.

Caution

- Do not turn off the power or remove the USB storage device when the software update is in progress because you might damage the home theater.

8 Product specifications

Note

- Specification and design are subject to change without notice.

Playback medium

USB storage device

File Format

- Audio: .mp3, .wma
- Picture: .jpg

Amplifier

- Total output power: 300 W RMS
- Frequency response: 20 Hz-20 kHz / ±3dB
- Signal-to-noise ratio: > 65 dB (CCIR) / (A-weighted)
- Input sensitivity:
  - AUX: 2 V
  - MP3 LINK: 1 V

Video

- Signal system: PAL / NTSC
- HDMI output 480p, 576p, 720p, 1080i, 1080p

Audio

- S/PDIF Digital audio input:
  - Coaxial: IEC 60958-3
- Sampling frequency:
  - MP3: 32 kHz, 44.1 kHz, 48 kHz
  - WMA: 44.1 kHz, 48 kHz
- Constant bit rate:
  - MP3: 112 kbps - 320 kbps
  - WMA: 48 kbps - 192 kbps

Radio

- Tuning range: FM 87.5-108 MHz (50 kHz)
- Signal-to-noise ratio: FM 50 dB
- Frequency response: FM 180 Hz-10 kHz / ±6dB

USB

- Compatibility: Hi-Speed USB (2.0)
- Class support: UMS (USB Mass Storage Class)
- File system: FAT12, FAT16, FAT32
- Maximum memory support: < 160GB

Main Unit

- Power supply: 27 Vdc; 2.5 A (External switching power adapter)
- Power consumption: 35 W
- Standby power consumption: < 1 W
- Impedance: 8 ohm woofer, 8 ohm tweeter
- Speaker drivers: 3" woofer, 1.5" tweeter
- Frequency response: 150 Hz ~ 20 kHz
- Dimensions (WxHxD): 790.6 x 100.3 x 50 (mm)
- Weight: 1.5 kg

Switching power adapter (G721DA-270250)

- Input: 100-240 Vac; 50-60 Hz; 1.35 A
- Output: 27 Vdc; 2.5 A

Subwoofer

- Power supply: 220-240 V; ~50 Hz
- Power consumption: 35 W
- Standby power consumption: < 1 W
- System: Bass Reflex System
- Impedance: 8 ohm
- Speaker driver: 6" woofer
- Frequency response: 35 Hz ~ 200 Hz
- Dimensions (WxHxD): 182 x 365 x 306 (mm)
- Weight: 6 kg

Wall Mount

- Dimensions (WxHxD): 440 x 60 x 23 (mm)
- Weight: 0.54 kg

9 Troubleshooting

Warning

- Risk of electric shock. Never remove the casing of the product.

To keep the warranty valid, never try to repair the product yourself.

If you have problems using this product, check the following points before you request service. If you still have a problem, register your product and get support at www.philips.com/welcome.

If you contact Philips, you will be asked for the model and serial number of your product. The model number and serial number are on the back or bottom of your product. Write the numbers here:

Model No. _____

Serial No. _____

Main unit

The buttons on this home theater do not work.

- Disconnect the home theater from the power outlet for a few minutes, then reconnect.

Picture

No picture.

- Ensure that the TV is switched to the correct source for the home theater.

No picture on HDMI connection.

- Check if the HDMI cable is faulty. Replace with a new HDMI cable.

Sound

No sound from subwoofer

1. In Standby, press and hold ■ (**Stop**) on the remote control until **[PAIRING]** flashes on the main unit.
2. Press and hold **PAIR** on the subwoofer until the blue and green indicators on the subwoofer flash alternately.
3. If the wireless connection succeeds, **[PAIR OK]** is displayed and the green indicator on the subwoofer lights up.

- If the wireless connection fails, **[PAIR FAIL]** is displayed, and the blue and green indicators on the subwoofer remain lit. Check whether there is any interference from nearby electronic devices. Remove the conflict or strong interference, then repeat the above procedures.

No sound.

- Ensure that the audio cables are connected and select the correct input source (for example, **AUX**, **USB**) for the device you want to play.

No sound on HDMI connection.

- You might not hear any sound if the connected device is not HDCP (High-bandwidth Digital Content Protection) compliant or only DVI compatible. Use an analog or digital audio connection.
- Ensure that the **[HDMI Audio]** is enabled.

No sound from TV program.

- Connect an audio cable from the audio input on the home theater to the audio output on the TV. Then select the correct input source, for example, **AUX** or **COAX**.

Distorted sound or echo.

- Ensure that the TV volume is muted or set to minimum if you are playing audio through the home theater.

Audio and video are not synchronized.

- 1) Press **AUDIO SYNC**. 2) Press **+/-** within five seconds.

Play

The contents of a USB storage device cannot be read.

- Ensure that the format of the USB storage device is compatible with the home theater (see 'Product specifications' on page 14).
- Ensure that the USB storage device is formatted with a file system that is supported by the home theater (note that NTFS is not supported).

'No entry' or 'x' sign appears on the TV.

- The operation is not possible.

EasyLink feature does not work.

- Ensure that the home theater is connected to a Philips brand EasyLink TV and that EasyLink is on.

I do not want my home theater to be switched on when I switch on my TV.

- This is the correct behavior for Philips EasyLink (HDMI-CEC). To make the home theater work independently, switch off EasyLink.

10 Index

A

amplifier 14
audio
  synchronize with video 10
audio input mapping 11

C

care 3
change settings 12
connect
  guide 6
  TV 7
connectors 6
contact us 15

E

EasyLink
  settings 11

F

file formats 14

H

HDMI CEC (see Easylink) 11

M

MP3
  play 11

O

one-touch play 11
one-touch standby 11
overview
  connectors 6
  main unit 4
  remote control 5

P

picture
  options 10
  slide show 10, 10
  thumbnail overview 10
  troubleshooting 15

play
MP3 player 11
radio 11
troubleshooting 16
product care 3
product specifications 14

R

radio
play 11
program 11
tune 11
recycle 3
remote control 5
rotate pictures 10

S

safety 3
slideshow 10
software
update 14
version 14
sound
mode 9
treble and bass 9
troubleshooting 15
system audio control 11

T

troubleshooting 15
TV
connect 7

U

USB
software update 14

V

video
synchronize with audio 10

Language Code

Abkhazian	6566
Afar	6565
Afrikaans	6570
Amharic	6577
Arabic	6582
Armenian	7289
Assamese	6583
Avestan	6569
Aymara	6589
Azerhaijani	6590
Bahasa Melayu	7783
Bashkir	6665
Belarusian	6669
Bengali	6678
Bihari	6672
Bislama	6673
Bokmål, Norwegian	7866
Bosanski	6683
Brezhoneg	6682
Bulgarian	6671
Burmese	7789
Castellano, Español	6983
Catalán	6765
Chamorro	6772
Chechen	6769
Chewa; Chichewa; Nyanja	7889
中文	9072
Chuang; Zhuang	9065
Church Slavic; Slavonic	6785
Chuvash	6786
Corsican	6779
Česky	6783
Dansk	6865
Deutsch	6869
Dzongkha	6890
English	6978
Esperanto	6979
Estonian	6984
Euskara	6985
Ελληνικά	6976
Faroese	7079
Français	7082
Frysk	7089
Fijian	7074
Gaelic; Scottish Gaelic	7168
Gallegan	7176
Georgian	7565
Gikuyu; Kikuyu	7573
Guarani	7178
Gujarati	7185
Hausa	7265
Herero	7290
Hindi	7273
Hiri Motu	7279
Hrwatski	6779
Ido	7379
Interlingua (International)	7365
Interlingue	7365
Inuktitut	7385
Inupiaq	7375
Irish	7165
Íslenska	7383
Italiano	7384
Ivrit	7269
Japanese	7465
Javanese	7486
Kalaallisut	7576
Kannada	7578
Kashmiri	7583
Kazakh	7575
Kernewek	7587
Khmer	7577
Kinyarwanda	8287
Kirghiz	7589
Komi	7586
Korean	7579
Kuanyama; Kwanyama	7574
Kurdish	7585
Lao	7679
Latina	7665
Latvian	7686
Letzeburgesch;	7666
Limburgan; Limburger	7673
Lingala	7678
Lithuanian	7684
Luxembourgish;	7666
Macedonian	7775
Malagasy	7771
Magyar	7285
Malayalam	7776
Maltese	7784
Manx	7186
Maori	7773
Marathi	7782
Marshallese	7772
Moldavian	7779
Mongolian	7778
Nauru	7865
Navaho; Navajo	7886
Ndebele, North	7868
Ndebele, South	7882
Ndonga	7871
Nederlands	7876
Nepali	7869
Norsk	7879
Northern Sami	8369
North Ndebele	7868
Norwegian Nynorsk;	7878
Occitan; Provencal	7967
Old Bulgarian; Old Slavonic	6785
Oriya	7982
Oromo	7977
Ossetian; Ossetic	7983
Pali	8073
Panjabi	8065
Persian	7065
Polski	8076
Português	8084
Pushto	8083
Russian	8285
Quechua	8185
Raeto-Romance	8277
Romanian	8279
Rundi	8278
Samoan	8377
Sango	8371
Sanskrit	8365
Sardinian	8367
Serbian	8382
Shona	8378
Shqip	8381
Sindhi	8368
Sinhalese	8373
Slovensky	8373
Slovenian	8376
Somali	8379
Sotho; Southern	8384
South Ndebele	7882
Sundanese	8385
Suomi	7073
Swahili	8387
Swati	8383
Svenska	8386
Tagalog	8476
Tahitian	8489
Tajik	8471
Tamil	8465
Tatar	8484
Telugu	8469
Thai	8472
Tibetan	6679
Tigrinya	8473
Tonga (Tonga Islands)	8479
Tsonga	8483
Tswana	8478
Türkçe	8482
Turkmen	8475
Twi	8487
Uighur	8571
Ukrainian	8575
Urdu	8582
Uzbek	8590
Vietnamese	8673
Volapuk	8679
Walloon	8765
Welsh	6789
Wolof	8779
Xhosa	8872
Yiddish	8973
Yoruba	8979
Zulu	9085

© 2010 Koninklijke Philips Electronics N.V.
All rights reserved.
sgptt_1039/12_v4