



SPA7355



User manual

คู่มือผู้ใช้

**PHILIPS**



## English

### 1 Important

#### Safety


##### Important safety instructions

- Read and follow all these instructions.
- The product shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product.
- To completely disconnect the power input, the mains plug of the product shall be disconnected from the mains.
- The mains plug of the product should not be obstructed or should be easily accessed during intended use.
- Keep this product away from direct sunlight, naked flames or other heat sources.
- Unplug the product from the power outlet during lightning storms or when unused for long periods of time.
- When you disconnect the power cord, always pull the plug instead of the cable.
- Only use attachments/accessories specified by the manufacturer.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



#### Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.

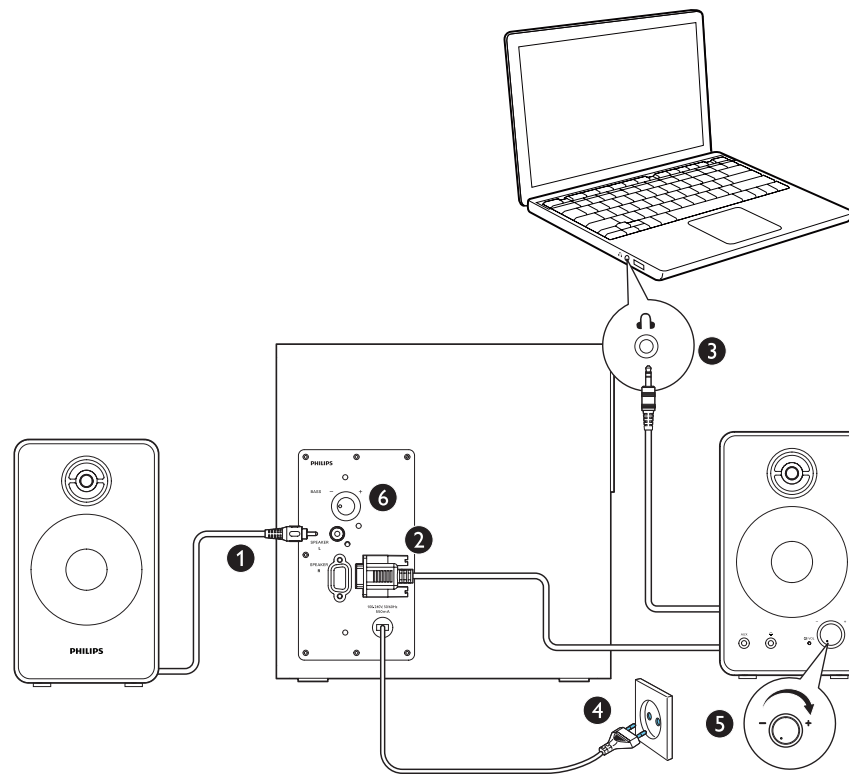

#### Hearing safety

##### Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

##### To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

##### Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

##### Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations.

#### Note

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.



#### Note

- The type plate is located on the back of the apparatus.

This is CLASS II apparatus with double insulation, and no protective earth provided.



#### Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health.

Please visit [www.recycle.philips.com](http://www.recycle.philips.com) for additional information on a recycling center in your area.

#### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

### 2 Your multimedia speaker

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).



## 3 Installation

- Insert the left speaker plug into **SPEAKER L** socket ( ① ).
- Insert the right speaker plug into **SPEAKER R** socket ( ② ).
- Connect the audio input plug on right speaker to the audio output socket of your computer ( ③ ).
- Connect the AC plug to AC power socket ( ④ ).

## 4 Get started


<span></span>	<b>Note</b>
<span></span>	<ul style="list-style-type: none"><li>Make sure that the multimedia speakers are installed properly before using.</li></ul>

- Rotate **VOL** knob clockwise to switch on the speakers ( ⑤ ).

→ Amber LED is on.
- Adjust the volume by **VOL** knob or by the computer application.
- Rotate **BASS** knob to adjust the bass ( ⑥ ).
- After use, switch off the speakers and unplug.

### Optional function

- To listen through a headphone:**

Connect a headphone (not supplied) to the  socket.

- To play music from an external audio device such as an MP3 player:**

- Connect an MP3 link cable (not supplied) to the **AUX** socket and the headphone socket on the device.
- Play music from the device.

## 5 Product information

<b>Specifications</b>	
AC power input	100-240V ~ 50/60Hz, 550mA
Operation power consumption	15W, 1/8 rated output power
Standby power consumption	<0.5W
Dimensions (W x H x D)	Subwoofer: 230 x 230 x 225 mm <p>Speakers: 101 x 170 x 100 mm</p>

<b>System requirements</b>	
<b>PC</b>	<b>Mac</b>
Windows® 98SE, Windows® ME, Windows® 2000, Windows® XP, or Windows® Vista™, Windows 7	Mac OS9/OS® X, or later

## 6 Troubleshooting

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using the product, check the following points before requesting service. If the problem remains unsolved, register your product and get support at www.philips.com/support.

**No sound:**

- Make sure that the speakers are correctly installed.
- Make sure the LED lights up.

# ภาษาไทย

## 1 ข้อสำคัญ

### ความปลอดภัย

#### คำแนะนำด้านความปลอดภัยที่สำคัญ

- อ่านและทำตามคำแนะนำเหล่านี้ทั้งหมด
- ต้องไม่ให้ของเหลวหยดลง หรือสาดกระเด็นเป็อนผลิตภัณฑ์ และต้องไม่วางวัตถุที่มีของเหลว เช่น วา แจนกันไว้บนผลิตภัณฑ์
- ในการยกเลิกการเชื่อมต่อกำลัง ไฟฟ้าโดยสมบูรณ์ ปลั๊กไฟของผลิตภัณฑ์ต้องไม่เชื่อมต่อกับแหล่งจ่ายไฟ
- ปลั๊กไฟของผลิตภัณฑ์นี้ไม่ควรมีสิ่งกีดขวาง หรือควรเข้าใช้งานได้อย่างสะดวกขณะต้องการใช้
- เก็บผลิตภัณฑ์นี้ให้ห่างจากแสงแดดโดยตรง เปลวไฟ หรือแหล่งความร้อนอื่นๆ
- ดึงปลั๊กผลิตภัณฑ์ออกจากเต้ารับบนผนังในขณะที่เกิดพายุฝนฟ้าคะนอง หรือเมื่อไม่ได้ใช้งานเป็นระยะเวลาานาน
- เมื่อคุณปลดการเชื่อมต่อสายไฟ ให้ดึงที่ตัวปลั๊ก อย่าดึงที่สาย
- ใช้อุปกรณ์ติดตั้ง/อุปกรณ์เสริมที่ผู้ผลิตกำหนดเท่านั้น
- หากใช้ปลั๊กไฟพหุหลักหรือตัวเชื่อมต่ออุปกรณ์อยู่ ในขณะที่ยกเลิกการเชื่อมต่อกับทีวี อุปกรณ์ที่ยกเลิกการเชื่อมต่อจะยังคงพร้อมใช้งานอยู่

<span></span>	<b>คำเตือน</b>
<span></span>	<ul style="list-style-type: none"><li>ห้ามถอดฝาครอบตัวเครื่องออกโดยเด็ดขาด</li> <li>ห้ามหลอ่สั่นชิ้นส่วนใดๆ ของเครื่องนี้</li> <li>ห้ามวางเครื่องบนอุปกรณ์อิเล็กทรอนิกส์อื่นฯ</li></ul>

## การฟังอย่างปลอดภัย

### ฟังที่ระดับเสียงปานกลาง

- การใช้หูฟังในระดับเสียงที่ตั้งมากอาจเป็นอันตรายต่อการได้ยินของผลิตภัณฑ์ที่สามารถให้เสียงในช่วงระดับความดังที่อาจก่อให้เกิดการสูญเสียการได้ยินสำหรับบุคคลปกติ แม้ว่าจะฟังในระยะเวลาไม่ถึงนาที ช่วงระดับความดังเสียงที่ตั้งขึ้นนี้ไว้สำหรับผู้ใช้ซึ่งอาจประสบกับการสูญเสียการได้ยินอยู่แล้ว
- เสียงอาจจะผิดเพี้ยนได้ ในช่วงระยะเวลาหนึ่งการปรับการได้ยินเสียง “ในระดับที่ฟังสบาย” จะเป็นระดับเสียงที่ตั้งขึ้น ดังนั้น หลังการฟังเป็นเวลานาน เสียง “ปกติ” แท้จริงแล้วอาจเป็นเสียงดัง และเป็นอันตรายต่อการได้ยินเสียงของคุณ เพื่อป้องกันมิให้เกิดเหตุการณ์นี้ ให้คุณตั้งค่าระดับเสียงในระดับที่ปลอดภัยก่อนที่จะปรับการได้ยินเสียง และปล่อยให้ระดับเสียงในระดับที่ปลอดภัยก่อนที่จะปรับการได้ยินเสียง และปล่อยให้

#### ในการตั้งค่าระดับเสียงในระดับที่ปลอดภัย:

- ให้ปรับการควบคุมเสียงไปที่การตั้งค่าต่ำ
- ให้เพิ่มระดับเสียงอย่างช้าๆ จนกระทั่งคุณสามารถได้ยินเสียงชัดเจนและรู้สึกสบาย โดยไม่มีความผิดเพี้ยน

### ฟังเป็นช่วงระยะเวลาที่เหมาะสม:

- การฟังเป็นระยะเวลาานาน แม้ในระดับเสียง ‘ปลอดภัย’ สามารถก่อให้เกิดการสูญเสียการได้ยิน
- ตรวจสอบให้แน่ใจว่าใช้งานอุปกรณ์อย่างพอเหมาะและหยุดพักอย่างเหมาะสม

ตรวจสอบให้แน่ใจว่าได้ทำตามคำแนะนำต่อไปนี้เมื่อใช้งานหูฟังของคุณ

- ฟังที่ระดับเสียงพอดีและเป็นระยะเวลาที่เหมาะสม
- ระมัดระวังไม่ปรับระดับเสียงเนื่องจากการปรับการได้ยินเสียงของคุณ
- ห้ามเปิดเสียงดังมากเกินไปเนื่องจากคุณจะไม่สามารยได้ยินเสียงรอบตัวคุณ
- คุณควรใช้อย่างระมัดระวังหรือหยุดการใช้งานชั่วคราวในสถานการณ์ที่มีแนวโน้มว่าจะเป็นอันตราย

### คำประกาศ

การเปลี่ยนแปลงหรือแก้ไขใดๆ ที่ทำการต่ออุปกรณ์นี้โดยไม่ได้รับการอนุญาตจาก Philips Consumer Lifestyle อาจส่งผลให้สิทธิ์การรับประกันอุปกรณ์ของผู้ใช้เป็นโมฆะ

<span></span>	<b>หมายเหตุ</b>
<span></span>	<ul style="list-style-type: none"><li>ป้ายระบุข้อมูลผลิตภัณฑ์อยู่ด้านหลังเครื่อง</li></ul>

อุปกรณ์นี้เป็นอุปกรณ์ CLASS II พร้อมฉนวนหุ้มสายขึ้น และไม่มีสายดินป้องกันก้ให้

#### การกำจัดผลิตภัณฑ์เก่าของคุณ

ผลิตภัณฑ์ของคุณได้รับการออกแบบ และผลิตด้วยวัสดุ และส่วนประกอบที่มีคุณภาพสูงซึ่งสามารถนำมารีไซเคิล และใช้ใหม่ได้

ห้ามทิ้งผลิตภัณฑ์รวมกับขยะจากครัวเรือน โปรดศึกษากฎข้อบังคับท้องถิ่นว่าด้วยการแยกเก็บผลิตภัณฑ์ไฟฟ้าและอิเล็กทรอนิกส์ การกำจัดผลิตภัณฑ์เก่าเหล่านี้อย่างถูกต้องช่วยป้องกันมลพิษเนื่องทางลบที่อาจเกิดขึ้นกับสิ่งแวดล้อมและสุขภาพของมนุษย์

โปรดเยี่ยมชม www.recycle.philips.com สำหรับข้อมูลเพิ่มเติมเกี่ยวกับศูนย์รีไซเคิลในพื้นที่ของคุณ

### ข้อมูลด้านสิ่งแวดล้อม

ห้ามใช้สวิตช์บรรจุภัณฑ์ที่ไม่จำเป็นทั้งหมด เราพยายามทำให้บรรจุภัณฑ์ง่ายต่อการแยกชิ้นส่วนออกเป็นสามส่วนคือ: กระดาษแข็ง (กล่อง), โฟมโพลีสไตรีน (กันกระแทก) และโพลีเอธิลีน (ถุง, แผ่นโฟมป้องกัน)
ตัวเครื่องประกอบด้วยวัสดุที่สามารถนำไปรีไซเคิลและใช้ซ้ำได้ หากได้รับการแยกชิ้นส่วนโดยบริษัทที่มีความเชี่ยวชาญ โปรดปฏิบัติตามข้อบังคับในท้องถิ่นเกี่ยวกับการกำจัดสวิตช์บรรจุภัณฑ์ แบตเตอรี่เก่า และอุปกรณ์เก่า

### 2 ลำโพงมัลติมีเดียของคุณ

ขอแสดงความยินดีที่คุณเลือกซื้อผลิตภัณฑ์ของเรา และยินดีต้อนรับสู่ Philips เพื่อให้คุณได้รับประโยชน์อย่างเต็มที่จากบริการที่ Philips มอบให้ โปรดลงทะเบียนผลิตภัณฑ์ของคุณที่ www.philips.com/welcome

### 3 การตั้งช่อง

- เสียบปลั๊กลำโพงซ้าย ไปในช่องเสียบ SPEAKER L ( ① )
- เสียบปลั๊กลำโพงขวา ไปในช่องเสียบ SPEAKER R ( ② )

- เชื่อมต่อปลั๊กอินพุตเสียบบนลำโพงขวา เข้ากับช่องเสียบเอาต์พุตเสียบของคอมพิวเตอร์ ( ① )
- เชื่อมต่อปลั๊ก AC เข้ากับช่องเสียบ AC ( ④ )

### 4 เริ่มต้นใช้งาน

<span></span>	<b>หมายเหตุ</b>
<span></span>	<ul style="list-style-type: none"><li>ตรวจสอบให้แน่ใจว่าลำโพงมัลติมีเดียได้รับการติดตั้งอย่างถูกต้องก่อนใช้งาน</li></ul>

- หมุนปุ่ม VOL ไปในทิศทางตามเข็มนาฬิกาเพื่อเปิดลำโพง ( ⑤ )

→ ไฟ LED สีเหลืองอำพันติดสว่างขึ้น
- ปรับระดับเสียงด้วยปุ่ม VOL หรือด้วยแอปพลิเคชันคอมพิวเตอร์
- หมุนปุ่ม BASS เพื่อปรับเสียงเบส ( ⑥ )
- หลังการใช้งาน ให้ปิดสวิตซ์ลำโพงและดึงปลั๊กไฟออก

### ฟังก์ชันที่เลือกได้

- ในการรับฟังผ่านหูฟัง:**

เชื่อมต่อหูฟัง (ไม่มีให้) เข้ากับช่องเสียบ *h*

- ในการเล่นเพลงจากอุปกรณ์เสียงภายนอก เช่น เครื่องเล่น MP3:**

- เชื่อมต่อสาย MP3 Link (ไม่มีให้) เข้ากับช่องเสียบ **AUX** และช่องเสียบหูฟังบนอุปกรณ์
- เล่นเพลงจากอุปกรณ์

### 5 ข้อมูลผลิตภัณฑ์

<b>ข้อมูลจำเพาะผลิตภัณฑ์</b>	
ไฟ AC อินพุต	100-240V ~ 50/60Hz, 550mA
การใช้พลังงานขณะใช้งาน	15W, 1/8 อัตรากำลังขับ
การใช้พลังงานขณะสแตนด์บาย	<0.5W
ขนาด (กว้าง x สูง x ลึก)	ซับวูฟเฟอร์: 230 x 230 x 225 มม. <p>ลำโพง: 101 x 170 x 100 มม.</p>

<b>ความต้องการของระบบ</b>	
<b>PC</b>	<b>Mac</b>
Windows® 98SE, Windows® ME, Windows® 2000, Windows® XP, or Windows® Vista™, Windows 7	Mac OS9/OS® X หรือใหม่กว่า

### 6 วิธีแก้ไขปัญหา

เพื่อรักษาการรับประกันให้ม้ผลใช้ได้ ห้ามซ่อมแซมระบบด้วยตัวคุณเอง หากคุณประสบปัญหาในการใช้งานผลิตภัณฑ์นี้ โปรดตรวจสอบหัวข้อดังต่อไปนี้ก่อนนำเครื่องเข้ารับบริการ หากปัญหายังไม่ได้รับการแก้ไข ให้ลงทะเบียนผลิตภัณฑ์ของคุณและรับความช่วยเหลือได้ที่ www.philips.com/support

**ไม่มีเสียง:**

- ตรวจสอบให้แน่ใจว่าได้ติดตั้งลำโพงอย่างถูกต้องแล้ว
- ตรวจสอบให้แน่ใจว่าไฟ LED ติดสว่าง