

Always there to help you

Register your product and get support at
www.philips.com/welcome



AE1500/37

EN Short User Manual

ES Manual de usuario corto

FR Bref mode d'emploi

PHILIPS

P&F USA Inc.
PO Box 2248
Alpharetta, GA 30023-2248
Phone: 1 866 309 0845

Meet Philips at the Internet
<http://www.philips.com/welcome>



2014 © WOOX Innovations Limited. All rights reserved. This product was brought to the market by WOOX Innovations Limited or one of its affiliates, further referred to in this document as WOOX Innovations, and is the manufacturer of the product. P&F is the warrantor in relation to the product with which this booklet was packaged. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V.

AE1500_37_Short UM_V1.0



Hearing safety



Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.
- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.



Note

- The type plate is located on the back of the product.

2 Get started

Always follow the instructions in this chapter in sequence.

Overview

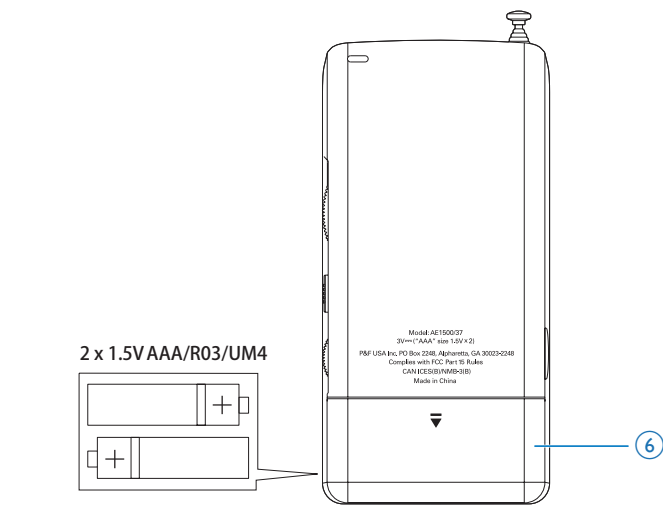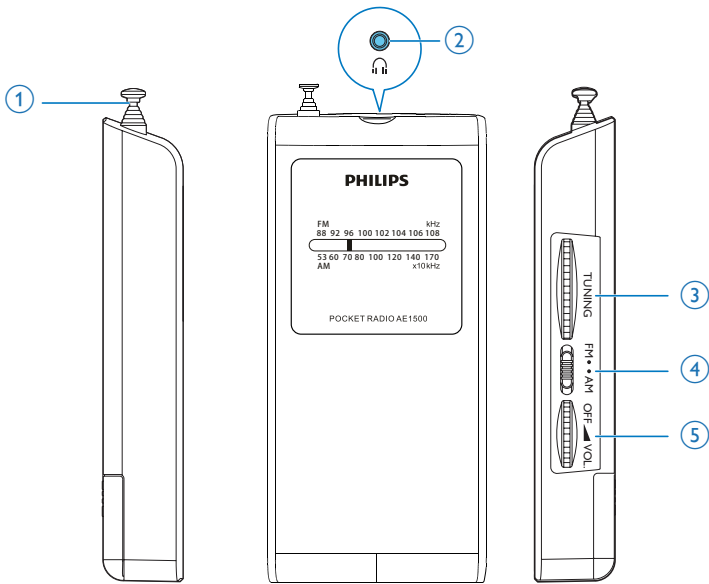

- Telescopic antenna
 - Improve FM reception.
- Headphone socket
 - 3.5 mm stereo headphone socket.
- TUNING
 - In FM/AM mode, tune to a radio station.
- Band selector
 - Select the waveband : FM or AM.
- OFF VOL
 - Switch on/off the set.
 - Adjust the sound level.
- Battery compartment

Install batteries

Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Risk of product damage! When the product is not used for a long period, remove the batteries.
- Batteries contain chemical substances, so they should be disposed of properly.

- Open the battery compartment.
- Insert 2 alkaline batteries (not supplied), type AA, R06, or UM3, with correct polarity (+/-) as indicated.
- Close the battery compartment.

Power on

Switch **OFF** **VOL** to turn on the speaker.

3 Listen through the headphone

Plug a headphone into the socket on the unit.

4 Listen to radio

Note

- For optimal reception, fully extend the antenna and adjust its position.

- Set the band selector to **FM** or **AM**.
- Turn the **TUNING** wheel to tune to the target radio station.
 - To increase or decrease volume, turn the **OFF** **VOL** wheel.

5 Product information

Note

- Product information is subject to change without prior notice.

Specifications

Total Output Power	0.2W RMS
Tuning range	FM: 87.5-108 MHz AM: 540-1710 KHz
Sensitivity	FM : 26dB S/N Ratio<22 dBf AM : 26dB S/N Ratio<70 dBf
Total Harmonic Distortion	<2%
Signal to Noise Ratio (FM)	>50 dBA
Power supply	Type AAA; R03 or UM4 batteries x 2 pcs(not included)
Dimensions : Main Unit (W x H x D)	57 x 133 x 20 mm

6 Troubleshooting

Warning

- Never remove the casing of this product.

To keep the warranty valid, never try to repair the product yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www.philips.com/support). When you contact the Consumer Care, make sure that the product is nearby and the model number and serial number are available.

No power

- The batteries are not installed correctly. Insert the batteries correctly as indicated on the battery compartment.
- The batteries are out of energy. Replace with new ones.

No sound

- Adjust volume.
- Disconnect the headphone from the unit.

Poor radio reception

- For FM, fully extend the telescopic antenna and adjust its position for better reception.
- For AM, a built-in antenna works. Adjust the position of the unit for better reception.

7 Notice

Any changes or modifications made to this device that are not expressly approved by WOOX Innovations may void the user's authority to operate the equipment.

Notice for the USA

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
 - Increase the separation between equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- CAN ICES(B)/NMB-3(B)
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- This device may not cause harmful interference, and
 - This device must accept any interference received, including interference that may cause undesired operation.

Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health.

Please visit www.recycle.philips.com for additional information on a recycling center in your area.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Note

- The type plate is located on the bottom of the apparatus.

ES

1 Seguridad

Instrucciones de seguridad importantes

- Lea estas instrucciones.
- Guarde estas instrucciones.
- Preste atención a todas las advertencias.
- Siga todas las instrucciones.
- No use este aparato cerca del agua.
- Utilice únicamente un paño seco para la limpieza.
- No instale cerca ninguna fuente de calor como, por ejemplo, radiadores, rejillas de calefacción, hornos u otros aparatos que produzcan calor (incluidos los amplificadores).
- Use exclusivamente los dispositivos/accesorios indicados por el fabricante.
- El servicio técnico debe realizarlo siempre personal cualificado. Se requerirá servicio de asistencia técnica cuando el aparato sufra algún tipo de daño como, por ejemplo, que se haya derramado líquido o hayan caído objetos dentro del aparato, que éste se haya expuesto a la lluvia o humedad, que no funcione normalmente o que se haya caído.
- ATENCIÓN con el uso de las pilas. Para evitar fugas de las pilas que puedan causar lesiones corporales, daños en la propiedad o a la unidad:
 - Instale todas las pilas correctamente, siguiendo las indicaciones de los polos + y - de la unidad.
 - No mezcle pilas (antiguas y nuevas, o de carbón y alcalinas, etc.).
 - Quite las pilas cuando no use la unidad durante un periodo largo de tiempo.
- No exponga el aparato a goteos ni salpicaduras.
- No coloque sobre el aparato objetos que puedan suponer un peligro (por ejemplo, objetos que contengan líquido o velas encendidas).
- No exponga las pilas a temperaturas altas, como las que emiten la luz solar, el fuego o similares.

Seguridad auditiva



Utilice un nivel de sonido moderado:

- El uso de los auriculares a un nivel de sonido elevado puede dañar el oído. Este producto produce sonidos con rangos de decibelios que pueden provocar una pérdida auditiva a una persona con un nivel auditivo normal, incluso en el caso de una exposición inferior a un minuto. Los rangos de decibelios más elevados se ofrecen para aquellas personas que tengan cierta deficiencia auditiva.
- El nivel de sonido puede ser engañoso. Con el paso del tiempo, el "nivel de comodidad" de escucha se adapta a los niveles de sonido más elevados. Por lo tanto, tras una escucha prolongada, el sonido de un nivel "normal" puede ser en realidad de tono elevado y perjudicial para el oído. Para protegerse contra esto, ajuste el nivel de sonido a un nivel seguro antes de que su oído se adapte y manténgalo así.

Para establecer un nivel de sonido seguro:

- Fije el control de volumen en un ajuste bajo.
- Aumente poco a poco el sonido hasta poder oírlo de manera cómoda y clara, sin distorsión.

Escuche durante periodos de tiempo razonables:

- La exposición prolongada al sonido, incluso a niveles "seguros", también puede provocar una pérdida auditiva.
- Asegúrese de utilizar su equipo de forma razonable y realice los descansos oportunos.

Asegúrese de respetar las siguientes pautas cuando use los auriculares.

- Escuche a niveles de sonido razonables durante periodos de tiempo razonables.
- Tenga cuidado de no ajustar el nivel de sonido mientras se adapta su oído.
- No suba el nivel de sonido hasta tal punto que no pueda escuchar lo que le rodea.
- En situaciones posiblemente peligrosas, debe tener precaución o interrumpir temporalmente el uso. No utilice los auriculares cuando conduzca un vehículo motorizado, ni cuando practique ciclismo, skateboarding, etc., ya que podría suponer un riesgo para el tráfico y es ilegal en muchas zonas.



Note

- La placa de identificación está situada en la parte posterior del dispositivo.

2 Introducción

Siga siempre las instrucciones de este capítulo en orden.

Overview

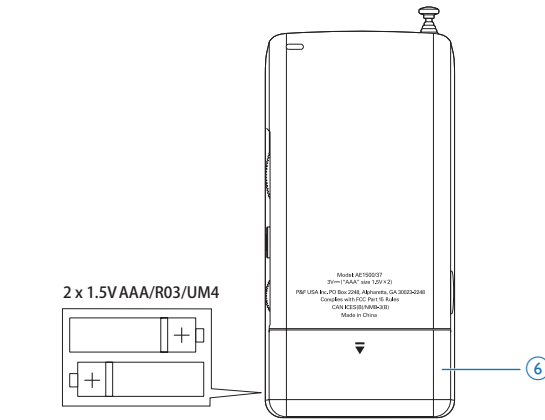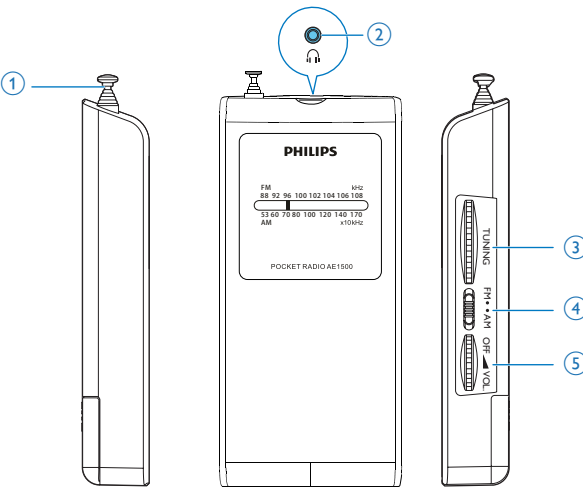

- Antena telescópica
 - Mejora la recepción de FM.
- Headphone socket
 - Toma para auriculares estéreo de 3,5 mm.
- TUNING
 - En el modo FM/AM, sintonice una emisora de radio.
- Selector de banda
 - Selecciona la banda de ondas: FM o AM.
- OFF VOL
 - Enciende/apaga el aparato.
 - Ajusta el nivel de sonido.
- Compartimiento de las pilas

Instalación de las pilas

Precaución

- Riesgo de explosión. Mantenga las pilas alejadas del calor; la luz del sol o el fuego. Nunca tire las pilas al fuego.
- Riesgo de daños en el producto. Quite las pilas si no va a utilizar el producto durante un periodo largo de tiempo.
- Las pilas contienen sustancias químicas, por lo que debe deshacerse de ellas correctamente.

- Abra el compartimento de las pilas.
- Introduzca 2 pilas alcalinas (no incluidas), tipo AA, R06 o UM3, con la polaridad (+/-) correcta, tal como se indica.
- Cierre el compartimento de las pilas.

Encendido

Cambie **OFF** **VOL** para encender el altavoz.

3 Escuchar a través de los auriculares

Enchufe los auriculares en la toma de la unidad.

4 Cómo escuchar la radio

Note

- Para una recepción óptima, extienda completamente la antena y ajuste su posición.

- Ajuste el selector de banda en FM o AM.
- Gire la rueda **TUNING** para sintonizar la emisora de radio objetivo.
 - Para subir o bajar el volumen, gire la rueda **OFF** **VOL**.

5 Información del producto

Note

- La información del producto puede cambiar sin previo aviso.

Specifications

Potencia de salida total	0.2 W RMS
Rango de sintonización	FM: 87,5 - 108 MHz AM: 540 - 1710 kHz
Sensibilidad	FM: relación S/R 26 dB <22 dBf AM: relación S/R 26 dB <70 dBf
Distorsión armónica total	<2%
Relación señal/ruido (FM)	>50 dBA
Fuente de alimentación	2 pilas tipo AAA, R03 o UM4 (no incluidas)
Dimensiones: unidad principal (ancho x alto x profundo)	57 x 133 x 20 mm

6 Solución de problemas

Advertencia

- No quite nunca la carcasa de este producto.

Para que la garantía mantenga su validez, no trate nunca de reparar el producto usted mismo.

Si tiene problemas al usar el dispositivo, compruebe los siguientes puntos antes de llamar al servicio técnico. Si no consigue resolver el problema, vaya a la página Web de Philips (www.philips.com/support). Cuando se ponga en contacto con el Servicio de Atención al Cliente, asegúrese de que el producto está cerca y de que tiene disponibles el número de modelo y de serie.

No hay alimentación

- Las pilas no están bien colocadas. Introduzca las pilas correctamente como se indica en el compartimento de las pilas.
- Las pilas están agotadas. Sustitúyalas por unas nuevas.

No hay sonido

- Ajustar el volumen.
- Desconecte los auriculares de la unidad.

La recepción de radio es débil

- Para FM, extienda completamente la antena telescópica y ajuste su posición para mejorar la recepción.
- Para AM, se utiliza una antena integrada. Ajuste la posición de la unidad para mejorar la recepción.

7 Aviso

Cualquier cambio o modificación que se realice en este dispositivo que no esté aprobada expresamente por WOOX Innovations puede anular la autoridad del usuario para utilizar el equipo.

Nota para EEUU.:

Este equipo ha sido probado y cumple los límites establecidos para los dispositivos digitales de clase B, de acuerdo con la sección 15 del reglamento FCC. Estos límites se han establecido para proporcionar una protección razonable contra las interferencias perjudiciales en instalaciones particulares. Este aparato genera, utiliza y puede emitir energía de frecuencias de radio y, si no se instala y utiliza según el manual de instrucciones, puede provocar interferencias perjudiciales en las comunicaciones de radio. No obstante, no hay garantías de que no se produzcan interferencias en una instalación particular. Si el equipo causa interferencias perjudiciales en la recepción de radio o televisión, que se puedan percibir encendiendo y apagando el equipo, se recomienda al usuario que intente corregirlas tomando una o más de las siguientes medidas:

- Cambie la posición de la antena receptora.
- Aumente la separación entre el aparato y el receptor.
- Conectar el equipo a una toma de corriente de un circuito distinto al que está conectado el receptor.

