

始终如一地为您提供帮助

www.philips.com/welcome

SBM110PNK



用户手册

PHILIPS

目录

1	注意事项	2
	注意	2
2	您的便携式扬声器	3
	产品简介	3
	包装盒内物品	3
	扬声器概述	4
3	使用入门	5
	电源	5
	打开/关闭	5
	选择来源	5
4	播放	6
	从 Micro SD 卡播放	6
	从外部设备播放	6
5	产品信息	7
	规格	7
6	故障种类和处理方法	7

1 注意事项

- 阅读这些说明。
- 注意所有警告。
- 遵循所有说明。
- 不要在靠近水的地方使用本装置。
- 不要在任何热源附近安装，如散热器、蓄热器、炉具或其它发热设备（包括功放器）。
- 仅使用制造商指定的附件/配件。
- 所有维修应由合格的维修人员来执行。本装置有任何损坏时，如液体泼溅到或物体跌落到装置上，装置淋雨或受潮，无法正常运行，或者跌落，均需要进行维修。
- 不可将电池置于高温环境，如阳光直射处、明火或类似环境。
- 切勿将本装置置于漏水或溅水环境下。
- 不要将任何危险源放在本装置上（例如装有液体的物体、点燃的蜡烛）。

警告


- 切勿拆下本产品的外壳。
- 切勿将本装置放在其它电器设备上面。

请自行了解当地关于分类收集电池的规定。正确弃置电池有助于避免对环境 and 人类健康造成潜在的负面影响。关于您所在地区回收中心的更多信息，请访问 www.recycle.philips.com。

注意

- 拆卸内置电池将使保修失效，并可能毁坏本产品。

务必让专业人员拆卸产品中的内置电池。

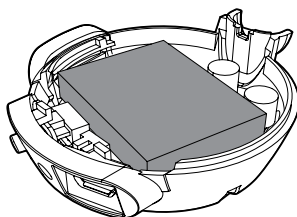

环境信息

已省去所有不必要的包装。我们努力使包装易于分为三种材料：纸板（盒）、泡沫塑料（缓冲物）和聚乙烯（袋、保护性泡沫片）。

您的系统包含可回收利用的材料（如果由专业公司拆卸）。请遵守当地有关包装材料、废电池和旧设备的处理的规定。

注

- 铭牌（铭牌上的信息包括工作电流和工作电压）位于本设备的底部，使用前请先了解铭牌上的相关信息。

注意

如果用户未经 WOOX Innovations 的明确许可而擅自对此设备进行更改或修改，则可能导致其无权操作此设备。

旧产品和电池的处理

本产品采用可回收利用的高性能材料和组件制造而成。

切勿将本产品与其它生活垃圾一起处理。请自行了解当地关于分类收集电子、电气产品及电池的规定。正确弃置这些产品有助于避免对环境和人体健康造成潜在的负面影响。

本产品所含的电池不能与一般的生活垃圾一同弃置。

2 您的便携式扬声器

感谢您的惠顾，欢迎光临飞利浦！为了您能充分享受飞利浦提供的支持，请在 www.philips.com/welcome 上注册您的产品。

产品简介

通过本扬声器，您可以：


- 欣赏 Micro SD 卡和其他外置设备中的音乐。

包装盒内物品

检查并识别包装中的物品：

- 主装置
- 1 根 USB 线缆
- 3.5 毫米音频连接线缆（1 根）
- 简明用户手册

扬声器概述

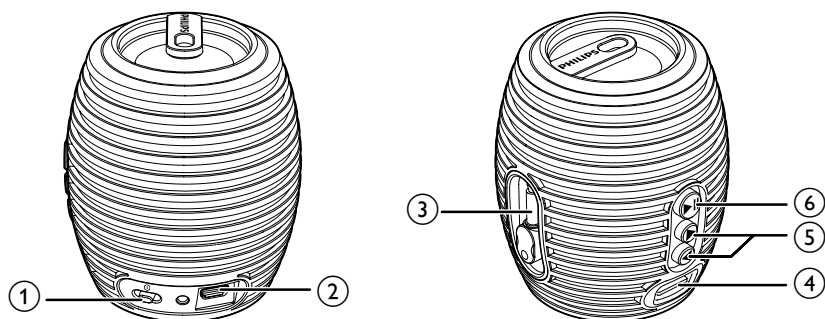

- ① ①
 - 打开或关闭扬声器。
- ② 充电插孔
 - 为内置电池充电。
- ③ 音频输入插头
 - 连接外置音频播放器
- ④ Micro SD 卡槽
 - Micro SD 卡插槽。
- ⑤ ◀/▶
 - 在 Micro SD 卡模式下，跳至上一个/下一个音频文件。
 - 按住可增大/减小音量。
- ⑥ ▶||
 - 开始或暂停播放。
 - 在播放模式之间切换。
 - 在 Micro SD 卡模式下，按住 3 秒打开或关闭随机播放功能。

3 使用入门


始终依照顺序，遵循本章的说明。
如果您与飞利浦联系，将询问您此装置的型号和序列号。型号和序列号可以在产品的底部找到。请在此处填写型号：
型号 _____
序列号 _____

电源

扬声器可通过内置充电电池工作。
要为内置电池充电：
将随附的 USB 线连接至：

- 扬声器上的充电端口。
- 电脑上的 USB 插孔。

↳ LED 指示灯呈红色亮起。

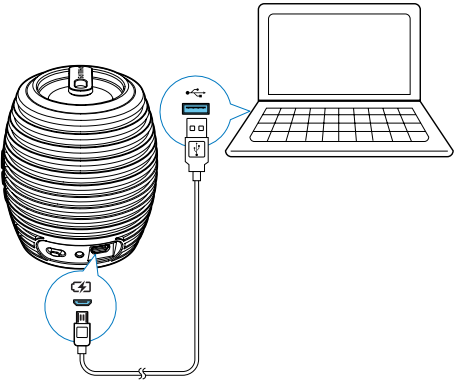

注

- 您可以在扬声器充电时收听音乐。LED 指示灯会呈白色亮起。

打开/关闭

- 1 要打开扬声器，请将 ① 滑至右侧。
↳ LED 指示灯呈白色亮起。
- 2 要关闭扬声器，请将 ① 滑至左侧。

选择来源

反复按 ►|| 可在 Micro SD 卡模式和音频输入模式之间进行选择。

注

- 仅当 Micro SD 卡插入扬声器后，才能使用 Micro SD 卡模式。


4 播放

从 Micro SD 卡播放

注

- 扬声器仅支持 FAT32/16/18 格式的 Micro SD 卡。
- 扬声器只能播放 MP3 格式的音频文件。

- 1 将 Micro SD 卡插入卡插槽。
- 2 将 ① 滑至右侧可打开扬声器。
↳ 播放将自动开始。

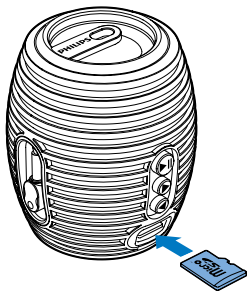

* 提示

- 如果扬声器处于音频输入模式，请插入 Micro SD 卡，然后按 ►|| 切换至 Micro SD 卡模式。

- 要暂停播放并切换至音频输入模式，请按 ►||。
- 要启用与禁用随机播放模式，请按住 ►||。
- 要选择音频文件，请按 ◀/▶。
- 要调节音量，请按住 ◀/▶。


注

- 飞利浦不保证此扬声器兼容所有 Micro SD 卡。

从外部设备播放

借助本扬声器，您还可以欣赏外置设备中的音乐。

- 1 从扬声器上拉出音频输入插头。

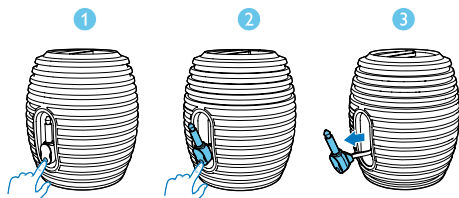

- 2 将 ① 开关滑至右侧以打开扬声器。
- 3 用音频输入插头将扬声器连接至设备。
- 4 播放设备中的音频（请参阅该设备的用户手册）。
- 5 使用后，断设备与扬声器的连接，将 ① 开关滑至左侧以关闭扬声器。

* 提示

- 如果扬声器处于 Micro SD 卡模式，按 ►|| 可切换至音频输入模式。

5 产品信息

注

- 产品信息如有更改，恕不另行通知。

规格

功放器

额定输出功率	2W RMS
信噪比	>70dB
失真	<1%
Aux-in 连接	300 毫伏 RMS, 10 千欧

一般信息

直流输入	USB 5 伏 500 毫安
内置锂聚合物电池	3.7 伏 500 毫安
电池工作时间	>8 小时
尺寸 - 主装置（直径 x 高度）	D65.8 毫米 * H76.6 毫米
重量 - 主装置	0.208 千克

6 故障种类和处理方法

警告

- 切勿拆下本设备的外壳。

为保持保修的有效性，切勿尝试自行维修本装置。

如果在使用设备时遇到问题，请在申请服务之前检查以下事项。如果仍然无法解决问题，请访问飞利浦网页 (www.philips.com/support)。联系飞利浦时，请确保将设备放在身边并准备好型号和序列号。

不能通电

- 给电池充电。

没有声音

- 调节音量。
- 检查您是否选择了正确的音频来源。
- 如果正在收听外置音频设备中的内容，请调节外置音频设备的音量。

扬声器没有反应

- 确保扬声器已打开。
- 给电池充电。
- 如果正在播放 Micro SD 卡中的内容：
 - 确保 Micro SD 卡工作正常。
 - 确保 Micro SD 卡已正确连接至扬声器。
 - 确保 Micro SD 卡上存有 MP3 文件。
- 如果正在播放外置音频设备中的内容：
 - 确保外置音频设备已正确连接至扬声器。
 - 调节外置音频设备的音量。

Service
Service
Service
GUARANTEE

This guarantee card is valid in china
This guarantee card should be retained by
The USER
此保用卡在中国适用，用户请保留此卡。



PHILIPS

No.

This product is made of high quality material and great care has been taken in its manufacture. It is designed to give good performance provided it is properly operated and maintained. The product is sold subject to the understanding that if any defect in manufacture or material shall appear within 12 months from date of consumer sale, if any defect in main parts over 12 months, the warranty period is subject to country Consumer Law, WOOX Innovations China Service will arrange for such defect to be rectified without charge under the following warranty items and conditions.

Warranty Terms and Conditions:

- The defect is not due to use of the product for other than domestic purposes, or an incorrect voltage, or use of improper accessories, or contrary to operating instructions, or to accidental damage (whether in transit or otherwise), misuse, neglect or inept repair, or incorrect installation, or the product is excessively used for improper purposes other than daily consumption, or accessories belonging to the product, transportation.
- Present this warranty card and sales invoice when demanding service from WOOX authorized service centres;
- This guarantee card will be void if correction is made.
- This guarantee card is valid only when it is sealed by the dealer.
- 2013© WOOX Innovation Limited , All rights Reserved.

Users Name:

用户姓名

Address:

地址

Tel.No:

电话

Post Code:

邮编

Model No:

型号

Serial No:

机身编号

Product Place:

产地

Company Seal:

购买商品印章

Date of Purchase:

购买日期

Invoice No:

发票号

Shop name and address:

购买商名称及地址

Tel.No/Post Code:

电话/邮编

Installation Registration 调试记录

Purchase Date 购买日期	Installation Date 调试日期	Fix Content & Result 调试内容和结果	Technician 调试员

本产品由WOOX Innovations Limited或其关联公司（简称“WOOX Innovations”或“沃科声”）制造并销售。沃科声(WOOX Innovations)将提供此产品的保修服务。
“Philips”及“Philips 盾牌图形”为皇家飞利浦公司的注册商标。

服务须知：
SERVICE INFORMATION:

For products after service and consulting, please call service
hotline 4008 800 008 or visit website: www.philips.com.cn
Any comments and enquiries during the service, please
contact our WOOX Innovations China Customer Care Service Office.

WOOX innovations (Shanghai) Commercial Co., Ltd
Customer Care China
Room 2201, No.369, KaiXuan Road ,Shanghai
P. R. C. 200051
Fax: +86 21 6115 8001

如需要此产品的售后服务，请拨打服务热线:4008 800 008
或访问网站: www.philips.com.cn
如在维修服务过程中有任何意见，
欢迎致函沃科声中国服务办事处解决疑难。

沃科声（上海）商贸有限公司
中国客户服务部
中国上海市凯旋路369号雅士大厦2201室
邮政编码: 200051
传真: (021) 6115 8001

服务热线：4008 800 008
(用户需承担本地通话费)

网址：// www.philips.com.cn



Repair Registration 维修记录							
	Claim date 报修日期	Repair date 修理日期	Defect description 故障现象	Reason 故障原因	Fix content 修理详情	Colletion date 取机日期	Technician 修理员

* Present this warranty card to regist 修理时请出示此卡以便记录

部件名称 Name of the Parts	有毒有害物质或元素 Hazardous/toxic Substance					
	铅 (Pb, Lead)	汞 (Hg, Mercury)	镉 (Cd, cadmium)	六价铬(Chromium 6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
Housing 外壳	○	○	○	○	○	○
Loudspeakers 喇叭单元	○	○	○	○	○	○
PWBs 电路板组件	×	○	○	○	○	○
Accessories (Remote control & cables) 附件（遥控器，电源线，连接线）	×	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363 - 2006 标准规定的限量要求以下。
 O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363 — 2006.

×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363 — 2006 标准规定的限量要求。
 X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363 - 2006.



环保使用期限 Environmental Protection Use Period

This logo refers to the period (10 years)

电子信息产品中含有的有毒有害物质或元素在正常使用的条件下不会发生外泄或突变，电子信息产品用户使用该电子信息产品不会对环境造成严重污染或对其人身、财产造成严重 损害的期限。

This logo refers to the period (10 years) during which the toxic or hazardous substances or elements contained in electronic information products will not leak or mutate so that the use of these [substances or elements] will not result in any severe environmental pollution, any bodily injury or damage to any assets.

Always there to help you

Register your product and get support at
www.philips.com/welcome



AB1234

Specifications are subject to change without notice
2013 © WOOX Innovations Limited. All rights reserved.
This product was brought to the market by WOOX
Innovations Limited or one of its affiliates, further referred
to in this document as WOOX Innovations, and is the
manufacturer of the product. WOOX Innovations is the
warrantor in relation to the product with which this booklet
was packaged. Philips and the Philips Shield Emblem are
registered trademarks of Koninklijke Philips N.V.

SBM110BLE_93_UM_CN_V2.0

PHILIPS