



1

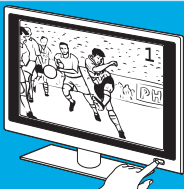

Slå på den enhet du vill styra, t.ex. TV:n.

Kontrollera om enheten (t.ex. TV:n) reagerar på alla knappkommandon. Om enheten inte reagerar fortsätter du med steg 2.


2

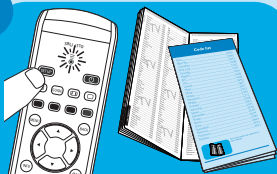

Tryck på enhetslägesknappen (t.ex. TV) tills knappen blinkar två gånger och sedan förblir tänd.

Leta reda på och ange den fyrsiffriga koden för enheten (t.ex. TV:n). Se kodlistan.

3

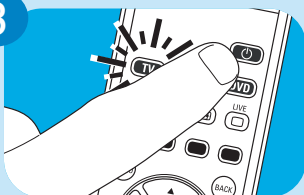

Tryck på och håll in standbyknappen (TV) tills enheten (t.ex. TV:n) stängs av (standby). Släpp sedan knappen omedelbart.

Obs! Fjärrkontrollen skickar flera koder till enheten för att hitta rätt kod.


4



Slå på enheten (t.ex. TV:n) och kontrollera om du kan styra alla funktioner på den med fjärrkontrollen.

Om en knapp inte fungerar ordentligt håller du den intryckt tills den fungerar. Släpp sedan knappen omedelbart.

5

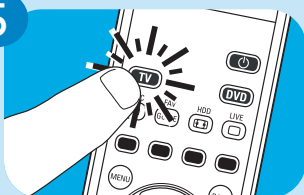

Håll enhetslägesknappen (t.ex. TV) intryckt i 5 sekunder för att avsluta inställningsläget och spara inställningarna.

Upprepa stegen ovan för alla enheter som du vill styra med fjärrkontrollen.

Code list TV / DVD

Blue Sky	.0395	Philips	.2195
Carrefour	.0492	Pioneer	.2212
Denon	.0731	Samsung	.2448
First Line	.1008	Sagem	.2434
Grundig	.1162	Sanyo	.2462
Hitachi	.1251	Schneider	.2501
JVC	.1464	Sharp	.2550
LG	.1628	Sierra	.3549
Loewe	.1660	Sony	.2679
Metz	.1810	Supratech	.2789
Mivar	.1857	Technics	.2869
Nokia	.2017	Thomson	.2972
Panasonic	.2153	Toshiba	.3021

Code list STB - SRU 5130 only

Canal+	.0478
Humax	.1298
Nokia	.2017
Premiere	.3666
SKY	.2610



For more codes, see code list in user manual.