


# Rotary Four-Sided Clock

## User Manual

### Demonstration

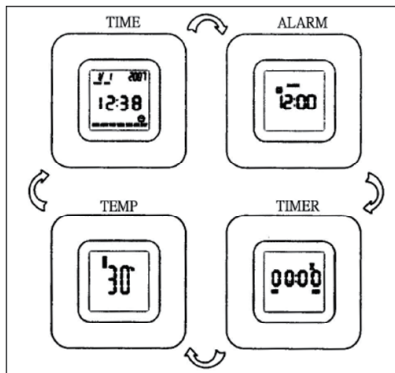

Rotate the clock clockwise in four directions to set the following functions:

#### TIME

1. In **TIME** mode, press **SET** and the clock digits start to flash.
2. Press **UP** to adjust the clock digits.
3. Repeat step 1 and 2 to set the hours, minutes, month, day, year sequentially.
4. Press **SET** again to complete the setting; the time is displayed.

#### ALARM

1. In **ALARM** mode, press **SET** and the clock digits start to flash.
2. Press **UP** to adjust the clock digits.
3. Repeat step 1 and 2 to set the hours and minutes sequentially.
4. Press **SET** again to complete the setting; the alarm is displayed and activated.
5. Press **SET** again to turn off the alarm.

#### TEMPERATURE

In **TEMP** mode, press **UP** to switch between Celsius and Fahrenheit temperature scales.


#### TIMER

1. In **TIMER** mode, press **SET** and the clock digits start to flash.
2. Press **UP** to adjust the minutes and seconds sequentially.
3. Press **SET** again to activate the timer.
4. The timer stops automatically if the clock is switched to other functions.

# Reloj giratorio con cuatro lados

## Manual del usuario

### Demostración

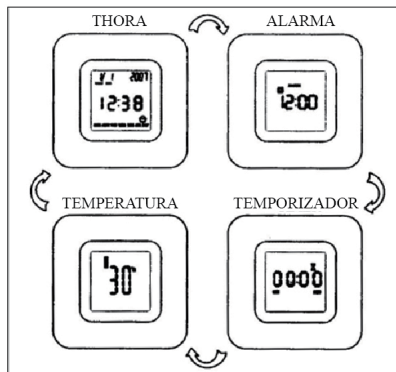

Gire el reloj en el sentido de las agujas del reloj para apoyarlo sobre cada uno de sus lados y ajustar las siguientes funciones:

### HORA

1. En el modo de hora, pulse **SET** y los dígitos del reloj comenzarán a parpadear.
2. Pulse **UP** para ajustar los dígitos del reloj.
3. Repita los pasos 1 y 2 para ajustar las horas, minutos, mes, día, y año de forma secuencial.
4. Vuelva a pulsar **SET** para finalizar la configuración; la hora aparecerá.

### ALARMA

1. En el modo de alarma, pulse **SET** y los dígitos del reloj comenzarán a parpadear.
2. Pulse **UP** para ajustar los dígitos del reloj.
3. Repita los pasos 1 y 2 para ajustar las horas y los minutos de forma secuencial.
4. Vuelva a pulsar **SET** para finalizar la configuración; aparece la alarma activada.
5. Vuelva a pulsar **SET** para desactivar la alarma.

### TEMPERATURA

En el modo de temperatura, pulse **UP** para cambiar entre las escalas de temperatura en Celsius y Fahrenheit.

### TEMPORIZADOR

1. En el modo de temporizador; pulse **SET** y los dígitos de los minutos parpadearán.
2. Pulse **UP** para ajustar los minutos y segundos de forma secuencial.
3. Vuelva a pulsar **SET** para activar el temporizador.
4. El temporizador se detiene automáticamente si el reloj se ajusta para realizar otras funciones.