



1

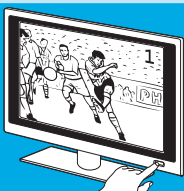

Kytke virta laitteeseen, jota haluat käyttää, esim. televisioon.

Tarkista, reagoiko laite kaikkiin komentoihin. Jos laite ei reagoi, jatka vaiheeseen 2.


2

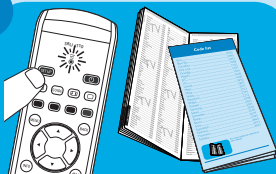

Paina laitteen tilapainiketta, kunnes painike välähtää kaksi kertaa ja jää palamaan.

Etsi ja kirjoita laitteen nelinumeroinen koodi. Katso koodiluettelo.

3

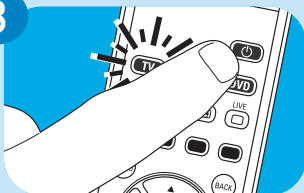

Paina valmiustilapainiketta (⏻), kunnes laite siirtyy valmiustilaan vapauta painike välittömästi.

Huom.: kaukosäädin lähettää laitteeseen useita koodeja, jotta oikea koodi löytyisi.


4



Kytke laitteeseen virta ja tarkista, että voit käyttää kaikkia laitteen toimintoja kaukosäätimellä.

Jos jokin painike ei toimi kunnolla, paina sitä niin kauan, että se alkaa toimia. Vapauta painike sitten välittömästi.

5

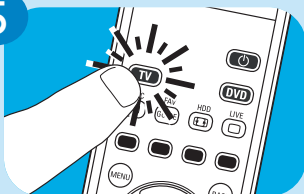

Poistu määristilasta ja tallenna asetukset painamalla laitteen tilapainiketta 5 sekunnin ajan.

Toista edellä kuvatut vaiheet kaikkien niiden laitteiden kohdalla, joita haluat käyttää kaukosäätimellä.

Code list TV / DVD

Blue Sky	.0395	Philips	.2195
Carrefour	.0492	Pioneer	.2212
Denon	.0731	Samsung	.2448
First Line	.1008	Sagem	.2434
Grundig	.1162	Sanyo	.2462
Hitachi	.1251	Schneider	.2501
JVC	.1464	Sharp	.2550
LG	.1628	Sierra	.3549
Loewe	.1660	Sony	.2679
Metz	.1810	Supratech	.2789
Mivar	.1857	Technics	.2869
Nokia	.2017	Thomson	.2972
Panasonic	.2153	Toshiba	.3021

Code list STB - SRU 5130 only

Canal+	.0478
Humax	.1298
Nokia	.2017
Premiere	.3666
SKY	.2610



For more codes, see code list in user manual.