





ZH-CN 用户手册

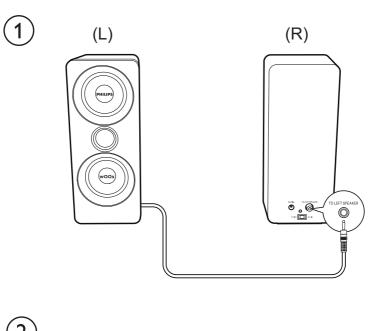


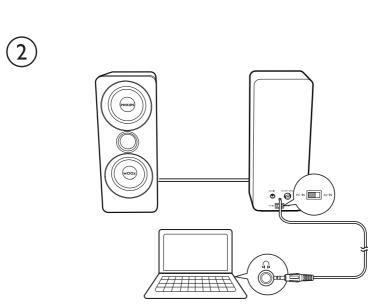


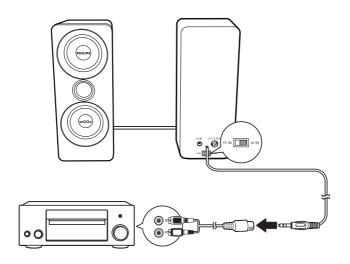





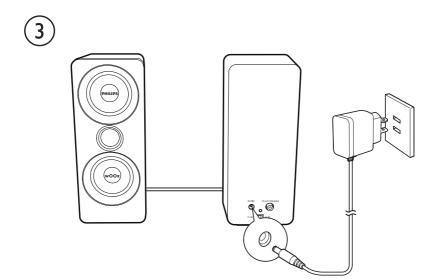


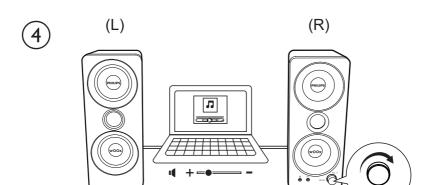

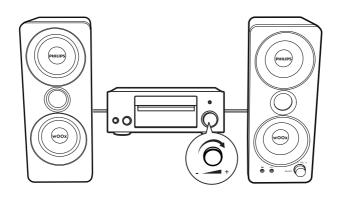


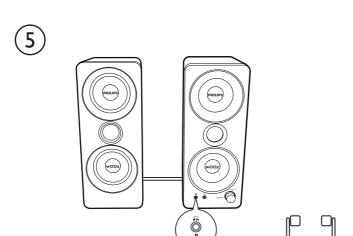

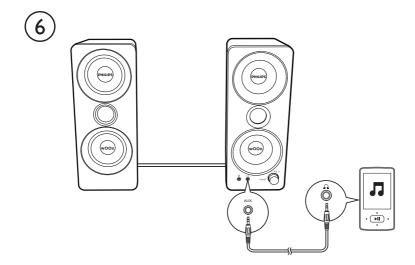

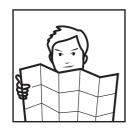



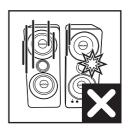










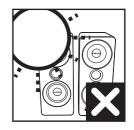







# **ZH-CN**

# 1 多媒体音箱系统

#### 警告:

- 切勿将本产品暴露在滴漏或溅漏环境下,也不要在产品上面放置装有液体的物体(如花瓶)。
- 要完全断开电源输入,应从电源上拔下产品的电源插头。
- 产品的电源插头应触手可及,或者在需要使用时应能轻易插拔。
- 切勿将无遮盖的火源(如点燃的蜡烛)置于产品上。

#### 注意:

- 使用之前,请确保多媒体音箱安装正确。
- 如果您将多媒体音箱靠近 CRT 显示器放置,您将看到明显的 颜色失真。

#### 系统要求:

个人电脑	MAC
Windows® 98SE、Windows® ME、 Windows® 2000、Windows® XP、or Windows® Vista™、Windows 7	Mac OS9/OS® X 或更 高版本
5	

### 安装:

- 1 将左扬声器插头插入右扬声器上的 TO LEFT SPEAKER 插孔 (①)。
- 2 将音频输入插头连接到电脑或 DVD 播放机的音频输出插孔 (②)。
- 3 将 PC IN/AV IN 滑块切换至左侧或右侧 (②)。
  - PC IN: 适用于电脑。
  - AV IN: 适用于 DVD 播放机。
- 4 将交流电源适配器连接至(③):
  - 右扬声器背面的电源插孔。
  - 墙上插座。
- 5 顺时针转动音量旋钮打开多媒体音箱(④)。

- 6 通过右扬声器的音量旋钮或您的电脑或 DVD 的音量控制调节音量。(④)。
- 7 使用后,请关闭扬声器并拔掉插头。

### 可选功能

### 通过耳机收听:

将耳机连接到右扬声器(⑤) 上的 ∩ 插孔。

### 要从外部音频设备(如 MP3 播放器)播放音乐(⑥):

- 1 用 MP3 Link 线缆(未提供)连接右扬声器上的 AUX 插孔和外部设备的耳机插孔。
- 2 在设备上播放音乐。

## 规格

# 功放器

2×20瓦RMS
60 赫兹 - 16 千赫,-3dB
> 50 dB
<2%
600 毫伏
600 毫伏
2000 毫伏

#### 扬声器

扬声器阻抗	8 欧姆
扬声器驱动器	L/R 3 英寸 x2,高音扬声器 1 英寸 x2 WOOX 3 英寸 x2

### 一般信息

交流电源	型号: AS360-180-AB200(飞利浦); 输入: 约 100-240 伏, 50/60 赫
	兹, 1.2 安; 输出: 18 伏 === 2 安

操作功耗	20 瓦
待机功耗	< 0.5 瓦
	100 × 250 × 116.5 毫米
重量 - 含包装 - 主装置	2.4 千克 2.0 千克

#### 听力安全



# 注意

• 为避免听力受损,应限制以高音量使用耳机的时间,并将音量设定在安全级别。音量越大,安全聆听的时间就越短。

#### 使用耳机时请确保遵循以下准则。

- 在合理时间内以合理音量收听。
- 听力适应后,注意不要持续地调高音量。
- 请勿将音量调得太高,从而无法听见周围的声音。
- 在有潜在危险的情况下应谨慎使用或暂停使用。
- 耳机声压过大可导致听力受损。

本产品采用可回收利用的高性能材料和组件制造而成。请熟悉当地专门为电子和电器产品,包括那些标有叉线有轮垃圾箱符号的产品所制订的分门别类的收集机制。请遵循当地的规章制度,不要将旧产品与一般的生活垃圾一同弃置。



#### 环境信息

为使包装尽量简化,已省去所有不必要的包装材料。包装材料 分为三类:纸板(盒)、纸浆(缓冲物)和聚乙烯(袋、保护 膜)。

本系统的所有材料均可回收和再利用(如果由专业公司拆卸)。请遵守当地有关包装材料、废电池和旧设备的处理的规定。

部件名称	有毒有害物质或元素 Hazardous/toxic Substance						
Name of the Parts	铅 (Pb, Lead)	汞 (Hg, Mercury)	镉 (Cd, cadmium)	六价铬(Chromium 6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)	
Housing 外壳	0	0	0	0	0	0	
PWBs 电路板组件	Х	0	0	0	0	0	
Accessories (Remote control & cables) 附件(电源线, 连接线)	X	0	0	0	0	0	

○:表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363 - 2006 标准规定的限量要求以下。 O:Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363 — 2006.

×:表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363 - 2006 标准规定的限量要求。

X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363 - 2006.



#### 环保使用期限 Environmental Protection Use Period

This logo refers to the period (10 years)

电子信息产品中含有的有毒有害物质或元素在正常使用的条件下不会发生外泄或突变,电子信息产品用户使用该电子信息产品不会对环境造成严重污染或对其人身、财产造成严重 损害的期限。

This logo refers to the period (10 years) during which the toxic or hazardous substances or elements contained in electronic information products will not leak or mutate so that the use of these [substances or elements] will not result in any severe environmental pollution, any bodily injury or damage to any assets.

#### Service Service

#### Service **GUARANTEE**

This guarantee card is valid in China This guarantee card should be retained by The USER. 此為用卡在中国活用。用户请保留此卡。

This product is made of high quality material and great care has been taken in its manufacture. It is designed to give good performance provided it is properly operated and maintained. The product is sold subject to the understanding that if any defect in manufacture or material shall appear within 12 months from date of consumer sale, if any defect in main parts over 12 months, the warranty period is subject to country Consumer Law, Philips Consumer Lifestyle China Service will arrange for such defect to be rectified without charge under the following warranty items and conditions

- . The defect is not due to use of the product for other than domestic purposes, or an incorrect voltage, or use of improper accessories, or contrary to operating instructions, or to accidental damage (whether in transit or otherwise), misuse, neglect or inexpert repair, or incorrect installation, or accessories belonging to the product, transportation.
- Present this warranty card and sales invoice when
- demanding service from Philips authorized service centres;

  This guarantee card will be void if correction is made.
- This guarantee card is valid only when it is sealed by the

User's Name

PHILIPS		PHILI	PS	P	H		L		P	5	
---------	--	-------	----	---	---	--	---	--	---	---	--

1000 × 此产品是一件设计精良,有高品质元件制造之家庭电器,在正确使用及保养下 应能正确地表现其优越性能。

自购买口期始,整机保修一年。关于主要部件保修期限,按照国家消法规定执行。 飞利浦优质生活服务部将按下列保用条例为持卡用户提供免费保修服务。

#### 保用条例:

- 保用服务只限于一般正常使用下有效。一切人为损坏,例如接入不适当电源, 使用不适当配件,不依说明书使用,因运输及其他意外而造成之损坏,非经本公 司认可之维修和改装,错误使用或疏忽而造成损坏,不适当之安装或因天灾造成 损坏等,保用服务立即失效。此保用服务并不包括附件,辅助装置,运输费。
- 维修时请带上此卡及正本发票。
- 此卡若经涂改即作废。
- 此卡须经购买商号盖章为有效。
- 对不依照上述保用条例办理之用户, 本公司对上述条例负解释权。 Company Seal :

			购买商号印章		
Address :		Serial No :	Date of Purchase : Invoice No. :		
180:		机身编号	购买口则 发票号		
Tel. No:		Product Place :	Shop name and address :		
电话		产地	购买商号名称及地址		
Post Code :			Tel. No/Post Code :		
邮箱			电话/ 邮编		
		Installation Registration			
		调试记录			
		柯枫心水			
Purchase Date	Installation Date	Fix Content & Result		Technician	
购买日期	调试日期	调试内容和结果		调试员	
州大口州	阿拉仁沙门	桐枫四台和柏木		阿克汉	
	ne table when insta 凡时,请将试机情》	all the set in the market 兄填写在表格内			

Model No:

#### 服务须知:

Fax: +86 21 54452663

#### SERVICE INFORMATION:

For after-sales and maintenance service, please call service hot line 4008 800 008. Any comments and enquiries during the service, please contact our Philips Consumer Lifestyle Service Offices. 如需要此产品的售后服务,请拨打服务热线 4008 800 008。 如在维修服务过程中有任何意见, 欢迎致高飞利浦优质生活服务办事处解决疑难。

Philips (China) Investment Co.,Ltd.
Consumer Care China Philips Consumer Lifestyle
Philips Innovation Campus Shanghai NO.1 Building, NO.10 ,Lane 888
Tian Lin Road Shanghai, P. R. C. 200233

飞利浦(中国)投资有限公司 飞利浦优质生活客户服务部 中国上海市田林路888素10号 飞利浦创新科技园1号楼

邮政编码: 200233 传真: (021) 54452663

服务热线: 4008 800 008

(用户需承担本地通话费

网址: //www.philips.com.cn



Repair Registration 维修过录								
Claim Date 报修日期	Repair Date 修理日期	Defect Description 故障现象	Reason 故障原因	Fix Content 修理详情	Collection Date 取机口期	Technician 修理员		

<sup>\*</sup> Present this warranty card to register 修理时请出示此卡以便记录

 $3140\ 035\ 50291$ 



All registered and unregistered trademarks are property of their respective owners.

© 2012 Koninklijke Philips Electronics N.V. All rights reserved.

