

Docking Entertainment System

AJ300D

Register your product and get support at
www.philips.com/welcome


QUICK START

快速指南



Thanks for buying **Philips AJ300D Docking Entertainment System**.
Our **Quick Start** guides you through just some of the features on the set.
Please read our instruction booklet to really rise & shine!

PHILIPS

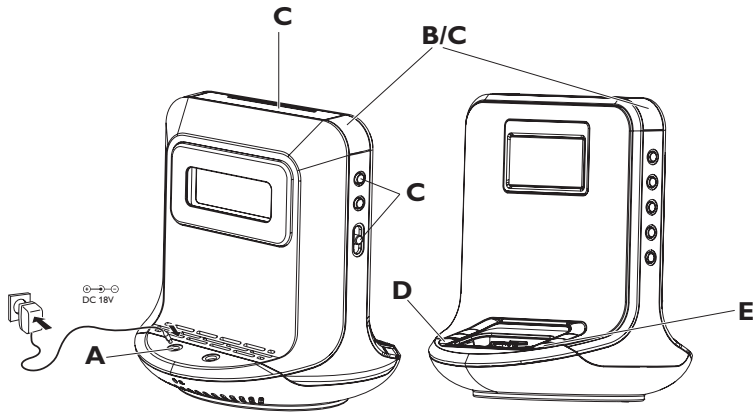

中文

步骤 A

- 将电源适配器连接至本机的 DC 18V 插口上和电源插座上。

步骤 B

如何设置时钟和闹钟时间

1. 按住 **TIME SET** 键或 **ALM1 / ALM2** 键。直至小时数字闪烁。
2. 按住 **◀◀ / ▶▶** 键调整时间。
3. 按 **TIME SET** 键或 **ALM1 / ALM2** 键确认。
4. 重复步骤 2-3 完成其它时间项的设置。

步骤 C

选择闹钟模式

待机模式下，使用 **DOCK/BUZZER/ TUNER** 滑动开关选择想要的模式。

提示：

- 如果选择了收音机闹钟模式，关机前务必正确调谐好电台。
- 如果选择了 iPod 闹钟模式，务必插好可兼容的播放器，否则会自动选用蜂鸣器模式。

关闭闹钟的三个方法

- 轻按 **POWER** 键或 **REPEAT ALARM/ BRIGHTNESS CONTROL** 键。
- 按 **ALM1** 或 **ALM2** 键。

步骤 D

调谐选台

1. 按 **TUNER/AUX** 键打开收音机。
2. 按 **◀◀ / ▶▶** 键调谐选台。
 - 要存储预设电台，轻轻按住 **1-5** 其中一个 **PRESET** 键直至听到两声蜂鸣声。

步骤 E

用 AJ300D 播放 Apple iPod

1. 确保所插入基座与需要播放的播放器相匹配
 - iPod 连接器已预先在 AJ300D 上装好。
2. 选择合适的基座固定器，将其插入基座以便固定播放器。
 - 根据 iPod 固定器的背面印有的指示配合相应的播放器使用。
3. 将可兼容的 iPod 插入基座连接器。
4. 按 **DOCK** 键选择 **DOCK** 模式。
5. 相连接的 iPod 会自动播放。

注意：

- 有关基座操作问题，请参阅随机附送的《使用说明》中“可兼容的便携式播放器”，“选择合适的基座固定器”及相关重要事项的详尽描述。