



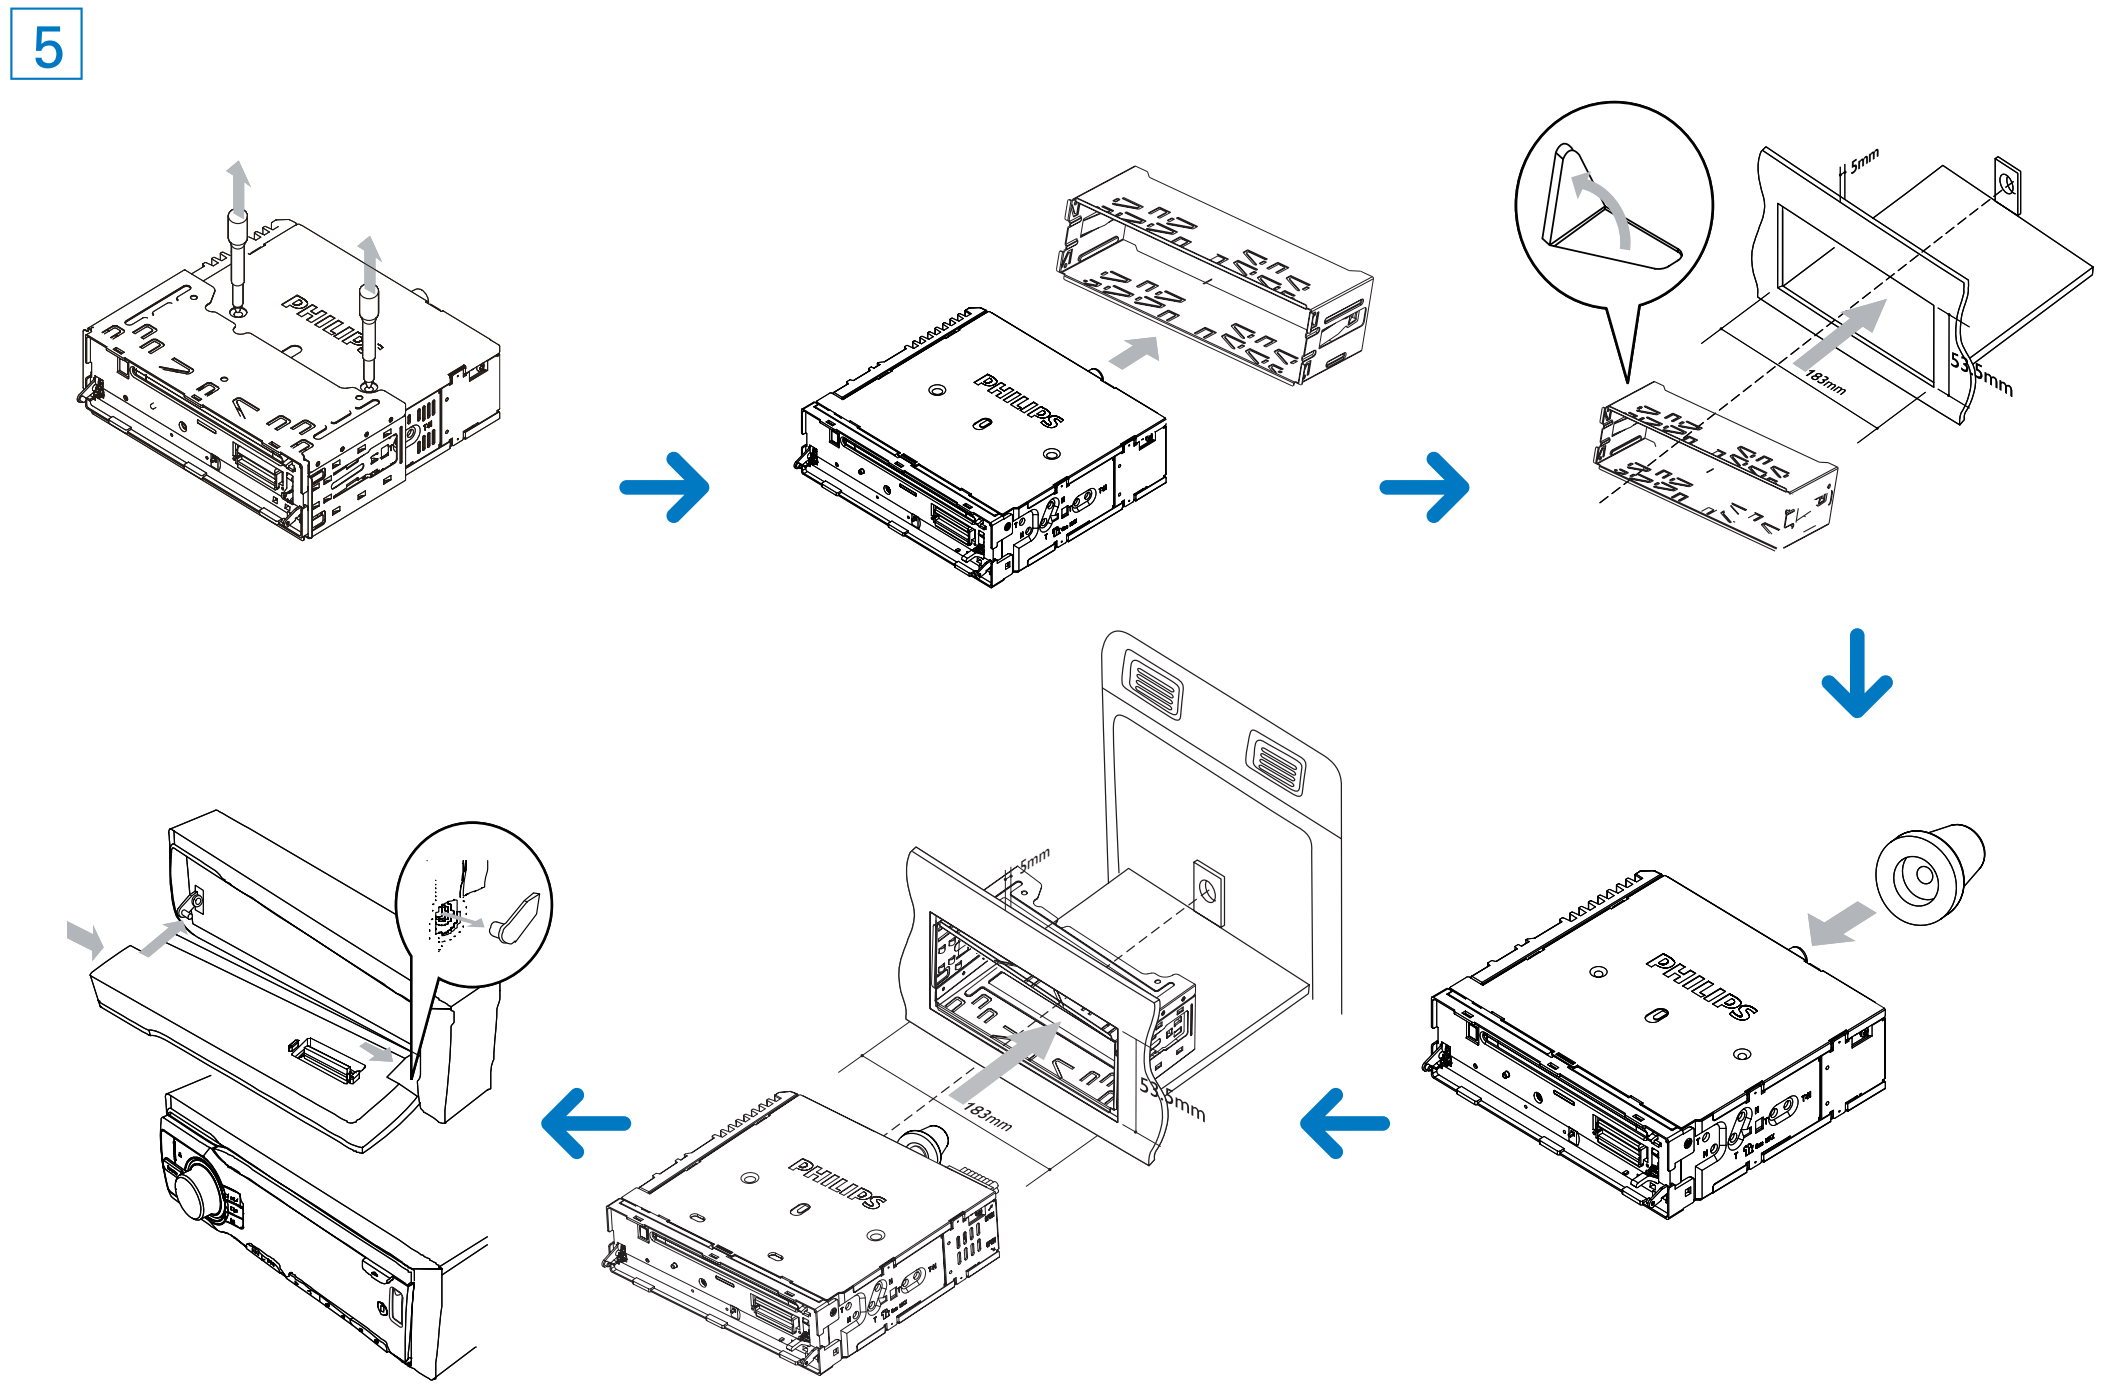

EN Quick Start Guide

PHILIPS

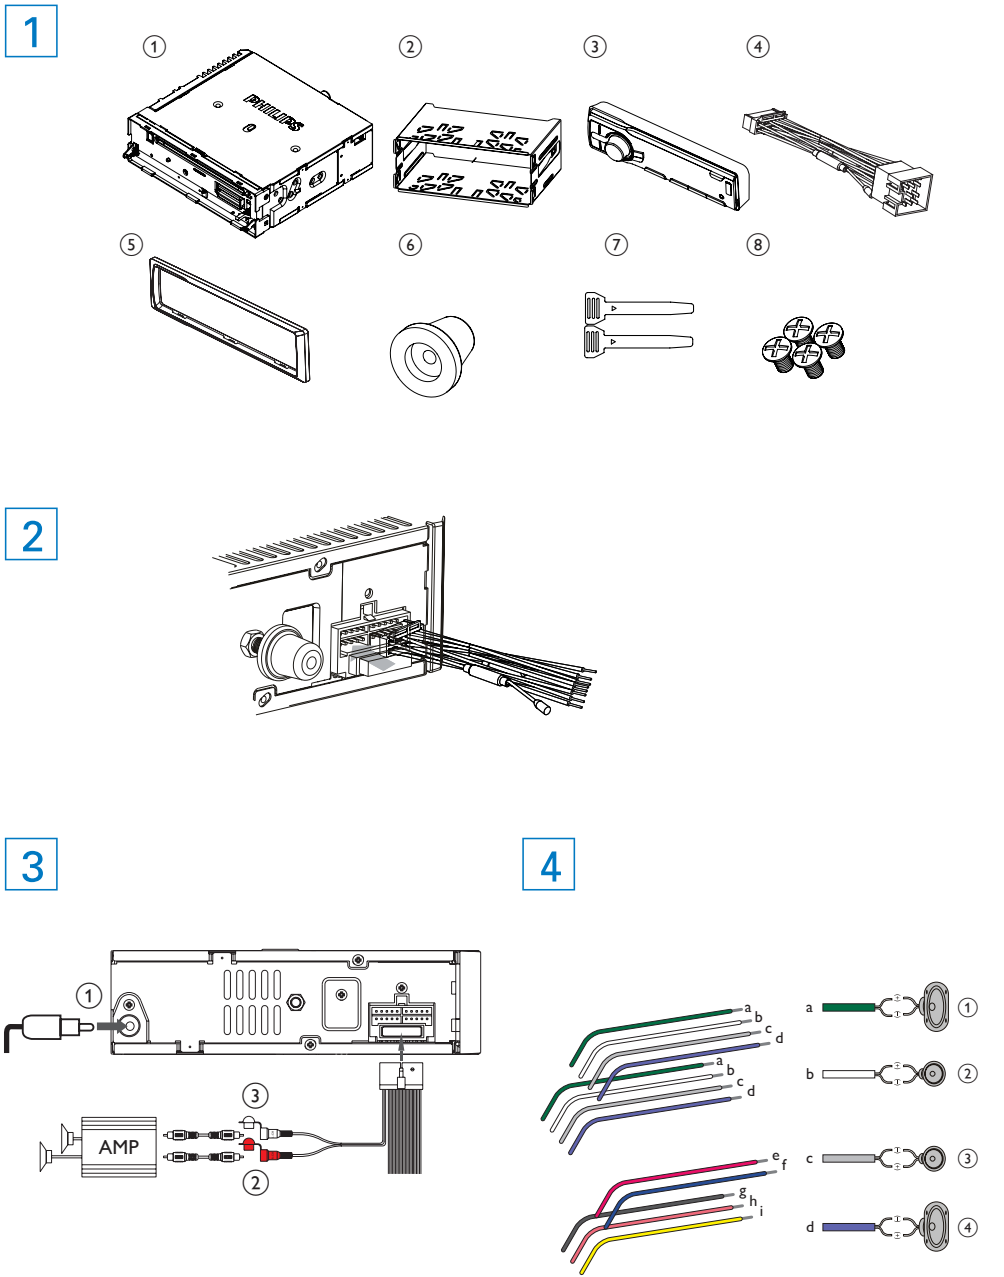

Overview of parts 1

Check and identify the contents of your package:

- 1 In-car audio system
- 2 Sleeve
- 3 Front panel
- 4 ISO connector
- 5 Trim plate
- 6 Rubber cushion
- 7 Disassembly tools
- 8 Screws (4 pieces)

Connect wires

Caution

- Ensure that all loose leads are insulated with electrical tape.

For cars with ISO connectors 2 3

- 1 Pull out the ISO connectors from car dashboard and connect them to the bigger end of the supplied standard connector.
- 2 Connect the other end of the supplied standard connector to the unit.
- 3 Connect the antenna and amplifier as illustrated, if applicable. You can connect the car audio to the amplifier through RCA-TO-RCA cables (not supplied).

Connector	Connect to
1 ANTENNA	Antenna
2 REAR LINE OUT R	Rear right speaker
3 REAR LINE OUT L	Rear left speaker

For cars without ISO connectors 3 4

Caution

- Be sure to connect the black ground (earth) lead first.

- 1 Connect the antenna and amplifier as illustrated, if applicable.
- 2 Cut off the bigger end of the supplied standard connector.
- 3 Check the car's wiring carefully and connect them to the supplied standard connector.
- 4 Connect the supplied standard connector to the unit.

1 Green/black strip	Left speaker (Rear)
2 White/black strip	Left speaker (Front)
3 Gray/black strip	Right speaker (Front)
4 Purple/black strip	Right speaker (Rear)

e RED	Ignition key +12V DC when ON/ACC
f BLUE	Motor/electric antenna relay control lead/Amplifier relay control lead
g BLACK	Ground
h Orange	Illumination switch
i YELLOW	To the +12V car battery which is energized at all times

Note

- Check wire connection before you mount the unit into a car.
- If preset radio stations are lost when the ignition key is turned **OFF** and then back **ON**, reconnect the red leads crosswise to the yellow ones.

Attach the front panel 5

- 1 Attach the trim plate.
- 2 Insert the right side of the panel in the chassis until it is correctly engaged.
- 3 Press the left side of the panel and point the left hole at the left pillar.
- 4 Release the panel to engage the left side.

Mount in the dashboard 5

- 1 If the car does not have an on-board drive or navigation computer, disconnect the negative terminal of the car battery.
 - If you disconnect the car battery in a car that has an on-board drive or navigation computer, the computer may lose its memory.
 - If the car battery is not disconnected, to avoid short-circuit, ensure that bare wires do not touch each other.

- 2 Remove the two screws on the top of the unit.
- 3 Remove the mounting sleeve with the supplied disassembly tools.
- 4 Ensure that car dashboard opening is within these measurements:
- 5 Install the sleeve into the dashboard and bend the tabs outward to fix the sleeve.
- 6 Place the supplied rubber cushion over the end of the mounting bolt.
- 7 Slide the unit into the dashboard until you hear a click sound.
- 8 Reconnect the negative terminal of the car battery.

Turn on

- 1 Press to turn on the unit.
 - To turn off the unit, press for 3 seconds.

Set clock

- 1 Press **MENU/DISP** for 3 seconds.
- 2 Press or repeatedly to until the currently time is displayed.
- 3 Turn clockwise to set hour.
- 4 Press to confirm.
- 5 Turn anti-clockwise to set minute.
- 6 Press to confirm.

View clock

- 1 Press **MENU/DISP** repeatedly until the clock is displayed.

Listen to radio

- 1 Press **SOURCE** repeatedly to select Radio.
- 2 Press or to select band: **[FM1]**, **[FM2]**, **[FM3]**, **[AM1]**, or **[AM2]**.
- 3 Press or to tune to a radio station manually.
 - To search for a radio station automatically, press for 3 seconds.

Play audio files

- 1 Press on the front panel to release the panel.
- 2 Insert a CD with the printed side facing up.
- 3 Close the panel.
 - ➔ Play starts automatically.
 - To pause CD play, press 1 .
 - To resume CD play, press 1 again.

Insert the USB device

- 1 Open the cover marked on the front panel.
- 2 Insert the USB device into the USB socket.
 - ➔ The unit starts playing from the USB device automatically.




JA クイックスタートガイド


PHILIPS




1

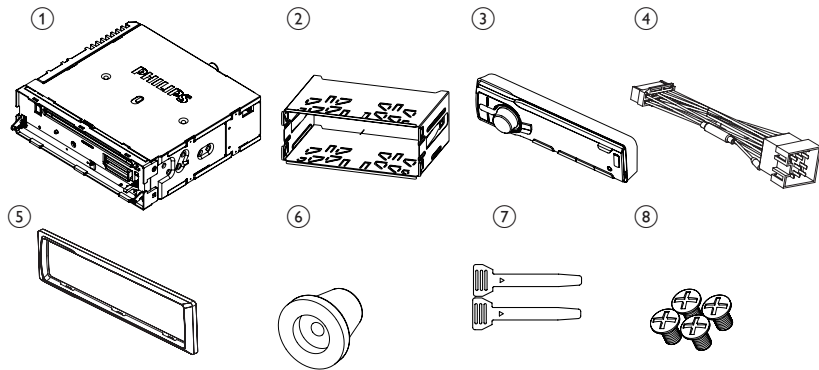


2

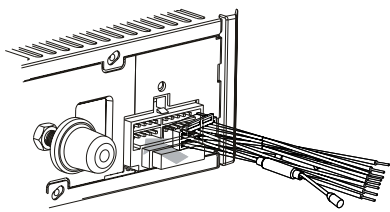

3

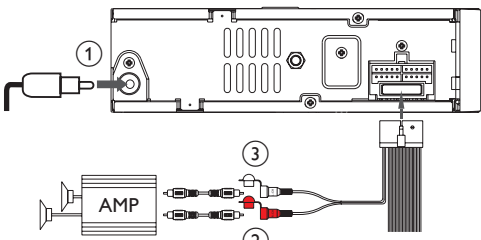

4

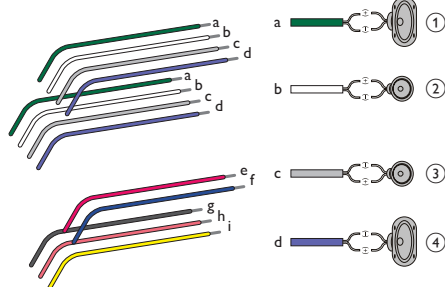

部品の概要 1

以下の付属部品は、この機器の接続および取り付けに必要な部品です。

- 1 カーオーディオシステム
- 2 スリーブ
- 3 前面パネル
- 4 ISO コネクター
- 5 トリムプレート
- 6 ゴム製クッション
- 7 分解用ツール
- 8 ねじ (4 本)

配線

！ 注意

- 接続されていないすべてのリード線が、絶縁テープで絶縁されていることを確認してください。

ISO コネクターがある場合 2 3

- 1 ダッシュボードから ISO コネクターを引き出し、付属の標準コネクターの大きい方の端に接続します。
- 2 付属の標準コネクターのもう一方の端を機器に接続します。
- 3 必要に応じて、アンテナとアンプを図に示すように接続します。カーオーディオとアンプの接続には、RCA-TO-RCA ケーブル (別売) を使用します。

コネクター	接続先
1 ANTENNA	アンテナ
2 REAR LINE OUT R	右リアスピーカー
3 REAR LINE OUT L	左リアスピーカー

ISO コネクターがない場合 3 4

！ 注意

- 最初に黒グラウンド (アース) リード線を接続してください。

- 1 必要に応じて、アンテナとアンプを図に示すように接続します。
- 2 付属の標準コネクターの大きい方の端を切り落とします。
- 3 自動車側の配線を確認して、付属の標準コネクターに接続します。
- 4 付属の標準コネクターを機器に接続します。







1 緑／黒の線	左スピーカー (リア)
2 白／黒の線	左スピーカー (フロント)
3 グレイ／黒の線	右スピーカー (フロント)
4 紫／黒の線	右スピーカー (リア)

e 赤	イグニッションキー +12V DC (ON/ACC の場合)
f 青	モーター／電動アンテナリレーコントロールリード線／アンプリレーコントロールリード線
g 黒	グラウンド
h オレンジ	イルミネーションスイッチ
i 黄色	常時電圧印加された +12V カーバッテリー

≡ 注

- 機器を車内に取り付ける前に、配線を確認してください。
- イグニッションキーをオフにしてからオンに戻すと、プリセットされたラジオ局が消去されてしまう場合は、赤のリード線を黄色のリード線に交差するように接続し直してください。

5

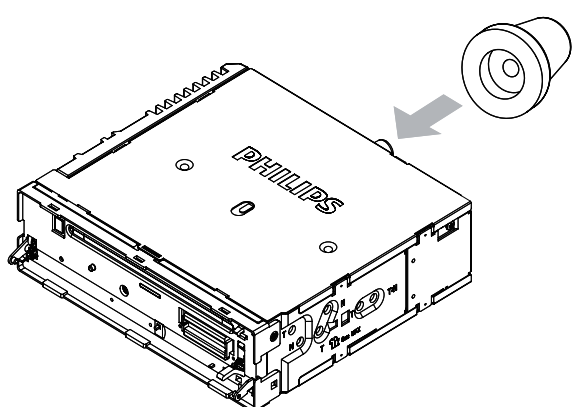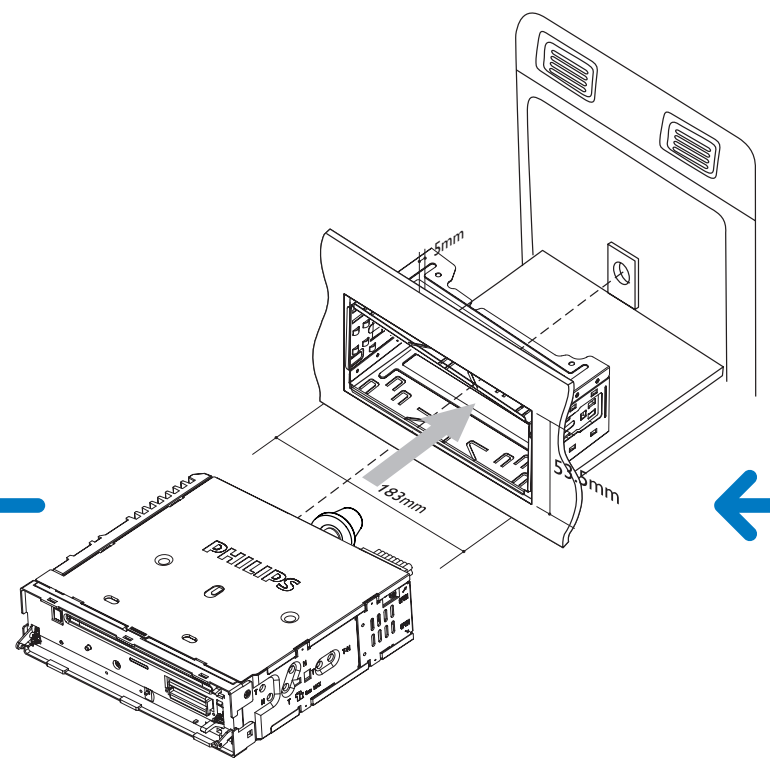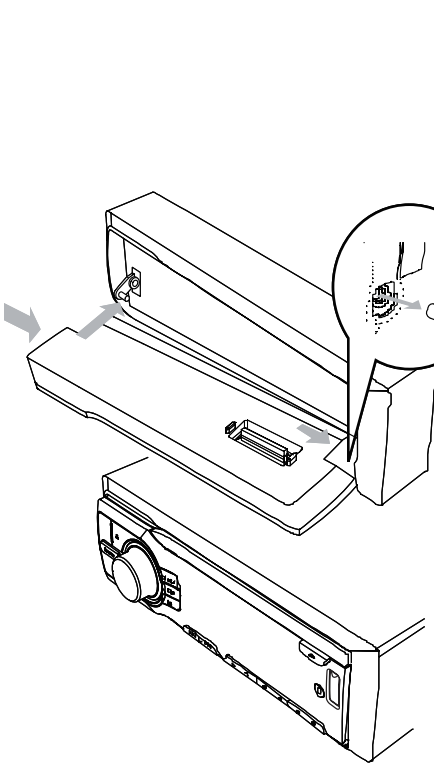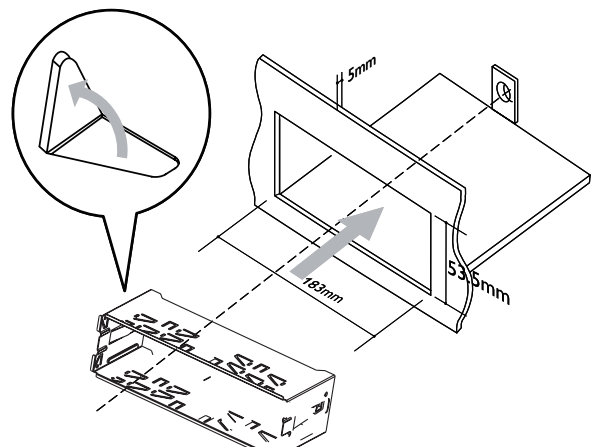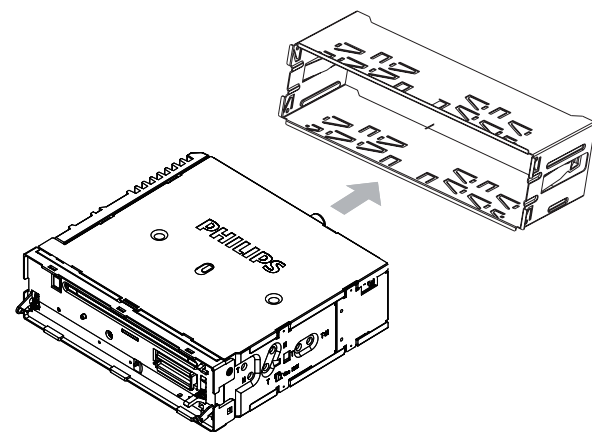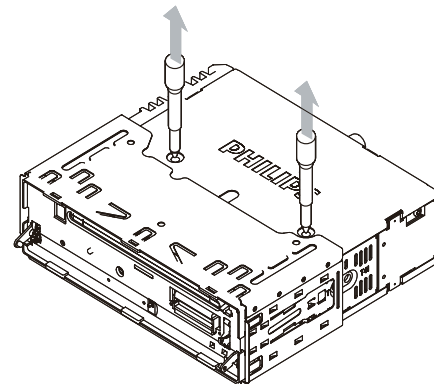

前面パネルの取り付け 5

- 1 トリムプレートを取り付けます。
- 2 パネルの右側を正しくかみ合うまで、シャーンに挿入します。
- 3 パネルの左側を押して、左側の穴が左側のピラーを指すようにします。
- 4 パネルから手を放すと、左側がかみ合います。

ダッシュボード内への取り付け 5

- 1 自動車にオンボードドライブまたはナビゲーションコンピュータがない場合は、カーバッテリーのマイナス端子を取り外します。
 - オンボードドライブまたはナビゲーションコンピュータがある自動車で、カーバッテリーのマイナス端子を取り外すと、メモリ内のデータが消去されることがあります。
 - カーバッテリーが取り外されていない場合は、短絡防止のために、裸線どうしを接触させないようにしてください。
- 2 機器の上部から 2 本のねじを取り外します。
- 3 付属の分解用ツールを使用して、取り付けスリーブを取り外します。
- 4 ダッシュボードの開口部が、図に示す寸法以内であることを確認します。
- 5 スリーブをダッシュボード内に取り付け、タブを外側に折ってスリーブを固定します。
- 6 付属のゴム製クッションを取り付けボルトの端にかぶせます。
- 7 カチッという音が聞こえるまで、機器をダッシュボード内にスライドします。
- 8 カーバッテリーのマイナス端子を接続し直します。

電源のオン／オフ

- 1 ① を押して機器の電源をオンにします。
 - 機器の電源をオフにするには、① を約 3 秒間押し続けます。

時計の設定

- 1 MENU/DISP を約 3 秒間押し続けます。
- 2 現在の時刻が表示されるまで ▲ または ▼ を繰り返し押します。
- 3 ① を右に回して時間を設定します。
- 4 ① を押して確定します。
- 5 ① を左に回して分を設定します。
- 6 ① を押して確定します。

時計の表示

- 1 時計が表示されるまで MENU/DISP を繰り返し押します。

ラジオを聴く

- 1 SOURCE を繰り返し押してチューナーを選択します。
- 2 ▲ または ▼ を押して、バンドを選択します ([FM1]、[FM2]、[FM3]、[AM1]、[AM2])
- 3 ⏮ または ⏭ を押して、手でラジオ局にチューニングします。
 - ラジオ局を自動的にサーチするには、⏮ または ⏭ を約 3 秒間押し続けます。

オーディオファイルの再生

- 1 前面パネルの 📀 を押してパネルを開けます。
- 2 ラベルの印刷面を上にして CD を挿入します。
- 3 パネルを閉じます。
 - ➡ 再生が自動的に開始されます。
 - CD の再生を一時停止するには、1 ▶⏮ を押します。
 - CD の再生を再開するには、もう一度 1 ▶⏮ を押します。

USB の再生

- 1 前面パネルの 🔄 が付いているカバーを開けます。
- 2 USB デバイスを USB ソケットに挿入します。
 - ➡ USB デバイスの再生が自動的に開始されます。