

Always there to help you

Register your product and get support at  
www.philips.com/welcome

Question?  
Contact  
Philips



EN Short User Manual

AJ ショートユーザーマニュアル

AJ7050D

PHILIPS



Specifications are subject to change without notice  
© 2013 Koninklijke Philips Electronics N.V.  
All rights reserved.

AJ7050D\_11\_Short User Manual\_V1.0



EN Tip: Press **⏻** again to switch the unit to standby mode.

JA ヒント: もう一度 **⏻** を押すと、機器がスタンバイモードに切り替わります。

---

EN You can only use AC power as power supply. Batteries (not supplied) are for backup purpose.

JA 電源として使用できるのは、AC電源のみです。電池(別売)はバックアップ電源となります。

EN Listen to the iPod/iPhone/iPad

Press SOURCE repeatedly to select the DOCK source.

- To pause/resume play, press OK/▶||
- To skip to a track, press PRESET +/PRESET - (◀/▶).
- To search during play, press and hold SET TIME (⏮)/PROG/SCAN (▶▶) or PRESET +/PRESET - (◀/▶), then release to resume normal play.

JA iPod/iPhone/iPad の音楽を聴く

SOURCE を繰り返し押して、音源としてドックを選択します。

- 再生を一時停止/再開するには OK/▶|| を押します。
- トラックをスキップするには PRESET +/PRESET - (◀/▶) を押します。
- 再生中に検索するには SET TIME (⏮)/PROG/SCAN (▶▶) または PRESET +/PRESET - (◀/▶) を押し続けます。指を放すと標準再生に戻ります。

EN Store FM radio stations automatically

In tuner mode, press and hold PROG/SCAN (▶▶) for more than 3 seconds to activate automatic program mode.

JA FM ラジオ局を自動的に記憶する

チューナーモードで、PROG/SCAN (▶▶) を 3 秒以上押し続けて自動プログラムモードに切り替えます。

EN Store FM radio stations manually

- Tune to a radio station.
- Press PROG/SCAN (▶▶) to activate the program mode.
- Press PRESET +/PRESET - (◀/▶) to select a number.
- Press OK/▶|| to confirm.
- Repeat the above steps to program other stations.

JA FM ラジオ局を手動で記憶させる

- ラジオ局にチューニングします。
- PROG/SCAN (▶▶) を押してプログラムモードに切り替えます。
- PRESET +/PRESET - (◀/▶) を押して番号を選択します。
- OK/▶|| を押して確認します。
- 上記の手順を繰り返して、他のラジオ局を設定します。

EN 1 In standby mode, press and hold SET TIME (⏮) for 3 seconds.

2 Press TUNE+/TUNE- (▲/▼) to select the 12/24 hour format.

3 Press OK/▶|| to confirm.

4 Press TUNE+/TUNE- (▲/▼) to set the hour.

5 Press OK/▶|| to confirm.

6 Repeat steps 4-5 to set the minute, day, month, and year.

JA 1 スタンバイモードで、SET TIME (⏮) を 3 秒間押し続けます。

2 TUNE+/TUNE- (▲/▼) を押して 12 時間形式または 24 時間形式を選択します。

3 OK/▶|| を押して確認します。

4 TUNE+/TUNE- (▲/▼) を押して時間を設定します。

5 OK/▶|| を押して確認します。

6 手順 4~5 を繰り返して、分、日、月、年を設定します。

**EN** When the system is turned on, press it to select the sleep timer period. When **[OFF]** (off) is displayed, the sleep timer is deactivated.

**JA** システムの電源がオンの状態で、スヌーズを押してスリープタイマーの時間を選択します。  
[OFF] (オフ) が表示される場合は、スリープタイマーが無効になっています。

**EN** Make sure that you have set the clock correctly.  
1 Press and hold **AL1/AL2** for 3 seconds.  
2 Press **TUNE+/TUNE-** (▲/▼) to set the hour.  
3 Press **OK/▶▶** to confirm.  
4 Repeat steps 2-3 to set the minute, select when to ring the alarm, choose alarm sound source, and set alarm volume.

**JA** 時計が正しく設定されていることを確認してください。  
AL1/AL2 を 3 秒間押し続けます。  
TUNE+/TUNE- (▲/▼) を押して時間を設定します。  
OK/▶▶ を押して確定します。  
手順 2~3 を繰り返して分を設定し、アラームが鳴る時刻を選択して、アラームの音源を選び、アラームの音量を設定します。

**EN** To download the full user manual, visit [www.philips.com/support](http://www.philips.com/support).

**JA** ユーザーマニュアルの完全版をダウンロードするには [www.philips.com/support](http://www.philips.com/support) にアクセスしてください。

- 機器のケーシングは絶対に取り外さないでください。
- 機器のどの部分にも絶対に潤滑剤を塗らないでください。
- 機器は他の電子機器の上に絶対に置かないでください。
- 機器は直射日光、裸火、熱から離して置いてください。
- 機器を電源から切断するために、電源コード、プラグ、アダプターに手が届きやすいようにしておいてください。

**通知**

Philips Consumer Lifestyle によって明示的に承認された場合を除き、この機器に変更または変更を加えた場合は、この機器を操作するための権限が無効になる可能性があります。ご使用の製品は、純度の高い素材と材質を使用してデザインおよび製造されたもので、リサイクルと再利用が可能です。このような製品を家庭のゴミと一緒に捨てることにご注意ください。お住まいの地域での電気製品および電池の分別収集ルールを確認してください。製品および電池を分別収集することにより、環境と健康への潜在的なマイナス要因が削減されます。ご使用の製品には電池が含まれており、一般の家庭ゴミと一緒に捨てることはできません。お住まいの地域での電池の分別収集ルールを確認してください。電池を分別収集することにより、環境と健康への潜在的なマイナス要因が削減されます。お住まいの地域のリサイクルセンターについては、[www.recycle.philips.com](http://www.recycle.philips.com) を参照してください。

**環境に関する情報**

本製品の梱包には不必要な梱包材を使用していません。当社では、梱包材をダンボール(箱)、発泡スチロール(緩衝材)、ポリエチレン(袋、保護発泡シート)の3種類の素材ごとに簡単に分類できるように、努力を払っています。システムは、リサイクル可能な素材で製造されているため、専門業者による分解の後に再利用できるようになっています。梱包材、使用済み電池、古くなった機器の廃棄方法については、お住まいの地域の廃棄手順に従ってください。



「Made for iPod」、「Made for iPhone」、「Made for iPad」は、各電子アクセサリが iPod、iPhone、または iPad に接続されるよう設計されており、Apple の定める性能基準を満たしていることが開発者によって保障されていることを示します。Apple はこの装置の操作および安全および規制基準への遵守に関する責任を負いません。この製品を iPod、iPhone、または iPad で使用する場合、ワイヤレス性能に影響することがあります。

iPod および iPhone は、米国および他の国々で登録された Apple Inc. の商標です。iPad は Apple Inc. の商標です。

**クラス II 機器シンボル:**



クラス II 機器は、二重絶縁が講じられており、保護用接地の手段を持っていません。

**注**

- タイププレートは機器の底面にあります。

**仕様**

<b>アンプ</b>	
総出力	3 W RMS x 2
周波数特性	80Hz~16kHz ±3dB
信号対雑音比 (SN 比)	≥ 67 dB
補助入力 (オーディオ入力)	600 mV RMS 22 kohm

**FM**

チューニング範囲	FM 87.5~108 MHz
<b>チューニンググリッド</b>	50 KHz
- モノラル, 26dB S/N 比	< 22 dB
- ステレオ, 46dB S/N 比	< 43 dB
サーチ感度	≥ 28 dB
全高調波歪み	< 2 %
信号対雑音比 (SN 比)	> 50 dB

**スピーカー**

スピーカーインピーダンス	4 ohm
スピーカードライバー	58 mm フルレンジ
感度	83 dB/1 m/1 W


**一般情報**

AC 電源	100V~、50/60 Hz
操作時消費電力	30 W
スタンバイモード時消費電力 (時計表示)	< 1 W

**EN**

**Safety**

**Know these safety symbols**

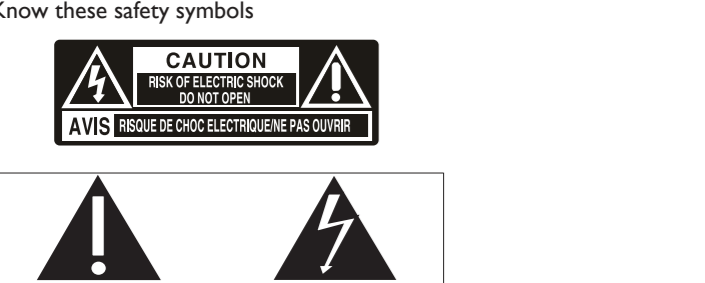

This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering. The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems. WARNING: To reduce the risk of fire or electric shock, this apparatus shall not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus. CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

**Important Safety Instructions**

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 10 Only use attachments/accessories specified by the manufacturer.
- 11 Unplug this apparatus during lightning storms or when unused for long periods of time.

- 12 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 13 Battery usage CAUTION – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
  - Install all batteries correctly, + and - as marked on the unit.
  - Do not mix batteries (old and new or carbon and alkaline, etc.).
  - Remove batteries when the unit is not used for a long time.
  - Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- 14 Apparatus shall not be exposed to dripping or splashing.
- 15 Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- 16 Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

**⚠️ Warning**

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.

**Notice**

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment. Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health. Your product contains batteries, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health. Please visit [www.recycle.philips.com](http://www.recycle.philips.com) for additional information on a recycling center in your area. **Environmental information** All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet). Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



"Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance. iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. iPad is a trademark of Apple Inc.

**Class II equipment symbol:**



CLASS II apparatus with double insulation, and no protective earth provided.

**☰ Note**

- The type plate is located on the bottom of the unit.

**Specifications**

<b>Amplifier</b>	
Total output power	2 x 3W RMS
Frequency Response	80Hz-16kHz ±3dB
Signal to Noise Ratio	≥ 67dB
Aux Input (Audio in)	600mV RMS 22kohm

<b>FM</b>	
Tuning Range	FM 87.5 - 108 MHz
Tuning grid	50 KHz
- Mono, 26dB S/N Ratio	< 22 dB
- Stereo, 46dB S/N Ratio	< 43 dB
Search Sensitivity	< 28 dB
Total Harmonic Distortion	< 2%
Signal to Noise Ratio	> 50 dB


<b>Speakers</b>	
Speaker Impedance	4 ohm
Speaker Driver	58mm full range
Sensitivity	83dB/1m/1W

<b>General information</b>	
AC power	100V~、50/60Hz
Operation Power Consumption	30 W
Standby Power Consumption (clock display)	< 1 W
<b>Dimensions</b>	
- Main Unit (W x H x D)	260 x 137 x 185 mm
Weight (Main unit, without packing)	1.13 kg

**AJ**

**安全上の注意**

**安全に関するマーク**

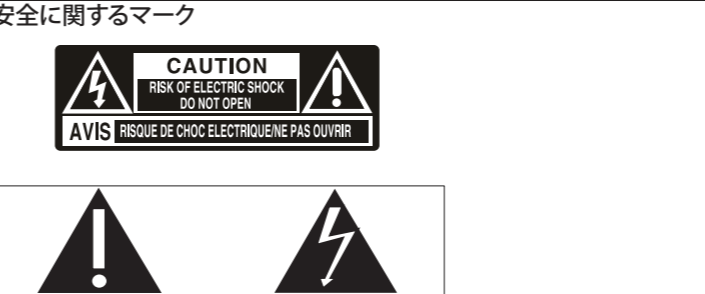

稲妻のマークは、ご使用の機器に使われている非絶縁素材が感電の原因になる可能性があることを示しています。ご家庭内で安全にご使用いただくために、製品のカバーは取り外さないでください。感嘆符のマークは、注意が必要な機能を示しています。操作時およびお手入れ時に問題が発生しないように、付属の説明書をよくお読みください。