


1



Çalıştırmak istediğiniz cihazı açın. Örn. TV.

Cihazın (örn. TV) tuşlarının çalışıp çalışmadığını kontrol edin cihaz komuta yanıt vermezse, 2. adımla devam edin.


2

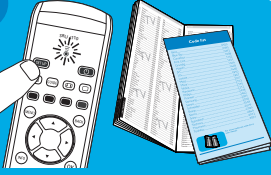

Tuş iki kez yanıp söndükten sonra sürekli yanana kadar cihaz modu tuşuna basın (örn. TV).

Cihaz için 4 rakamdan oluşan kodu bulun ve girin. Örn. TV. Bkz. 'Kod listesi'.

3

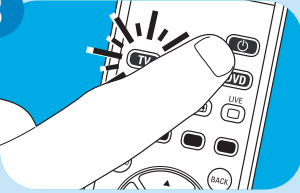

Cihaz (örn. TV) kapanana (bekleme) kadar Standby (⏻) tuşunu basılı tutun sonra tuşu hemen bırakın.

Not: uzaktan kumanda doğru kodu bulmak için cihaza çoklu kodlar gönderir.


4



Cihazı (örn. TV) açın ve uzaktan kumandayla cihazın tüm fonksiyonlarının çalıştığını kontrol edin bir tuş düzgün olarak çalışmıyorsa, çalışana kadar basılı tutun.

Sonra sonra tuşu hemen bırakın

5

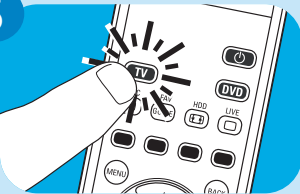

Kurulum modundan çıkmak ve ayarları kaydetmek için cihaz modu tuşunu (örn. TV) 5 saniye boyunca basılı tutun yukarıdaki adımları uzaktan kumandayla çalıştırmak istediğiniz tüm cihazlar için tekrarlayın.

Code list TV / DVD

Blue Sky	.0395	Philips	.2195
Carrefour	.0492	Pioneer	.2212
Denon	.0731	Samsung	.2448
First Line	.1008	Sagem	.2434
Grundig	.1162	Sanyo	.2462
Hitachi	.1251	Schneider	.2501
JVC	.1464	Sharp	.2550
LG	.1628	Sierra	.3549
Loewe	.1660	Sony	.2679
Metz	.1810	Supratech	.2789
Mivar	.1857	Technics	.2869
Nokia	.2017	Thomson	.2972
Panasonic	.2153	Toshiba	.3021

Code list STB - SRU 5130 only

Canal+	.0478
Humax	.1298
Nokia	.2017
Premiere	.3666
SKY	.2610



For more codes, see code list in user manual.