

ORT2300



User manual
Brugervejledning
Benutzerhandbuch
Mode d'emploi

PHILIPS

All registered and unregistered trademarks are property of their respective owners.
© 2013 Koninklijke Philips Electronics NV.
All rights reserved.

ORT2300_10_UM_V1.0

English

DCongratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Safety

Read and understand all instructions before you use this product. If damage is caused by failure to follow the instructions, the warranty does not apply.

Risk of electric shock or fire!

- Never remove the casing of the product.
- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or onto the product, disconnect it from the power outlet immediately. Contact Philips Consumer Care to have the product checked before use.
- Never place the product and accessories, near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, hold the plug securely, never the cable.

Risk of short circuit or fire!

- Use only power supplies listed in the user manual.
- Before you connect the product to the power outlet, make sure that the power voltage matches the value printed on the back of the product. Never connect the product to the power outlet if the voltage is different.
- Never expose the product to rain, water, sunshine, or excessive heat.
- Avoid force coming onto power plugs. Loose power plugs can cause arcing or fire.
- This product is not to be exposed to dripping or splashing.
- Do not place any sources of direct heat on the product (e.g. liquid filled objects, lighted candles).
- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.

Risk of overheating!

- Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation.
- Make sure that curtains or other objects never cover the ventilation slots on the product.

Note

- The model number and serial number are printed on the bottom.

2 What's in the box (Fig. 1)

Check and identify the contents of the package.

3 Connect power (Fig. 2)

- Select a proper plug and fit it to the power adaptor securely.
- Connect the power adaptor between the power outlet and the product.
- Press the power and volume knob to power on the product.
- To switch the product to standby mode, press the power and volume knob again.

4 Set the time and date (Fig. 3)

Note

- To manually set the clock, switch the product to standby mode first.

- In standby mode, press and hold **MENU / INFO** until [Set time] is displayed.
 - The hour digits blink.
- Press **2** / **1** to set the hour, and then press **SCAN / SELECT** to confirm.
 - The minute digits blink.
- Press **2** / **1** to set the minute, and then press **SCAN / SELECT** to confirm.
 - The date is displayed with the day digits blink.
- Press **2** / **1** to set the day, and then press **SCAN / SELECT** to confirm.
 - The month digits blink.
- Press **2** / **1** to set the month, and then press **SCAN / SELECT** to confirm.
 - The year digits blink.
- Press **2** / **1** to set the year, and then press **SCAN / SELECT** to confirm.
 - [Time saved] flashes, and then the set clock and date are displayed.

Tip

- When DAB radio station that transmits fine signal is broadcast, the product automatically switches to DAB radio station automatically.


5 Use the alarm timer

Note

- For optimal reception, fully extend the antenna and adjust its position.
- You can program a maximum of 20 DAB radio stations.
- Check the [Full scan] menu or go to www.NordDAB.org for applicable DAB radio frequencies in your area.

Set an alarm (Fig. 4)

- You can set two alarms.
- Press and hold **AL1** (or **AL2**) for two seconds.
 - [Alarm 1] (or [Alarm 2]) is displayed with **AL1** (or **AL2**) blinking.
 - The current alarm time is displayed with hour digits blinking.
- Press **2** / **1** to set the hour, and then press **SCAN / SELECT** to confirm.
 - The minute digits begin to blink.
- Press **2** / **1** to set the minute, and then press **SCAN / SELECT** to confirm.
 - The alarm source menu begins to blink. [DAB], [FM] or [Buzzer]

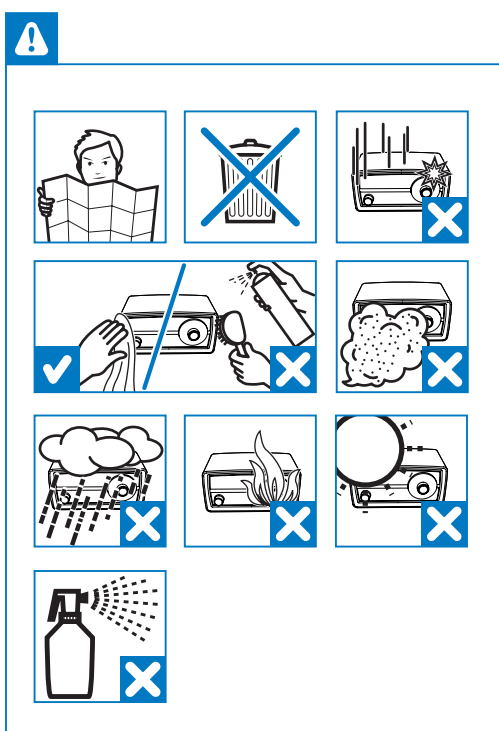

To get the detailed instructions for use, visit www.philips.com/support.

- Press **2** / **1** to select an alarm source, and then press **SCAN / SELECT** to confirm.
 - If [DAB] or [FM] is selected as the alarm source, press **SCAN / SELECT** to select a preset radio station or the list of stored stations.
 - The alarm frequency blinks [Daily] (daily), [Weekdays] (weekdays), [Weekend] (weekends), or [Once] (once).
- Press **2** / **1** to select a frequency, and then press **SCAN / SELECT** to confirm.
 - The alarm volume level blinks.
- Press **2** / **1** to set the volume level, and then press **SCAN / SELECT** to confirm.
 - [Alarm Saved] flashes.

Snooze the alarm

When an alarm sounds, press **SNOOZE**.
The alarm repeats after 9 minutes.

Stop the alarm

When the first (or second) alarm sounds, press **AL1** (or **AL2**).
The alarm stops, and then repeats at the set time.

6 Listen to FM radio stations (Fig. 5)

Note

- For optimal reception, fully extend the antenna and adjust its position.
- You can store a maximum of 20 FM radio stations.

- Press **SOURCE** repeatedly until [FM Mode] is displayed.
 - [FM] is highlighted and the current radio station is displayed.
- Press and hold **SCAN / SELECT** until [Auto] is displayed.
 - After the search is complete, the first stored radio station is broadcast.
- Press **PRESET** to access the list of stored radio stations.
- Press **2** / **1** repeatedly to tune to a stored radio station.

Search for a radio station manually

Press **2** / **1** repeatedly until the frequency of target radio station is displayed.

Search for a radio station automatically

Press and hold **SCAN / SELECT** until [Scanning...] is displayed.
After a strong radio station is detected, the search stops and the radio station is broadcast.

Program radio stations manually

- Tune to a radio station.
- Press and hold **PRESET** until [Preset store] is displayed.
- Press **2** / **1** repeatedly to select a preset sequence number.
- Press **PRESET** to confirm.
 - The radio station is stored with the selected sequence number.

- Repeat steps 1-4 to program more radio stations.
- To tune to a stored radio station, press **PRESET** to access the list of stored radio stations, and then press **2** / **1** repeatedly.

Display RDS information

Radio Data System (RDS) is a service that allows FM stations to transmit additional information. When you tune to an FM radio station that transmits RDS signals, the station name is displayed.

- Tune to an RDS station.
- Press **MENU / INFO** repeatedly to scroll through the following information (if available):
 - Station name
 - Radio text
 - Program type such as [NEWS] (news), [SPORT] (sport), [POP] (pop music),...
 - Stereo/mono

Adjust FM settings



- Press and hold **MENU / INFO** to access the FM menu.
- Press **2** / **1** to display the [Scan setting] menu.
- Press **SCAN / SELECT** to activate the automatic search.
 - The product automatically stores radio stations with sufficient signal strength.
 - After the search is complete, the first stored radio station is broadcast automatically.
- Press **2** / **1** to select an option.
 - [Strong station] Search for strong stations only.
 - [All stations] Search for all stations no matter whether the signal strength of a station is strong or weak.
- Press **SCAN / SELECT** to confirm the option.

7 Listen to DAB radio stations (Fig. 6)

Note

- For optimal reception, fully extend the antenna and adjust its position.
- You can program a maximum of 20 DAB radio stations.
- Check the [Full scan] menu or go to www.NordDAB.org for applicable DAB radio frequencies in your area.

- Press **SOURCE** repeatedly until [DAB Mode] is displayed.
 - DAB is highlighted.
- Press and hold **MENU / INFO** to access the DAB menu.
 - The [Full scan] menu is displayed. If not, press **2** / **1** repeatedly to select the [Full scan] menu.
- Press **SCAN / SELECT** to activate the automatic search.
 - The product automatically stores radio stations with sufficient signal strength.
 - After the search is complete, the first stored radio station is broadcast automatically.
- Press **2** / **1** repeatedly to select a station, and then press **PRESET** to start listening.

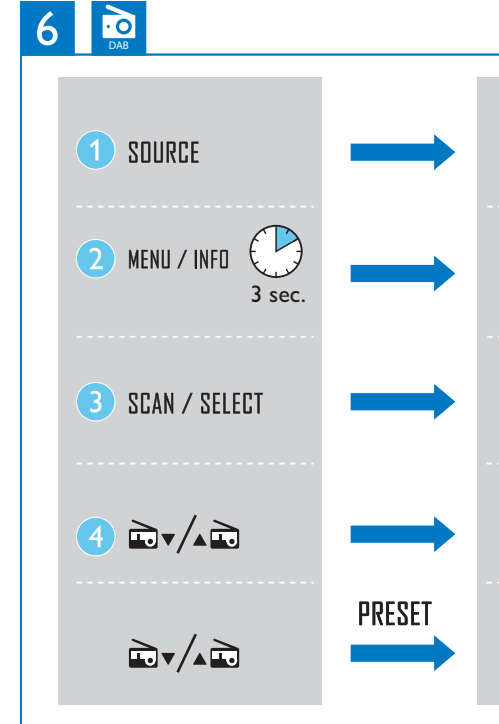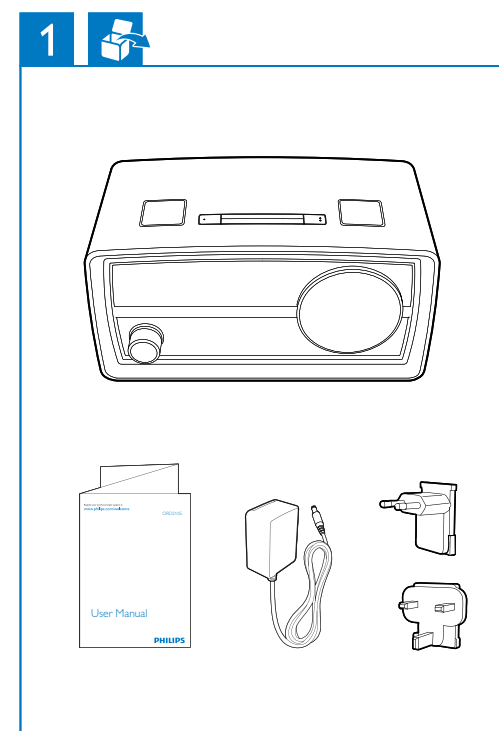

To get the detailed instructions for use, visit www.philips.com/support.

- Press **2** / **1** to select an alarm source, and then press **SCAN / SELECT** to confirm.
 - If [DAB] or [FM] is selected as the alarm source, press **SCAN / SELECT** to select a preset radio station or the list of stored stations.
 - The alarm frequency blinks [Daily] (daily), [Weekdays] (weekdays), [Weekend] (weekends), or [Once] (once).
- Press **2** / **1** to select a frequency, and then press **SCAN / SELECT** to confirm.
 - The alarm volume level blinks.
- Press **2** / **1** to set the volume level, and then press **SCAN / SELECT** to confirm.
 - [Alarm Saved] flashes.

Snooze the alarm

When an alarm sounds, press **SNOOZE**.
The alarm repeats after 9 minutes.

Stop the alarm

When the first (or second) alarm sounds, press **AL1** (or **AL2**).
The alarm stops, and then repeats at the set time.

6 Listen to FM radio stations (Fig. 5)

Note

- For optimal reception, fully extend the antenna and adjust its position.
- You can store a maximum of 20 FM radio stations.

Use DAB menus

- Press and hold **MENU / INFO** to access the DAB menu.
- Press **2** / **1** repeatedly to toggle between the menus.

Re-scan for stations

Full scan is used to perform a wide range search for DAB radio stations.

Full scan

Press **SCAN / SELECT** to start scanning for available DAB stations.
After the scanning is complete, the first stored station is broadcast.

Tune to a station manually

With this feature, you can tune to a specific channel/frequency manually. In addition to antenna orientation for better radio reception, the optional reception can also be obtained with this feature.



- Press **SCAN / SELECT** to access the station list.
- Press **2** / **1** repeatedly to select a station from SA to 13F.
- Press **SCAN / SELECT** to confirm the option.

DRC (Dynamic Range Control)

DRC adds or removes a degree of compensation for the differences in the dynamic range between radio stations.




DRC (Dynamic Range Control)

- Press **SCAN / SELECT** to access the sub-menu.
- Press **2** / **1** repeatedly to select an option. (The asterisk behind the option indicates the current setting).
 - [DRC off] No compensation applied.
 - [DRC low] Medium compensation applied.
 - [DRC high] Maximum compensation applied.
- Press **SCAN / SELECT** to confirm the option.

Remove invalid stations

Some stations in the list have no service when you travel to another area. In front of the station name of an invalid station a question mark (?) is displayed.




System menus

Note

- Philips does not guarantee the compatibility of this product with all devices.
- The USB *A* socket is for charging only.



- Press **SCAN / SELECT** to access the system menu.
- Press **2** / **1** repeatedly to select a sub-menu.
 - For details, refer to the section **Use system menus**.
- Press **SCAN / SELECT** to confirm the option.



- Press **SCAN / SELECT** to access system menu.
- Press **2** / **1** repeatedly to select a sub-menu.
 - For details, refer to the section **Use system menus**.
- Press **SCAN / SELECT** to confirm the option.

8 Listen to an external device (Fig. 7)

You can also listen to an external audio device, for example, MP3 player, through this product.

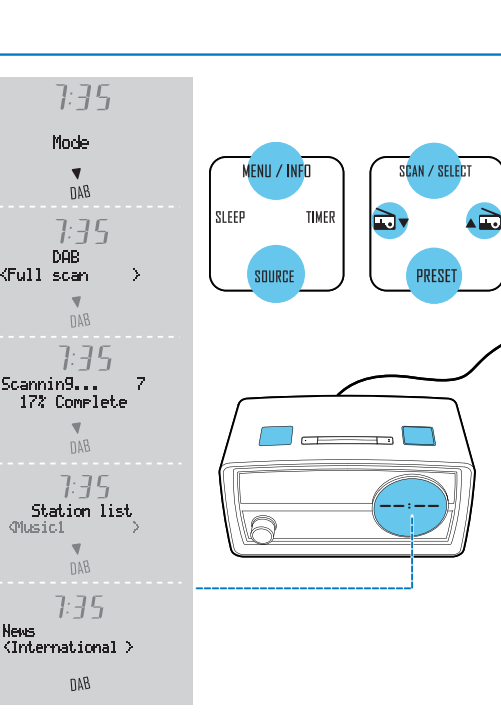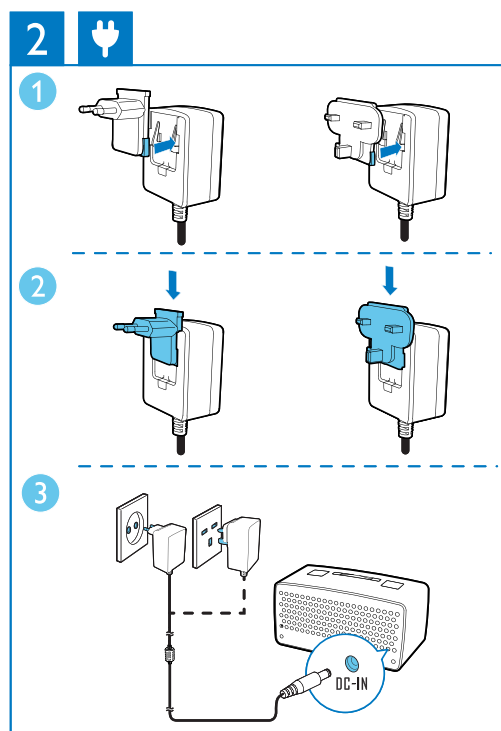

To get the detailed instructions for use, visit www.philips.com/support.

- Press **SOURCE** repeatedly to switch the source to **AUX IN**.
 - AUX is highlighted.
- Connect an audio input cable with a 3.5 mm connector on both ends to:
 - the **AUDIO-IN** socket on the back panel of this product, and
 - the headphone socket on the external device.
- Play audio on the external device (refer to its user manual).

9 Use the sleep timer (Fig. 8)

You can set a time period after which the product switches to standby mode automatically.

To tune to a stored radio station, press **PRESET** repeatedly. Press **SLEEP** repeatedly to select a time period (in minutes).

When the sleep timer is activated, **SLEEP** appears.

After the set period, the product switches to standby mode.

To deactivate the sleep timer, press **SLEEP** repeatedly until [Sleep off] appears.

10 Use the countdown timer (Fig. 9)

You can set a time period after which the product beeps for a reminder.

Press and hold **TIMER** until **0** blinks.

The hour digits blink.

Press **2** / **1** repeatedly to set the hour, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the minute, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.



The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

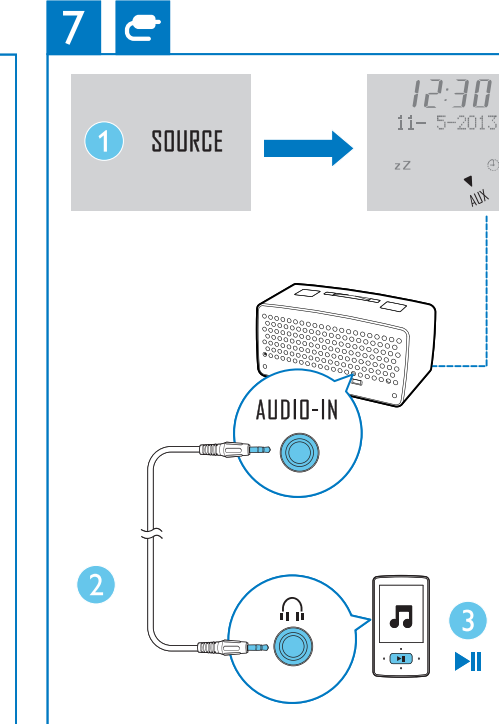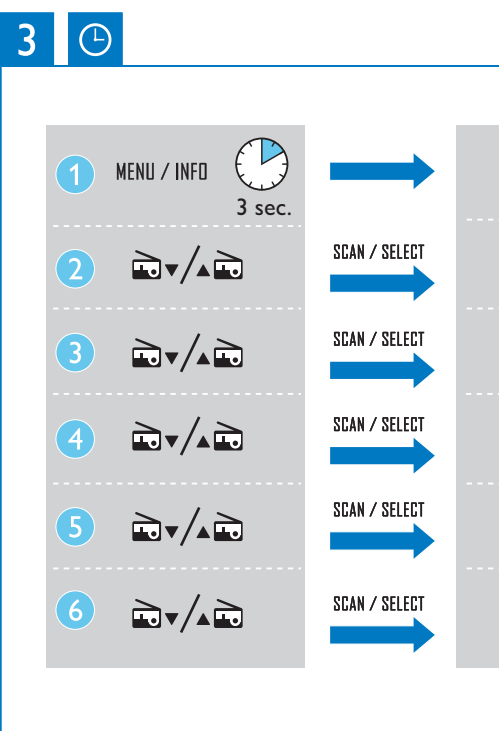

To get the detailed instructions for use, visit www.philips.com/support.

- Press **SOURCE** repeatedly to switch the source to **AUX IN**.
 - AUX is highlighted.
- Connect an audio input cable with a 3.5 mm connector on both ends to:
 - the **AUDIO-IN** socket on the back panel of this product, and
 - the headphone socket on the external device.
- Play audio on the external device (refer to its user manual).

9 Use the sleep timer (Fig. 8)

You can set a time period after which the product switches to standby mode automatically.

To tune to a stored radio station, press **PRESET** repeatedly. Press **SLEEP** repeatedly to select a time period (in minutes).

When the sleep timer is activated, **SLEEP** appears.

After the set period, the product switches to standby mode.

To deactivate the sleep timer, press **SLEEP** repeatedly until [Sleep off] appears.

10 Use the countdown timer (Fig. 9)

You can set a time period after which the product beeps for a reminder.

Press and hold **TIMER** until **0** blinks.

The hour digits blink.

Press **2** / **1** repeatedly to set the hour, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the minute, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Press **2** / **1** repeatedly to set the second, and then press **SCAN / SELECT** to confirm.

The second digits blink.

Kontrol af den aktuelle softwareversion

Tryk på **SCAN / SELECT** for at vise den aktuelle softwareversion.

Dette produkt overholder EUs krav om radiofrekvenser. Du kan læse EU-VERBODENDESTREKKEDESPRØVNING på http://download.philips.com/files/in/00/ORT2300_10/ORT2300_10_desc_eng.pdf.

Opråder softwaren

- Beag www.philips.com/support.
- Sej efter understøttelsesoplysninger om dit produkt med **ORT230010**, som sæges.
- Når en oplysningsside er tilgængelig, vil ikonet **»Vejrtil for firmwareopdatering«** være tilgængeligt. Linkes adskilt om en anden vare fra sprøg til sprøg.
- Klik på ikonet **»Vejrtil for firmwareopdatering«**.
- Læs og forstå vejledningen om softwareopdateringen.
- Følg instruktionerne for de følgende opdateringer.

Nulstil produktet

- Tryk på **SCAN / SELECT** for at vise indstillingerne.
- Tryk gentagne gange på **»»»»»** for at vælge en indstilling.
 - [No] Vind tilbag til den forrige menu.
 - [Yes] Nulstil produktet til fabriksindstillinger.
- Tryk på **SCAN / SELECT** for at bekræfte indstillingen.

16 Fejlfinding

Prøv aldrig selv at reparere produktet, da garantien i så fald bortfalder. Hvis der forekommer fejl på produktet, bør du kontrollere følgende punkter under du bestiller reparatur. Hvis der fortal et problem:
Hvil du gå til Philips websted på www.philips.com/support.
Når du kontakter Philips, skal du sørge for produktet er i nærheden, og at modelnummeret og serienummeret er tilgængelige.

Generelt

Ingen reaktion fra produktet

- Kontrol af strømforbrug er tilgængelig.
- Sluk for produktet og tænd det igen.

Dårlig radioomdækning

- Signalerne er svage på grund af interferens fra andre elektriske produkter eller trykknapper i forbindelse fra produktet til et andet produkt.
- Søg for at antennen er trukket helt ud. Juster placeringen af antennen.

Ud-larmindstilling er blevet slået af.

- Stemmen er blevet afsluttet, eller strømdampningen er blevet frakoblet.
- Indstil uret alarmer.

Om Bluetooth-forbindelse

Musikafspilning kan ikke foretages på produktet selv efter genopretning af Bluetooth-tilslutning.

- Bluetooth-modtageren er dårlig til at høre den sættere på dette produkt, eller uventede forhindringer imellem dem.

Kan ikke oprette forbindelse til et produkt.

- Enkelt underskeder ikke de profiler, der kræves til produktet.
- Indreder Bluetooth-tilslutning er ikke aktiveret. Se indrederes brugervejledning for at få ud af hvordan funktionen aktiveres.
- Dette produkt er ikke i paringsstand.
- Produktet har allerede forbindelse til en anden Bluetooth-aktiveret enhed. Afbryd forbinden, og prøv igen.

Den parrede enhed er ikke i rækkevidde.

- Bluetooth-modtageren er dårlig til at høre den sættere på dette produkt, eller uventede forhindringer imellem dem.
- Nogle modtagerenheder kobler muligvis til og fra telefon, når du forlanger eller afslutter en opkald. Dette er ikke tegn på en funktionsfejl i produktet.
- På nogle enheder deaktiveres Bluetooth-forbindelsen muligvis automatisk for at spare strøm. Dette er ikke tegn på en funktionsfejl i produktet.

17 Produktinformation

Generelle oplysninger

- Den Hovedbetjening befndes på den Rückseite des Geräts. Die Model- und Seriennummer befndes på den Rück der Unterseite.

Bluetooth

- Bluetooth-modtageren er dårlig til at høre den sættere på dette produkt, eller uventede forhindringer imellem dem.

18 Meddelelse

Enhver ændring af dette apparat, som ikke er godkendt af Philips Consumer Lifestyle, kan annullere garantien og til at betjene dette udbyr.

Overholdelse

- Drücken Sie **»»»»»** um eine Alarmquelle auszuwählen. Drücken Sie anschließend **SCAN / SELECT**, um die Auswahl zu bestätigen.
 - Wenn **[DAB]** oder **[PM]** als Alarmquelle ausgewählt ist, drücken Sie **SCAN / SELECT**, um einen voreingestellten Radiosender oder zuletzt angehörten Radiosender auszuwählen.
 - Die Alarmfrequenz **WAKE [Daly]** (täglich), **[Weekend]** (Wochenende), **[Weekend]** (Wochenende) oder **[Once]**(einmal).

- Drücken Sie **»»»»»** um eine Frequenz auszuwählen. Drücken Sie anschließend **SCAN / SELECT**, um die Auswahl zu bestätigen.
 - Die Lautstärke des Alarms blinkt.
 - Die Lautstärke des Alarms blinkt.
- Drücken Sie die Taste **»»»»»** um die Lautstärke einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - [Alarm Saved]** blinkt.

Drücken Sie **SCAN / SELECT**, um die Suche nach verfügbaren DAB-Sendern zu starten.

- Wenn die Suche abgeschlossen ist, wird der erste gespeicherte Sender gesendet.

Unterbrechen des Alarms

- Wenn der Alarm ertönt, drücken Sie **SNOOZE**.
- Der Alarm ertönt erneut nach 3 Minuten.

Beenden des Alarms

Wenn der erste (oder zweite) Alarm ertönt, drücken Sie **AL1** (oder **AL2**).

- Der Alarm wird ausgeschaltet und zur eingestellten Zeit fortgesetzt.

Wiedergabe von UKW-Radiosendern (Abb. 5)

- Drücken Sie wiederholt **SOURCE** bis **[FM Mode]** angezeigt wird.
 - FM** ist hervorgehoben, und die aktuelle Radiofrequenz wird angezeigt.

- Haben Sie **SCAN / SELECT** gedrückt, bis **[Auto]** angezeigt wird.
 - Wenn die Suche abgeschlossen ist, wird der erste gespeicherte Radiosender gesendet.

- Drücken Sie **»»»»»** auf der Liste der gespeicherten Radiosender zuzugreifen.
 - Drücken Sie wiederholt **»»»»»** um einen Sender zwischen 54 und 137 MHz auszuwählen.
- Drücken Sie **SCAN / SELECT**, um die Optionsauswahl zu bestätigen.
 - Die Lautstärke wird automatisch auf den eingestellten Wert eingestellt.
- Drücken Sie **»»»»»** auf der Liste der gespeicherten Radiosender zuzugreifen.
 - Drücken Sie wiederholt **»»»»»** um einen gespeicherten Radiosender einzustellen.

Drücken Sie wiederholt **»»»»»** bis die Frequenz des Zielradiosenders angezeigt wird.

- Die Lautstärke wird automatisch auf den eingestellten Wert eingestellt.

Manuelle Suche nach Radiosendern

- Drücken Sie wiederholt **»»»»»** um eine Option auszuwählen. (Das Sternchen hinter der Option zeigt die aktuelle Einstellung an.)
 - [DRC off]** Es wird keine Anpassung durchgeführt.
 - [DRC low]** Es wird eine mittlere Anpassung durchgeführt.
 - [DRC high]** Es wird eine maximale Anpassung durchgeführt.

- Drücken Sie **SCAN / SELECT**, um die Optionsauswahl zu bestätigen.
 - [Alarm 1]** (oder **[Alarm 2]**) ist affiché und **AL1** (ou **AL2**) digito.

Entfernen ungültiger Sender

- Enge Sender in der Liste bieten keinen Service, wenn Sie in eine andere Region reisen. Vor dem Sendernamen eines ungültigen Senders wird ein Fragezeichen (?) angezeigt.

- Entstellen eines Radiosenders
- Haben Sie **PRESET** gedrückt, bis **[Preset store]** angezeigt wird.
 - Drücken Sie wiederholt **»»»»»** um eine voreingestellte Sequenznummer auszuwählen.
- Drücken Sie zur Bestätigung der Taste **PRESET**.
 - Der Radiosender wird mit der ausgewählten Sequenznummer gespeichert.
- Wiederholen Sie die Schritte 1 bis 4 um weitere Sender zu programmieren.
 - Um einen gespeicherten Radiosender auszuwählen, drücken Sie auf **PRESET**, um auf die Liste der gespeicherten Radiosender zuzugreifen, und drücken Sie dann wiederholt auf **»»»»»**.

Kurzschluss- und Feuergefahr!

- Verwenden Sie nie ein Benutzerschnittfeld aufgeführte Netzabel.
- Stellen Sie vor dem Verbinden des Geräts mit dem Stromnetz sicher, dass die Netzspannung mit dem auf der Rückseite des Geräts aufgedruckten Wert übereinstimmt. Verbinden Sie das Gerät nicht mit dem Netzanschluss, falls die Spannung nicht mit diesem Wert übereinstimmt.
- Setzen Sie das Gerät niemals Regen, Wasser, Sonne oder Hitze aus.
- Vermeiden Sie die Ausübung von Kraft auf Steckdosen. Lockere Steckdosen können Funktionsbeschädigung oder Feuer verursachen.

Gefahr von Beschädigungen für das Gerät und Verletzungen!

- Es dürfen keine Flüssigkeiten an das Produkt gelangen. Auf das Produkt dürfen keine möglichen Gefahrenquellen einwirken (z. B. mit einer Flüssigkeit gefüllte Gegenstände, brennende Kerzen).
- Platzieren Sie das Gerät niemals auf Netzkabeln oder anderen elektrischen Geräten.
- Wenn das Gerät bei Temperaturen unter 5 °C transportiert wird, packen Sie es aus und warten Sie, bis es Zimmertemperatur erreicht hat, bevor Sie es mit dem Netzanschluss verbinden.

- Stellen Sie dieses Gerät nicht in einen Bereich mit direktem Licht. Das Gerät benötigt an allen Seiten einen Lüftungsabstand von mindestens 10 cm.
- Stellen Sie sicher, dass keine Vordränge und anderen Gegenstände die Lüftungsschlitze des Geräts abdecken.

Radio der Überleitung

- Wenn Sie dieses Gerät nicht in einen Bereich mit direktem Licht. Das Gerät benötigt an allen Seiten einen Lüftungsabstand von mindestens 10 cm.
- Stellen Sie sicher, dass keine Vordränge und anderen Gegenstände die Lüftungsschlitze des Geräts abdecken.

- Haben Sie **MENU / INFO** gedrückt, um auf den UKW-Modi zuzugreifen.
 - Drücken Sie **»»»»»** um die Menu **[Scan setting]** auszuwählen.
- Drücken Sie **SCAN / SELECT**, um auf Unteremds zuzugreifen.
 - Drücken Sie **»»»»»** um eine Option auszuwählen.

- Drücken Sie **»»»»»** um die automatische Suche zu aktivieren.
 - Das Gerät sucht automatisch alle Radiosender mit ausreichender Signalstärke.
 - Wenn die Suche abgeschlossen ist, wird der erste gespeicherte Radiosender gesendet.

- Drücken Sie **SCAN / SELECT**, um die Optionsauswahl zu bestätigen.
 - [Alarm 1]** (oder **[Alarm 2]**) ist angezeigt, und **AL1** (ou **AL2**) digito.

- Wählen Sie einen passenden Stecker aus, und befestigen Sie ihn sicher am Netzteil.
- Verbinden Sie das Netzteil mit der Steckdose und den Gerät.
- Drücken Sie den Regler für Lautstärke und Betrieb, um das Gerät einzuschalten.

- Um das Gerät in den Standby-Modus zu schalten, drücken Sie den Regler für Lautstärke und Betrieb.
- Drücken Sie **»»»»»** um die Minuten einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Das Datum wird angezeigt, und den Ziffern der Lagespanne blinken.

- Drücken Sie die Taste **»»»»»** um den Tag einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Die Ziffern der Monatsanzeige blinken.

- Drücken Sie **SCAN / SELECT**, um die automatische Suche zu aktivieren.
 - Das Gerät sucht automatisch alle Radiosender mit ausreichender Signalstärke.
 - Wenn die Suche abgeschlossen ist, wird der erste gespeicherte Radiosender gesendet.

- Drücken Sie wiederholt **»»»»»** um einen Sender auszuwählen, und drücken Sie **PRESET**, um die Wiedergabe zu starten.

- Drücken Sie die Taste **»»»»»** um die Minuten einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Das Datum wird angezeigt, und den Ziffern der Lagespanne blinken.

- Drücken Sie die Taste **»»»»»** um den Tag einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Die Ziffern der Monatsanzeige blinken.

- Drücken Sie **SCAN / SELECT**, um die automatische Suche zu aktivieren.
 - Das Gerät sucht automatisch alle Radiosender mit ausreichender Signalstärke.
 - Wenn die Suche abgeschlossen ist, wird der erste gespeicherte Radiosender gesendet.

- Drücken Sie wiederholt **»»»»»** um einen Sender auszuwählen, und drücken Sie **PRESET**, um die Wiedergabe zu starten.

- Drücken Sie die Taste **»»»»»** um die Minuten einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Das Datum wird angezeigt, und den Ziffern der Lagespanne blinken.

- Drücken Sie die Taste **»»»»»** um den Tag einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Die Ziffern der Monatsanzeige blinken.

- Drücken Sie **SCAN / SELECT**, um die automatische Suche zu aktivieren.
 - Das Gerät sucht automatisch alle Radiosender mit ausreichender Signalstärke.
 - Wenn die Suche abgeschlossen ist, wird der erste gespeicherte Radiosender gesendet.

- Haben Sie in Standby-Modus **MENU / INFO** gedrückt, bis **[See menu]** angezeigt wird.
 - Die Ziffern der Stundenanzeige blinken.

- Drücken Sie die Taste **»»»»»** um die Stunden einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Die Ziffern der Monatsanzeige blinken.

- Drücken Sie die Taste **»»»»»** um die Minuten einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Der Name der Alarmquelle beginnt zu blinken **[Daly]**, **[PM]** oder **[Buzzer]**.

Verwenden der DAB-Menüs

- Halten Sie **MENU / INFO** gedrückt, um auf das DAB-Menü zuzugreifen.
 - Drücken Sie **»»»»»** um die Menüoptionen anzuzeigen.

- Drücken Sie wiederholt **»»»»»** um durch die Menüs zu blättern.
 - Die Lautstärke des Alarms blinkt.

- Drücken Sie **»»»»»** um die Lautstärke einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - [Alarm Saved]** blinkt.

Drücken Sie **SCAN / SELECT**, um die Suche nach verfügbaren DAB-Sendern zu starten.

- Wenn die Suche abgeschlossen ist, wird der erste gespeicherte Sender gesendet.

Manuelles Einstellen eines Radiosenders

- Mit dieser Funktion können Sie einen bestimmten Sender/eine bestimmte Frequenz manuell einstellen. Zusätzlich zur Ausrichtung der Antenne können Sie auch mit dieser Funktion einen optimalen Empfang erreichen.

Drücken Sie **»»»»»** um die Lautstärke einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.

- Die Lautstärke des Alarms blinkt.

- Drücken Sie **»»»»»** um die Lautstärke einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Die Lautstärke des Alarms blinkt.

- Drücken Sie **»»»»»** um die Lautstärke einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Die Lautstärke des Alarms blinkt.

- Drücken Sie **»»»»»** um die Lautstärke einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Die Lautstärke des Alarms blinkt.

- Drücken Sie **»»»»»** um die Lautstärke einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Die Lautstärke des Alarms blinkt.

- Drücken Sie **»»»»»** um die Lautstärke einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Die Lautstärke des Alarms blinkt.

- Drücken Sie **»»»»»** um die Lautstärke einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Die Lautstärke des Alarms blinkt.

- Drücken Sie **»»»»»** um die Lautstärke einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Die Lautstärke des Alarms blinkt.

- Drücken Sie **»»»»»** um die Lautstärke einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Die Lautstärke des Alarms blinkt.

- Drücken Sie **»»»»»** um die Lautstärke einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Die Lautstärke des Alarms blinkt.

- Drücken Sie **»»»»»** um die Lautstärke einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Die Lautstärke des Alarms blinkt.

- Drücken Sie **»»»»»** um die Lautstärke einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Die Lautstärke des Alarms blinkt.

- Drücken Sie **»»»»»** um die Lautstärke einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Die Lautstärke des Alarms blinkt.

- Drücken Sie **»»»»»** um die Lautstärke einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Die Lautstärke des Alarms blinkt.

- Drücken Sie **»»»»»** um die Lautstärke einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Die Lautstärke des Alarms blinkt.