


## 1 what's in the box




**2 connectTV**

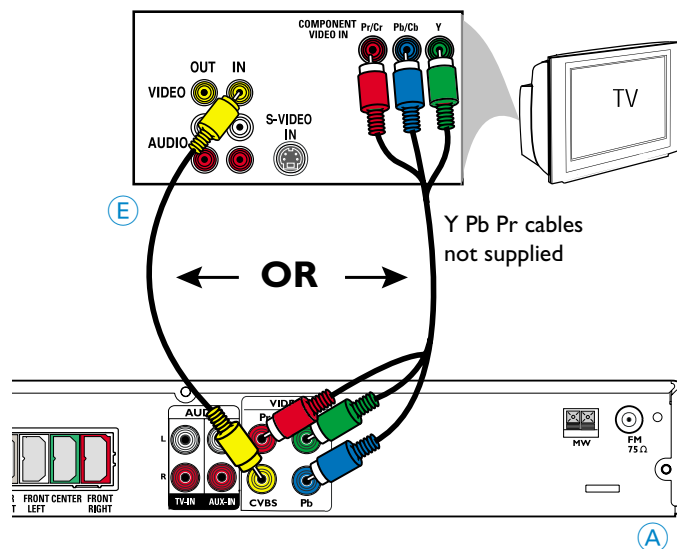

**Note:** For connecting to a Progressive Scan TV, refer to the user manual for proper connections and detailed set up.

### 3 connect subwoofer, speakers and antennas


### 3a Placement of speakers

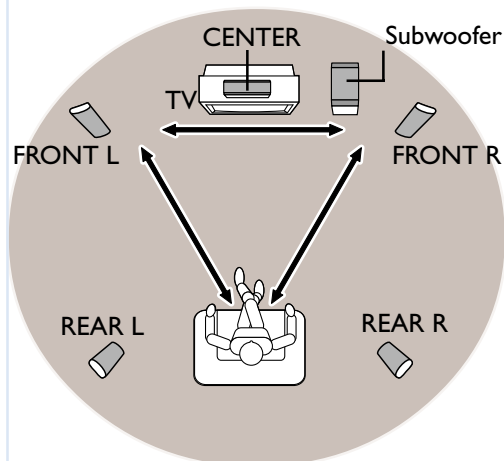


### 3b Connect the speakers and subwoofer to the DVD system

(refer to the user manual for  
“Individual speaker volume  
adjustment”)


### 3c Connect the FM and MW antennas

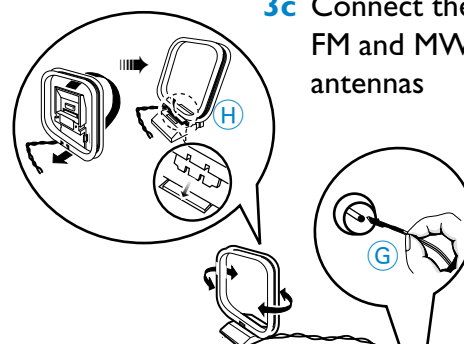

**3d** Connect the mains cord to the power supply

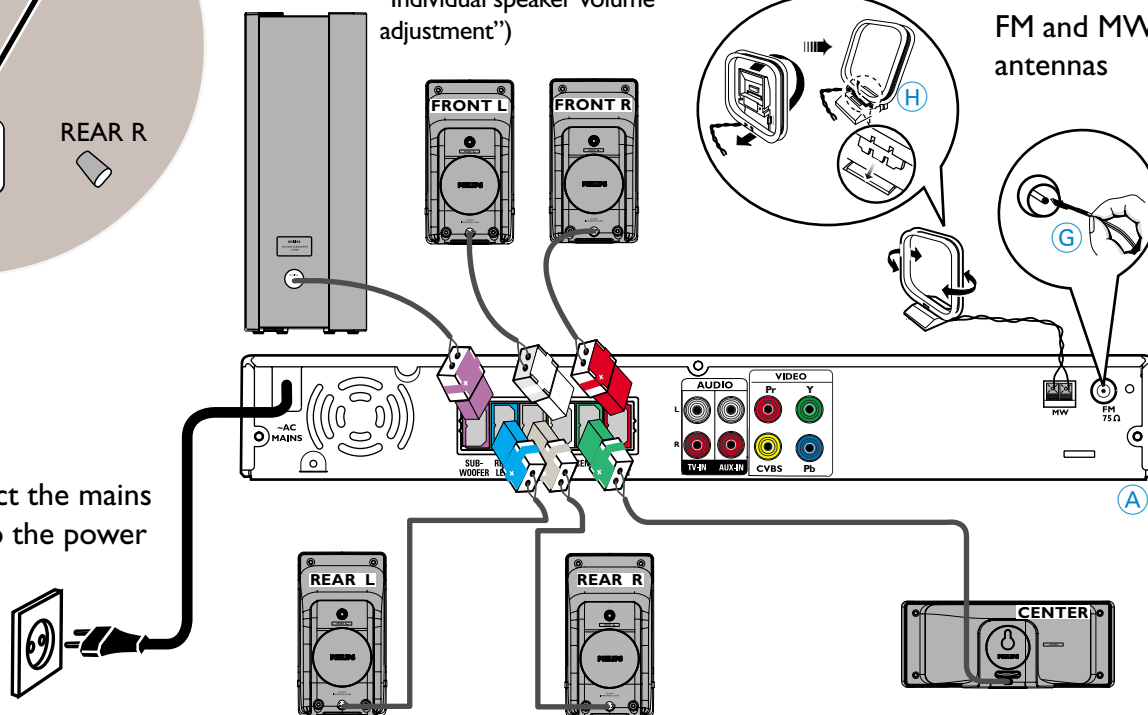


## 4 play a disc

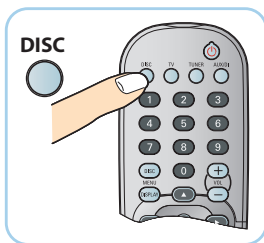


**4a** Press **DISC**.

Point the remote control towards the DVD system.

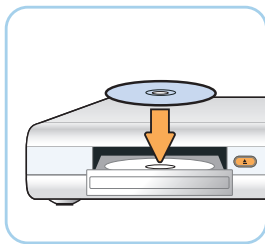

**4b** Load in a disc

Press **OPEN CLOSE** to open and close the disc tray.

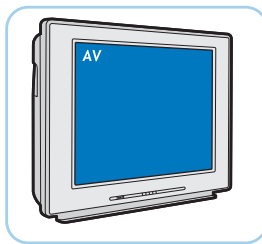


**4c** Select correct AV In channel

Switch to the correct input source by using the TV remote control.

### GET PICTURE


- Check the connection of the DVD system to TV is in place (see **2 Connect TV**).
- Check the AV mode on TV. It may be called **FRONT**, **A/V IN**, or **VIDEO**. Choose the different modes using TV remote control.
- Or, use the TV remote control to select Channel 1 on TV, then press Channel down button until you get the picture.
- See your TV manual for more details.

### More settings and features

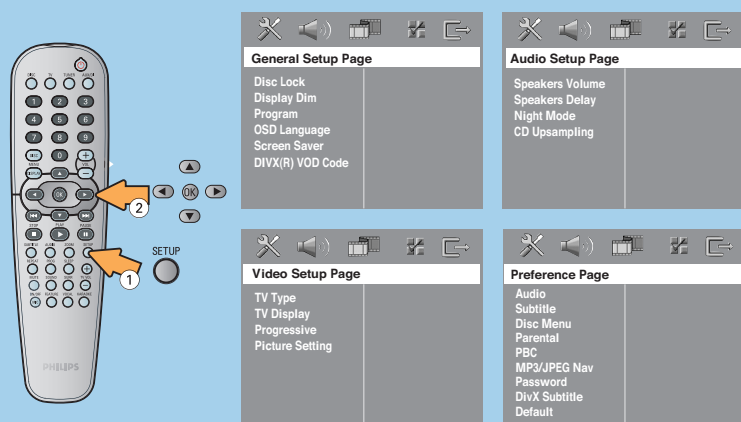

Refer to chapter “DVD Setup Menu Options” in the user manual for detailed descriptions.

### GET SOUND

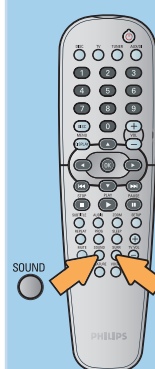


**No sound from rear speakers?**  
Press **SURR** button to select “Multi-Channel”.

**To enhance the sound quality**  
Press **SOUND** button to select a predefined digital sound effect.

Detailed playback features and additional functions are described in the user manual.

## 5 programme radio stations

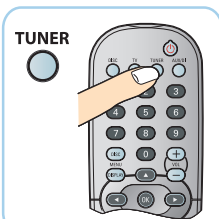


**5a** Press **TUNER**.

AUTO INSTALL PRESS PLAY

**Note:** This feature is only available for first time setup.




**5b** Press and hold **PLAY** until “START ...” appears. It will start to programme all available radio stations.

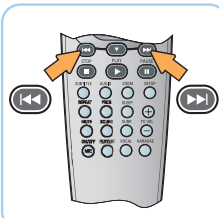

**5c** Once complete, use **◀▶** to select a preset radio station.

## 6 connect other device (optional)

Audio/Video device

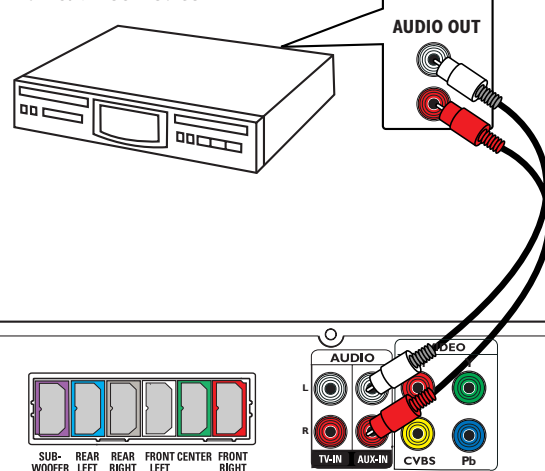

**Note:** Connect the **AUDIO OUTPUT** of other audio/video device to this DVD system in order to use the Home Theatre Audio System's surround sound capabilities. Press **AUX/DI** on the remote control in order to listen to the playback.

**NEEDS HELP?** Visit our website [www.philips.com/support](http://www.philips.com/support)

## 1 箱中装的是什么

- (A) 主机
- (B) 重低音扬声器
- (C) 遥控器（包括 2 节 AA 电池）
- (D) 前/后/中间扬声器
- (E) 视频接线
- (F) 音频接线
- (G) FM 金属丝天线
- (H) MW 环型天线

## 2 连接电视

**注意：**欲连接至逐行扫描电视，请参阅使用手册的正确连接与详细设定。

## 3 连接重低音扬声器、扬声器、天线

- 3a 扬声器位置。
- 3b 将扬声器和重低音扬声器连接至 DVD 系统  
[详情请参阅“Individual speaker volume adjustment（个别扬声器音量调节）”用户手册]
- 3c 连接 FM 和 MW 天线。
- 3d 连接电源电缆至电源。

## 4 播放视盘

- 4a 按 DISC。  
将遥控器直指 DVD 系统。
- 4b 安装视盘。  
按 OPEN CLOSE，以开关视盘托盘。
- 4c 在频道上选择正确的 AV。  
用电视遥控器正确输入源。

### 更多设定与功能

详情请参阅**用户手册**的“DVD 设置功能表选项”一节。

### 取得影像

- 检查 DVD 系统至电视的连接在正确位置。（见 2 连接电视）。
- 检查电视上的 AV 模式。这可能称做 FRONT, A/V IN, 或 VIDEO。用电视遥控器选择不同模式。
- 或者，使用电视 遥控器选择电视上频道 1，然后按频道递降按钮直至获得画面。
- 更多信息，见电视手册。

### 取得声音

#### 后置扬声器没有声音？

按 SURR 选择“MULTI-CHANNEL”。

#### 增强声音质数？

重复按 SOUND 选择预设的数字声效。

详细的回放特性和额外功能，见附送的用户手册。

## 5 设定频道

- 5a 按 TUNER。  
**注意：**此功能仅用于第一次设定。
- 5b 按住 PLAY ► 直到显示“START...”字样。系统将开始设定所有可接收到的频道。
- 5c 完成后，请使用 ◀◀ / ▶▶ 选择预设的频道。

## 6 连接其他设备（选择性）

**注意：**将其他影音设备的 AUDIO OUT 与本 DVD 系统相连接，以便使用家庭剧院音响系统的环绕音效。在遥控器上按下 AUX/DI 键聆听播放效果。


**需要帮助？请游览我们的网站** [www.philips.com/support](http://www.philips.com/support)

---

[www.philips.com/support](http://www.philips.com/support)

This document is printed on chlorine free produced paper

Data subject to change without notice



3139 115 23931

**PHILIPS**