Register your product and get support at

www.philips.com/welcome

CID3688

ENG Quick Start Guide

PHILIPS

1

a

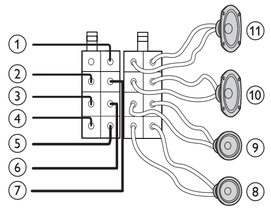

b

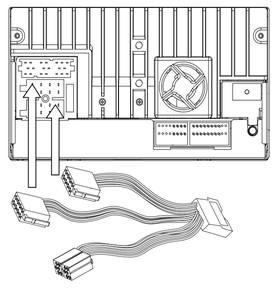

c

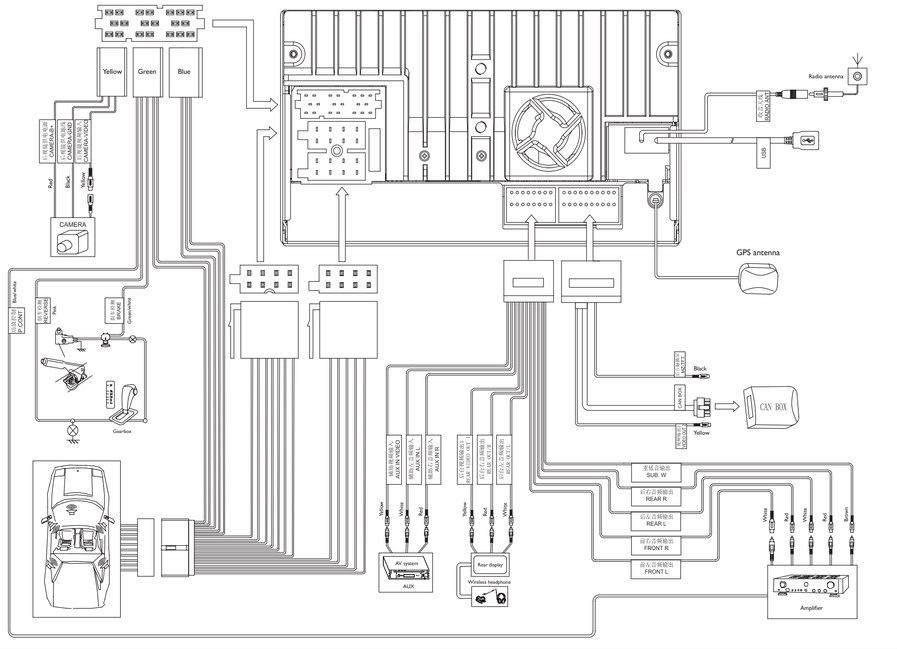

2

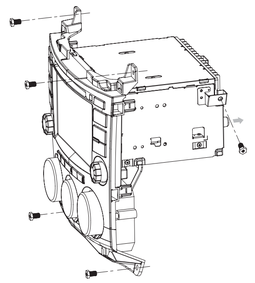

3

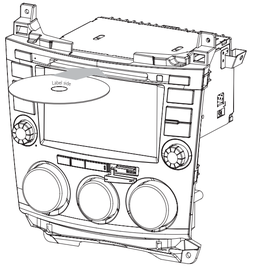

4

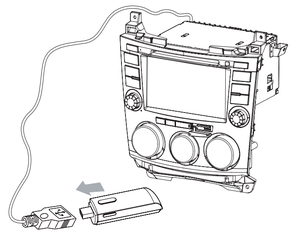

5

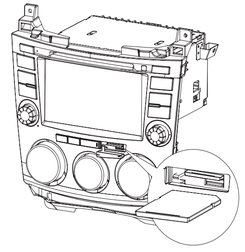

English

Install the car audio 1

Connect wires

1 Check the car's wiring carefully, then connect them to the two supplied ISO wires. b

	Connector	Connect to
1		CAN BOX
2	Red wire	**The +12V power terminal which is live in the accessory (ACC) position of the ignition switch** If there is no accessory position, connect to the +12V car battery terminal that is always live. Be sure to connect the black ground (earth) lead to a metal surface of the car first.
3	Orange wire	Illumination switch
4	Black wire	**A metal surface of the car** First connect the black ground (earth) lead, then connect the yellow and red power supply leads.
5	Yellow wire	**The +12V car battery which is live at all times.**
6	Blue wire	**The electric antenna control lead or power supply lead of the antenna booster** If there is no electric antenna or antenna booster, or it is manually operated telescopic antenna, it is not necessary to connect this lead.
7		CAN BOX
8	Green and green/black wires	**Left speaker (Rear)**
9	White and white/black wires	**Left speaker (Front)**
10	Gray and gray/black wires	**Right speaker (Front)**
11	Purple and purple/black wires	**Right speaker (Rear)**

2 Connect the other end of the two ISO connectors to the car audio system. b

3 If necessary, do other connections: c

Mount in the dashboard 2

1 If the car does not have an on-board drive or navigation computer, disconnect the negative terminal of the car battery.

2 Ensure that the horizontal slant of the car dashboard opening is between 0 and 20 degrees. The unit cannot be used if the dashboard opening's slant angle is above 20 degrees.

3 Install the mounting bolt and place the supplied rubber cap over the end of the mounting bolt.

4 Slide the unit into the dashboard and fix it to the car with five screws.

5 Reconnect the negative terminal of the car battery.

Turn on

Caution

- Risk of road accidents! Never watch video or adjust settings while you drive.

1 Press and hold ⏻/**MUTE/VOL** to turn on the unit.
   ↳ The available OSD (On-Screen Display) languages are displayed.

2 Tap a language to select.
   ↳ The OSD language is changed to the selected language immediately.

- To turn off the unit, press and hold ⏻/**MUTE/VOL**.

Adjust screen

To adjust screen brightness

1 Press **DISP**/☼/◑ to show the brightness bar.
2 Tap ◀/▶ to adjust the value.
3 Press **DISP**/☼/◑ to confirm.

To turn on/off the screen, press and hold **DISP**/☼/◑.

Set date and time

1 Tap the upper left corner to display the main menu.

2 Tap ◖ in the middle right side of the screen.
   ↳ The second main menu is displayed.

3 Tap **[Settings]**.
4 Tap **[Time]**.
   ↳ The date/time setup menu is displayed.

Set date

1 Tap **[Date]**.
2 Tap on the displayed date information.
   ↳ A submenu is displayed.
3 Tap ▲ or ▼ to set year, month and day.

Set clock mode

1 Tap **[Clock mode]**.
2 Tap on **[12Hr]** or **[24Hr]** to select clock mode.

Set time

1 Tap **[Time]**.
2 Tap on the displayed time.
   ↳ A submenu is displayed.
3 Tap ▲ or ▼ to set hour and minute.

Use map

Note

- You may need to upgrade the map before using it (see "Upgrade the map" section).

1 Tap the upper left corner to display the main menu.
2 Tap **[Navigation]**.
   ↳ The navigation menu is displayed in a few seconds.
3 Refer to the map manual (in Chinese) to operate the navigation tool.

Listen to Radio

1 Tap ⌂ to display the home menu.
2 Tap **[Radio]**.
   ↳ Band and frequency information is displayed.

3 Tap on **FM** or **AM** to select band:
4 Briefly tap ◀ or ▶ to tune to a radio station by step.

Play disc 3

You can play video, audio or images stored on the following discs:

- DVD video, DVD-R, DVD-RW
- VCD
- Audio CD, CD-R, CD-RW

1 Insert the disc into the disc slot with the label side facing up.
   ↳ Play starts automatically.
   ↳ To remove the disc, press ⏏.

Connect USB device 4

1 Insert your USB device to the USB socket.
   ↳ Play starts automatically.

Remove the USB device

1 Switch to another (non-USB) source.
2 Remove the USB device.

Insert SD/MMC card 5

1 Open the SD/MMC card cover.
2 Insert the SD/MMC card into the SD/MMC card slot.
   ↳ Play starts automatically.

Remove the SD/MMC card

1 Switch to another source.
2 Press the card until you hear a click sound.
   ↳ The card is now disengaged.
3 Remove the SD or MMC card.

Play with Bluetooth device

Pair the Bluetooth-enabled devices

To connect your Bluetooth device to the unit, you need to pair the device to the unit. Pairing needs only to be done once.
You can pair up to eight devices.

1 Turn on the Bluetooth function on the device.
2 Search for Bluetooth device with the device.
3 Select "CID3688" in the pairing list.
4 Enter default password "0000".
   ↳ if pairing succeeds. phone call record is displayed.

Make a call

1 Pair the phone with the unit.
2 Tap ⌂ to display the home menu.
3 Tap **[Bluetooth]**.
   ↳ The Bluetooth menu is displayed.

4 Tap ▲ or ▼ to select the paired phone, then tap ☎.
5 Tap ▲ or ▼ to search for phone number from the following list:

Or tap ⠿ to dial number directly, then tap ☎ to dial.

Receive call

By default, all incoming calls are received automatically.

1 If there is incoming call, **[Incoming call...]** flashes on the screen. Speak into the Bluetooth microphone.



2 When conversation ends, tap ☎ (red) to terminate the call.

© 2010 Koninklijke Philips Electronics N.V.
All rights reserved.

CID3688_00_QSG_V1.0