



ENGLISH

Keep the user manual and product packaging for future reference.

For your child's safety and health

WARNING!

- Continuous and prolonged sucking of fluids will cause tooth decay.
- Always check food temperature before feeding.
- Throw away at the first signs of damage or weakness.
- Keep components not in use out of the reach of children.
- Never attach to cords, ribbons, laces or loose parts of clothing. The child can be strangled.
- Never use feeding teats as a soother.
- Always use this product with adult supervision.

Before first use, clean the product and then place in boiling water for 5 minutes. This is to ensure hygiene. After each use, wash in warm, soapy water, remove any food residues and rinse thoroughly. If you use a brush to clean the tip of the feeding teat, clean it as carefully as possible to avoid damage. Clean before each use to ensure hygiene. Do not allow children to play with small parts or walk/run while using bottles or cups. Do not place the product in a heated oven or microwave. Do not use aggressive cleaning agents. Do not place parts on surfaces cleaned with antibacterial cleaners. Plastic packaging material properties may be affected by sterilizing and high temperatures. Inspect before each use and pull the feeding teat in all directions. Throw away at the first signs of damage or weakness. We recommend replacing feeding teats every 3 months. Keep feeding teats in a dry, covered container. Do not leave a feeding teat in direct sunlight or heat, or leave in disinfectant (sterilizing solution) for longer than recommended, as this may weaken the teat.

Support

If you need information or support, please visit www.philips.com/support.

简体中文

请保留用户手册和产品包装，以备日后参考。

为了儿童的安全和健康警告！


- 长时间持续吮吸液体将导致产生蛀牙。
- 喂食前请务必检查食物的温度。
- 若有明显破损或缺陷，请立即丢弃。
- 将不用的组件放置在儿童无法接触到的地方。
- 切勿系在绳索、丝带、蕾丝或衣服的松动部分，以免使孩子窒息。
- 请勿将奶嘴用作安抚奶嘴。
- 务必在成人的监督下使用本产品。

首次使用前，请清洁产品并将其置于沸水中浸泡5分钟。这样可以保证卫生。每次使用完后，在温热的肥皂水中进行清洗以除去任何食物残渣，并彻底冲洗。如果要使用刷子清洁奶嘴顶部，请尽量小心操作，避免损坏奶嘴。请在每次使用前进行清洁，以保证卫生。切勿让儿童玩耍小零件，或让儿童在行走或奔跑时使用奶瓶或杯子。请勿将产品置于加热的烤箱或微波炉中。请勿使用腐蚀性清洁剂。请勿将部件放在使用抗菌清洁剂清洁过的表面上。消毒和高温可能会影响塑料包装材质属性。每次使用之前，朝各个方向拉拔奶嘴进行检查。

若有明显破损或缺陷，请立即丢弃。我们建议每3个月更换一次奶嘴。请将奶嘴储存在干燥和封闭的容器内。请勿将奶嘴置于阳光直射处或热源附近，置于消毒剂（消毒溶液）中的时间也不要超过建议时间，否则可能会降低奶嘴的效用。

支持

如果您需要信息或支持，请访问 www.philips.com/support。

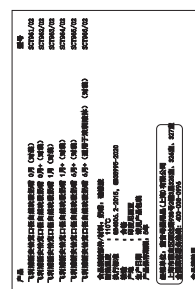

繁體中文

請保留使用手冊及產品包裝以供日後參考。

為了孩童安全與健康警告！

- 持續且長時間的吮吸液體會導致蛀牙。
- 餵哺之前，請務必檢查食物溫度。
- 若有損壞或變質的現象，請立即丟棄。
- 所有不用的組件應收放在孩童無法拿取的地方。
- 切勿加繫繩索、絲帶、鞋帶或衣物的寬鬆零件。否則可能造成兒童遭絞勒窒息。
- 請勿將餵哺奶嘴作為安撫奶嘴使用。
- 本產品必須在成人監督下使用。

第一次使用前先清洗產品，然後浸泡於滾水中5分鐘，以確保安全衛生。每次使用後，請使用溫肥皂水清洗，清除所有食物殘渣後，再徹底沖洗乾淨。如果使用刷子清潔奶嘴頭尖端，請盡可能小心清潔，避免造成損壞。使用前務必清潔產品，以確保衛生。請勿讓孩童把玩小型零件，或邊走/跑邊使用奶瓶或杯子。請勿將本產品放入熱焗爐或微波爐中。請勿使用腐蝕性清潔劑。切勿將零件放在抗菌清潔劑清洗過的表面上。塑膠包裝材料特性可能受到消毒和高溫的影響。每次使用奶嘴前請先仔細檢查，並將奶嘴往各個方向輕拉，若有損壞或變質的現象，請立即丟棄。我們建議每3個月更換一次奶嘴。將奶嘴收斂在乾燥的加蓋容器中。請勿將奶嘴直接曝曬在陽光下或高溫處，或置於消毒劑（消毒溶液）中超過建議時間，以避免奶嘴脆弱變質。

支援

如需相關資訊或支援，請瀏覽 www.philips.com/support。