

PHILIPS

Shaver

i9000 Prestige



フィリップス 電動シェーバー

品番 **XP9205/05, XP9204/30,
XP9203/32, XP9202/20,
XP9202/05, XP9201/30,
XP9201/20, XP9201/05**


取扱説明書

フィリップス シェーバーをお買い上げいただき、まことにありがとうございます。長い間ご愛用いただくために、ご使用前にこの取扱説明書をよくお読みのうえ、正しくお使いください。

また、お読みになった後は、お使いになる方がいつでも見られるところに必ず保管してください。

製品のご確認

製品をご確認ください。




本体




鼻毛・耳毛トリマー
※ XP9203/32のみ




クイッククリーン
ポッドカートリッジ
※ XP9203/32、
XP9204/30、
XP9201/30、
XP9202/20、
XP9201/20のみ



収納ケース



クイッククリーン
ポッド
※ XP9203/32、
XP9204/30、
XP9201/30、
XP9202/20、
XP9201/20のみ



充電スタンド
※ XP9203/32、XP9204/30、
XP9201/30のみ



充電ケーブル



クリーニング
ブラシ

※改良の為、仕様を予告なく変更することがあります。

■品番別 付属品一覧

お買い上げの製品によって付属品が異なります。
該当する品番を下記の一覧よりお選びいただき、付属品をご確認ください。

付属品 \ 品番	XP9203/32	XP9204/30	XP9201/30	XP9202/20
充電ケーブル	●	●	●	●
充電スタンド	●	●	●	—
鼻毛・耳毛トリマー	●	—	—	—
クイッククリーンボッド	●	●	●	●
クイッククリーンボッド カートリッジ	●	●	●	●
収納ケース	●	●	●	●
クリーニングブラシ	●	●	●	●

付属品 \ 品番	XP9201/20	XP9205/05	XP9202/05	XP9201/05
充電ケーブル	●	●	●	●
充電スタンド	—	—	—	—
鼻毛・耳毛トリマー	—	—	—	—
クイッククリーンボッド	●	—	—	—
クイッククリーンボッド カートリッジ	●	—	—	—
収納ケース	●	●	●	●
クリーニングブラシ	●	●	●	●

お買い上げのお客様へ

初めてご使用になる際は、ご使用前に充電してください。

クイッククリーンポッド付きモデルお買い上げのお客様へ

•クイッククリーンポッドカートリッジに関して

フィリップスの専用クイッククリーンポッドカートリッジをご使用ください。
フィリップスの専用クリーニング液(ボトルタイプ)を入れてご使用いただくことはできません。

目次

● はじめに	製品のご確認 1・2 目次 4 必ずお守りください 5~8 各部の名称 9 メインメニューについて 10 表示について 11~13 過圧防止センサーについて 14・15 充電のしかた 16・17
● ご使用方法	アプリについて 18・19 シェービングのしかた 20~22 ポップアップトリマーの使いかた 23 鼻毛・耳毛トリマーの使いかた 24 お手入れ方法 25~28 クイッククリーンポッドの使いかた 29~31 刃の交換 32 保管のしかた 33
● 廃棄について	シェーバーを廃棄するとき 34・35
● 困ったとき	故障かな?と思ったら 36・37
● 英文解説	Guidance in English 38~84
● 保証	保証とアフターサービス 87 仕様 88 無料修理規定 90 保証書 最終ページ

必ずお守り ください

安全上のご注意

- ここに示した注意事項は、安全に関する重要な内容ですので、必ず守ってください。
- 誤った取扱いをしたときに想定される内容を「危険」、「警告」、「注意」に区別しています。

○絵表示について



危険 人が死亡または重傷を負う可能性が大きい内容。



警告 人が死亡または重傷を負う可能性が想定される内容。



注意 人が傷害を負う可能性および物的損害のみの発生が想定される内容。

○絵表示の例



△記号は、「危険、警告、注意」を示します。図の中や近くに具体的な注意内容(左図の場合は高温注意)を示します。



⊘記号は、してはいけない「禁止」を示します。図の中や近くに具体的な禁止内容(左図の場合は分解禁止)を示します。



●記号は、必ずしていただく「強制」を示します。図の中や近くに具体的な強制内容(左図の場合は電源プラグをコンセントから抜くこと)を示します。

⚠ 危険



- 本製品は充電式電池を内蔵しています。本製品の充電、使用、保管は10℃から35℃の環境で行ってください。火中投入、加熱、高温での充電・使用・放置をしないでください。発熱・発火・破裂の原因になります。また電池の寿命にも影響を及ぼします。

警告

-  • 本製品はヒゲをシェービングしたり、あごヒゲ、口ヒゲ、もみあげなどの長さを整えたり鼻毛・耳毛をカットするためのものです。本取扱説明書に記載されている以外の目的で使用しないでください。
-  • 製品を廃棄するとき以外は、絶対に本体を分解しないでください。また、改造、修理をしないでください。火災・感電・けがの原因になります。修理はフィリップスサポートセンターにお問い合わせください。
-  • 本体が異常に熱くなったり異臭がしたり充電時間が異常に長い等の異常・故障時には、直ちに使用を中止してください。そのまま、使用すると火災・感電・けがに至るおそれがあります。
-  • USB コネクタ部は確実にUSB 充電アダプタに差し込んでください。スムーズにコンセントに電源プラグが装着できない場合、無理に押し込もうとしないでください。火災や感電の原因になります。
-  • 充電ケーブルを無理に曲げたり、引っ張ったり、ねじったり、たばねたり、重いものを載せたり、挟み込んだり、加工したりしないでください。充電ケーブルが破損し、火災・感電の原因となります。
-  • 刃やトリマーなどの部品が破損または故障した場合は、本製品を使用しないでください。けがの原因になります。交換の際には必ずフィリップス社製の同型部品とお取替ください。
-  • 濡れた手で充電ケーブルを抜き差ししないでください。感電やけがをすることがあります。
-  • 水場や浴室での充電は絶対にしないでください。ショート・感電の原因になります。
-  • 電池が液漏れした場合は、液が目や皮膚に触れないように注意してください。万が一目に入った時は、こすらずに水道水で十分洗浄し医師の診察を受けてください。皮膚や衣類に付いた場合は水道水で十分洗い流してください。
-  • お手入れの際は必ず本体から充電ケーブルを外してください。感電やけがをすることがあります。
-  • 充電ケーブル接続の前にコネクタ部が完全に乾いていることを確認してください。ショート・感電の原因になります。
-  • 乳幼児の手の届くところに本製品を置かないでください。またお子様が本製品で遊ぶことがないように監視してください。
-  • 補助を必要とする人(子ども含む)に使用させないでください。また、お体の不自由な人だけでは使用しないでください。
-  • 本製品が発する電波(Bluetoothを含む)は、ペースメーカーおよびその他の医療機器の動作に影響を及ぼすことがあります。健康面で不安のある方や、ペースメーカー等の体内埋込型医療機器、家庭用医療電気機器を使用している場合は、使用前に医師又は機器メーカーに確認の上、医療機器から20 cm以上離して使用してください。
-  • クイッククリーンボッドカートリッジはお子様の手が届かない場所に保管してください。
-  • クイッククリーンボッドカートリッジ内のクリーニング液を万一飲み込んだり、目に入った場合は応急処置を行い医師に相談してください。


注意

-  • 充電する場合は、定格出力DC5 V、定格出力電流1 A以上で、タイププレートにPSEマークの表示がある安全技術基準に適合したUSB充電アダプタで充電してください。
-  • USB充電アダプタとの接続には変換コネクタや変換ケーブルは使用しないでください。本体の破損や火災の原因となります。
-  • 充電ケーブルは付属の専用充電ケーブルを使用してください。また付属の充電ケーブルで他の製品を充電しないでください。ショート、異常発熱による火災の原因になります。破損、故障した場合は、事故を避けるために必ずフィリップス社製の同型充電ケーブルをお求めください。
-  • ご使用の前に刃に異常がないことを確認してください。
-  • 刃は強く押さえないでください。破損して皮膚を傷つけることがあります。
-  • 充電ケーブルを抜くときには、電源コード部を持たずに必ず先端のコネクタ部を持って引き抜いてください。感電やショートして発火することがあります。
-  • 充電時以外は、本体から充電ケーブルを抜いてください。けがややけど、絶縁劣化による感電・漏電・火災の原因となります。
-  • 電源コネクタ受部にピンやごみを付着させないでください。感電・ショート・発火の原因になります。
-  • トリマーや鼻毛・耳毛カッターはタオルやティッシュペーパーなどでふかないでください。刃を傷めたり思わぬけがをすることがあります。
-  • 本製品を電子レンジやIH調理器具の近くに保管しないでください。故障や破損の原因になります。
-  • 本製品や部品を食器洗浄機で洗わないでください。故障や破損の原因になります。
-  • 皮膚に傷がある箇所には使用しないでください。また皮膚疾患や重度な炎症がある場合はご使用前に医師にご相談ください。
-  • 衛生上の理由から他の人と共用しないでください。


使用上のご注意

1. フィリップスシェーバーを初めてお使いの方は、剃りかたに慣れるまで2～3週間かかることがあります。
2. 本体のお手入れは、水またはぬるま湯で行ってください。60℃以上の熱湯では洗浄しないでください。研磨パッドや研磨剤を含んだ洗剤またはエアダスターは使用しないでください。
3. 外刃は、薄く仕上げてありますので、刃部を強く押さえたり、硬いものに当てないよう、ていねいに扱ってください。
4. シェービングユニットはクリーニング表示(しずくマーク)が表示された場合、「お手入れ方法」(P.25～28)に従って掃除してください。
5. シェービングユニットの掃除や着脱は、必ず電源をOffにしてから行ってください。
6. 切れ味が衰えてきたり、刃が破損した場合は、使用せず必ず新しい替刃に交換してください。
7. 直射日光の当たる場所には保管しないでください。夏場、車の中に放置しないでください。
8. シェーバー本体は防水加工をしておりますが、水や液体の中に浸けないでください。
9. クイッククリーンポッドは平らな所に設置してご使用ください。
10. クイッククリーンポッド内にクリーニング液が入っている状態で、クイッククリーンポッドを移動させないでください。
11. 水の近くや温度の高い場所でスマートフォンを取り扱う場合は十分注意してください。
12. 電子機器の使用が禁止されている場所ではBluetoothをOffにしてください。

各部の名称

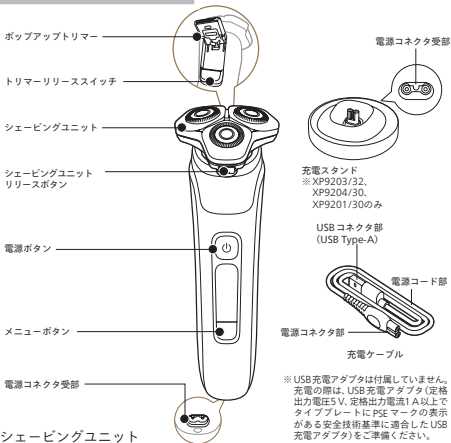


•シェービングユニット

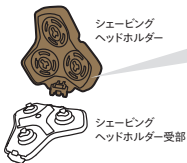

(替刃品番：SH92)

シェービングヘッド分解図

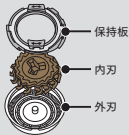

メインメニューについて

本製品はディスプレイの表示や機能を選択できます。シェーバー本体の電源がOffになっている状態でメニューボタンを押すと、ボタンを押すごとに1つずつ表示や機能が切り替わります。



● 充電残量表示

現在の充電残量を数値(%)でお知らせします。



● シェービングガイド表示

最後に行ったシェービングの圧力と動作が適切であったか星によって評価されます。

※シェービングガイド表示はアプリの設定で機能を有効にした場合のみ表示されます。



● トラベルロック機能(ロックされていると電源は入りません)

メニューボタンを約3秒間以上長押しすると、ロックがかかります。再度約3秒間長押しすると解除できます。充電アダプタに接続すると、ロックは自動的に解除されます。

※ロック中はシェーバーのBluetoothはOffになります。



● ライトリング表示

「LIGHT ON」が表示されている状態でメニューボタンを約3秒間以上長押しすると「LIGHT OFF」が表示され、ライトリングが無効になります。

「LIGHT OFF」が表示されている状態でメニューボタンを約3秒間以上長押しすると「LIGHT ON」が表示され、ライトリングが有効になります。



● ペアリング解除機能

シェーバー本体とスマートフォンのペアリングを解除できます。シェーバーとスマートフォンのペアリングについては「アプリについて」(P.18・19)をご参照ください。

※ペアリング解除機能はシェーバーがスマートフォンとペアリングされている場合のみ表示されます。

※スマートフォンにBluetooth® 4.2以降が搭載されていることを確認してください。

表示について

初めてお使いになるときや、長い間ご使用にならなかったときは、表示が出るまでに時間がかかる場合があります。

主な表示(本体)

●充電残量表示



充電残量はディスプレイ上に使用可能量(%)として表示されます。電源のOn/Offの際に数秒間点灯します。

●トラベルロック機能



(カギがかかっているマークが表示されると電源が入りません)
表示されるカギマークの状態によってトラベルロック機能が作動しているかどうかをお知らせします。

●ライトリング表示



ライトリングのOn/Offができます。

●Bluetooth接続表示



シェーバー本体とスマートフォンがペアリングされている状態であることをお知らせします。

●Bluetooth解除表示



シェーバー本体とスマートフォンがペアリングされていない状態であることをお知らせします。



●充電催促表示

動作中に充電残量が少なくなると、バッテリーアイコンが点滅します。



●ストレージ容量表示

シェーバー本体のストレージに容量がほとんど残っていないことをお知らせします。シェービングデータを同期させるため、シェーバーとアプリを同期させてください。



●ブロック表示

シェービングヘッドに長いヒゲがからまっていたりシェービングヘッドが破損していると、「！」マーク、シェービングヘッドの交換表示、クリーニング表示が同時に点灯します。この場合、電源をOnにすることができません。シェービングヘッドをお手入れするか、交換してください。



●ブロック表示

シェーバー本体の電源コネクタ受部に、付属の専用充電ケーブル以外のケーブルが差し込まれると「！」マークと充電器アイコンが表示されます。本製品の充電は付属の専用充電ケーブルをご使用ください。



●クリーニング表示

クリーニングをうながすために、しずくマークが点灯します。「お手入れ方法」(P.25～28)をご参照ください。



●クリーニング時間表示

クイッククリーンボッドで洗浄を行うと、ディスプレイにクリーニングマークと残り時間を表すタイマーが表示されます。メニューボタンを押すと残り時間(秒)が数値で表示されます。



•クイッククリーンポッド表示

クイッククリーンポッドによる洗浄をうながすために表示されます。「クイッククリーンポッドの使いかた」(P.29～31)をご参照ください。



•クリーニング中断表示

なんらかの理由でクイッククリーンポッドでの洗浄が中断された場合に表示されます。「故障かな?と思ったら」(P.36・37)をご参照ください。



•プラグ解除お知らせ表示

充電アダプタに接続している時に電源ボタンを押すと表示されます。ご使用の際は、充電スタンドまたは充電アダプタをシェーバー本体から外してご使用ください。

主な表示(クイッククリーンポッド)



•クイッククリーンポッドカートリッジ交換表示

クイッククリーンポッドカートリッジを交換してください。「クイッククリーンポッドの使いかた」(P.29～31)をご参照ください。

シェーバー本体の電源をOnにすると、ディスプレイにアニメーションが展開され、過圧防止センサーのモード変更画面が表示されます。電源をOnの状態でもメニューボタンを押すと過圧防止センサーのモード変更ができます。「過圧防止センサーについて」(P.14・15)をご参照ください。

過圧防止センサー について

シェービングヘッドをあまり強く押し当て過ぎると、肌を傷める可能性および本体故障の原因になります。

過圧防止センサー機能とは、シェービングの際、肌に押しつけられているシェービングヘッドの圧力をお知らせする機能です。圧力の強さに応じてシェーバー本体のライトリングが3色に点灯します。ライトリングを確認し適切な圧力（緑色で点灯）になるように、シェービングヘッドを押しつける力を調整してください。



押しつける力が弱い	適切な圧力になっている	押しつける力が強い
ライトリングが青色に点灯	ライトリングが緑色に点灯	ライトリングがオレンジ色に点灯

※過圧防止センサーはシェービングヘッドがシェーバーに取り付けられている時のみご使用できます。

シェーピングアドバイス機能

シェーピングが終了しシェーバー本体の電源をOffにすると、ディスプレイに正しくシェーピングができていたかどうかをお知らせする、さまざまな情報が表示されます。

※この機能のご使用はアプリによる設定が必要です。

•シェーピングヘッドを押し付ける力のアドバイス

シェーピングヘッドを押し付ける力が弱すぎたり、強すぎたりした場合には、過圧防止センサーアイコンが表示され、星の数でシェーピングを評価します。



•シェーバーの動かし方のアドバイス

シェーバーを正しく動かしていない(円を描くように動かす)場合に、モーションセンサーアイコンが表示され、星の数でシェーピングを評価します。



•シェーピングヘッドを押しつける力、シェーバーの動かし方の両方のアドバイス

シェーピングヘッドを押し付ける力が弱すぎたり、強すぎたりした場合、さらにシェーバーを正しく動かしていない場合は、過圧防止センサーアイコンとモーションセンサーアイコンが両方表示され、星の数でシェーピングを評価します。



充電のしかた



注意

- 定格出力電圧DC5 V、定格出力電流1 A以上で、タイププレートにPSEマークの表示がある安全技術基準に適合したUSB充電アダプタで充電してください。
- USB充電アダプタとの接続には変換コネクタや変換ケーブルは使用しないでください。
- 水場や浴室で充電をしないでください。
- USB充電アダプタは、完全に乾いていることを確認してからコンセントに差ししてください。
- 濡れた手で充電ケーブルを抜き差ししないでください。

※充電しながらシェービングはできません。

初めてお使いになるときや、長い間お使いにならなかったとき、または充電残量が少なくなったときは、ご使用前に充電してください。充電時間は約1時間です。充電開始後数分間、充電表示ランプが点滅しないことがありますが、そのまま充電すると充電表示ランプが点滅します。

※本製品はリチウムイオン充電電池を使用しているため、ご使用の都度充電をしても充電電池の寿命には影響ありません。

1. シェーバー本体の電源がOffになっていることを確認してください。
2. 充電ケーブルの電源コネクタ部をシェーバー本体の電源コネクタ受部に差し込みます。次に充電ケーブルのUSBコネクタ部を、USB充電アダプタのUSB出力端子に差し込みます。
3. ご家庭のコンセントにUSB充電アダプタの電源プラグ部を差し込みます。
4. 充電後はコンセントからUSB充電アダプタを抜き、シェーバーから充電ケーブルを外します。



クイックチャージ

充電残量が0の状態 で充電アダプタで充電すると、約5分間でシェービング1回分が急速充電されます。

注意

- 長時間使用しない場合は、充電電池が過放電や液漏れして使えなくなることがあります。3～4カ月に一度は充電してください。
- 本製品を24時間以上充電したままにしないでください。

充電スタンドで充電する場合

※XP9203/32、XP9204/30、XP9201/30のみ ※充電スタンドは光りません。

1. シェーバー本体の電源がOffになっていることを確認してください。
2. 充電ケーブルの電源コネクタ部を充電スタンドの電源コネクタ受部に差し込みます。次に充電ケーブルのUSBコネクタ部を、USB充電アダプタのUSB出力端子に差し込みます。
3. ご家庭のコンセントにUSB充電アダプタの電源プラグ部を差し込みます。
4. シェーバー本体を充電スタンドにセットします。
※充電の状況は本体ディスプレイにパーセンテージで表示されます。
5. 充電後はコンセントからUSB充電アダプタを抜き、シェーバーを充電スタンドから外します。



注意 本製品を24時間以上充電したままにしないでください。

アプリについて

フィリップスメンズグルーミングアプリ(ディリーケア)の機能

本製品はお持ちのスマートフォンと連携し、フィリップスメンズグルーミングアプリ(ディリーケア)をご利用いただくことができます。本アプリはお客様一人ひとりに合った上手なシェービングの方法をお知らせいたします。理想的なシェービングのため、フィリップスメンズグルーミングアプリ(ディリーケア)をぜひご活用ください。

シェーバーとスマートフォンのペアリング (初期設定)

1. スマートフォンでApp StoreもしくはGoogle Playにアクセスし、「フィリップスメンズグルーミングアプリ」と検索してアプリをダウンロードします。



2. スマートフォンのBluetooth設定がOnになっていることを確認し、シェーバーの電源をOnにします。

3. スマートフォンのフィリップスメンズグルーミングアプリ(ディリーケア)を起動し、画面の指示に従ってペアリングを開始してください。
※シェーバー1台に対してペアリングできるスマートフォンは1台のみです。



4. ペアリングが完了すると、フィリップスメンズグルーミングアプリ(ディリーケア)を開いたときにシェーバーとスマートフォンが自動的に接続されます。
※アプリを活用したシェービングを行う場合は、スマートフォンのBluetooth設定をOnにしてください。
※シェーバーとスマートフォンをペアリングしている場合、シェーバー本体の電源がOffになっていても、自動でBluetoothによる同期が行われるので、シェービングのたびにスマートフォンを用意する必要はありません。

Bluetoothの接続とシェービングデータの同期

1. スマートフォンのBluetooth設定がOnになっていることを確認し、スマートフォンのフィリップスメンズグルーミングアプリ(ディリーケア)を開きます。
2. シェーバーとスマートフォンのペアリング(初期設定)が完了している場合、「アプリについて」(P.18)をご参照ください。本製品と操作設定用アプリは自動的に接続されます。これでフィリップスメンズグルーミングアプリ(ディリーケア)を利用したシェービングができます。
3. シェーバーに保存されているシェービングのデータをアプリと同期させるため、スマートフォンのBluetooth設定がOnになっていることを確認し、スマートフォンとシェーバーを近づけてください。

シェーバー本体には、過去のシェービングデータを最大20件まで保存できます。データの消失を防ぐため、シェービングを行ったら20回以内に、シェーバーとペアリングしたスマートフォンを同期させてください。

ペアリングの解除

【スマートフォンでの解除】

スマートフォンの「設定」を開いて、Bluetoothを選択します。次に画面に表示されるシェーバーの品番を選択して、「接続解除」または「このデバイスの登録を解除」を押します。

※ペアリングを解除する方法は、スマートフォンの機種によって異なる場合があります。詳しいことについては、お使いのスマートフォンの取扱説明書をご覧ください。



【シェーバーでの解除】

メニューボタンを押してペアリング解除機能表示にし、メニューボタンを長押しすると、とが表示されるので、を選択して解除します。

注意

- 電子機器の使用が禁止されている場所ではBluetoothをOffにしてください。
- 水の近くや湿度の高い場所でスマートフォンを取り扱う場合は十分注意してください。
- 最新の対応OSはウェブの製品ページよりご覧いただけます。
- タブレットではお使いになれません。
- 一部の機種では正常に動作しない場合があります。

※Apple、Appleロゴ、iPadおよびiPhoneは、アメリカおよびその他の国におけるApple Inc.の登録商標です。App Storeは、Apple Inc.のサービスマークです。

※AndroidはGoogle LLCの商標です。Google PlayおよびGoogle PlayロゴはGoogle LLCの商標です。

※Bluetooth® ワードマークおよびロゴは登録商標であり、Bluetooth SIG, Inc. が所有権を有します。Koninklijke Philips N.V.およびその関連会社は使用許諾の下でこれらのマークおよびロゴを使用しています。その他の商標および登録商標は、それぞれの所有者の商標および登録商標です。

シェービングのしかた(ドライ)

肌が乾いた状態でのシェービングのしかたです。

ご使用の際は本体から充電アダプタを抜いてご使用ください。接続されていると作動しません。


注意

- シェーバー本体は防水加工をしており、水場や浴室でも使用できますが、水や液体の中に浸けないでください(故障の原因となります)。
- ご使用前に刃に異常がないことを確認してください。

- モーターの始動時、微弱な振動がシェーバー本体に伝わりますが、問題はありません。
- ほこりなどで肌が汚れている場合、ふきとってからご使用ください。
- ご使用前の外刃の破れや変形がないか確認してください(外刃に破れや変形があると肌を傷つける原因になります)。
- ヒゲ剃り以外の目的(頭髪など)には、使用しないでください。

1. 電源ボタンを押して電源をOnにします。

※カギマークが表示される場合はロック機能がOnになっています。ロックを解除してから電源をOnにしてください。



2. 円を描くようにシェービングヘッドを動かしながら、さまざまな方向に伸びているヒゲを剃ります。各シェービングヘッドが肌に密着するように動かしてください。軽く押し当てると、肌に沿ってなめらかにシェービングできます。

※強く押し当てると、肌を傷める可能性があります。

※シェービングヘッドへの高い圧力が感知されると、シェーバー本体のライトリングがオレンジ色に点灯します。「過圧防止センサーについて」(P.14)をご参照ください。




3. シェービング後は電源ボタンを押して、電源をOffにします。

4. シェーバーをきれいに洗います。「お手入れ方法」(P.25～28)をご参照ください。




ほお

肌を伸ばし、ヒゲを立たせるように円を描くように小さく回転させながら剃ります。

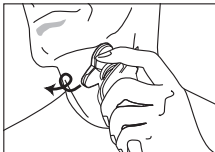


あごの裏側

刃を肌に軽くあて、図のようにあごを上げて円を描くように小さく回転させながら剃ります。

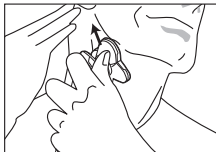

ほおの奥から首筋

片方の手で肌を後ろに引っ張りながら剃ります。

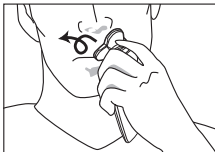

鼻の下

鼻の下を伸ばし、円を描くように小さく回転させながら剃ります。

フィリップスのシェーバーを初めてお使いの方は、剃りかたに慣れるまで2～3週間かかることがあります。初めてのシェービングで思い通りの結果が得られないことや、少し肌にヒリヒリ感が残る場合がありますが、これは普通のことです。フィリップスのシェーバーに限らずシェービング方法を変える時には、肌もヒゲも新しいシェービング方法に慣れる時間が必要です。新しいシェーバーに肌を慣らす為、まずは3週間このシェーバーを使い続けることをお勧めします(最低でも1週間に3回以上)。この3週間は、あまりシェービング方法を変えたりせず、同じシェーバーで肌を慣らすことが大切です。

シェービングの しかた(ウェット)

注意

- シェーバー本体は防水加工をしており、水場や浴室でも使用できますが、水や液体の中に浸けないでください(故障の原因となります)。
- ご使用前に刃に異常がないことを確認してください。

- モーターの始動時、微弱な振動がシェーバー本体に伝わりますが、問題はありません。
- ご使用前に外刃の破れや変形がないか確認してください(外刃に破れや変形があると肌を傷つける原因になります)。
- ヒゲ剃り以外の目的(頭髮など)には、使用しないでください。
- 石けんもお使いいただけますが、肌の上での滑りをよくするため、シェービングフォームやシェービングジェルの使用をお勧めします。

1. 顔を濡らし、市販のシェービングフォームまたはシェービングジェルを付けます。

2. シェービングヘッドを水で濡らし、肌の上でなめらかに動くようにします。

3. 電源ボタンを押し電源をOnにします。
※ロック機能表示ランプが点滅している場合はロック機能がOnになっています。ロックを解除してから電源をOnにしてください。

4. 刃を肌に軽く押しあて、円を描くように動かしながら剃ります。
シェービングフォームやシェービングジェルにより、鏡を見た時に剃った部分を確認しやすくなります。
※途中、よりなめらかにシェービングするために、シェービングヘッドを水で濡らすと効果的です。

5. シェービング後は電源ボタンを押し、電源をOffにします。

6. シェーバーをきれいに洗います。「お手入れ方法」(P.25～28)をご参照ください。
※シェービングフォームやシェービングジェルの使用後に、クイッククリーンボッドで洗浄される場合は、ぬるま湯または水でしっかりと洗い流してください。

【重要】

シェービングが完了し電源をOffにすると、洗浄を促すアイコンが表示されます。シェービングフォームやシェービングジェルがしっかりと洗い流されているかを確認してください。お手入れが不十分な場合、臭いが出るばかりでなく、故障の原因にもなります。



ポップアップトリマーの 使いかた

トリマーはヘアーライン、もみあげ、
ヒゲなどを整えるのに便利です。

1. トリマーリリーススイッチを下方に押し、ポップアップトリマーを開きます。
2. シェーバーの電源をOnにします。
3. カットしたいところに直角に当たるようにトリマーを軽く押し当て、下方に動かします。
4. トリマーを鼻の下のエリアに使うこともできます。
5. 詰まりや損傷を防ぐため、使用後は電源をOffにして、必ずポップアップトリマーをクリーニングします。「お手入れ方法」(P.27)をご参照ください。



注意 強く押し当てると肌を傷めますのでご注意ください。

鼻毛・耳毛トリマー の使いかた

注意

- ケガをする恐れがあるため、鼻毛・耳毛トリマーの先端は5 mm以上挿入しないでください。
- 着脱は必ず電源をOffにしてから行ってください。

シェービングユニットを本体からはずし、鼻毛・耳毛トリマーの突起部をシェーバー上部の溝に合わせ、カチッと音がするまで押し込み取り付けます。



鼻毛のトリミング

ご使用前に、鼻孔内は必ず清潔にしておいてください。

1. 電源ボタンを押し電源をOnにします。
2. 鼻毛・耳毛トリマーの先端を鼻孔内に注意深く挿入します。
3. 本体をゆっくりと動かし、鼻孔内のムダ毛を除去します。
4. 使用後は鼻毛・耳毛トリマーをお手入れします。「鼻毛・耳毛トリマーのお手入れ方法」(P.28)をご参照ください。



耳毛のトリミング

ご使用前に、耳は必ず清潔にしておいてください。耳垢なども取り除いてください。

1. 電源ボタンを押し電源をOnにします。
2. 耳に沿ってゆっくりと動かし、耳からはみ出ているムダ毛を除去します。
3. 鼻毛・耳毛トリマーを注意深く耳へ挿入します。
4. 本体をゆっくりと回転させ、耳のムダ毛を除去します。
5. 使用後は鼻毛・耳毛トリマーをお手入れします。「鼻毛・耳毛トリマーのお手入れ方法」(P.28)をご参照ください。



お手入れ方法



注意

- 本製品や部品を食器洗浄機で洗わないでください。
- シェービングユニットは水洗いできますが、本体は水中に浸けないでください。
- シェービングユニットを乾燥させる時に、タオルやティッシュペーパーを使用しないでください。刃を傷める場合があります。

シェービングユニットのお手入れ方法

※お手入れの際は、電源をOffにしてから水洗いしてください。

※研磨パッドや研磨剤を含んだ洗剤、またエアダスターは使用しないでください。

※ぬるま湯(40℃前後)でのお手入れをおすすめします。臭いのもととなる皮脂や汗などが取れやすくなります。ただし、熱湯はお止めください。故障の原因となります。

※お手入れ中にシェーバーの底から水が漏れてくる場合がありますが、異常ではありません。

1. シェービングユニット表面の汚れをぬるま湯で洗い流します。



2. シェービングユニットリリースボタンを押して、シェービングユニットを開きます。



3. シェービングヘッドホルダー受部の汚れをぬるま湯で洗い流します。



4. シェービングヘッドホルダーの内側の汚れをぬるま湯で洗い流します。



5. シェービングユニットを閉じます。



6. シェービングヘッドホルダーの水を切り、しっかり乾燥させます。



シェービングユニットのお手入れ方法(分解+水洗い)

※1カ月に1度、またはシェーバーの切れ味が落ちてきたら、シェービングヘッドを分解して水洗いすることをおすすめします。

※シェービングユニットの掃除や着脱は、必ず電源をOffにしてから行ってください。

1. シェービングユニットリリースボタンを押して、シェービングユニットを開きます。



2. シェービングヘッドホルダー内側とシェービングヘッドホルダー受部の汚れを水で洗い流します。




3. 内刃と外刃を取り外します。詳しい手順については、「刃の交換」(P.32)をご参照ください。

※内刃と外刃は1組になっているため、一度に2組以上の内刃と外刃をクリーニングしないでください。外刃と内刃の組み合わせが変わると、最適な性能に戻るまで数週間かかる場合があります。

4. 内刃を外刃から取り外し、流水で洗います。

5. 水を切ります。



6. 内刃と外刃をシェービングユニットに取り付けます。詳しい手順については、「刃の交換」(P.32)をご参照ください。

7. シェービングヘッドホルダーの金具をシェービングヘッドホルダー受部のくぼみに差し込み、シェービングユニットを閉じます。



ポップアップトリマーのお手入れ方法

※詰まりや損傷を防ぐため、使用後は必ずトリマーをクリーニングしてください。

※トリマーはタオルやティッシュペーパーなどでふかないでください。刃を傷めたり思わぬけがをすることがあります。

1. トリマーリリーススイッチを下方に押し、ポップアップトリマーを開きます。



3. 水を切り、トリマーを自然乾燥させます。

2. 温水でトリマーを洗浄します。




4. ポップアップトリマーを閉じます。

鼻毛・耳毛トリマーのお手入れ方法

※鼻毛・耳毛トリマーは、使用後必ずお手入れしてください。

1. トリミングヘッドは電源をOffにし、ぬるま湯または水で付着した汚れを洗い流します。



3. ぬるま湯を入れたガラスの中にトリミングヘッド部を入れ、2分程度置いた後電源をOnにすると、より効果的なお手入れが可能です。



※トリミングヘッド部以外は入れないでください。

2. 再び電源をOnにし、もう一度ぬるま湯または水で残っているムダ毛を除去します。その後電源をOffにします。



4. トリミングヘッドの余分な水を切り、よく乾かします。



※鼻毛・耳毛トリマーはタオルやティッシュペーパーなどでふかないでください。刃を傷めたり思わぬけがをすることがあります。

クイッククリーンポッドの 使いかた


※ XP9203/32、XP9204/30、XP9201/30、
XP9202/20、XP9201/20のみ

警告

- クイッククリーンポッドカートリッジ内のクリーニング液を万一飲み込んだり、目に入ったりした場合は応急処置を行い医師に相談してください。
- クイッククリーンポッドカートリッジはお子様の手が届かない場所に保管してください。

クイッククリーンポッドの準備


1. クイッククリーンポッドのキャップを回して取り外します。




2. クイッククリーンポッドカートリッジのキャップを回して取り外します。




3. シールのつまみを持ち上げ、シールを端から引き上げてクイッククリーンポッドカートリッジから剥がします。




4. クイッククリーンポッドカートリッジのつまみの円状の部分を押して、つまみのツメを外します。



5. クイッククリーンポッドカートリッジをクイッククリーンポッドに入れます。



6. クイッククリーンポッドのキャップを再度取り付け、カチッと音がするまで時計回りに回します。



※ 液漏れする場合がありますので、クイッククリーンポッドを傾けないでください。

クイッククリーンボッドの使いかた


※シェービングフォームやシェービングジェルの使用後に、クイッククリーンボッドで洗浄をされる場合は、ぬるま湯または水でしっかりと洗い流してください。

※クイッククリーンボッドには、専用のクイッククリーンボッドカートリッジ以外は使用しないでください。
専用のクイッククリーンボッドカートリッジに水を足したり専用のクイッククリーンボッドカートリッジの代わりに水や他の液を使用すると、故障の原因となりますのでお止めください。

※フィリップスの専用クイッククリーンボッドカートリッジをご使用ください。フィリップスの専用クリーニング液（ボトルタイプ）を入れてご使用いただくことはできません。

※クイッククリーンボッドのお手入れは、水洗いまたは水で濡らした布を絞って拭き取ってください。食器洗浄機で洗わないでください。

1. シェーバーを上下逆さまにしてクイッククリーンボッドに入れます。



2. シェーバーの電源をOnにしてクリーニングを開始します。

※クリーニングには約1分かかります。クリーニング中は洗浄ランプが点灯し、青いマークが点滅します。




3. シェーバーをクイッククリーンボッドに入れたまま自然乾燥させ、乾いてから保管します。

注意

- クイッククリーンボッドは平らな所に設置してご使用ください。
- クイッククリーンボッド内にクリーニング液が入っている状態で、クリーニングボッドを移動させないでください。


クイッククリーンポッドカートリッジの交換




クイッククリーンポッドにクイッククリーンポッドカートリッジ交換お知らせが表示されるか、以下の表に示す交換時期が来たら、クイッククリーンポッドカートリッジを交換してください。

使用頻度	使用回数	クイッククリーンポッド カートリッジの交換時期
毎日	約30回	月に1回
週に2～3回	約20回	2カ月に1回
週に1回	約13回	3カ月に1回
月に1回	約3回	3カ月に1回

- クイッククリーンポッドのキャップを回して取り外します。




- クイッククリーンポッドカートリッジのつまみを持って、クイッククリーンポッドから持ち上げます。



- 新しいクイッククリーンポッドカートリッジをクイッククリーンポッドに装着します。

※クイッククリーンポッドカートリッジの廃棄については、お住まいの地域の条例などに従って廃棄してください。



刃の交換

※シェービング性能を維持するために、刃は2年ごとに交換することをおすすめします。
※交換する際は、必ずフィリップス社製の専用の替刃(品番: SH92)とお取り替えてください。
※刃を交換する際は、電源をOffにしてください。

1. シェービングユニットのリリースボタンを押して、シェービングユニットを開き、シェービングヘッドホルダーを引き抜きます。



2. シェービングヘッドホルダー裏側の保持板を反時計回りに回して取り外します。他の保持板も同様に外します。



3. シェービングヘッドホルダーから内刃と外刃を取り外します。



4. 新しい替刃をシェービングホルダーに取り付けます。



5. 保持板をシェービングヘッドに再度取り付け、時計回りに回します。



各保持板には、シェービングヘッドホルダーの突起部分にぴったりとはまる2つのくぼみがあります。カチッと音がするまでリングを時計回りに回して固定します。



6. シェービングヘッドホルダーの金具をシェービングヘッドホルダー受部のくぼみに差し込み、シェービングユニットを閉じます。



保管のしかた

シェーバーやアタッチメントを保管する前にきちんと乾燥させてください。

- シェーバーを収納ケースに入れて保管してください。

※室温10℃～35℃の環境で保管してください。

※直射日光の当たる場所には保管しないでください。

※夏場、車の中には放置しないでください。

※お客様による充電電池の
修理交換はできません。

シェーバーを 廃棄するとき

製品を廃棄する際は、リチウムイオン充電電池を取り出し、充電電池を取り外した後の製品については、各自治体の廃棄方法に従い廃棄してください。

リチウムイオン充電電池のリサイクルについて

このシェーバーはリチウムイオン充電電池を使用しています。

リチウムイオン充電電池はリサイクル可能な貴重な資源です。

使用済みの製品の廃棄の際はリチウムイオン充電電池を取り出してください。

取り出したリチウムイオン充電電池は各自治体の廃棄方法に従い廃棄するかリサイクル協力店にお持ちください。



- 製品を廃棄するとき以外は、絶対に本体を分解しないでください。
- 安全上の理由から、一度分解した本体は絶対に再使用しないでください。
- 充電電池は完全に放電してから、取り外してください。また、ショートの原因を防ぐために、作業時にはコインやヘアピン、指輪等の金属製の物体を充電電池に近づけないようにしてください。
- 作業を行う際は、目、手、指などけがのないよう注意してください。また、必ず手・本体が乾いた状態で作業を行ってください。
- 本体内部の金具は鋭いので、ご注意ください。
- 電池が液漏れした場合は、液が目や皮膚に触れないように注意してください。万が一目に入った時は、こすらずに水道水で十分洗浄し医師の診察を受けてください。皮膚や衣服に付いた場合は水道水で十分洗い流してください。
- 取り外した充電電池は、ショートしないように両端子をテープで覆ってください。

充電電池の取り外しかた

電源のOn・Offを何回か繰り返し完全に動作しなくなるまで充電電池を放電させてから、行ってください。



1. シェービングユニットを回して本体から取り外します。



5. モーターユニットをスライドさせて本体から取り外します。



2. 本体下部のネジをマイナスドライバーで外します。



6. 側面のツメを外し、モーターユニットの透明カバーを取り外します。



3. 本体背面のトリマーとフロントパネルの間にマイナスドライバーを差し込んで、フロントパネルを曲げて取り外します。



7. マイナスドライバーでディスプレイカバーを取り外します。



4. 背面カバーとモーターユニットの間にマイナスドライバーを差し込んでツメを外します。



8. 充電電池ホルダーを持ち上げてニッパでワイヤーを切断し、取り出します。



9. 充電電池ホルダーのツメを外し、充電電池を取り出します。

故障かな？と思ったら、
お調べください。

故障かな？ と思ったら

だんだん切れ味が悪くなった

- シェービングヘッド部が汚れていないか確認してください。
- シェービングヘッド部が損傷または摩耗していないか確認してください。
損傷または摩耗しているときは、シェービングヘッドを交換してください。
(替刃品番:SH92)
- シェービングヘッドに長いヒゲがからまっていないか確認してください。
- 専用クイッククリーンポッドカートリッジが汚れていないか確認してください。汚れているときは、新しいクイッククリーンポッドカートリッジに交換してください。

充電しても使用時間が極端に短い

- シェーバーが完全に止まるまで作動させてから、もう一度充電してください。
それでも改善されないときは、充電電池の寿命です。

シェーバーの電源ボタンを押しても作動しない

- シェーバーに充電アダプタが接続されている場合は充電アダプタを外してください。
- 充電がされていない場合は約1時間、充電をしてください。
- カギマーク  が表示される場合はロックを解除してください。
- 刃が破損している場合は交換をしてください。

シェーバー本体のモーターは回転しているが、内刃が回転しない

- 外刃にキズ、ヘコミがある場合はシェービングヘッドを交換してください。
(替刃品番:SH92)

充電できない

- シェーバー本体や充電スタンドの電源コネクタ受部に充電アダプタのコードがきちんと差し込まれているか確認してください。
- 充電ケーブルが断線している場合は新しい充電ケーブルをお買い求めください。


クイッククリーンポッドを使用してもシェーバーがあまりきれいにならない

- シェーバー本体が正しくセットされているか確認してください。
- 専用クイッククリーンポッドカートリッジが使用されているか確認してください。
- 専用クイッククリーンポッドカートリッジが古くなっていないか確認してください。
- 専用クイッククリーンポッドカートリッジが空になっていないか確認してください。

クイッククリーンポッド本体から洗浄液がこぼれる


- クイッククリーンポッド使用前に水洗いした場合は、余分な水を落としてからセットしてください。
- シェービングフォームやシェービングジェルを使用してシェービングした後にクイッククリーンポッドで洗浄をされる場合は、事前にシェーバーのシェービングユニットをぬるま湯または水でしっかりと洗い流してください。
- カートリッジから洗浄液が溢れ、クイッククリーンポッド内に洗浄液が溜ることがありますが、故障ではありません。

以上の点検により、正常な状態に戻らない場合は、
フィリップスサポートセンターにお問い合わせください。

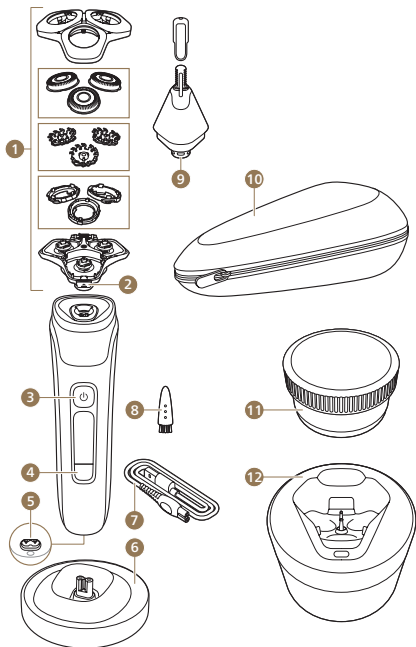

Important to know

Unplug for use

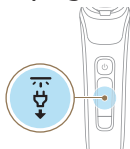

This product is waterproof. It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the product can therefore only be used without cord. The 'unplug for use' symbol flashes to remind you to disconnect the supply unit from the wall socket and remove the small plug from the product before you switch it on.

Taking care of your shaver

Maintenance is key for a long lasting shaving performance. Therefore it is important to clean your shaver on a regular basis.

After each shave: Rinse the outside of the shaving unit with lukewarm water (see 'Cleaning the shaver after each use.').

Once a month: Perform the thorough cleaning routine where you take apart the shaving unit and clean the separate components thoroughly (see 'Thorough cleaning').

Important safety information



Only use the product for its intended household purpose. Read this important information carefully before you use the product and its batteries and accessories, and save it for future reference. Misuse can lead to hazards or serious injuries. The accessories supplied may vary for different products.

Warning

- To charge the product, only use a certified safety extra low voltage (SELV) supply unit with output rating 5 V, ≥ 1 A. For safe charging in a moist environment (e.g. in a bathroom), only use an IPX4 (splash-proof) supply unit. A suitable supply unit (e.g. Philips HQ87) is available via www.philips.com/support. If you need support finding the correct USB supply unit, contact the Consumer Care Center in your country (see the international warranty leaflet for contact details). Using a non-certified supply unit may cause hazards or serious injuries.



- Keep the USB cable, the USB supply unit and the charging stand (if provided) dry.



- This shaver is waterproof. It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the shaver can therefore only be used without cord.
- Do not modify the supply unit.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Unplug the shaver before cleaning it with water.
- Do not use a damaged appliance. Replace damaged parts with new Philips parts.

- Only use cold or lukewarm water to clean the appliance.
- Because of hygiene, only one person should use the appliance.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids to clean the appliance.
- Always place the cleaning system on a stable, level and horizontal surface to prevent leakage.
- Always make sure the cartridge compartment is closed before you use the cleaning system.
- Water may drip from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.
- Do not use the product on damaged skin or skin affected by disease or severe skin irritation without consulting your doctor.
- Be careful when handling your smartphone near water and in moist environments.
- The radio waves of Bluetooth-enabled products may impair the operation of pacemakers and other medical devices. Consult your physician for advice and keep the product at least 20 cm away.

English

- Only use original Philips accessories or consumables.
- Charge, use and store the product at a temperature between 10 °C and 35 °C.
- Keep product and batteries away from fire and do not expose them to direct sunlight or high temperatures.
- If the product becomes abnormally hot or smelly, changes color or if charging takes longer than usual, stop using and charging the product and contact Philips.
- Do not place products and their batteries in microwave ovens or on induction cookers.
- Do not open, modify, pierce, damage or dismantle the product or battery to prevent batteries from heating up or releasing toxic or hazardous substances. Do not short-circuit, overcharge or reverse charge batteries.
- If batteries are damaged or leaking, avoid contact with the skin or eyes. If this occurs, immediately rinse well with water and seek medical care.

Philips Quick Clean Pod Cartridge fluid

- Keep out of reach of children.
- Do not swallow.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General description

- 1 Shaving unit
- 2 Shaving unit release button
- 3 On/off button
- 4 Menu button
- 5 Socket for small plug
- 6 Charging stand
- 7 USB cable

Note: A suitable power source (e.g. Philips HQ87) is available via www.philips.com/support.

- 8 Cleaning brush
- 9 Click-on nose trimmer attachment
- 10 Travel pouch
- 11 Quick Clean Pod Cartridge
- 12 Quick Clean Pod

The accessories supplied may vary for different products. The box shows the accessories that have been supplied with your product.

English

Get started



Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at **www.philips.com/welcome** or via the app.

What do the icons on the display mean?

- Main Menu



You can toggle through the menu items by pressing the menu button.

You can also activate or deactivate certain features with a long press.

Icon

Meaning



This menu shows the status of the battery in percentages.



You can activate or deactivate the travel lock in this menu (see 'Travel lock').



You can deactivate or reactivate the light ring feedback in this menu.

- Switching the shaver on



Press the on/off button to switch on the shaver.

- Bluetooth

Icon	Meaning
	This icon shows that your shaver is paired to your smartphone.
	This icon will appear after you unpair your shaver from your smartphone.

- Warnings and notifications

Icon	Meaning
 	The battery is almost empty and you need to charge your shaver.
 	When the data storage is almost full, you receive a notification reminding you to synchronize your shaves. To prevent data loss, synchronize the shaver with the app.
 	The shaving unit is soiled or damaged to such an extent that the motor cannot run. Clean the shaving heads thoroughly (see 'Thorough cleaning').
 	You are using the wrong power cord. Only use the power cord that is supplied with the shaver.

- Cleaning the shaver

Icon	Meaning
	A reminder: clean your shaver in the quick cleaning pod (see 'How do I use the Quick Clean Pod?').
	A reminder: clean your shaver (see 'How do I clean my shaver?').
 	The cleaning process is in progress and the display shows the remaining cleaning time as a clock, or in seconds, if you press the menu button.
	The cleaning process has been interrupted.

- Unplug for use

Icon	Meaning
	Unplug the shaver before you use it.

Shaver menu

You can toggle through the menu functions by pressing the menu button.

Remaining battery charge



This menu item shows the remaining battery charge.

Post-shave feedback



Note: This menu is displayed only after you activate this feature via the app settings.

You can optimize your shaving experience by applying the right motion and amount of pressure (see 'Shaving'). This item shows the **star rating** of your last shave. It tells whether the pressure and motion you applied during the shave was good, or could be improved.

Travel lock



When you are going to travel, you can lock the shaver to prevent it from accidentally switching on. In this menu, press and hold the menu button for 3 seconds to lock or unlock your shaver. When the travel lock is activated, Bluetooth will be switched off automatically and your shaver will be in energy saving mode.

Light ring on/off



During your shave, you receive feedback on how much pressure you are applying via the light ring at the top of your shaver handle. The light ring is active by default. You can deactivate or reactivate it.

To **deactivate** the light ring feedback,

- 1 Toggle through the menu items by pressing the menu button until you reach the 'Light on' menu.
- 2 While you are in the 'Light on' menu, press and hold the menu button for 3 seconds until you see 'Light off' on the display.

To **reactivate** the light ring feedback,

- 3 Toggle through the menu items by pressing the

menu button until you reach the 'Light off' menu.

- 4 While you are in the 'Light off' menu, press and hold the menu button for 3 seconds until you see 'Light on' on the display.

Note: Light ring feedback is only available when the shaving unit is attached to the handle.

Bluetooth



Note: The Bluetooth menu is displayed only when your shaver is paired to your smartphone.

Here you can unpair your shaver and smartphone. To learn the benefits of pairing your shaver and smartphone, see 'Benefits of connecting your shaver to the app'.

Note: Make sure your smartphone is equipped with **Bluetooth**® 4.2 or higher.

This shaver is equipped with **Bluetooth**® 4.2 and higher to connect to the app. When you have paired your shaver and smartphone, Bluetooth on your shaver is switched on automatically, even when the shaver is switched off. This allows your shave data to be synced later so you don't need to take your smartphone with you when you shave.

Note: You can switch off Bluetooth on your shaver by activating the travel lock.

Get connected

Benefits of connecting your shaver to the app

You can use the app to:

- Receive real-time motion and pressure feedback and guidance,
- Activate and customize post-shave feedback,
- Synchronize your shave data and track your shave history,
- Improve your shave routine and reduce shaving-related skin issues,
- Receive personalized advice and recommendations on style.


Pair the shaver and smartphone




The app is compatible with a wide range of iPhone and Android™ smartphones.

More information is available at **www.philips.com/MyShaveri9000Prestige**

- 1 Download the app.
- 2 Make sure Bluetooth on your smartphone is switched on.

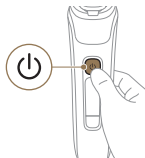

- 3 Switch on the shaver to activate Bluetooth.
- 4 Open the app and follow the instructions to start the pairing process.

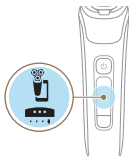

- 5 Once paired, the shaver and app connect automatically when the app is open and Bluetooth on your phone is switched on.

Note: When your shaver is paired with a smartphone, the Bluetooth menu appears as a new item.

Synchronize your shaves

This shaver stores your shave data so you don't need to take your smartphone with you when you shave or want to check your shave data at a later stage. When the data storage is almost full, you receive a notification reminding you to synchronize your shaves. To prevent data loss, synchronize the shaver with the app.

- 1 Make sure your phone is close to the shaver and open the app.
- 2 The app connects automatically and synchronizes your last shaves.

Unpair the shaver and smartphone

You can pair your shaver with only one smartphone at a time. To unpair your shaver from your smartphone (e.g. when you get a new smartphone), follow these steps:

- First, unpair your shaver



- 1 Toggle through the menu items by pressing the menu button until you reach the Bluetooth menu.



- 2 Press and hold the menu button until you are presented with a cross and check mark selection.



- 3 Select the check mark by pressing the menu button again to unpair your shaver.

Note: When your shaver is paired with a smartphone, the Bluetooth menu appears as a new item. When it is unpaired, this menu will disappear.

Note: When your shaver is successfully unpaired, Bluetooth icon will briefly appear on the shaver display.

Note: When you want to pair your shaver and smartphone again, make sure that both are unpaired first.


- **Then, unpair your smartphone**

- 4 Go to the settings on your smartphone and select Bluetooth.
- 5 Tap on the name of the shaver.
- 6 Tap 'forget' or 'unpair'.

Note: The unpairing procedure may vary by smartphone. Please check your smartphone manual for more information.

How do I charge my shaver?

Note: This product is waterproof. It is suitable for use in the bath or shower and for cleaning under the tap with water. For safety reasons, this product can only be used without cord.




- Charge the product before you use it for the first time and when the display shows that the battery is (almost) empty.
- Charging takes approx. 1 hour.

- **Quick Charge:** After approx. 5 minutes of charging, the battery contains enough energy for one full shave.
- When the product is fully charged, it has a cordless operating time of up to 60 minutes.

Note: You cannot use the product while it is charging.


Danger: Keep the USB cable and the USB power source dry.

Charging with the supply unit

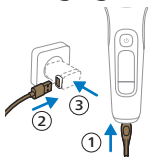

- 1 Insert the small plug of the USB cable into the socket in the bottom of the appliance.
- 2 Insert the USB plug into the USB supply unit (not provided).
- 3 Insert the USB supply unit into the wall socket.
 - While the appliance charges, an animation appears on the display showing the progress.
 - When the appliance is fully charged, the battery percentage shows 100 % and the battery icon shows the battery being full.
- 4 After charging, remove the USB supply unit from the wall socket, pull the USB plug out of the supply unit and then pull the small plug out of the appliance.

Charging with the charging stand

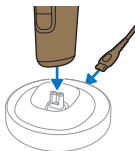

- 1 Make sure that the appliance is switched off.
- 2 Insert the small plug of the USB cable into the charging stand. And place the shaver in the charging stand to start charging.

- While the appliance is charging, an animation appears on the display showing the progress.
 - When the appliance is fully charged, the battery percentage shows 100 % and the battery icon shows the battery being full.
- 3 After charging, remove the supply unit from the wall socket and pull the small plug out of the appliance.

Shaving guidance


Your shaver is equipped with multiple features to optimize your shaving routine:

- Light guidance
- Post-shave feedback


Light guidance

During your shave, you receive feedback on how much pressure you are applying via the light ring at the top of your shaver handle.


The light ring on the handle lights up in various colors during your shave to give you feedback on how much pressure you are exerting. This feature is active by default.

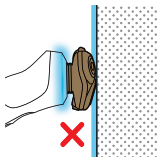Light effect**Meaning**

Too little pressure is being applied. Apply more pressure.

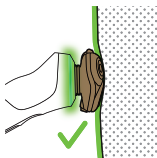

The right amount of pressure is being applied

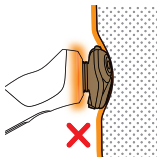

Too much pressure is being applied. Reduce pressure.

You can deactivate or reactivate this feature in the Light ring on/off menu.

Note: Light ring feedback is only available when the shaving unit is attached to the handle.

Post-shave feedback

Note: This feature is activated via the app settings.

You can optimize your shaving experience by applying the right motion and amount of pressure (see 'Shaving'). Your shaver gives you a **star rating** on motion and pressure applied during your last shave. Once this feature is activated,

- A new menu item for post-shave feedback appears on your shaver.



- After each shave, once you switch off your shaver, you see instant feedback on **pressure**,



- or **motion**,



- or both.




- When you navigate through the menu later, you see both the motion rating and pressure rating of your last shave in the new menu item.

How do I use my shaver?

Shaving

You can use this appliance either wet or dry, or even in the shower. For a wet shave, apply some water and shaving foam or gel to your skin and rinse the shaving heads under the tap with warm water before following the steps below.

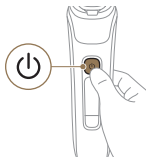


- 1 Switch on the appliance.



- 2 Move the shaving heads over your skin in circular movements to catch all hairs growing in different directions. Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: Do not press too hard, as this can cause skin irritation. When you apply too much pressure, the light ring lights up orange. The different colors of the light ring have different meanings (see 'Light guidance').

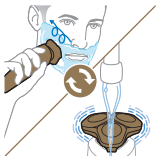

Note: If you are shaving with gel or foam, rinse the shaving unit regularly during your shave to ensure that it continues to glide smoothly over your skin.

- 3 Use the narrow sides of the shaving unit to shave in hard-to-reach areas such as along your jawline and under your nose.
- 4 Switch off and clean the appliance after each use.

Note: Make sure you rinse all foam or shaving gel off the appliance.

When you are finished shaving and switch off your shaver, you can also receive feedback about your overall shave on the handle (when activated in app). You can personalize your feedback settings, see more detailed feedback and get personalized advice via the app.

Skin adaptation period

Your first shaves may not bring you the result you expect and your skin may even become slightly irritated. This is normal. Your skin needs time to adapt to any new shaving system. Follow the advice provided by the app and shave regularly (at least 3 times a week) with this shaver for a period of up to 3 weeks to allow your skin to adapt to the new shaver.

Cleaning reminder




When you switch off the product, the cleaning reminder flashes to remind you to clean the product (see 'How do I clean my shaver?').

- Clean the product (see 'How do I use the Quick Clean Pod?') and attachments after each use (see 'How do I clean my shaver?') to prevent clogging and damage.
- Clean the shaving heads thoroughly once a month or when the product does not shave as well as it used to (see 'Thorough cleaning').

Trimming

You can use the trimmer to groom your sideburns and moustache.

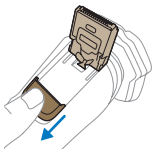

- 1 Push the trimmer release slide downwards to open the trimmer.
- 2 Switch on the appliance.



- 3 Hold the trimmer perpendicular to the skin and move the appliance downwards while you exert gentle pressure.



- 4 You can also use the trimmer under your nose.
- 5 Switch off the appliance and clean the trimmer after each use to prevent clogging and damage (see 'How do I clean my shaver?').
- 6 Close the trimmer.

Using the click-on attachments


Note: The accessories supplied may vary for different products. The box shows the accessories that have been supplied with your product.

All click-on attachments can be attached and detached in the same way.



To detach the shaving unit or other click-on attachment:

Twist (1) and pull (2) the shaving unit or other attachment to remove it from the handle.

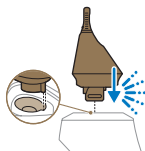

To attach a click-on attachment or shaving unit:

Insert the lug of the attachment into the slot in the top of the appliance. Then press down the attachment to attach it to the appliance ('click').

Using the nose/ear trimmer attachment

You can use the nose/ear trimmer attachment to trim your nose and/or ear hair.

Trimming nose hair

Make sure both the nose/ear trimmer attachment and nasal passages are clean before trimming.

1 Click the nose/ear trimmer attachment onto the handle

English

- 2 Switch on the appliance.
- 3 Carefully insert the trimming head into one of your nostrils.

Do not insert the attachment more than 0.5 cm into your nostrils.



- 4 Slowly move the trimming head around inside each nostril, making sure the side of the tip is held firmly against the skin. This reduces the tickling effect that can occur.
- 5 Switch off the appliance and clean the attachment after use.


Dried nasal mucus can block the cutting element, preventing the appliance from switching on. If the cutting element is blocked, clean the attachment (see 'How do I clean my shaver?').

Trimming ear hair

Make sure your outer ear channels are clean and free from wax.

- 1 Switch on the appliance.
- 2 Slowly move the trimming head along the rim of the ear to remove hairs that stick out beyond the rim.
- 3 Carefully insert the trimming head into the outer ear channel.

Do not insert the trimming head more than 0.5 cm into your ear channel, as this could damage the eardrum.

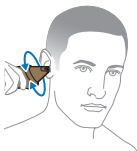

- 1 Slowly turn the trimming head around to remove all unwanted hairs from your outer ear channel.
- 2 Switch off the appliance and clean the attachment after use.

How do I clean my shaver?

Clean the product and the attachments after each use for optimal performance.

Cleaning the shaver after each use.

Clean the shaver after each use to prevent clogging and damage.

While rinsing the shaving unit, water may drip out of the base of the shaver. This is a normal occurrence.



- 1 Switch on the shaver.
- 2 Rinse the shaving unit under a warm tap.



- 3 Switch off the shaver. Press the release button to open the shaving unit.



- 4 Rinse the hair chamber under a warm tap.



- 5 Rinse the shaving head holder under a warm tap.



- 6 Close the shaving unit.



- 1 Carefully shake off excess water and let the shaving head holder air-dry completely.


Thorough cleaning

We advise you to clean the shaving heads thoroughly once a month, when the shaver does not shave as well as it used to or when the deep clean notification appears on the display.




- 1 Make sure that the appliance is switched off and disconnected from the wall socket.
- 2 Press the release button on the shaving unit and pull the shaving head holder off the shaving unit.
- 3 Rinse the hair chamber and shaving head holder under the tap.
- 4 Remove the shaving heads (see 'How do I replace the shaving heads?').

Note: Do not clean more than one cutter and guard at a time, since they are all matching sets. If you accidentally put a cutter in the wrong shaving guard, it may take several weeks before optimal shaving performance is restored.

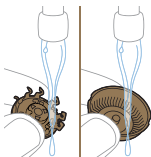



- 5 Clean the cutter and guard under the tap.
- 6 Shake off excess water.
- 7 Put the shaving heads back into the shaving head holder. (see 'How do I replace the shaving heads?')
- 8 Insert the hinge of the shaving head holder into the slot in the top of the shaving unit and close the shaving unit.



Cleaning the pop-up trimmer

Clean the trimmer after each use to prevent clogging and damage.

Caution: Never dry the trimmer teeth with a towel or tissue, as this may damage the trimmer teeth.

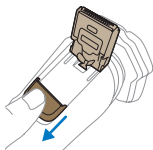

- 1 Make sure that the appliance is switched off and disconnected from the wall socket.
- 2 Push the trimmer release slide down to open the pop-up trimmer.
- 3 Switch on the appliance and rinse the pop-up trimmer with warm water.
- 4 After cleaning, switch off the appliance.

- 5 Carefully shake off excess water and let the pop-up trimmer air dry.
- 6 Close the trimmer.

Tip: For optimal performance, lubricate the teeth of the pop-up trimmer with a drop of mineral oil every six months (oil not included).

Cleaning the click-on attachments


Never dry the trimmer or beard styler attachments with a towel or tissue, as this may damage the trimming teeth.

The accessories supplied may vary for different products. The box shows the accessories that have been supplied with your product.

Cleaning the nose trimmer attachment

Clean the nose trimmer attachment every time you have used it.

- 1 Make sure the product is switched off.
- 2 Rinse the cutting element with hot water.

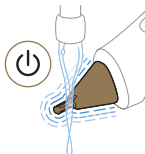

- 3 Switch on the appliance and rinse the cutting element once more to remove any remaining hairs. Then switch off the appliance again.




- 4 Carefully shake off excess water and let the nose trimmer attachment dry.


Tip: For optimal trimmer performance, lubricate the trimmer teeth with a drop of sewing machine oil every six months.

How do I use the Quick Clean Pod?


Preparing the Quick Clean Pod for use

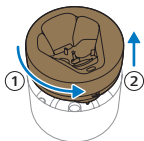


- 1 Twist and remove the top of the Quick Clean Pod.

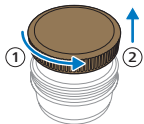


- 2 Twist the lid off the Quick Clean Pod Cartridge.

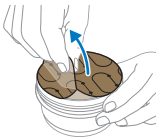


- 3 Lift the tab on the seal and pull it by the corner to remove the seal from the Quick Clean Pod Cartridge.

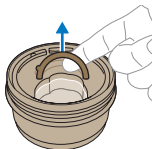

- 4 Press the small round snap hook on the small handle of the Quick Clean Pod Cartridge and put the handle upright.

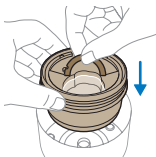

- 5 Place the Quick Clean Pod Cartridge into the Quick Clean Pod.

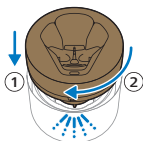

- 6 Put the top of the Quick Clean Pod back onto the base and turn it clockwise until you hear a click.


Do not tilt the Quick Clean Pod to prevent leakage.



Using the Quick Clean Pod

Note: If you use the shaver with shaving foam, shaving gel or pre-shave products, thoroughly rinse the shaving heads before you use the Quick Clean Pod (see 'How do I clean my shaver?').

Always shake excess water off the shaver before you place it in the Quick Clean Pod.

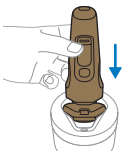

- 1 Place the shaver upside down into the Quick Clean Pod. While switched on, the shaver automatically detects that it is in the Quick Clean Pod.




- 2 Switch on the shaver to start the cleaning program.



Each cleaning program takes approximately one minute. During the cleaning program the remaining time is displayed as a countdown clock on the handle.


- 3 Let the shaver air-dry completely in the Quick Clean Pod before storing it.

Replacing the Quick Clean Pod Cartridge

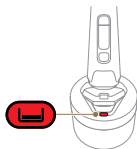


Replace the Quick Clean Pod Cartridge immediately when the cartridge replacement icon on the Quick Clean Pod becomes visible or follow the table below.


Frequency of use	Cycles	When to replace the Quick Clean Pod Cartridge
Every day	About 30	Every month
A few times per week	About 20	Every 2 months
Every week	About 13	Every 3 months
Every month	About 3	Every 3 months

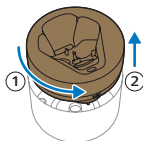

- 1 Twist and remove the top of the Quick Clean Pod.

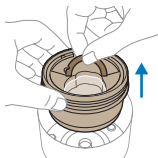

- 2 Lift the Quick Clean Pod Cartridge out of the Quick Clean Pod by the handle.

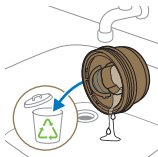

- 3 Pour any remaining fluid down a drain and recycle the empty cartridge in accordance with local waste regulations.



- 4 Place a new Quick Clean Pod Cartridge into the Quick Clean Pod.
Scan the QR code to the left or visit **www.philips.com/cleaning-cartridge** to order replacement Quick Clean Pod Cartridges.

Storage

- Be sure the shaver is switched off. Remove the USB cable from wall socket and the shaver before storing it in a safe, dry location where it will not be crushed, banged, or subject to damage.

English

- Do not wrap the USB cable around the shaver when storing.
- Store USB cable and other accessories in a safe location where these will not be cut or damaged.
- Do not place or store the shaver where it can fall or be pulled into a tub or sink, water or other liquid while plugged in.

Store the shaver:

- In the pouch (if supplied)
- on the charging stand (if supplied)
- In the Philips Quick Clean Pod (if supplied).

Note: We advise you to let the shaver and its attachments dry completely before you store them for the next use.

How do I replace the shaving heads?

For maximum shaving performance, we advise you to replace the shaving heads every two years.


Replace damaged shaving heads immediately.

Always replace the shaving heads with original Philips shaving heads (see 'Ordering accessories').


Replacing the shaving heads




- 1 Switch off the shaver.
- 2 Press the release button on the shaving unit and pull the shaving head holder off the shaving unit.

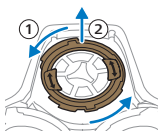


- 3 Turn the retaining rings counterclockwise and remove them. Place them aside in a safe place.

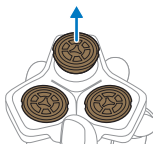


- 4 Remove the shaving heads (cutters and guards) from the shaving head holder. Discard the used shaving heads immediately to avoid mixing them with the new shaving heads.

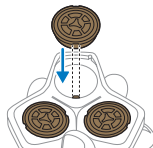


- 5 Place new shaving heads (cutters and guards) in the holder.

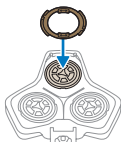

- 6 Place the retaining rings back onto the shaving heads and turn them clockwise to reattach the retaining rings.

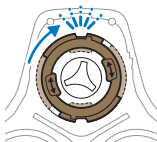

- Each retaining ring has two recesses that fit exactly into the projections of the shaving head holder. Turn the ring clockwise until you hear a click to indicate that the ring is fixed.



- 7 Insert the hinge of the shaving head holder into the slot in the top of the shaving unit and close the shaving unit.

Ordering accessories

To buy accessories or spare parts, visit **www.philips.com/parts-and-accessories** or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

The following accessories and spare parts are available:

- SH92 Philips shaving heads
- CC13 Cleaning cartridge 3-pack
- CC16 Cleaning cartridge 6-pack
- CC18 Cleaning cartridge 8-pack

Note: The availability of the accessories may differ by country.

Support

For all product support, please visit

www.philips.com/support.

Parts that are subject to normal wear (such as shaving heads and cutting units) are not covered by the international warranty.

Recycling



- This symbol means that electrical products and batteries shall not be disposed of with normal household waste.
- Follow your country's rules for the separate collection of electrical products and batteries.


Removal of built-in rechargeable battery

The built-in rechargeable battery must only be removed by a qualified professional when the appliance is discarded. Before removing the battery, make sure that the appliance is disconnected from the wall socket and that the battery is completely empty.


Take any necessary safety precautions when you handle tools to open the appliance and when you dispose of the rechargeable battery.

When you handle batteries, make sure that your hands, the product and the batteries are dry.


To avoid accidental short-circuiting of batteries after removal, do not let battery terminals come into contact with metal objects (e.g. coins, hairpins, rings). Do not wrap batteries in aluminum foil. Tape battery terminals or put batteries in a plastic bag before you discard them.




- 1 Twist (1) and pull (2) the shaving unit to remove it from the shaver handle.

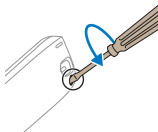


- 2 Remove the screw from the bottom of the shaver handle with a flat-head or torx 6 screwdriver.




- 3 Insert a flat-head screwdriver in between the front panel and the trimmer and tilt until the front panel is released. Bend the front panel forward.

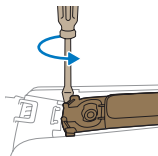


- 4 Insert a flat-head screwdriver in between the power unit and backshell to release the snap connections.

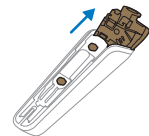


- 5 Slide the power unit out of the body.

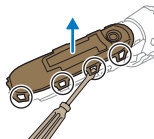


- 6 Bend the 8 snap hooks aside.



- 7 Remove the display of the power unit with a flat-head screwdriver.

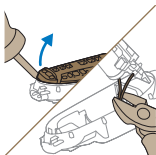

- 8 Lift out the battery holder and cut the wires with a pair of cutting pliers or scissors.

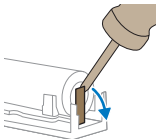

- 9 Bend the battery tags aside with a pair of cutting pliers or a screwdriver.
10 Remove the rechargeable battery.

Be careful, the battery strips are sharp.

Trademarks

Apple, the Apple logo, iPad, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Android is a trademark of Google LLC. Google Play and the Google Play logo are trademarks of Google LLC.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Koninklijke Philips N.V. is under license.

保証と アフターサービス

保証書と修理サービスについて (必ずお読みください)

【保証書・最終ページに付属】

- 保証書は、必ず「お買い上げ日・販売店名」等の記入をお確かめのうえ、販売店から受け取っていただき内容をよくお読みのあと大切に保管してください。

保証 期間	お買い上げ日から2年間
対象 部分	本体、充電ケーブル、充電 スタンド(シェービンググ ニット、クイッククリーン ボット、鼻毛・耳毛トリマー、 収納ケース、クリーニング ブラシを除く)

【補修用性能部品の保有期間】

- 補修用性能部品の保有期間は製造打ち切り後6年です。
- 性能部品とは、その製品の機能を維持するために必要な部品です。

【ご不明な点や修理に関するご相談は】

- 修理に関するご相談ならびにご不明な点は、フィリップスサポートセンターにお問い合わせください。

【修理を依頼されるときは】

- 修理をご依頼される前に、この取扱説明書をよくお読みいただき、再度点検ください。尚、異常のあるときはご使用を中止し、フィリップスサポートセンターにお問い合わせください。

【保証期間中は】

- 製品と保証書をご用意いただき、フィリップスサポートセンターにお問い合わせください。保証の規定に従って無料修理いたします。

【保証期間が過ぎているときは】

- 修理によって製品の機能が維持できる場合は、補修用性能部品の保有期間内であれば、ご希望により有料で修理させていただきます。

【海外での本製品の保証及びアフターサービスについて】

- 本製品の保証は海外においても有効です(同シリーズ製品の取り扱いがある国に限ります)。
- 日本国以外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができますが、この場合多少日数を要することもあります。
- 海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お困りの点がございましたら下記までご連絡ください。

Philips Service Department P.O.Box 20100 9200 Ca Drachten
The Netherlands, <http://www.philips.com/support>

【お客様の個人情報のお取り扱いについて】

- お受けしましたお客様の個人情報は、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「プライバシーに関する通知」に基づき適切に管理いたします。

お買い上げ日	年 月 日	お買い上げ店名	電話番号 ()
--------	-------	---------	----------

ご使用の時、このような症状はありませんか？

- 本体にさわると時々電気を感じる。
- こげくさい臭いがする。
- 電源コード部を動かすと通電したり、しなかったりする。
- その他の異常、故障がある。

このような症状の時は、故障や事故防止のため、電源をOffにし、充電アダプタをコンセントから外して、必ずフィリップスサポートセンターにお問い合わせください。



仕様

品番	XP9205/05	XP9204/30	XP9203/32	XP9202/20	XP9202/05	XP9201/30	XP9201/20	XP9201/05
ハンドル品番	XP9205	XP9204	XP9203	XP9202		XP9201		
替刃品番	SH92							
本体寸法 (高さ×幅×奥行)	約180×65×70 mm							
本体質量	約226 g							
電源方式	充電式							
定格入力	DC5 V 1 A							
充電時間	約1時間							
使用時間	約60分							
使用充電電池	リチウムイオン充電電池 (Li-ion)							
交換用クイッククリーン ボッドカートリッジ品番	CC13 (3個入り)、CC16 (6個入り)、CC18 (8個入り) ※XP9204/30, XP9203/32, XP9202/20, XP9201/30, XP9201/20のみ							

※改良の為、仕様を予告なく変更することがあります。

株式会社 フィリップス・ジャパン

〒106-0041 東京都港区麻布台 1-3-1 麻布台ヒルズ森JPタワー 15階



無料修理規定

【無料修理規定】

1. 取扱説明書、本体貼付ラベル等の注意書に従った正常な使用状態で保証期間内に故障した場合には、無料修理します。
2. 保証期間内に故障して無料修理をお受けになる場合には、フィリップスサポートセンターにお問い合わせください。
3. ご贈答品の修理に関するご相談は、フィリップスサポートセンターにお問い合わせください。
4. 保証期間内でも次の場合には有料修理になります。

- ① 使用上の誤り及び不当な修理や改造による故障及び損傷。
- ② お買い上げ後の輸送、移動、落下等による故障及び損傷。
- ③ 火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障及び損傷。
- ④ 一般家庭以外(例えば、業務用の長時間使用)に使用された場合の故障及び損傷。
- ⑤ 保証書の提示がない場合。
- ⑥ 保証書にお買い上げ年月日、お客様名、販売店名の記入のない場合、或は字句を書き換えられた場合。

※ 保証書は、本書に明示した条件のもとにおいて無料修理をお約束するものです。従って保証書を発行している者(保証責任者)、及びそれ以外の事業者に対するお客様の法律上の権利を制限するものではありません。

保証期間経過後の修理についてご不明の場合は、フィリップスサポートセンターにお問い合わせください。

※ 保証期間経過後の修理・補修用性能部品の保有期間について詳しくは取扱説明書の保証とアフターサービスの項目をご覧ください。

※ お客様にご記入いただいた個人情報(保証書の控え)は保証期間内のサービス活動及びその後の安全点検活動のために利用させていただく場合がございます。ご了承ください。また個人情報は、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「プライバシーに関する通知」に基づき適切に管理いたします。

フィリップス 電動シェーバー 保証書

Certificate of purchase

この保証書は、「無料修理規定」記載内容で無料修理を行うことをお約束するものです。お買い上げの日から下記期間中に故障が発生した場合は、フィリップスサポートセンターにお問い合わせください。お客様にご記入いただいた個人情報(保証書の控え)は、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp/>に掲載されている「プライバシーに関する通知」に基づき適切に管理いたします。

品 名	電動シェーバー
品 番	XP9205/05, XP9204/30, XP9203/32, XP9202/20, XP9202/05, XP9201/30, XP9201/20, XP9201/05
保 証 期 間	お買い上げ日より2年
対 象 部 分	本体、充電ケーブル、充電スタンド(シェービングユニット、クイッククリーンポッド、鼻毛・耳毛トリマー、収納ケース、クリーニングブラシを除く)
お買い上げ日	年 月 日
お 客 様	ご住所 〒
	ご芳名
	電話番号
販 売 店	販売店名・住所・電話番号

- 保証書は再発行しませんので、大切に保管してください。
- ご販売店様へ この保証書はお客様へのアフターサービスの実施と責任を明確にするものです。贈答品、記念品の場合も含めて必ず記入捺印してお客様にお渡しください。

製品の使用方法や修理に関するお問い合わせ

フィリップスサポートセンター

0120(944)859

受付時間 9:00~18:00(年末年始除く)

Webからの
お問い合わせ



MyPhilips登録のご案内



フィリップスでは、製品をより快適にご使用いただくために製品登録をおすすめしております。

MyPhilipsでは製品の保証書や購入証明書の写真も保管でき、万が一購入証明書を紛失された場合にも安心です。

URL <http://www.philips.co.jp/myphilips-about>

