

PHILIPS


7000


Power Flosser



7000 Power Flosser

7000 Power Flosser
& Toothbrush system

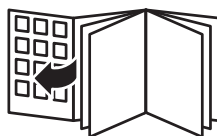

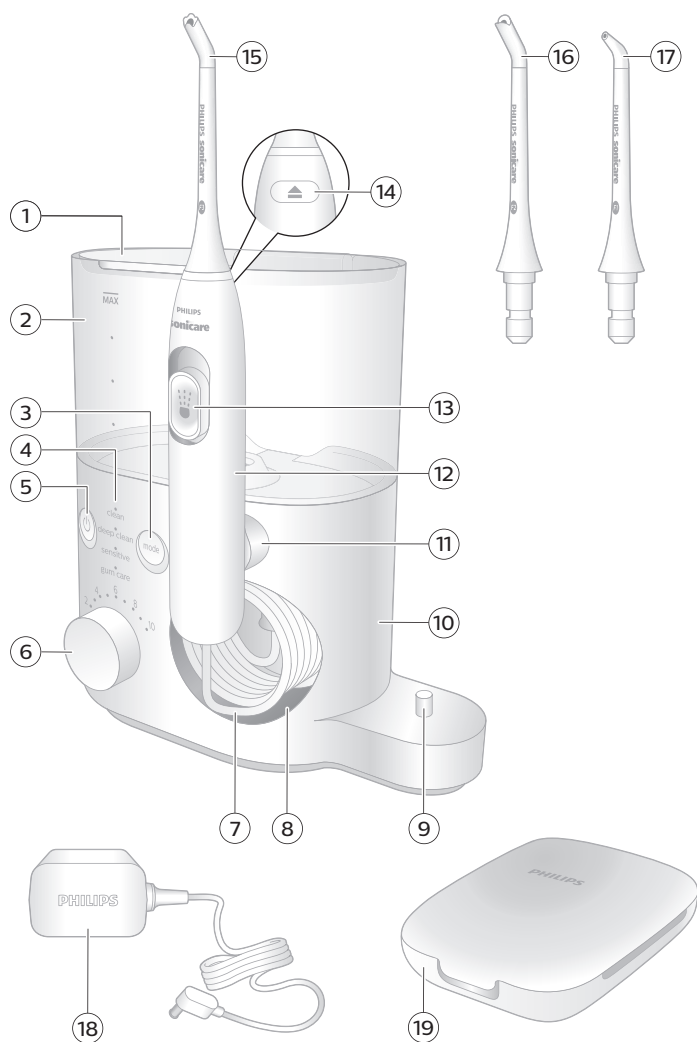

English 6

한국어 24

Important safety information

Read this important information carefully before you use the appliance and save it for future reference.

DANGER

- Keep the power adapter away from water.
- Do not place or store product where it can fall or be pulled into a tub or sink.
- Do not reach for a product that has fallen into water. Unplug immediately.
- Do not immerse the power adapter or base in water or any other liquid.
- After cleaning, make sure the power adapter is completely dry before you connect it to the mains.

WARNINGS

To reduce the risk of burns, electrocution, fire or injury to persons:

- Only use the power adapter (WAC1001) provided with the Power Flosser.
- If the product is damaged in any way (power adapter, base, handle, hose or nozzle), stop using it.
- Always replace the power adapter with one of the original type in order to avoid a hazard.
- Keep cord away from heated surfaces
- This appliance contains no user serviceable parts. If the appliance is damaged, contact the Consumer Care Center in your country (see 'Warranty and support').
- Do not use the product outdoors
- The maximum altitude of use is 4420 meters.

- This product is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
- Children (ages 6+) should be supervised to ensure that they do not play with the product.
- Do not fill the reservoir with hot water. Hot water may cause burns.
- Philips Sonicare Power Flosser or Power Flosser & Toothbrush System is a personal care device and is **not** intended for use by multiple users.
- If you are not going to use the product for an extended period of time, unplug it from the electrical outlet, clean it and store it in a cool and dry place away from direct sunlight.

CAUTION

- To avoid damage to the product, do not place the product or parts in the dishwasher for cleaning unless otherwise instructed.
- If you have had oral or gum surgery in the previous 2 months, consult your dentist before you use the Philips Sonicare Power Flosser.
- Consult your dentist if excessive bleeding occurs after using this toothbrush or if bleeding continues to occur after 1 week of use.
- The Philips Sonicare Power Flosser complies with the safety standards for electromagnetic devices. If you have a pacemaker or other implanted device, contact your physician or the manufacturer of the implanted device prior to use.
- If you have medical concerns, consult your doctor before you use the Philips Sonicare Power Flosser.

- This product has only been designed for cleaning teeth and gums. Do not use it for any other purpose. (for e.g. eyes, nose and ears). Stop using the appliance and contact your doctor if you experience any discomfort or pain.
- Do not use other nozzles than the ones recommended by Philips Sonicare.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Introduction

Welcome to Philips! Congratulations on your new Sonicare Power Flosser or Power Flosser & Toothbrush System. To fully benefit from the support that Philips offers, register your product at philips.com/welcome.

Intended Use

The Philips Sonicare Power Flosser or Power Flosser & Toothbrush System is an oral irrigator intended to remove plaque and food debris between teeth and the tooth surface in order to reduce tooth decay and improve and maintain gum health. This product is intended for consumer home use, normally used at least once a day. Use by children (ages 6+) should be with adult supervision.

Your Philips Sonicare Power Flosser (Fig. 1)

- 1 Reservoir lid
- 2 Reservoir
- 3 Mode button
- 4 Mode indicator

- 5 On/off button
- 6 Intensity dial
- 7 Hose
- 8 Hose storage compartment
- 9 Sonicare power toothbrush charger*
- 10 Base
- 11 Magnetic handle dock
- 12 Handle
- 13 Pause switch
- 14 Nozzle eject button
- 15 Quad Stream nozzle*
- 16 Comfort nozzle*
- 17 Standard nozzle*
- 18 Power adapter
- 19 Nozzle storage case

*Note: The contents of the box may not include all items shown depending on the product configuration purchased.

Nozzles

To see what type of nozzles you have, check the code at the base of the nozzle. Each nozzle type provides different benefits.



Nozzle label	F1	F2	F3
Nozzle Name	Standard nozzle	Comfort nozzle	Quad Stream nozzle

Benefit

Standard nozzle with a single stream of water for removing debris and plaque.

Soft rubber nozzle for comfort and ease of positioning for those with sensitive gums.

Soft rubber nozzle that directs water into a cross-shaped stream that gently removes plaque for an effortlessly thorough clean.

Modes

Your Power Flosser is equipped with 4 different modes:

Clean

This mode, with pacer, provides standard water pressure for a great clean.

Deep clean

This mode, with Pulse Wave technology, provides strong and gentle pulses of water for a thorough clean.

Sensitive

This mode, with Pulse Wave technology, provides gentle pulses of water for beginners or those with sensitive gums.

Gum care

This mode, with pacer, offers soothing pulses of water to massage your gums.

Note: For details on "Pulse Wave technology" and "pacer" (see 'Features').

Selecting modes

- 1 Turn on the device by pressing the on/off button.
- 2 Press the mode button to select desired mode.



Intensity Settings

Your power flosser comes with 10 different intensity settings. To manually change the intensity, turn on the base and turn the intensity dial to the setting you prefer.




Note: For first time use, start the device from the lowest setting. It is recommended to increase the intensity you use over the course of a few weeks. This can give better cleaning benefits as you are able to tolerate higher settings.

Features

Pacer

The **clean** and **gum care** modes have a pacer. This feature indicates when you are supposed to move to the next section of your mouth via a short pause in the waterflow.

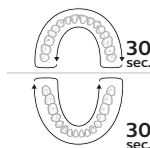

Note: This feature is on clean mode and gum care modes only.

Activating or deactivating pacer

You can activate or deactivate the pacer feature by holding the on/off button and the mode button simultaneously for 5 seconds.

- When deactivated, all the lights will flash once.
- When activated, all the lights will flash twice.

Pulse Wave technology

The **deep clean** and **sensitive** modes have a "Pulse Wave technology" feature. The flow of the water increases and decreases in intensity, providing a brief pause during which you can move the nozzle to the next space between your teeth.

Magnetic Docking

If the pause switch on the handle was not turned to the off position, when the handle is docked back to the base after use, the magnetic dock will automatically set the pause switch back to off.

Sonicare power toothbrush charger (Specific models only)

The Sonicare Power Flosser & Toothbrush System has an integrated charger for your Philips Sonicare Power toothbrush.

Charging your toothbrush on your Power Flosser & Toothbrush System

- 1 Place the handle on the charger.

- 2 The lights on your toothbrush handle will turn off when its battery is fully charged.

Note: See Sonicare power toothbrush charging instructions and charging times in the separate toothbrush manual.

Getting started

- 1 Connect the small plug into the bottom of the base and connect the power plug in any 100-240V power outlet.

- 2 Remove the reservoir from the base.


Note: Make sure the product is powered off before you remove the reservoir.

- 3 Open the lid, fill the reservoir with lukewarm water to the MAX fill line.



- 4 Close the lid. Place the reservoir back on the base.

Note: Press down firmly to ensure there is no gap between the reservoir and the base.

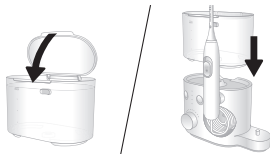

- 5 Insert your preferred nozzle into the handle. Press the nozzle down until you hear a "click".




- 6 Press the on/off button on the base station to turn on the product. Select your desired mode (see 'Modes') and intensity (see 'Intensity Settings').



- 7 Remove the handle from the base and point the tip of the nozzle into the sink. Slide the pause switch on the handle to the 'on' (up) position and wait until the water stream comes out of the tip of the nozzle. Stop the flow of water by sliding the pause switch to the 'off' (down) position.

Note: This step is for first time use after purchase only.

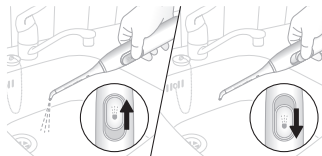

- 8 Press the on/off button on the base again to turn off the product.

Using your Power Flosser

- 1 Make sure that the pause switch on the handle is in the 'off' position.
- 2 Press the on/off button on the base to turn on the product.




- 3 Place the nozzle tip in your mouth. Lean over the sink and partially close your lips over the nozzle to avoid splashing. Leave enough space to allow water to flow from your mouth into the sink.



Standard and Comfort Nozzle


With the base station turned on:

- a Position the nozzle tip just above the gum line at a 90° angle.

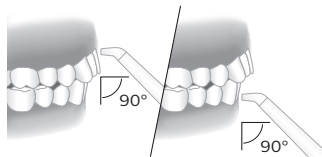


- b Slide the pause switch on the handle to the 'on' position to start the water flow.

- c Starting from your back teeth in your upper or lower jaw, slide the nozzle tip along the gum line and pause briefly between each tooth. Continue to clean both inside and outside of your teeth in one arch of your mouth for 30 seconds.

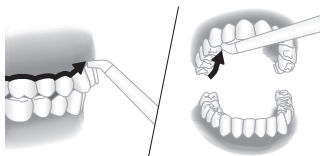

Note: Remember to clean the inside of your teeth.

- d Repeat in the other arch of your mouth for another 30 seconds until all spaces around and between your teeth have been cleaned for a total of at least one minute.

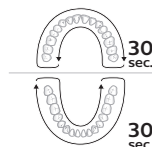


Note: You can stop the water flow during use by sliding the pause switch on the handle to the 'off' position (motor will pause).


Quad Stream Nozzle

With the base station turned on:

- a Position the nozzle tip just above the gum line at a 90° angle. Press gently so that the nozzle tip is in contact with the gum line and the teeth.

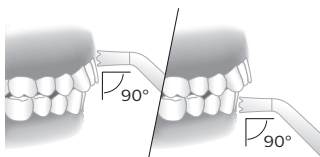


- b Slide the pause switch on the handle to the 'on' position to start the water flow.
- c Starting from your back teeth in your upper or lower jaw, slide the nozzle tip along the gum line and pause briefly between each tooth. Continue to clean both inside and outside of your teeth in one arch of your mouth for 30 seconds.

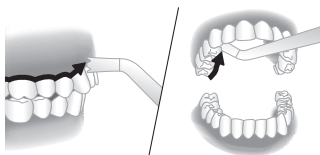

Note: Remember to clean the inside of your teeth.


- d Repeat in the other arch of your mouth for another 30 seconds until all spaces around and between your teeth have been cleaned for a total of at least one minute.

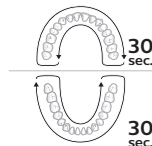

Note: You can stop the water flow during use by sliding the pause switch on the handle to the 'off' position (motor will pause).


Cleaning orthodontic brackets with the Quad Stream nozzle

- a To clean around orthodontic brackets, place the nozzle tip over each bracket.
- b Gently rotate the nozzle tip around the bracket in a small circle before moving to the bracket on the next tooth.

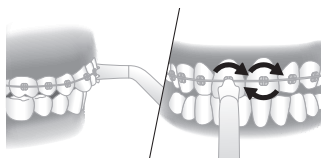

After each use

- 1 When you are finished, turn off the product.
- 2 Pick up and empty the reservoir.
- 3 Remove the nozzle from the handle by pushing the eject button on the back of the handle.

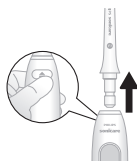

- 4 Rinse the nozzle under the tap.
- 5 Insert the nozzle back into the handle.





- 6 Dry any excess water off the tether and handle.

Cleaning




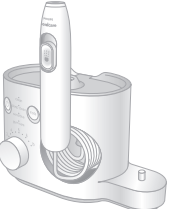
The product needs to be cleaned once a week.
Clean the device and the accessories as follows:

Reservoir and lid

			
	✓	✓	✓





Gently remove the reservoir from the unit. The reservoir can be hand washed with warm water and mild soap or cleaned in the dishwasher.

Base and handle

			
	✓	✗	✗

When necessary, you can clean the outside of the base and the handle with a soft cloth and mild soap.

Nozzles

			
	✓	✓	✓

Regular Cleaning:

Remove the nozzle from the handle. Rinse the tip under warm water.

Every few months, or if your nozzle becomes clogged:

Soak the nozzle in a container of 2 parts water and 1 part white vinegar for 5 minutes. Rinse the nozzle with warm water.

Nozzle storage case

			
	✓	✓	✓

The storage case can be hand washed in warm water with mild soap or cleaned in the dishwasher.

Internal components, hose and handle

Fill the reservoir with warm water and add 1-2 tablespoons of white vinegar. Remove the handle, point the nozzle at the sink and turn on the product to run the solution through the unit until the reservoir is empty. Rinse by repeating with a full reservoir of clean warm water.

Storage

If you are not going to use the product for an extended period of time, unplug it from the electrical outlet, clean it and store it in a cool and dry place away from direct sunlight.

Replacement

Replace nozzles every 6 months or immediately when damaged. To buy accessories or spare parts, visit **philips.com** or go to your local Philips Sonicare dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

The following spare parts are available:

- Standard nozzle
- Comfort nozzle
- Quad Stream nozzle

Note: The availability of spare parts may differ by country.

Frequently asked questions

Question	Answer
Can I use mouthwash or essential oils in my reservoir?	It is not recommended to use essential oils in the reservoir. Mouthwash can be mixed with water and used in the reservoir. After using mouthwash, rinse the device to prevent clogging by partially filling reservoir with warm water and running product with tip pointed into sink until reservoir is empty.

Question	Answer
Will other nozzles fit on my Philips Sonicare Power Flosser?	Only Philips Sonicare Power Flosser nozzles will work with this device. Nozzles from other brands and Philips AirFloss nozzles are not compatible with this product.
How often do I need to replace my nozzle?	We advise you to replace your nozzle after 6 months of use. You can find more information about buying replacement parts at philips.com

Locating the model number

Look on the bottom of the base for the model number (HXxxxx).

Warranty and support

Philips warrants its products for two years after the date of purchase. Defects due to faulty materials and workmanship will be repaired or replaced at Philips' expense provided that convincing proof of purchase in the qualifying period is provided. Philips recommends use of genuine Sonicare Nozzles for optimal performance. Use of other Nozzles may damage your PowerFlosser and limit your warranty protection.

For product information, support and online user instructions, please visit:

www.philips.com/support or read the international warranty leaflet.

Warranty restrictions

The terms of the international warranty do not cover the following:

- Reservoir

- Nozzles
- Damage caused by use of unauthorized replacement parts or unauthorized nozzles
- Damage caused by misuse, abuse, neglect, alterations or unauthorized repair
- Normal wear and tear, including chips, scratches, abrasions, discoloration or fading

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

중요 안전 정보

본 제품을 사용하기 전에 이 중요 정보를 주의 깊게 읽고 나중에 참조할 수 있도록 잘 보관하십시오.

위험

- 전원 어댑터를 물기가 있는 곳에 두지 마십시오.
- 욕조, 세면대, 싱크대 등 물이 가까이 있는 곳에서 보관하거나 놓아 두지 마십시오.
- 물에 떨어진 제품을 만지지 마십시오. 물에 떨어뜨린 경우 즉시 플러그를 뽑으십시오.
- 전원 어댑터 또는 본체를 물 또는 다른 액체에 담그지 마십시오.
- 세척한 경우 전원 어댑터를 완전히 건조시킨 다음에 다시 전원에 연결하십시오.

경고

화상, 감전, 화재 또는 상해의 위험을 줄이려면:

- 파워플로서와 함께 제공되는 전원 어댑터(WAC1001)만 사용하십시오.
- 제품이 손상된 경우(전원 어댑터, 본체, 핸들, 호스 또는 노즐) 사용을 중단하십시오.
- 위험할 수 있으므로 전원 어댑터는 반드시 정품으로 교체하여 사용하십시오.
- 코드가 제품의 가열된 표면에 닿지 않도록 하십시오.
- 본 제품에는 서비스 가능한 부품이 없습니다. 제품이 손상될 경우 해당 국가 (보기 '품질 보증 및 지원')의 고객 상담실에 문의하십시오.
- 야외에서는 제품을 사용하지 마십시오.
- 최대 사용 고도는 4420미터입니다.
- 신체적인 감각 및 정신적인 능력이 떨어지거나 경험과 지식이 풍부하지 않은 성인 및 어린이는 혼자 이 제품을 사용하지 말고 제품 사용과 관련하여 안전에 책임질 수 있도록 지시사항을 충분히 숙지한 사람의 도움을 받으십시오.

- 어린이(6세 이상)가 이 제품을 가지고 놀지 못하도록 지도해 주십시오.
- 급수통에 따뜻한 물을 채우지 마십시오. 물이 뜨거울 경우 화상을 입을 수 있습니다.
- 필립스 소닉케어 파워플로서, 파워플로서 및 음파칫솔 콤보는 개인용품이므로 여러 사용자가 공용으로 이용해서는 **안 됩니다**.
- 제품을 장기간 사용하지 않을 경우, 전기 콘센트에서 코드를 뽑고 깨끗하게 닦은 다음 직사광선이 닿지 않는 시원하고 건조한 장소에 보관하십시오.

주의

- 제품 손상을 방지하려면 별도의 지시가 없는 한 제품이나 부품을 식기 세척기로 세척하지 마십시오.
- 최근 2개월 이내에 구강 또는 잇몸 수술을 받은 경우에는 필립스 소닉케어 파워플로서를 사용하기 전에 치과 의사와 상의하십시오.
- 본 제품을 사용한 후 출혈이 심하거나 1주일이라도 증상이 호전되지 않는다면 치과 의사와 상의하십시오.
- 필립스 소닉케어 파워플로서는 국내 안전 기준에 따라 전자파 장애 검정을 받은 제품입니다. 심장 박동 보조기 등 보조 기기를 이식 받은 경우에는 주치의나 해당 이식 기기의 제조업체에 문의하여 충분히 이해한 후 사용하십시오.
- 의료적 문제가 있을 경우 필립스 소닉케어 파워플로서를 사용하기 전에 치과 전문의와 상의하십시오.
- 본 제품으로는 치아와 잇몸만 세정할 수 있으므로 다른 용도로는 사용하지 마십시오. 예를 들어 눈, 코 및 귀 등에 사용해서는 안 됩니다. 사용 중 불편함이나 통증이 느껴지면 제품 사용을 중단하고 의사와 상의하십시오.
- 필립스 소닉케어에서 권장한 제품 이외의 노즐을 사용하지 마십시오.

EMF(전자기장)

이 Philips 제품은 EMF(전자기장) 노출과 관련된 모든 기준 및 규정을 준수합니다.

소개

필립스 제품을 구입해 주셔서 감사합니다! 소닉케어 파워플로서, 파워플로서 및 음파칫솔 콤보 신제품을 구매해 주셔서 감사합니다. 필립스가 드리는 지원 혜택을 최대한 누리시려면 philips.com/welcome에서 제품을 등록하십시오.

용도

필립스 소닉케어 파워플로서, 파워플로서 및 음파칫솔 콤보는 충치를 예방하고 잇몸 건강을 개선하고 유지하기 위해 치아 사이와 치아 표면의 플라그 및 음식물 찌꺼기를 제거하는 구강 세정기입니다. 본 제품은 일반적으로 하루에 한 번 이상 사용되는 소비자 가정용 제품입니다. 어린이(6세 이상)가 사용할 경우 반드시 성인이 관리해야 합니다.

필립스 소닉케어 파워플로서(그림 1)

- 1 급수통 뚜껑
- 2 급수통
- 3 모드 버튼
- 4 모드 표시등
- 5 전원 버튼
- 6 강도 다이얼
- 7 호스
- 8 호스 보관함
- 9 소닉케어 음파 칫솔 충전기*
- 10 본체
- 11 자석 손잡이 독
- 12 핸들
- 13 일시 중지 스위치
- 14 노즐 분리 버튼
- 15 쿼드 스트림 노즐*

- 16 콤포트 노즐*
- 17 표준 노즐*
- 18 전원 어댑터
- 19 노즐 보관 케이스

*참고: 제품 구성품에는 구매한 제품의 구성에 따라 표시된 항목 중 일부가 포함되지 않을 수도 있습니다.

노즐

사용 중인 노즐의 유형을 확인하려면 노즐 바닥의 코드를 확인하십시오. 노즐 유형에 따라 제공하는 이점이 달라집니다.



노즐 라벨	F1	F2	F3
노즐 이름	표준 노즐	컴포트 노즐	퀵스트림 노즐
이점	음식물 찌꺼기와 플라그를 제거하기 위한 단일 스트림의 표준 노즐입니다.	부드러운 고무 노즐로 잇몸이 민감한 사람도 편안하고 쉽게 사용할 수 있습니다.	부드러운 고무 노즐은 물을 십자형 스트림으로 분사하여 플라그를 부드럽게 제거하며 쉽고 철저하게 세정합니다.

모드

파워플로서에는 다음과 같은 4가지 모드가 있습니다.

일반세정

페이서를 사용하는 이 모드는 탁월한 세정을 위한 표준 수압을 제공합니다.

딥 클린

펄스웨이브 기술을 사용하는 이 모드는 철저한 세정을 위한 강력하고 부드러운 물 분사를 제공합니다.

민감

펄스웨이브기술을 사용하는 이 모드는 처음 사용하는 사람이나 잇몸이 민감한 사람을 위한 부드러운 물 분사를 제공합니다.

잇몸 케어

페이서를 사용하는 이 모드는 잇몸을 마사지하기 위한 진정 효과가 있는 물 분사를 제공합니다.

참고: "펄스웨이브 기술"과 "페이서"에 대한 자세한 내용은 을 참조하십시오.

모드 선택

- 1 전원 버튼을 눌러 기기를 켭니다.
- 2 모드 버튼을 눌러 원하는 모드를 선택합니다.



강도 설정


파워플로서에는 10가지 강도 설정이 있습니다. 강도를 수동으로 변경하려면 본체를 켜고 강도 다이얼을 원하는 설정으로 돌립니다.



참고: 처음 사용하는 경우에는 가장 낮은 설정부터 기기를 시작하십시오. 몇 주 동안 사용하는 강도를 높이는 것이 좋습니다. 이렇게 하면 더 높은 설정을 견딜 수 있어 세정 효과를 높일 수 있습니다.

기능 페이서

세정 및 잇몸 케어 모드에는 페이서가 있습니다. 이 기능은 물 흐름의 짧은 중단을 통해 입 안의 다음 부분으로 옮겨가야 할 때를 표시합니다.

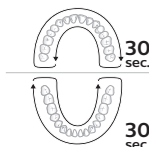

참고: 이 기능은 세정 모드와 잇몸 케어 모드에서만 작동합니다.

페이서 설정 또는 해제

5초 동안 전원 버튼과 모드 버튼을 동시에 눌러 페이서 기능을 활성화하거나 비활성화할 수 있습니다.

- 비활성화되면 모든 표시등이 한 번 깜박입니다.
- 활성화되면 모든 표시등이 두 번 깜박입니다.

펄스파 기술

딥 클린 및 민감 모드에는 "펄스웨이브 기술" 기능이 있습니다. 물 흐름의 강도가 높아지고 낮아져서 잠시 중단될 때 치아 사이의 다음 부분으로 노즐을 이동할 수 있습니다.

자석 도킹

사용 후 손잡이의 일시 중지 스위치를 꺼짐 위치로 돌리지 않은 경우 손잡이를 다시 본체에 도킹하면 자석 독이 자동으로 일시 중지 스위치를 꺼짐으로 설정합니다.

소닉케어 음파 칫솔 충전기(특정 모델만 해당)

소닉케어 파워플로서, 파워플로서 및 음파칫솔 콤보에는 필립스 소닉케어 음파 칫솔용 통합 충전기가 있습니다.

파워플로서 및 칫솔 시스템의 칫솔 충전

- 1 충전기에 손잡이를 꽂으십시오.
- 2 배터리가 완전히 충전되면 칫솔 손잡이의 표시등이 꺼집니다.

참고: 소닉케어 음파 칫솔 충전 지침과 별도의 칫솔 매뉴얼에 나오는 충전 시간을 참조하십시오.

시작하기

- 1 소형 플러그를 본체 하단에 연결하고 전원 플러그를 100-240V 전원 콘센트에 연결합니다.
- 2 본체에서 급수통을 분리합니다.


참고: 급수통을 분리하기 전에 제품의 전원이 꺼져 있는지 확인합니다.

- 3 뚜껑을 열고 급수통의 MAX 수위량까지 미온수로 채웁니다.



- 4 뚜껑을 닫으십시오. 급수통을 다시 본체에 장착합니다.

참고: 급수통과 본체 사이에 틈새가 없도록 아래쪽으로 단단히 누릅니다.

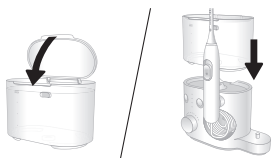

- 5 핸들에 원하는 노즐을 끼웁니다. "딸깍" 소리가 날 때까지 노즐을 누릅니다.




- 6 본체의 전원 버튼을 눌러 제품을 켭니다. 원하는 모드 (보기 '모드')와 강도 (보기 '강도 설정')를 선택합니다.



- 7 본체에서 핸들을 분리하고 노즐 끝부분을 싱크대에 넣습니다. 핸들의 일시 중지 버튼을 '켜기'(위로) 위치로 민 다음 노즐 끝부분에서 물이 나올 때까지 기다립니다. 일시 중지 스위치를 '끄기'(아래로) 위치로 밀어 물 흐름을 중지합니다.

참고: 이 단계는 구매 후 처음 사용할 때에만 적용됩니다.

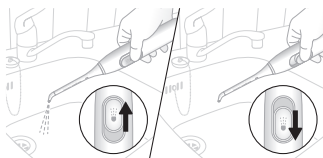

- 8 본체의 전원 버튼을 다시 눌러 제품을 끕니다.

파워플로서 사용

- 1 핸들의 일시 중지 스위치가 '꺼짐' 위치에 있는지 확인합니다.
- 2 본체의 전원 버튼을 눌러 제품을 켭니다.




- 3 입 안으로 노즐 끝부분을 넣습니다. 싱크대에 기대고 난 후 노즐 위로 입술을 살짝 다물어서 물이 튀는 것을 방지하십시오. 입에서 싱크대로 물이 흐르도록 충분한 공간을 확보하십시오.




표준 및 콤포트 노즐

본체를 켜 후 다음을 수행하십시오.

- a 노즐 끝부분을 잇몸선 바로 위에 90° 각도로 놓습니다.

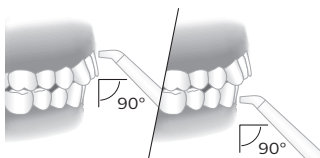


- b 물 흐름을 시작하려면 핸들의 일시 중지 스위치를 '켜기' 위치로 미십시오.
- c 윗턱 또는 아랫턱의 뒤쪽 치아에서 시작하여 잇몸선을 따라 노즐 끝부분을 밀면서 각 치아 사이에서 잠시 멈춥니다. 입의 한 치열궁(치아들이 형성하는 활 모양의 치아 배열)에서 치아 내부와 외부로 30초 동안 세정하십시오.

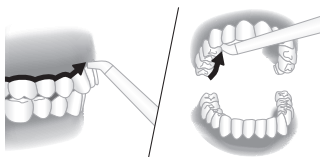

참고: 치아 내부를 반드시 세정해야 합니다.

- d 입의 다른 치열궁(치아들이 형성하는 활 모양의 치아 배열)에 대해서도 30초 동안 반복하여 총 1분 이상 치아 주변과 치아 사이의 모든 공간을 세정하십시오.

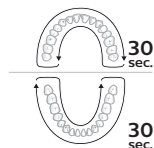


참고: 핸들의 일시 중지 스위치를 '끄기' 위치로 밀면(모터가 일시 중지됨) 사용 중에 물 흐름을 멈출 수 있습니다.


쿼드스트림 노즐

본체를 켜 후 다음을 수행하십시오.

- a 노즐 끝부분을 잇몸선 바로 위에 90° 각도로 놓습니다. 노즐 팁이 잇몸선과 치아에 닿도록 부드럽게 누릅니다.

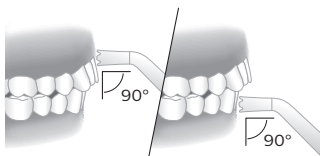


- b 물 흐름을 시작하려면 핸들의 일시 중지 스위치를 '켜기' 위치로 미십시오.
- c 윗턱 또는 아랫턱의 뒤쪽 치아에서 시작하여 잇몸선을 따라 노즐 끝부분을 밀면서 각 치아 사이에서 잠시 멈춥니다. 입의 한 치열궁(치아들이 형성하는 활 모양의 치아 배열)에서 치아 내부와 외부로 30초 동안 세정하십시오.

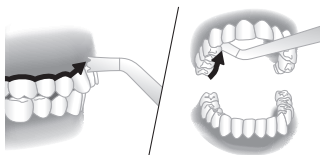

참고: 치아 내부를 반드시 세정해야 합니다.


- d 입의 다른 치열궁(치아들이 형성하는 활 모양의 치아 배열)에 대해서도 30초 동안 반복하여 총 1분 이상 치아 주변과 치아 사이의 모든 공간을 세정하십시오.

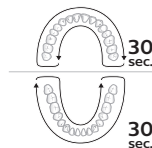

참고: 핸들의 일시 중지 스위치를 '끄기' 위치로 밀면(모터가 일시 중지됨) 사용 중에 물 흐름을 멈출 수 있습니다.


쿼드스트림 노즐로 교정기 브래킷 세정

- a 교정기 브래킷 주위를 세정하려면 각 브래킷 위에 노즐 끝부분을 놓습니다.
- b 노즐 팁으로 브래킷 주위에 작은 원을 그리며 부드럽게 돌린 후 다음 치아의 브래킷으로 이동합니다.

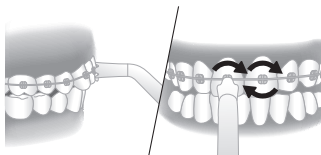

사용 후

- 1 완료한 후에는 제품의 전원을 끄십시오.
- 2 급수통을 들어 올려 비웁니다.
- 3 핸들 뒷면의 분리 버튼을 눌러 핸들에서 노즐을 분리합니다.

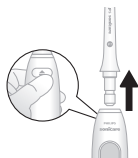

- 4 수돗물로 노즐을 행굽니다.
- 5 핸들에 노즐을 다시 끼웁니다.







- 6 연결장치와 핸들에 남아 있는 물기를 말립니다.

세척

일주일에 한 번 제품을 세척해야 합니다.





다음과 같이 기기와 액세서리를 세척하십시오.

급수통 및 뚜껑

			
	✓	✓	✓





본체에서 급수통을 조심스럽게 꺼냅니다. 급수통은 따뜻한 물과 중성 비누로 손세척하거나 식기세척기로 세척할 수 있습니다.

본체 및 핸들

			
	✓	✗	✗

필요한 경우 부드러운 천과 중성 비누로 본체와 핸들 외부를 닦을 수 있습니다.

노즐

			
	✓	✓	✓

정기적 세척:

노즐을 손잡이에서 제거합니다. 따뜻한 물로 끝부분을 행급니다.

몇개월마다 또는 노즐이 막힌 경우:

흰 식초와 물을 1대 2의 비율로 섞은 용기에 5분 동안 노즐을 담가 놓습니다. 따뜻한 물로 노즐을 행급니다.

노즐 보관 케이스

			
	✓	✓	✓

보관 케이스는 따뜻한 물과 중성 비누로 손세척하거나 식기세척기로 세척할 수 있습니다.

내부 부품, 호스 및 핸들

급수통에 따뜻한 물과 흰 식초 1-2큰술을 넣습니다. 핸들을 분리하고, 노즐을 싱크대에 넣은 다음 제품을 꺼서 급수통이 빌 때까지 본체를 통해 용액이 흐르도록 합니다. 반복해서 깨끗하고 따뜻한 물로 급수통을 가득 채워 행급니다.

보관

제품을 장기간 사용하지 않을 경우, 전기 콘센트에서 코드를 뽑고 깨끗하게 닦은 다음 직사광선이 닿지 않는 시원하고 건조한 장소에 보관하십시오.

교체

6개월마다 또는 손상된 경우 즉시 노즐을 교체하십시오. 액세서리 또는 예비 부품을 구입하려면 **philips.com**을 방문하거나 해당 지역 필립스 소닉케어 대리점에 문의하십시오. 또한 해당 국가의 필립스 고객 상담실에 문의하셔도 됩니다(연락처 정보는 국제 보증서 참조).

다음과 같은 교체품이 별도 판매됩니다.

- 표준 노즐
- 컴포트 노즐
- 쿼드스트림 노즐

참고: 교체 부품 사용 가능 여부는 국가마다 다릅니다.

자주 묻는 질문(FAQ)

질문	답변
금수통에 구강 청결제나 에센셜 오일을 사용할 수 있습니까?	금수통에 에센셜 오일을 사용하지 않는 것이 좋습니다. 구강 청결제는 물과 혼합하여 금수통에서 사용할 수 있습니다. 구강 청결제를 사용한 후에는 기기가 막히지 않도록 헹구십시오. 금수통을 따뜻한 물로 반쯤 채우고 끝부분을 싱크대로 향하게 하여 금수통이 비워질 때까지 제품을 실행합니다.
필립스 소닉케어 파워플로서에 다른 노즐도 있습니까?	필립스 소닉케어 파워플로서 노즐만 이 기기에 사용할 수 있습니다. 다른 브랜드의 노즐 및 필립스 에어플로스 노즐은 이 제품과 호환되지 않습니다.

질문

노즐은 얼마나 자주 교체해야 하나요?

답변

6개월마다 노즐을 교체하는 것이 좋습니다. 교체용 부품 구매에 대한 자세한 내용은 필립스 홈 페이지를 참조하십시오. philips.com

모델 번호 찾기

본체 하단에 모델 번호가 나와 있습니다(HXxxxx).

품질 보증 및 지원

필립스의 제품 보증 기간은 구입일로부터 2년입니다. 보증 기간 동안 재료 및 사양의 결함으로 인한 고장이 발생할 경우 제품 구입을 증명할 수 있는 근거 자료를 제출하시면 필립스에서는 무상으로 제품을 수리해 드리거나 교체해 드립니다. 필립스는 최적의 성능을 위해 정품 소닉케어 노즐을 사용할 것을 권장합니다. 다른 노즐을 사용할 경우 파워플로서가 손상되고 보증이 제한될 수 있습니다.

제품 정보, 지원 및 온라인 사용자 지침을 보려면 www.philips.com/support를 방문하거나 국제 보증서를 읽어 보십시오.

보증 제한

국제 보증 약관에서 제외되는 항목은 다음과 같습니다.

- 급수통
- 노즐
- 정품이 아닌 교체품 또는 노즐의 사용으로 인한 손상
- 오용, 남용, 부주의, 개조 또는 무단 수리로 인한 손상
- 찌개짐, 긁힘, 마모, 변색, 탈색 등 일반적인 마모 및 손상

재활용

- 수명이 다 된 제품은 일반 가정용 쓰레기와 함께 버리지 말고 지정된 재활용품 수거 장소에 버리십시오. 이를 준수함으로써 환경 보호에 동참할 수 있습니다.
- 전기 및 전자 제품의 분리 수거에 대한 해당 국가의 규정을 준수하십시오. 제품을 올바르게 폐기하면 환경과 인체 건강에 미치는 부정적인 영향을 예방할 수 있습니다.

www.philips.com/Sonicare

©2019 Koninklijke Philips N.V. (KPNV). All rights reserved. Philips and the Philips shield are trademarks of KPNV. Sonicare and the Sonicare logo are trademarks of Philips Oral Healthcare, LLC and/or KPNV.

3000.053.3405.1 (6/8/2020)



>75 % recycled paper
>75 % papier recyclé