

フィリップス 電動シェーバー
品番 S1880/00

取扱説明書



©2025 Koninklijke Philips N.V.
記載されている製品名などの固有名詞は、Koninklijke Philips N.V.またはその他の会社の商標または登録商標です。
3000.153.5031.1 (07/25)

フィリップス 電動シェーバー 保証書

Certificate of purchase

この保証書は、「無料修理規定」記載内容で無料修理を行うことをお約束するものであります。お買い上げの日から下記期間中に故障が発生した場合は、フィリップスサポートセンターにお問い合わせください。お客様にご記入いただいた個人情報（保証書の控え）は、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp/>に掲載されている「プライバシー」に関する通知に基づき適切に管理いたします。

品名	電動シェーバー
品番	S1880/00
保証期間	お買い上げ日より2年
対象部分	本体、充電ケーブル（シェービングユニット、保護キャップを除く）
お買い上げ日	年月日
お住所	〒
お客様	ご芳名 電話番号 販売店名・住所・電話番号
販売店	

・保証書は再発行せんので、大切に保管してください。
・販売店様へ、この保証書はお客様へのアフターサービスの実施と責任を明確にするものです。贈答品、記念品の場合も含めて必ず記入捺印してお客様にお渡しください。

製品の使用方法や修理に関するお問い合わせ

フィリップスサポートセンター
0120(944)859

受付時間 9:00~18:00(年末年始除く)

Webからの
お問い合わせ

MyPhilips登録のご案内



フィリップスでは、製品をより快適にご使用いただくために製品登録をおすすめしております。MyPhilipsでは製品の保証書や購入証明書の写真も保管でき、万が一購入証明書を紛失された場合にも安心です。

この印刷物は再生紙を使用しております。

フィリップス シェーバーをお買い上げいただき、まことにありがとうございます。長い間ご愛用いたくために、ご使用前にこの取扱説明書をよくお読みのうえ、正しくお使いください。
また、お読みになった後は、お使いになる方がいつでも見られるところに必ず保管してください。



※改良の為、仕様を予告なく変更することがあります。

お買い上げのお客様へ 初めてご使用になる際は、ご使用前に充電してください。

目次

- ① 必ずお守りください
- ② 各部の名称
- ③ 充電表示ランプについて
- ④ 充電のしかた
- ⑤ シェーピングのしかた（ドライ）
- ⑥ シェーピングのしかた（ウェット）
- ⑦ お手入れ方法
- ⑧ 保護キャップの取り付けかた
- ⑨ 保管のしかた
- ⑩ 刃の交換
- ⑪ シェーバーを廃棄するとき
- ⑫ 故障かな？と思ったら
- ⑬ 保証とアフターサービス
- ⑭ 仕様
- ⑮ 無料修理規定

① 必ずお守りください

安全上のご注意

- ここに示した注意事項は、安全に関する重要な内容ですので、必ず守ってください。
- 誤った取扱いをしたときに想定される内容を「危険」、「警告」、「注意」と区別しています。

○点表示について

- ⚠ 危険 人が死なまたは重傷を負う可能性が大きい内容。
- ⚠ 警告 人が死なまたは重傷を負う可能性が想定される内容。
- ⚠ 注意 人が傷害を負う可能性および物的損害のみの発生が想定される内容。

○線表示の例

- △印は「危険、警告、注意」を意味する、図の中や近くに具体的な意匠（左の図では高さ表示）を示します。
- 🚫印は、してはいけない（禁止）を示します、図の中や近くに具体的な禁止意匠（左の図の場合は分離禁止）を示します。
- ⌚印は、必ずしていただきたい（強制）を示します、図の中や近くに具体的な強制意匠（左の図の場合は電源プラグをコンセントから抜くこと）を示します。

△ 危険

- 本製品は充電式電池を内蔵しています。本製品の充電、使用、保管は10 °Cから35 °Cの環境で行ってください。火災投入、加熱、高温での充電、放電、充電しないでください。発熱、発火、破裂の原因になります。また電池の寿命にも影響を及ぼします。

- お風呂、湯船、浴室等での充電は絶対にしてください。ショート、感電の原因になります。

- 充電ケーブルは必ずお風呂や湯船等の水に濡れないようにして下さい。充電ケーブルが壊れ、火災・感電の原因になります。

- USBコネクタ部は確実にUSB充電アダプタに差し込んでください。スムーズに差し込めないと、充電の際に無理に押し込もうとしてしまうと、火災や感電の原因になります。

- 刃が破損または故障した場合は、本製品を分解しないでください。けがの原因になります。刃を分解して修理する場合は、修理はフィリップスサポートセンターにお問い合わせください。

- お風呂や湯船等の水に充電ケーブルを差ししないでください。感電の原因になります。

- 洗濯機等の洗濯槽等の水に充電ケーブルを差ししないでください。感電の原因になります。

- 充電ケーブルの接続前に、ネクタ部が完全に乾いていることを確認してください。濡れた状態で差し込むとショート・感電の原因になります。

- お手入れの際は必ず本体から充電ケーブルを外してください。感電や感電の原因になります。

- 電池が液漏れした場合は、液体や皮膚に触れないように注意してください。万が一目に入った時は、こすらずに水道水で十分洗浄し医師の診察を受けてください。皮膚や衣服にいた場合は水を多く洗いでください。

- 乳幼児の手の届くところに本製品を遊ぶことがないように監視してください。

- 捕獲を必要とする人（子どもを含む）に使用せなでください。またお体の不自由な人だけに使用しないでください。


△ 注意

- 健康面で不安のある方や、ベースメーカー等の体内埋込型医療器具、家庭用電気医療器具を使用している場合は、使用前に医師又は機器メーカーにご相談ください。

- 充電する場合は、定格出力電圧DC 5V、定格出力電流1 A以上で、タイミングドットマーク表示がある安全技術基準適合に適合したUSB充電アダプタで充電してください。


- USB充電アダプタの接続には変換コネクタや変換ケーブルは使用しないでください。本体の損傷や火災の原因となります。

- ご使用前に異常がないことを確認してください。

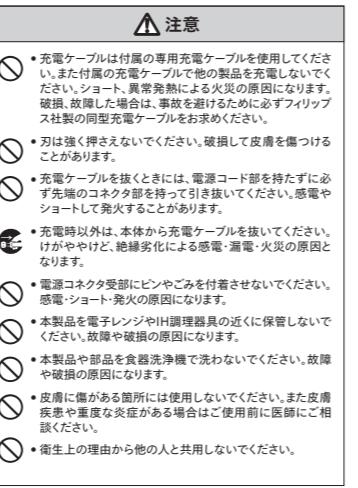

使用上のご注意

1. フィリップスシェーバーを初めてお使いの方は、剃りかたに慣れるまで2~3回間違えることがあります。
2. 本製品のお手入れは、水またはぬるま湯で行ってください。60 °C以上の熱湯は使用しないでください。研磨パッドや研磨剤を含んだ洗剤またはエアスターは使用しないでください。
3. 外刃は、薄くはさまありますので、刃部を強く押さえたり、硬いものにあてないよう、ていねいに扱ってください。
4. シェーピングユニットの掃除や着脱は、必ず電源をOffにしてから行ってください。
5. 初めて味が覚えてきたら、刃が破損した場合は、使用せずに新しい替刃を購入してください。
6. 直射日光の当たる場所には保管しないでください。夏場、車の中に放置しないでください。
7. シェーバー本体は防水加工をしていますが、水や液体の中に浸けないでください。
8. シェーピングユニットはご使用のたびに、ぬるま湯または水でお手入れをしてください。

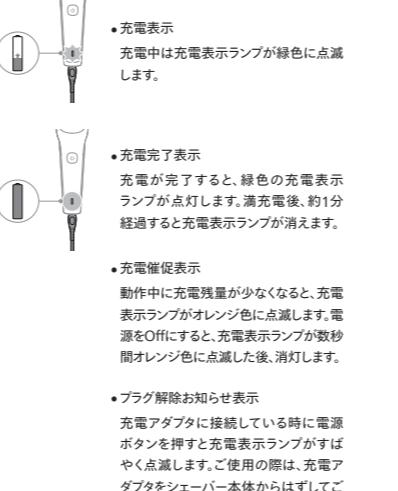

充電表示

充電中は赤色表示ランプが緑色で点滅します。

充電完了表示

充電が完了すると、緑色の充電表示ランプが点灯します。満充電後、約1分経過すると充電表示ランプが消えます。

充電催促表示

動作中に充電残量が少なくなると、充電表示ランプがオレンジ色で点滅します。電源ボタンをOffにするごとに数秒間オレンジ色で点滅します。

ブレーキ解除お知らせ表示

動作中に充電残量が少なくなると、充電表示ランプがオレンジ色で点滅します。満充電後、約1分経過すると充電表示ランプが消えます。

電源ボタン

電源ボタンに接続している時に電源ボタンを押すと充電表示ランプが点滅します。ご使用の際は、電源ボタンをOffにしてご使用ください。

4. 充電のしかた

● 定格出力電圧DC 5V、定格出力電流1 A以上で、タイミングドットマーク表示がある安全技術基準に適合したUSB充電アダプタで充電してください。

● USB充電アダプタとの接続には変換コネクタや変換ケーブルは使用しないでください。

● 本製品は電子部品や食器洗浄機で洗わないでください。故障や破裂の原因になります。

● 皮膚に傷がある箇所には使用しないでください。また皮膚疾患や重症な炎症がある場合はご使用前に医師にご相談ください。

● 衛生上の理由から他の人と共用しないでください。

● 初めて味が覚えてきたら、刃が破損した場合は、使用せずに新しい替刃を購入してください。

● お手入れは、水またはぬるま湯で行ってください。60 °C以上の熱湯は使用しないでください。研磨パッドや研磨剤を含んだ洗剤またはエアスターは使用しないでください。

● 外刃は、薄くはさまありますので、刃部を強く押さえたり、硬いものにあてないよう、ていねいに扱ってください。

● シェーピングユニットを初めてお使いの方は、剃りかたに慣れるまで2~3回間違えることがあります。

● お手入れは、必ず電源をOffにしてから行ってください。

13 保証とアフターサービス

保証書と修理サービスについて(必ずお読みください)

【保証書・表面左側に付属】

・保証書は、必ず「お買い上げ日・販売店名」等の記入をお確かめのうえ、販売店は受け取ったとき内容をよくお読みのあと大切に保管してください。

【保証期間】
お買い上げ日から2年間
対象部分 本体、充電ケーブル(シェービングユニット、保護キャップを除く)

【補修用性能部品の保有期間】

・補修用性能部品の保有期間は製造打ち切り後6年です。
・性能部品とは、その製品の機能を維持するために必要な部品です。

【ご不明な点や修理に関するご相談は】

・修理に関するご相談ならびにご不明な点は、フィリップスサポートセンターにお問い合わせください。

【保証期間中の修理】

・製品と保証書をご用意いただき、フィリップスサポートセンターにお問い合わせください。保証書の記載内容により無料修理いたします。

【保証期間が過ぎているとき】

・修理によって製品の機能が維持できる場合は、補修用性能部品の保有期間内であれば、ご希望により有料で修理させていただきます。

【海外での本製品の保証及びアフターサービスについて】

・本製品の保証は海外においても有効です。(同シリーズ製品の取り扱いがある国に限ります)

・日本国外のフィリップスサービス部門においても保証期間内及び保証期間が経過後のアフターサービスを受けることができますが、この場合多日費が必要となります。

・海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お困りの場合はご使用を中止し、フィリップスサポートセンターにお問い合わせください。

Philips Service Department P.O.Box 20100 9200 Ca Drachten The Netherlands, <http://www.philips.com/support>

【お客様の個人情報のお取り扱いについて】

・受けましたお客様の個人情報を、株式会社フィリップスジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「プライバシーに関する通知」に基づき適切に管理いたします。

便利メモ

お買い上げ日	年	月	日
お買い上げ店名	電話番号	()	

ご使用の時、このような症状はありませんか?

- ・本体にさわると時々電気を感じる。
- ・こげこげ臭いがする。
- ・充電ケーブルを動かすと通電したりしなかつたりする。
- ・その他異常、故障がある。

このような症状の時は、故障や事故防止のため、電源の差しし、充電アダプタをコンセントから外して、必ずフィリップスサポートセンターにお問い合わせください。

14 仕様

品番	\$1880/00
ハンドル品番	\$1880
替刃品番	SH30
本体寸法 (高さ×幅×奥行)	162×59×57 mm
本体質量	約143 g
電源方式	充電式
定格入力	DC5 V 1 A
充電時間	約8時間
使用時間	約35分
使用充電池	ニッケル水素電池 (Ni-MH)

※改良の為、仕様を予告なく変更することがあります。

15 無料修理規定

【無料修理規定】

1. 取扱説明書、本体貼付ラベル等の注意書きに従った正常な使用状態で保証期間内に故障した場合には、無料修理します。
2. 保証期間内に故意して無料修理をお受けになる場合には、フィリップスサポートセンターにお問い合わせください。

3. ご購入品の修理に関するご相談は、フィリップスサポートセンターにお問い合わせください。

4. 保証期間内でも次の場合には有料修理になります。

① 使用上の誤り及び不正確な修理や改修による故障及び損傷。
② お買い上げ後の返送、移動、落としによる故障及び損傷。

③ 火災、掉落、水害、落雷、その他の天災地変、公害や異常電圧による故障及び損傷。

④ 一般家庭以外(例えば、業務用の長時間使用)に使用された場合の故障及び損傷。

⑤ 保証書の提示がない場合。

⑥ 保証書においてお買い上げ年月日、お客様名、販売店名の記入のない場合、或は手書きで書き込まれた場合。

※保証書は、本書に明示した条件のもとにおいて無料修理をお約束するものです。従って保証書を発行している者(保証責任者)、及びそれ以外の事業者に対するお客様の法律上の権利を制限するものではありません。


保証期間経過後の修理についてご不明の場合は、フィリップスサポートセンターにお問い合わせください。

※保証期間経過後の修理・補修用性能部品の保有期間について詳しくは取扱説明書の保証とアフターサービスの項目をご覗ください。

※お客様にご記入いただいた個人情報(保証書の控え)は保証期間内のサービス活動及びその後の安全点検活動のために利用させていただく場合がございます。ご了承ください。また個人情報は、株式会社フィリップスジャパンのホームページ <http://www.philips.co.jp/> に掲載されている「プライバシーに関する通知」に基づき適切に管理いたします。

ENGLISH

1 S1880/00

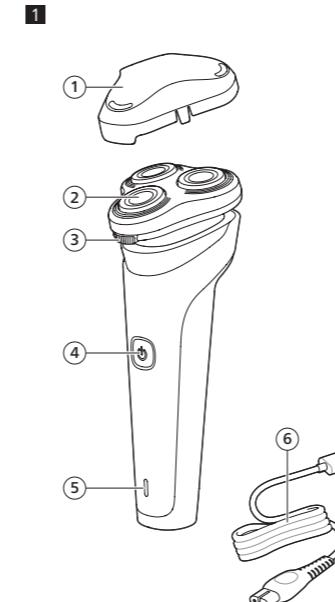

Charge indications

Battery low

When the battery is almost empty (when there are only 5 or fewer shaving minutes left), the charging light flashes orange (Fig. 5). When you switch off the product, the charging light continues to flash orange for a few seconds.

Charging

When the shaver is charging, the charging light flashes green (Fig. 5).

Battery fully charged

When the battery is fully charged, the charging light lights up green continuously (Fig. 6).

Note: After approx. 1 minute, the charging light goes out to save energy.

Quick charge

When you start charging the empty battery, the charging light flashes green quickly. After approx. 5 minutes the charging light flashes green slowly. The shaver now contains enough energy for a 5-minute shave.

Charging

Charge the shaver when the charging light indicates that the battery is almost empty.

- Charging takes approx. 8 hours.
- Quick charge: After approx. 5 minutes of charging, the battery contains enough energy for one full shave.
- A fully charged shaver has a shaving time of up to 35 minutes.

Note: When you charge the shaver for the first time or after a long period of disuse, let it charge until the charging light lights up continuously.

Note: You cannot use the appliance while it is charging.

Charging with a USB supply unit

Warning: Keep the USB cable and the USB supply unit dry (Fig. 3).

- 1 Make sure that the appliance is switched off.
- 2 Insert the small plug of the USB cable into the socket in the bottom of the appliance.
- 3 Insert the USB plug into the USB supply unit (not provided) (Fig. 7).
- 4 Insert the USB supply unit into the wall socket (Fig. 8).
- 5 The charging light shows the charging status of the appliance (see 'Charge indications').
- 6 After charging, remove the USB supply unit from the wall socket, pull the USB plug out of the supply unit and then pull the small plug out of the appliance.

Using the appliance

Warning: Always check the appliance and all accessories before use. Do not use the appliance or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

Note: This appliance is waterproof (Fig. 4). It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the appliance can therefore only be used without cord.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Do not modify the supply unit.

- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.

- Do not use a damaged appliance. Replace damaged parts with new Philips parts.

- Because of hygiene, only one person should use the appliance.

- Unplug the appliance before cleaning it with water.

- Only use cold or lukewarm water to clean the appliance.

- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids to clean the appliance.

- Water may drip from the socket at the bottom of the appliance when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the appliance.

- Only use original Philips accessories or consumables.

- Charge, use and store the product at a temperature between 10°C and 35°C.

- Keep product and batteries away from fire and do not expose them to direct sunlight or high temperatures.

- If the product becomes abnormally hot or smelly, changes color or if charging takes longer than usual, stop using and charging the product and contact Philips.

- Do not place products and their batteries in microwave ovens or on induction cookers.

- Do not open, modify, pierce, damage or dismantle the product or battery to prevent batteries from heating up or releasing toxic or hazardous substances. Do not short-circuit, overcharge or reverse charge batteries.

- If batteries are damaged or leaking, avoid contact with the skin or eyes. If this occurs, immediately rinse well with water and seek medical care.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

General description (Fig. 1)

- 1 Protection cap
- 2 Shaving unit
- 3 Shaving unit release button
- 4 On/off button
- 5 Charging light
- 6 USB cable

Note: A suitable supply unit (e.g. Philips HQ87) is available via www.philips.com/support.

Cleaning and maintenance

Cleaning the shaver

Clean the shaver after every shave for optimal shaving performance.

Water may drip from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.

1 Switch on the shaver.

2 Rinse the shaving unit with cold or lukewarm water (Fig. 11).

3 Switch off the shaver. Press the shaving unit release button to open the shaving unit (Fig. 12).

4 Rinse the shaving unit and hair chamber with lukewarm water (Fig. 13).

5 Rinse the outside of the shaving unit with lukewarm water.

6 Carefully shake off excess water and let the shaver air dry.

Caution: Never dry the shaving unit with a towel or tissue, as this may damage the shaving heads (Fig. 14).

7 Close the shaving unit.

Thorough cleaning

Clean the shaving heads thoroughly once a month for optimal performance.

- 1 Switch off the shaver.

- 2 Press the shaving unit release button to open the shaving unit. Pull the shaving unit off the shaver (Fig. 15).

- 3 Turn the lock counterclockwise and remove the retaining frame. Place it aside in a safe place (Fig. 16).

- 4 Remove and clean one shaving head at a time. Each shaving head consists of a cutter and a guard (Fig. 17).

Note: Do not clean more than one cutter and guard at a time, since they are all matching sets. If you accidentally mix up the cutters and guards, it may take several weeks before optimal shaving performance is restored.

- 5 Remove the cutter from the shaving guard and clean both parts under the tap (Fig. 18).

- 6 Put the cutter back into the guard (Fig. 19).

- 7 Put the shaving heads back into the shaving unit.

Note: Your shaver contains either shaving heads with projections or shaving heads with notches. In case of shaving heads with projections, make sure that the projections fit exactly into the recesses of the shaving head holder. In case of shaving heads with notches, make sure that the notches fit exactly onto the projections of the shaving head holder (Fig. 20).

- 8 Put the retaining frame back into the shaving unit and turn the lock clockwise (Fig. 21).

- 9 Insert the hinge of the shaving unit into the slot in the top of the shaver. Then close the shaving unit (Fig. 22).

Note: If the shaving unit does not close smoothly, check if you have inserted the shaving heads properly and if the retaining frame is locked.

Replacement

Replacing the shaving heads

For maximum shaving performance, we advise you to replace the shaving heads every two years (Fig. 23). Replace damaged shaving heads immediately. Always replace the shaving heads with original Philips shaving heads (see 'Ordering accessories').

- 1 Switch off the shaver.

- 2 Press the shaving unit release button to open the shaving unit.