



フィリップス オールインワントリマーキットをお買い上げいただき、また、お読みになった後は、お使いになる方がいつでも見られるところに必ず保管してください。

フィリップス オールインワントリマーキット
品番 **MG3921/15**
MG3931/15

取扱説明書



※1 MG3921/15のみ付属 ※2 MG3931/15のみ付属

お買い上げのお届けへ 初めてご使用になる際は、ご使用前に充電してください。



©2025 Koninklijke Philips NV. 記載されている商品名などの固有名称は、Koninklijke Philips NV. またはその他の会社の商標または登録商標です。 3000.127.8488.1 (09/25)

フィリップス オールインワントリマーキット 保証書

Certificate of purchase

この保証書は、「無料修理規定」記載内容で無料修理を行うことをお約束するものです。お買い上げの日から下記保証期間中に故障が発生した場合は、フィリップスサポートセンターにお問い合わせください。お客様にご記入いただいた個人情報(保証書の控えは、株式会社フィリップス・ジャパンのホームページ http://www.philips.co.jp/ に掲載されている「お客様の個人情報の取り扱いについて」の当社の方針)に基づき適切に管理いたします。

品名	オールインワントリマーキット
品番	MG3921/15 MG3931/15
保証期間	お買い上げ日より2年
対象部分	本体、充電ケーブル(トリマー、鼻毛・耳毛トリマー(回転式)、フメタル細部トリマー、コム、クリーニングブラシ、ポーチを除く)
お買い上げ日	年 月 日
ご住所	
ご氏名	
ご電話番号	
販売店	販売店名、住所、電話番号

※保証書は再発行しませんが、大切に保管してください。
※保証書が破損した場合、この保証書はお客様へのアカウントへの実名と責任を証明するものではありません。贈答品、記念品の場合も必ず記入捺印しお客様にお届けさせていただきます。

製品の使用方法や修理に関するお問い合わせ

フィリップスサポートセンター
0120(944)859

受付時間:9:00~18:00(年末年始除く)

Webからの
お問い合わせ




MyPhilips 登録のご案内

フィリップスでは、製品をより快適にご使用いただくために製品登録をおすすめしております。MyPhilipsでは製品の保証書や購入証明書の写事も保管でき、万一が購入証明書を紛失された場合に安心です。


URL <http://www.philips.co.jp/myphilips-about>

この印刷物は再生紙を使用しております。

フィリップス オールインワントリマーキットをお買い上げいただき、また、お読みになった後は、お使いになる方がいつでも見られるところに必ず保管してください。



※1 MG3921/15のみ付属 ※2 MG3931/15のみ付属

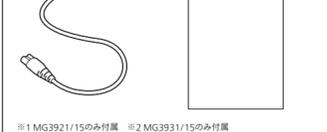

※1 MG3921/15のみ付属 ※2 MG3931/15のみ付属

お買い上げのお届けへ 初めてご使用になる際は、ご使用前に充電してください。



©2025 Koninklijke Philips NV. 記載されている商品名などの固有名称は、Koninklijke Philips NV. またはその他の会社の商標または登録商標です。 3000.127.8488.1 (09/25)

フィリップス オールインワントリマーキット 保証書

Certificate of purchase

この保証書は、「無料修理規定」記載内容で無料修理を行うことをお約束するものです。お買い上げの日から下記保証期間中に故障が発生した場合は、フィリップスサポートセンターにお問い合わせください。お客様にご記入いただいた個人情報(保証書の控えは、株式会社フィリップス・ジャパンのホームページ http://www.philips.co.jp/ に掲載されている「お客様の個人情報の取り扱いについて」の当社の方針)に基づき適切に管理いたします。

品名	オールインワントリマーキット
品番	MG3921/15 MG3931/15
保証期間	お買い上げ日より2年
対象部分	本体、充電ケーブル(トリマー、鼻毛・耳毛トリマー(回転式)、フメタル細部トリマー、コム、クリーニングブラシ、ポーチを除く)
お買い上げ日	年 月 日
ご住所	
ご氏名	
ご電話番号	
販売店	販売店名、住所、電話番号

※保証書は再発行しませんが、大切に保管してください。
※保証書が破損した場合、この保証書はお客様へのアカウントへの実名と責任を証明するものではありません。贈答品、記念品の場合も必ず記入捺印しお客様にお届けさせていただきます。

製品の使用方法や修理に関するお問い合わせ

フィリップスサポートセンター
0120(944)859

受付時間:9:00~18:00(年末年始除く)

Webからの
お問い合わせ



MyPhilips 登録のご案内

フィリップスでは、製品をより快適にご使用いただくために製品登録をおすすめしております。MyPhilipsでは製品の保証書や購入証明書の写事も保管でき、万一が購入証明書を紛失された場合に安心です。

URL <http://www.philips.co.jp/myphilips-about>

この印刷物は再生紙を使用しております。

警告

- 本体が異常に熱くなったり、異臭がしたり、充電時間が異常に長い等の異常・故障時は、直ちに使用を中止してください。そのまま使用すると火災・感電・けがに至るおそれがあります。
- USBコネクタ部は確実にUSB充電アダプタに差し込んでください。スムーズに差し込みができない場合は無理に押し込まずとしないでください。火災や感電の原因になります。
- 水場や浴室での充電は絶対にしてください。ショート・感電の原因になります。
- 電池が液漏れした場合は、液が目や皮膚に触れない様に注意してください。万一目に入った時は、こすらずに水道水で十分洗浄し医師の治療を受けてください。皮膚や衣類に付いた場合は水道水で十分洗い流してください。
- 充電ケーブルの接続前にコネクタ部が完全に乾いていることを確認してください。濡れた状態のままショート・感電の原因になります。
- お手入れの際は必ず本体から充電ケーブルを外してください。感電やけがをすることがあります。
- 濡れた手で充電ケーブルを抜き差ししないでください。感電やけがをすることがあります。
- 充電ケーブルを無理に曲げたり、ひっぱったり、ねじったり、たばねたり、重いものを載せたり、踏み込んだり、加工したりしないでください。充電ケーブルが破損し、火災・感電の原因となります。
- 刃やコマなどの部品が破損または故障した場合は、本製品を使用しないでください。けがの原因になります。交換の際は必ずフィリップス社製の代替部品にお取り替えください。
- 赤ちゃんの手の届くところに本製品を置かないでください。またお子様が本製品で遊ぶことがないように監視してください。
- 補助を必要とする人(子ども含む)に使用させないでください。また、お他の不自由な人だけでは使用しないでください。

注意

- 健康面で不安のある方や、ペースメーカー等の体内埋込型医療機器、家庭用医療電気機器を使用している場合は、使用前に医師又は機器メーカーに確認してください。
- 充電する場合は、定格出力電圧DC5V、定格出力電流1A以上で、タイププレートにPSEマークの表示がある安全技術基準に適合したUSB充電アダプタで充電してください。
- USB充電アダプタとの接続には変換コネクタや変換ケーブルは使用しないでください。本体の破損や火災の原因となります。
- 充電ケーブルを抜くときは、電源コード部を持たずに必ず先端のコネクタ部を持って引き抜いてください。感電やショートして発火することがあります。
- 充電時以外は、本体から充電ケーブルを抜いてください。けがややけど、感電発火による感電・漏電・火災の原因となります。
- 充電ケーブルは付属の専用充電ケーブルを使用してください。また付属の充電ケーブルでの製品の充電はしないでください。ショート、異常発熱による火災の原因になります。破損、故障した場合は、事故を避けるために必ずフィリップス社製の同型充電ケーブルをお求めください。
- 電源コネクタ受部にピンやごみを付着させないでください。感電・ショート・発火の原因になります。
- 本製品を部品を食糧洗浄機で洗わないでください。故障や破損の原因になります。
- ご使用時に刃やコムに異常がないことを確認してください。
- 刃は強く押さないでください。破損して皮膚を傷つけることがあります。
- 衛生上の理由から他の人と共用しないでください。
- 本製品を電子レンジやIH調理器具の近くに保管しないでください。故障や破損の原因になります。
- 鼻毛・耳毛トリマー(回転式)の先端は5mm以上挿入しないでください。けがをする恐れがあります。
- トリマー、鼻毛・耳毛トリマー(回転式)およびコムを乾燥させるときは、タオルやティッシュペーパーを使用しないでください。刃を傷めたと思われるけがをすることがあります。

目次

- 必ずお守りください
- 各部の名称
- 充電表示ランプについて
- 充電のしかた
- 基本的な使いかた
- ヒゲトリミングのしかた
- ヘアークットのしかた
- 顔まわりのトリミングのしかた
- ムダ毛の整えかた・剃りかた
- お手入れ方法
- 保管のしかた
- 製品を廃棄するとき
- 故障かな?と思ったら
- 保証とアフターサービス
- 仕様
- 無料修理規定

保管のしかた

● 充電ケーブルを無理に曲げたり、ひっぱったり、ねじったり、たばねたり、重いものを載せたり、踏み込んだり、加工したりしないでください。充電ケーブルが破損し、火災・感電の原因となります。

目次

1 必ずお守りください

2 各部の名称

3 充電表示ランプについて

4 充電のしかた

5 基本的な使いかた

6 ヒゲトリミングのしかた

7 ヘアークットのしかた

8 顔まわりのトリミングのしかた

9 ムダ毛の整えかた・剃りかた

10 お手入れ方法

11 保管のしかた

12 製品を廃棄するとき

13 故障かな?と思ったら

14 保証とアフターサービス

15 仕様

16 無料修理規定

Guidance in English

3 充電表示ランプについて

● 充電ケーブルを無理に曲げたり、ひっぱったり、ねじったり、たばねたり、重いものを載せたり、踏み込んだり、加工したりしないでください。充電ケーブルが破損し、火災・感電の原因となります。

● お手入れの際は必ず本体から充電ケーブルを外してください。感電やけがをすることがあります。

● 濡れた手で充電ケーブルを抜き差ししないでください。感電やけがをすることがあります。

● 充電ケーブルを無理に曲げたり、ひっぱったり、ねじったり、たばねたり、重いものを載せたり、踏み込んだり、加工したりしないでください。充電ケーブルが破損し、火災・感電の原因となります。

● 赤ちゃんの手の届くところに本製品を置かないでください。またお子様が本製品で遊ぶことがないように監視してください。

● 補助を必要とする人(子ども含む)に使用させないでください。また、お他の不自由な人だけでは使用しないでください。

トリマー

3 充電表示ランプについて

初めてお使いになるときや長い間ご使用にならないときは、充電表示ランプが表示されるまでに時間をかけて充電してください。

● 充電表示
充電中は充電表示ランプが白色に点灯します。

4 充電のしかた

● 定格出力電圧DC5V、定格出力電流1A以上で、タイププレートにPSEマークの表示がある安全技術基準に適合したUSB充電アダプタで充電してください。
- USB充電アダプタとの接続には変換コネクタや変換ケーブルは使用しないでください。
- 水場や浴室で充電をしないでください。
- 接続の前に各コネクタ部が完全に乾いていることを確認してください。濡れた手で充電ケーブルを抜き差ししないでください。
- 長時間使用しない場合は、充電電池が過充電や液漏れして使えなくなる可能性があります。3~4ヵ月~1度は充電してください。

● フルメタル細部トリマーを使用する時は、刃に触れた全ての毛がカットされますので、ご注意ください。

● フルメタル細部トリマーは、トリミングで残ってしまった毛の除去や、ヒゲの細部のスタイリングを整えるために使用します。顔全体のトリミングは使用しないでください。

● トリマーを本体に取り付けます。
※電気がOFFになっていることを確認してください。

● 電源をOnにし、ヒゲの流れに逆らうように動かします。常に刃が皮膚の上に押しつけず、すべらずように動かしてください(仕上がり)。

● トリマーを本体から取り外し、毛を取り除いてください。

トリマー

3 充電表示ランプについて

初めてお使いになるときや長い間ご使用にならないときは、充電表示ランプが表示されるまでに時間をかけて充電してください。

● 充電表示
充電中は充電表示ランプが白色に点灯します。

4 充電のしかた

● 定格出力電圧DC5V、定格出力電流1A以上で、タイププレートにPSEマークの表示がある安全技術基準に適合したUSB充電アダプタで充電してください。
- USB充電アダプタとの接続には変換コネクタや変換ケーブルは使用しないでください。
- 水場や浴室で充電をしないでください。
- 接続の前に各コネクタ部が完全に乾いていることを確認してください。濡れた手で充電ケーブルを抜き差ししないでください。
- 長時間使用しない場合は、充電電池が過充電や液漏れして使えなくなる可能性があります。3~4ヵ月~1度は充電してください。

● フルメタル細部トリマーを使用する時は、刃に触れた全ての毛がカットされますので、ご注意ください。


● フルメタル細部トリマーは、トリミングで残ってしまった毛の除去や、ヒゲの細部のスタイリングを整えるために使用します。顔全体のトリミングは使用しないでください。

● トリマーを本体に取り付けます。
※電気がOFFになっていることを確認してください。

● 電源をOnにし、ヒゲの流れに逆らうように動かします。常に刃が皮膚の上に押しつけず、すべらずように動かしてください(仕上がり)。

● トリマーを本体から取り外し、毛を取り除いてください。

● トリマーを本体から取り外し、毛を取り除

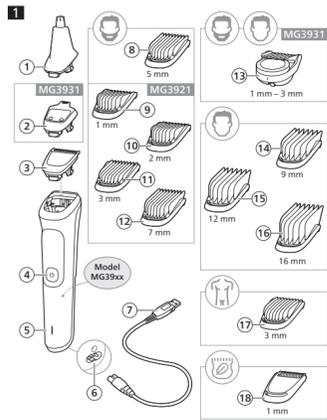

English

Features (Fig. 1)

Important safety information

Only use the product for its intended household purpose. Read this important information carefully before you use the product and its batteries and accessories, and save it for future reference. Misuse can lead to hazards or serious injuries. The accessories supplied may vary for different products.

Warning

- To charge the product, only use a certified safety extra low voltage (SELV) supply unit with output rating 5 V, ≥ 1 A. A suitable supply unit (e.g. Philips HQ87) is available via www.philips.com/support. If you need support finding the correct USB supply unit, contact the Consumer Care Center in your country (see the international warranty leaflet for contact details). Using a non-certified supply unit may cause hazards or serious injuries.
- Keep the product, the USB cable and the USB supply unit dry (Fig. 2).
- Combs and cutting units can be rinsed under the tap if detached from the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not modify the supply unit.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.
- Do not use a damaged appliance. Replace damaged parts with new Philips parts.
- Because of hygiene, only one person should use the appliance.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids to clean the appliance.
- Only use original Philips accessories or consumables.
- Charge, use and store the product at a temperature between 10 °C and 35 °C.
- Keep product and batteries away from fire and do not expose them to direct sunlight or high temperatures.
- If the product becomes abnormally hot or smelly, changes color or if charging takes longer than usual, stop using and charging the product and contact Philips.
- Do not place products and their batteries in microwave ovens or on induction cookers.
- Do not open, modify, pierce, damage or dismantle the product or battery to prevent batteries from heating up or releasing toxic or hazardous substances. Do not short-circuit, overcharge or reverse charge batteries.
- If batteries are damaged or leaking, avoid contact with the skin or eyes. If this occurs, immediately rinse well with water and seek medical care.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

You can find the model number on the back of your product.

The full model number (e.g. MG1234/56) is located on the bottom of the packaging, your receipt or order confirmation.

IMPORTANT TO KNOW



Never rinse the handle under the tap or immerse it in water. Only the cutting element and the attachments can be rinsed under the tap when detached from the handle.

Getting the handle wet may cause irreversible damage to your appliance. This will result in the appliance becoming unusable.

- This appliance can only be used without cord.
 - Switch off the appliance before removing or attaching attachments and before cleaning.
 - Clean the appliance after each use (see 'Cleaning').
- 1 Nose and ear hair trimmer
 - 2 Precision trimmer (MG3921)
 - 3 Cutting element
 - 4 On/off button
 - 5 Charge indicator
 - 6 Socket for small plug
 - 7 USB cable

Note: The power source is not included. A suitable power source (e.g. Philips HQ87) is available via www.philips.com/support.

- 8 Beard comb 5 mm
 - 9 Stubble comb 1 mm (MG3921)
 - 10 Stubble comb 2 mm (MG3921)
 - 11 Beard comb 3 mm (MG3921)
 - 12 Beard comb 7 mm (MG3921)
 - 13 Adjustable beard and hair comb 1 mm - 3 mm (MG3931)
 - 14 Hair comb 9 mm
 - 15 Hair comb 12 mm
 - 16 Hair comb 16 mm
 - 17 Body comb 3 mm
 - 18 Intimate comb 1 mm
- Not shown: cleaning brush and pouch

Charging

- Charging or using the appliance at temperatures below 10 °C or higher than 35 °C adversely affects the lifespan of the battery.
- If the appliance is subjected to a major change in temperature, pressure or humidity, let the appliance acclimatize for 30 minutes before use.

Charge the appliance before first use and when the motor starts working more slowly. It takes 8 hours to fully charge the battery. When the appliance is fully charged, it has an operating time of up to 60 minutes (MG3921) or 70 minutes (MG3931).

Warning: Keep the USB cable and the USB power source dry (Fig. 2).



- 1 Make sure the appliance is switched off.
- 2 Insert the small plug of the USB cable into the socket in the bottom of the appliance (Fig. 3).
- 3 Insert the USB plug into the USB power source (not included) (Fig. 4).
- 4 Insert the USB power source into the power outlet (Fig. 5).
- 5 After charging, remove the USB power source from the power outlet and pull the small plug out of the appliance.

Using the appliance

Always check the product and all accessories before you use it. Do not use the product or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

Because of hygiene, only one person should use the product.

Trimming tips

- When trimming for the first time, start by using the comb with the maximum trimming length setting to familiarize yourself with the appliance.
- Since all hairs do not grow in the same direction, you may want to try different trimming directions (i.e. upwards, downwards, or across). Practice is best for optimum results.
- Always make smooth and gentle movements and be sure the surface of the comb always stays in contact with your skin.
- For best results, use the appliance on clean, dry hair, as wet hair tends to stick to the body.
- When too many hairs have accumulated on the appliance, remove the hairs before and/or during use, for best trimming results (see 'Cleaning').

Changing attachments

Detaching and attaching cutting elements

- 1 To detach a cutting element, place your thumb below the teeth of the cutting element and gently push upwards until the cutting element comes off the handle (Fig. 6).
- 2 To attach a cutting element, insert the plastic notch at the back of the cutting element into the guiding slot in the handle. Then gently press the teeth of the cutting element downwards until the cutting element clicks into place (Fig. 7).

Detaching the nose and ear hair trimmer

- 1 Place your finger on the recess at the back of the attachment and push the attachment off the handle. Use your other hand to prevent the attachment from dropping on the floor.

Attaching and detaching combs

- 1 To attach any type of comb onto the cutting element, slide the front part of the comb onto the teeth and press the notch at the back of the comb downwards until it clicks into place (Fig. 8).
- 2 To detach any type of comb from the cutting element, carefully push its back part off the appliance and then slide it off the cutting element (Fig. 9).

Switching the appliance on and off

To switch the appliance on or off, press the on/off button once.

Attachments for use on beard

Always comb your beard or moustache with a fine comb before you start trimming.

Beard combs

Use a stubble or beard comb attached to the cutting element to trim your beard and mustache evenly. The numbers on the combs relate to the number of millimeters of hair length that will remain after trimming.

- 1 Attach a stubble or beard comb to the cutting element (see 'Changing attachments').
- 2 To trim in the most effective way, move the comb against the direction of hair growth (Fig. 10). Make sure that the surface of the comb always stays in contact with the skin.
- 3 Switch off and clean the appliance after each use (see 'Cleaning').

Trimming without comb

Use the cutting element without any comb to trim hair close to the skin (to a length of ca. 0.5 mm) or to create clean lines around your beard, neck and sideburns.

- 1 To trim hair close to the skin, place the flat side of the cutting element against your skin and make strokes against the direction of hair growth.
- 2 For contouring, hold the cutting element perpendicular to the skin and move it upwards or downwards with gentle pressure (Fig. 11).
- 3 Switch off and clean the appliance after each use (see 'Cleaning').

Adjustable beard and hair comb (MG3931)

Use the adjustable beard and hair comb to trim your beard or scalp hair evenly to the desired length. The hair length settings range from 1 mm to 3 mm and relate to the number of millimeters of hair length that will remain after trimming.

- 1 Attach the adjustable beard and hair comb to the cutting element (see 'Changing attachments').
- 2 Scroll the wheel on the comb to set the length (Fig. 12).
- 3 To trim in the most effective way, move the comb against the direction of hair growth. Make sure that the surface of the comb always stays in contact with the skin.
- 4 Switch off and clean the appliance after each use (see 'Cleaning').

Attachments for use on head

Always comb your hair before you start trimming.

For best results, use the appliance on clean, dry hair.

Hair combs

Use a hair comb attached to the cutting element to evenly trim the hairs on your head. The numbers on the combs relate to the number of millimeters of hair length that will remain after trimming.

- 1 Attach a hair comb to the cutting element (see 'Changing attachments').
- 2 Move the appliance slowly over the crown from different directions to achieve an even result (Fig. 13). Always move the appliance against the direction of hair growth. Press lightly. Make sure that the surface of the comb always stays in contact with the skin.
- 3 Make overlapping passes over the head to ensure that all hair that should be cut has been cut.
- 4 Gently shake the hairs off the appliance in between strokes to prevent hairs from collecting between the cutting element and the comb.
- 5 Switch off and clean the appliance after each use (see 'Cleaning').

Attachments for use on body

Always use a body comb when trimming sensitive areas.

Intimate comb

Attach the intimate comb to the cutting element to trim hair on sensitive body areas (such as your intimate area, armpits or chest) to a short length (1 mm), for extra skin protection.

- 1 Attach the intimate comb to the cutting element.
- 2 If possible, stretch a small area of the skin with two fingers to make the hairs stand upright.
- 3 Place the flat side of the cutting element against your skin and make strokes against the direction of hair growth (Fig. 14). Make sure that the surface of the comb always stays in contact with the skin.
- 4 Switch off and clean the appliance after each use (see 'Cleaning').

Body comb

Attach the body comb to the cutting element to trim hairs below the neckline to the length of 3 mm.

- 1 Attach the body comb to the cutting element (see 'Changing attachments').
- 2 To trim in the most effective way, stretch the skin with your free hand and move the comb against the direction of hair growth (Fig. 15). Make sure that the surface of the comb always stays in contact with the skin.
- 3 Switch off and clean the appliance after each use (see 'Cleaning').

Precision attachments for use on face

Precision trimmer (MG3931)

Use the precision trimmer to create fine lines and contours around your facial style close to the skin, to the length of 0.5 mm.

- 1 Hold the precision trimming head perpendicular to the skin and move the trimming head upwards or downwards with gentle pressure (Fig. 16).
- 2 Switch off and clean the appliance after each use (see 'Cleaning').

Nose and ear hair trimmer

- Use the nose and ear hair trimmer to trim your nose and/or ear hair.
- Make sure nasal passages are clean. Make sure outer ear channels are clean and free from wax.
 - Do not insert the cutting element too deep into your nostrils or ear channels (max. 5 mm).
 - When trimming both nose and ear hair, make firm, rotary movements to ensure that the cutting element reaches all the hairs.
 - Clean the nose and ear hair trimmer after each use.

Note: The nose and ear hair trimmer is **not** designed to clean-shave your nostrils or ear channels, but to cut the hairs to a shorter length. Nose and ear hairs have important protective functions and should not be fully removed.

Trimming nose hair

- 1 Gently insert the cutting element into one of the nostrils. Move the tip in and out of the nostril in a firm, rotary motion to cut the hairs to a shorter length (Fig. 17).

Trimming ear hair

- 1 Slowly move the cutting element along the outer ear to trim hairs that stick out beyond the rim.
- 2 Gently insert the cutting element into the outer ear channel. Move the tip in and out of the outer ear channel in a firm, rotary motion to cut the hairs to a shorter length (Fig. 17).

Switch off and clean the product after each use (see 'Cleaning').

Cleaning

Never rinse the handle under the tap or immerse it in water. Only the cutting element and the attachments can be rinsed under the tap when detached from the handle.

Switch off the appliance before removing or attaching attachments and before cleaning.

Only use cold or lukewarm water to clean the cutting element and the attachments.

Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Never dry the cutting element with a towel or tissue, as they may get caught in the teeth and cause damage.

- 1 Make sure that the appliance is switched off and that the USB power source has been removed from the power outlet and from the appliance.
- 2 Wipe the handle with a dry cloth.

Cleaning with brush

- 1 Detach any comb from the appliance and clean it with the cleaning brush.
- 2 Detach the cutting element from the appliance. Clean the teeth and the inside of the cutting element with the cleaning brush.
- 3 Clean the inside of the hair chamber with the cleaning brush (Fig. 18).

Keep the handle away from water. Make sure that no water reaches the inside of the hair chamber.

Cleaning attachments under the tap

- 1 Detach any comb and the cutting element from the appliance and rinse them under the tap (Fig. 19).
- 2 Carefully shake off excess water and let the parts air-dry completely before reattaching them to the appliance (Fig. 20).

Cleaning the nose and ear hair trimmer

Clean the nose and ear hair trimmer immediately after use and when a lot of hair or dirt has accumulated on the cutting element.

- 1 Detach the nose and ear hair trimmer from the product.
- 2 Rinse the nose and ear hair trimmer head under running tap water (Fig. 21).
- 3 For a thorough clean, immerse the nose and ear hair trimmer head in a bowl with warm water for a few minutes to soak and soften the debris. Then rinse the nose and ear trimmer head under running tap water to remove stubborn debris.
- 4 Carefully shake off excess water and let all parts air-dry completely before reattaching them to the product.

Storage

Note: Do not place or store the appliance where it can fall or be pulled into a tub or sink, water or other liquid while plugged in.

- Make sure that the appliance is switched off and that the USB power source has been removed from the power outlet and from the appliance.
- Do not wrap the USB cable around the appliance when storing.
- Store the appliance, the USB power source and all the accessories in the pouch supplied. Attach a comb to the cutting element to protect the teeth during storage.
- Place the pouch in a safe, dry location, where it will not be crushed, banged, or subject to damage.
- Make sure that the appliance and the accessories are dry before you place them in the pouch.

Support

For all product support, please visit www.philips.com/support. Cutting units are not covered by the terms of the international warranty because they are subject to wear.

Ordering accessories

To buy accessories or spare parts, visit www.philips.com/parts-and-accessories or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

Removal of built-in rechargeable battery

The built-in rechargeable battery must be removed when the appliance is discarded. Before removing the battery, make sure that the appliance is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the appliance and when you dispose of the rechargeable battery.

When you handle batteries, make sure that your hands, the product and the batteries are dry.

To avoid accidental short-circuiting of batteries after removal, do not let battery terminals come into contact with metal objects (e.g. coins, hairpins, rings). Do not wrap batteries in aluminum foil. Tape battery terminals or put batteries in a plastic bag before you discard them.

- 1 Remove the cutting element (Fig. 6).
- 2 Unscrew the screw in the bottom of the handle (Fig. 22).
- 3 Place the handle horizontally on a flat surface with the back panel facing upwards. Slide the back panel slightly towards the bottom of the handle and then lift it off the handle (Fig. 23).
- 4 Use the screwdriver to lift the metal connectors near the bottom of the handle (Fig. 24).
- 5 Use the screwdriver to unhook and lift one of the sides of the printed circuit board (Fig. 25).
- 6 Pull the printed circuit board together with the battery out of the handle (Fig. 26).
- 7 Detach the battery from the printed circuit board (Fig. 27). You can now dispose of the rechargeable battery.

Recycling

- This symbol means that electrical products and batteries shall not be disposed of with normal household waste (Fig. 28).
- Follow your country's rules for the separate collection of electrical products and batteries.