

Read all instructions carefully before use. Keep the user manual and product packaging for future reference.



Finding the right teat is important:

We all learn at our own pace. Suckling is a skill and some babies develop it quicker than others. That's why some babies might initially benefit from our "First Flow" teat (Teat 0) before progressing to the Natural Response teats.

When should I switch the teats?
Switch to "First Flow" teat when your baby takes longer than 20 minutes to drink 50 ml using the Natural Response teats. Try a Natural Response teat with a higher flow rate if your baby is playing with the teat instead of drinking or seems frustrated. If feeding difficulties persist, consult a healthcare professional.

For your child's safety and health

WARNING!

- Continuous and prolonged sucking of fluids will cause tooth decay.
- Always check food temperature before feeding.
- Throw away at the first signs of damage or weakness.
- Keep components not in use out of the reach of children.
- Never attach to cords, ribbons, laces or loose parts of clothing. The child can be strangled.
- Never use feeding teats as a soother.
- Glass bottles may break.
- Always use this product with adult supervision.

It is not recommended to use a microwave to warm up baby food or drinks. Microwaves may destroy valuable nutrients in food/drinks and may produce localized high temperatures. If you decide to use the microwave, take extra care to stir heated food/drinks to ensure even heat distribution and check the temperature before serving. Only place the container in the microwave, without the screw ring, teat and cap. Do not allow children to play with small parts or walk/run while using bottles. Always discard any breast milk that is left over at the end of a feed. Inspect before each use and pull the feeding teat in all directions. Throw away at the first signs of damage or weakness.

Glass bottle (if applicable)

Glass bottles may break. Always handle with care and do not let children hold glass bottles. Do not use bottle handles with glass bottles. Inspect the glass bottle before each use. Do not use bottles if there are any cracks on or glass fragments in the bottle. Do not use metal inside the glass bottle to stir contents or for cleaning. This can damage the glass. Prolonged wear or development of scratches may lead to breakage.

Before first use

Disassemble all parts, clean and then sterilize the parts by placing in boiling water for 5 minutes or sterilize by using a Philips Avent sterilizer. This is to ensure hygiene.

Assembly

Make sure that the feeding teat is fully pulled through the screw ring as shown in the image (Fig. 1, 2).

Cleaning and storage

Clean all parts before each use to ensure hygiene. After each use, disassemble all parts, wash in warm, soapy water, remove any food residues and rinse thoroughly. If you use a brush to clean the tip of the feeding teat, clean it as carefully as possible to avoid damage. Then sterilize using a Philips Avent sterilizer or boil for 5 minutes. Make sure that you wash your hands thoroughly and that the surfaces are clean before contact with sterilized components. During sterilization

with boiling water, prevent the parts from touching the side of the pot. This can cause irreversible product deformation, defect or damage that Philips cannot be held liable for. Food colorings may discolor parts. This product is dishwasher safe. Do not place the product in a heated oven. Do not bring the bottle parts in contact with or place on surfaces with abrasive or antibacterial cleaning agents. We recommend replacing feeding teats every 3 months. Keep feeding teats in a dry, covered container. Do not leave a feeding teat in direct sunlight or heat, or leave in disinfectant (sterilizing solution) for longer than recommended, as this may weaken the teat.

Compatibility

Replacement teats are available separately. To learn more about choosing the right teat for your baby, visit us at www.philips.com/avent. These bottle parts are compatible only with Philips Avent Natural teats.

Support

If you need information or support, please visit www.philips.com/support.

简体中文

使用前请仔细阅读所有说明。
请保留用户手册和产品包装，
以备日后参考。



找到合适的奶嘴很重要：

每个人的学习节奏各不相同。吮吸是一项技能，有些宝宝掌握得更快。因此，有些宝宝在开始阶段使用“特小流量”奶嘴（0号奶嘴）会更合适，然后再逐步过渡到 Natural Response 奶嘴。什么时候需要更换奶嘴？如果宝宝使用 Natural Response 奶嘴喝完 50 毫升奶超过 20 分钟，可以尝试换成“特小流量”奶嘴。如果宝宝只是含着奶嘴玩，而不喝奶，或者显得有些烦躁，可以尝试流速更高的 Natural Response 奶嘴。如果喂养问题持续存在，请咨询医疗专业人士。

为了您孩子的安全与健康


警告！

- 长期吸吮将会导致龋病。
- 喂食前应检查食物的温度。
- 若有明显破损或缺陷，请立即丢弃。
- 将不用的组件放置在儿童无法接触到的地方。
- 切勿系在绳索、丝带、蕾丝或衣服的松动部分，以免使孩子窒息。
- 不应将奶嘴作为安抚奶嘴使用。
- 玻璃易碎。
- 应在成人监护下使用本产品。



www.philips.com/avent
Philips Consumer Lifestyle B.V.
Tussendiepen 4, 9206 AD Drachten, The Netherlands

Trademarks are the property of Koninklijke Philips N.V.
商标归 Koninklijke Philips N.V.
© 2025 Koninklijke Philips N.V.
All rights reserved.
保留所有权利。
4241.354.0273.8 (2025-11-18)

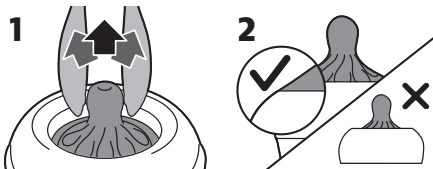

- 保持所有不使用的部件放在儿童可触及范围之外,使儿童不能接触,以免被儿童入口误吞或发生其他危险的意外。不应将奶瓶及奶瓶任何部件作为玩具使用。

建议不要使用微波炉来加热婴儿食物或饮品。微波炉可能会造成食物/饮品中重要的营养成分流失,同时会产生局部高温。如果您决定使用微波炉,应格外小心,请搅拌加热的食物/饮品,以确保热量均匀分布并在喂食之前测量温度。请不要用火源直接加热产品,会导致产品损坏。请仅将不带螺旋盖、奶嘴和瓶盖的容器放到微波炉中。切勿让儿童玩耍小零件,或让儿童在行走或奔跑时使用奶瓶。务必丢弃哺喂后剩余的母乳。每次使用前先检查、并向各方向拉伸奶嘴,一旦出现破损或缺陷应立即丢弃。

玻璃奶瓶 (如果适用)


玻璃奶瓶可能会破裂。请务必小心处理,不要让儿童握住玻璃奶瓶。切勿将奶瓶把手与玻璃奶瓶一同使用。每次使用前,请检查玻璃奶瓶。如果瓶身有任何破裂或瓶内有玻璃碎片,请不要使用。切勿使用金属物在玻璃奶瓶内搅拌或进行清洁。这可能会损坏玻璃。长期磨损或出现划痕可能会导致奶瓶破裂。

首次使用之前

请在第一次使用前清洁本产品。为保证卫生,首次使用前在沸水中消毒 5 分钟,煮沸消毒时水量应足够,避免产品因长时间接触到温度较高的锅底或锅沿而导致变形;每次使用前进行清洁或消毒。

组装

如图所示 (图 1、图 2), 确保将奶嘴完全提拉, 穿过螺旋盖。

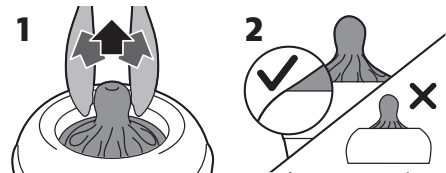

清洁和存放

请在每次使用前清洁或消毒所有部件, 以保证卫生。每次使用完后, 请拆卸所有部件, 在温热的肥皂水中进行清洗以除去任何食物残渣, 并彻底冲洗。如果要使用刷子清洁奶嘴顶部, 请尽量小心操作, 避免损坏奶嘴。然后使用飞利浦新安怡消毒锅进行消毒或在沸水中煮 5 分钟。在接触消毒组件之前, 确保彻底清洗您的双手并确保表面干净。在用沸水消毒期间, 防止部件接触锅的侧面。这可能会导致不可逆的产品变形、缺陷或损坏, 对此飞利浦概不负责。食品的颜色可能会使部件变色。本产品可用洗碗机清洗。请勿将产品放置在加热的烤箱中。切勿将奶瓶部件接触或放置在带有腐蚀性或抗菌清洁剂的物体表面。我们建议每 3 个月更换一次奶嘴。请将奶嘴储存在干燥和封闭的容器内。不要将奶嘴置于阳光直射处、直接置于热源处或长期置于消毒剂中、这将导致奶嘴老化。

兼容性

替换奶嘴可单独出售。若要详细了解如何为宝宝选择适合的奶嘴, 请访问

www.philips.com/avent。

这些奶瓶部件仅与飞利浦新安怡自然系列奶嘴兼容。

支持

如果您需要信息或支持, 请访问 www.philips.com/support。

繁體中文

使用前請先仔細閱讀所有說明。請保留使用手冊及產品包裝以供日後參考。



找到合適的奶嘴很重要：

每個寶寶的學習步調都不同。吮吸是一項技能, 有些寶寶學得比其他寶寶快。因此, 有些寶寶可能在使用 Natural Response 奶嘴前, 需要先从我們的「初始流量」奶嘴 (0 號奶嘴) 開始。我應該什麼時候更換奶嘴? 如果您的寶寶使用 Natural Response 奶嘴喝完 50 毫升的奶需要超過 20 分鐘, 建議更換為「初始流量」奶嘴。若寶寶在餵奶時只是在玩弄奶嘴、不專心吮吸, 或表現出焦躁情緒, 您可以嘗試更換為流速更快的 Natural Response 奶嘴。若仍有餵哺上的困難, 建議諮詢專業的醫療人員。

為了孩童安全與健康

警告！

- 持續且長時間的吮吸液體會導致蛀牙。
- 餵哺之前, 請務必檢查食物溫度。
- 若有損壞或變質的現象, 請立即丟棄。
- 所有不用的組件應收放在孩童無法拿取的地方。
- 切勿加繫繩索、絲帶、鞋帶或衣物的寬鬆零件。否則可能造成兒童絞勒窒息。
- 請勿將餵哺奶嘴作為安撫奶嘴使用。
- 玻璃奶瓶有破裂的疑慮。
- 本產品必須在成人監督下使用。

嬰兒食物或飲品不建議使用微波爐加熱。食物/飲品中真實營養成分可能會受微波爐破壞, 並造成受熱不均。如仍決定使用微波爐, 加熱後的食物/飲品務必攪拌以確保均勻受熱, 並在食用前檢查溫度。使用微波爐時, 不可放入螺旋環、奶嘴和杯蓋等零件, 只能放入容器。請勿讓孩童把玩小型零件, 或邊走/跑邊使用奶瓶。請務必丟棄餵食後剩下的母乳。每次使用奶嘴前請先仔細檢查, 並將奶嘴往各個方向輕拉, 若有損壞或變質的現象, 請立即丟棄。

玻璃奶瓶 (如適用)

玻璃奶瓶有破裂的疑慮。請輕拿輕放, 不要讓兒童握持本產品。請勿將奶瓶握把用於玻璃奶瓶。請在每次使用前檢查本產品。若奶瓶上有任何裂痕或瓶內有玻璃碎片, 請勿使用。請勿將金屬物伸入玻璃奶瓶中攪拌盛裝物或清潔。這樣做可能會損壞玻璃材質。長時間磨損或累積刮痕可能會導致瓶身破裂。

第一次使用前

拆下並清潔所有零件, 然後浸泡於沸水中 5 分鐘, 或使用飛利浦 Avent 消毒鍋消毒, 以確保衛生。

組裝

請務必如圖所示 (圖 1、圖 2), 將奶嘴穿過螺旋環並完全拉出。

清潔與收納

請在每次使用前清潔所有零件, 以確保衛生。每次使用後, 請拆卸所有零件, 接著使用溫肥皂水清洗; 清除所有食物殘渣後, 再徹底沖洗乾淨。如果使用刷子清潔奶嘴頭尖端, 請盡可能小心清潔, 避免造成損壞。接著, 使用飛利浦 Avent 消毒鍋消毒, 或放入沸水中煮 5 分鐘。在接觸消毒過的零件之前, 請務必先徹底洗手, 確保雙手表面乾淨。以沸水消毒時, 請避免零件直接接觸鍋邊。這可能造成無法回復的變形、瑕疵或損壞, 飛利浦一概不負責。食物色素可能會讓零件變色。本產品可用洗碗機清洗。請勿將本產品放入熱焗爐內。請避免奶瓶零件接觸到磨蝕性或抗菌性的清潔劑, 或沾有這類清潔劑的表面。我們建議每 3 個月更換一次奶嘴。將奶嘴收納在乾燥的加蓋容器中。請勿將奶嘴直接曝曬在陽光下或高溫處, 或置於消毒劑 (消毒溶液) 中超過建議時間, 以避免奶嘴脆弱變質。

兼容性

您可另外選購替換奶嘴。如需進一步了解如何為寶寶選擇合適的奶嘴, 請瀏覽我們的官網, 網址是 www.philips.com/avent。這些奶瓶零件只能搭配飛利浦 Avent Natural 奶嘴使用。

支援

如需相關資訊或支援, 請瀏覽 www.philips.com/support。