HD2618

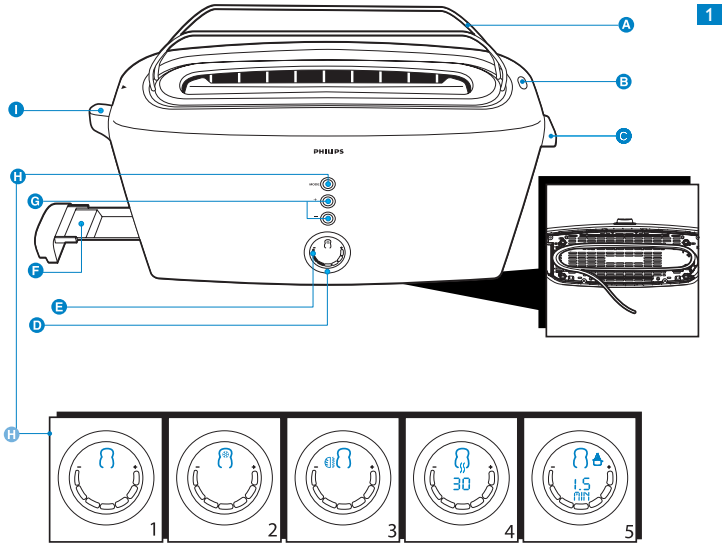

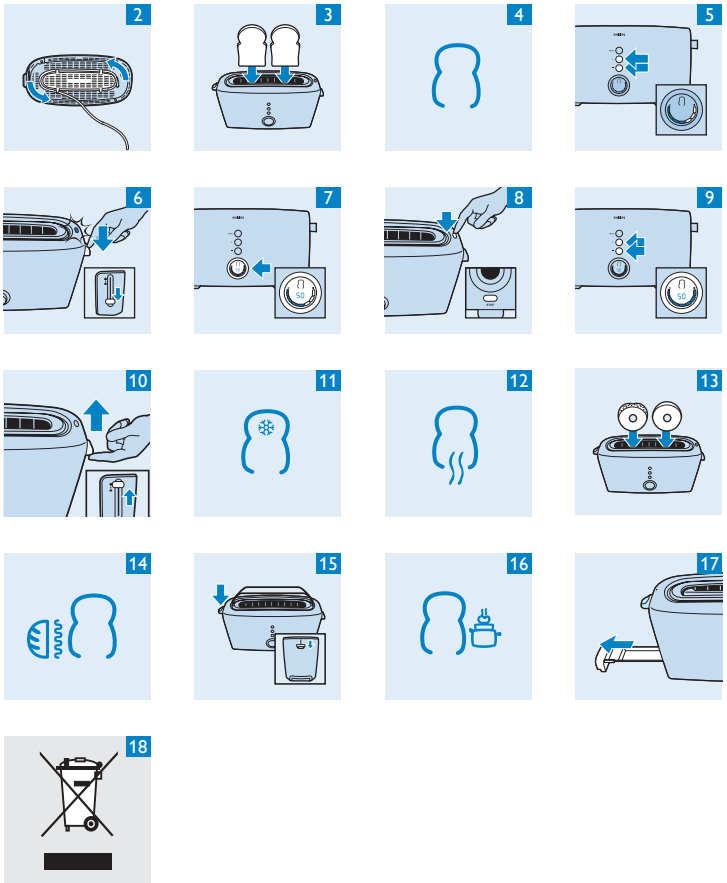



THE ALUMINIUM COLLECTION

PHILIPS

ENGLISH

General description (Fig. 1)

- A Warming rack
- B Stop button
- C Toasting lever
- D Display
- E Browning setting indication
- F Crumb tray
- G Browning controls (+ and -)
- H Mode button (to select different functions)
- 1 Normal toasting
- 2 Defrosting and toasting
- 3 One-side toasting (ideal for bagels and baguettes)
- 4 Reheating
- 5 Warming up rolls and croissants
- I Warming rack lever

Important

Read this user manual carefully before you use the appliance and save it for future reference.

- Check if the voltage indicated on the bottom of the appliance corresponds to the local mains voltage before you connect the appliance.
- Only connect the appliance to an earthed wall socket.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- Do not immerse the appliance or the mains cord in water or any other liquid.
- Always unplug the appliance after use.
- Keep the appliance out of the reach of children.
- Do not let the mains cord hang over the edge of the table or worktop on which the appliance stands and keep the cord away from hot surfaces.
- Do not let the appliance operate unattended. Do not operate it under or near curtains or other flammable materials or under wall cabinets, as bread may burn.
- Avoid touching the metal parts on top of the toaster, as they get very hot during toasting. Only touch the controls.
- To avoid the risk of fire, frequently remove crumbs from the crumb tray. Make sure the crumb tray is correctly placed.
- Immediately unplug the toaster if you observe fire or smoke.
- If a slice of bread gets stuck inside the toaster, unplug the appliance and let it cool down before you try to remove the bread. Do not use a knife or a sharp tool, as these may cause damage to the heating elements.
- This appliance is only intended for household use. Do not use it for commercial or industrial purposes and do not use it outdoors.
- Do not insert oversized foods or metal foil packages into the toaster, as this may cause fire or electric shock.
- Do not place the toaster on a hot surface.
- The warming rack is only meant for warming up rolls or croissants. Do not put any other ingredients on the warming rack, as this may lead to a hazardous situation.

Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Before first use

1. Remove any stickers and wipe the body of the toaster with a damp cloth.
2. Let the toaster complete a few toasting cycles without bread in it. Put the toaster in a properly ventilated room and select the highest browning setting.

This burns off any dust that may have accumulated on the heating elements and prevents unpleasant smells during toasting.

Using the appliance

Never let the toaster operate unattended.

1. To adjust the length of the cord, wind part of it round the brackets in the base of the appliance (Fig. 2).
2. Put the appliance on a stable and flat surface, away from curtains and other combustible materials.
3. Put the plug in the wall socket.

Toasting bread

1. Put one or two slices of bread in the toaster (Fig. 3).
2. Select the mode by pressing the mode button until appears on the display. Depending on the previously selected mode, you have to press the mode button once or several times. (Fig. 4)
3. Select the desired browning setting. (Fig. 5)

Select a low setting for lightly toasted bread and a high setting for darkly toasted bread.

- Press the - button once or several times to select a lower setting for lighter toast.
- Press the + button once or several times to select a higher setting for darker toast.

◗ The display shows the selected setting.

4. Push the toasting lever down to switch on the appliance. (Fig. 6)

The toasting lever only stays down if the appliance is connected to the mains.

The top part of the toaster gets hot during toasting. Be careful not to touch it.

◗ The stop button lights up.
◗ The display shows the toasting time and starts to count down. The last minute is displayed in seconds (Fig. 7).

Note: You can stop the toasting process and pop the bread up at any time by pressing the STOP button on top of the toaster (Fig. 8).

5. If required, you can adjust the browning setting during toasting (Fig. 9)

During toasting, you can press the + button to get darker toast or the - button to get lighter toast.

◗ The toasting time and browning setting are adjusted on the display.

Note: When you select a lower setting for lighter toast, the toast may pop up immediately because the desired browning level has already been reached.

6. When the toast is ready, you hear a beep, the display flashes a few times and the bread pops up.
7. Remove the toasted bread. To remove smaller items, you can move the toasting lever upwards a little further (Fig. 10).

Note: If bread gets stuck inside the toaster, remove the plug from the wall socket, let the appliance cool down completely and carefully remove the bread from the toaster. Do not use a knife or another sharp metal tool to do this and do not touch the metal internal parts of the toaster.

Toasting frozen bread

1. Select the mode by pressing the mode button. (Fig. 11)

Depending on the previously selected mode, you have to press the mode button once or several times.

2. Select the desired browning setting and push the toasting lever down to switch on the appliance on (see section 'Toasting bread').

Reheating toasted bread

1. Select the mode by pressing the mode button. (Fig. 12)

Depending on the previously selected mode, you have to press the mode button once or several times.

2. Push the toasting lever down to switch on the appliance.

Note: You cannot adjust the browning setting. This mode operates at a fixed setting for an optimal result.

Toasting one side only

Ideal for toasting bagels and baguettes.

1. Half the bagel or baguette lengthwise and shorten the baguette to a length of max. 13cm.
2. Put the bread in the toaster with the side to be toasted facing the front of the toaster. (Fig. 13)
3. Select the mode by pressing the mode button. (Fig. 14)

Depending on the previously selected mode, you have to press the mode button once or several times.

4. Select the desired browning setting and push the toasting lever down to switch on the appliance on (see section 'Toasting bread').

Warming up rolls and croissants

1. Push the warming rack lever down to unfold the warming rack (Fig. 15).

Never put the rolls to be warmed up directly on top of the toaster. Always unfold the warming rack to avoid damage to the toaster.

2. Put the rolls or croissants on top of the warming rack.

Do not warm up more than 2 items at a time.

3. Select the mode by pressing the mode button. (Fig. 16)

Depending on the previously selected mode, you have to press the mode button once or several times.

4. Push the toasting lever down to switch on the appliance.

Note: You cannot adjust the browning setting. This mode operates at a fixed setting for an optimal result.

Note: If you want even warmer rolls or croissants, turn them over and push the toasting lever down again.

Sleep mode

If the toaster has not been used for 5 minutes, it goes into sleep mode automatically. Press any button to reactivate the toaster.

Cleaning

Never immerse the appliance in water.

1. Unplug the appliance.
2. Let the appliance cool down.
3. Clean the appliance with a damp cloth. Do not use abrasive cleaning agents.
4. Clean the display with a dry cloth without exerting any pressure.
5. Slide the crumb tray out of the appliance to remove crumbs (Fig. 17).

Do not hold the appliance upside down and do not shake it to remove the crumbs.

Environment

- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment (Fig. 18).

Guarantee & service

If you need information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Customer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Customer Care Centre in your country, go to your local Philips dealer or contact the Service Department of Philips Domestic Appliances and Personal Care BV.

Frequently asked questions

This chapter lists the questions most frequently asked about the appliance. If you cannot find the answer to your question, contact the Customer Care Centre in your country.

Question	Answer
1. Why doesn't the toaster work?	Perhaps the plug is not properly inserted in the wall socket.
	Perhaps the sleep mode is active. Press any button to check if the sleep mode has been activated.
	Perhaps the electronic system of the toaster is defective. Have the toaster examined and repaired or replaced by Philips or a service centre authorised by Philips.
2. How do I remove bread that is stuck in the toaster?	Unplug the appliance and let it cool down. Carefully remove the slice or slices from the toaster. Take care not to damage the heating elements while you remove the slice or slices of bread. Never use a metal object for this purpose.
3. The toast is too dark/too light. How can I prevent this?	Select a lower setting next time if your toast is too dark and a higher setting if your toast is too light.
4. Why does smoke come out of the toaster?	You have set a too high toasting setting for the type of bread inserted. Press the stop button to stop the toasting process.
5. The mains cord is damaged. What do I have to do?	If the mains cord of this appliance is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
6. Why has one side of the bread not been toasted?	You have selected the one-side toasting mode. To toast the other side as well, put the bread in the slot with the untoasted side facing the front of the toaster. Then follow the instructions in section 'Toasting one side only'.
7. Why can't I change the browning setting when I use the warming mode or reheat mode?	To warm up rolls and croissants and to reheat toasted bread, the toaster operates at fixed settings to ensure an optimal end result.
8. Why is only one side of my roll or croissant warm?	On the warming rack, only one side of the roll or croissant is warmed. Turn your roll or croissant over and warm it up again. Follow the instructions in section 'Warming up rolls and croissants'.
9. The display of the toaster continues to flash or be on. What do I have to do?	Remove the plug from the wall socket and then reinsert it. If the display continues to flash, the electronic system is probably defective. In this case, have the toaster examined and repaired or replaced by Philips or a service centre authorised by Philips.
10. Can I make toasted sandwiches (e.g. with cheese) in this toaster?	No, this toaster is not suitable for making toasted sandwiches.

繁體中文

一般說明 (圖 1)

- A 溫熱架
- B 取消按鈕
- C 烤麵包撥桿
- D 顯示
- E 烘烤設定標示
- F 集屑盤
- G 烘烤控制 (+ 和 -)
- H 模式鈕 (提供功能選擇)
  1 一般烘烤
  2 解凍加烘烤
  3 單面烘烤 (適合烘烤貝果和法國麵包)
  4 再加熱
  5 溫熱麵包捲及可頌
- I 溫熱架撥桿

重要事項

在使用本產品前，請先仔細閱讀本使用手冊，並保留說明以供日後參考。

- 在連接本產品的電源之前，請確認本產品機體底部所標示的電壓與當地的室內電壓是否相同。
- 只將產品連接到有接地的牆壁插座。
- 如果電線損壞，必須交由飛利浦、飛利浦授權之服務中心，或是具備相同資格的技師更換，以免發生危險。
- 不要將產品或電源線浸泡在水中或任何其他液體中。
- 用完本產品後，請務必將插頭拔掉。
- 請勿讓孩童接觸本產品。
- 請勿讓電源線懸掛在產品放置的桌子、流理台邊緣，電源線應遠離熱源。
- 使用時請勿離開產品。不要在窗簾下或其他易燃性材料附近或在壁櫥下方操作產品，此舉將有造成火災的危險。
- 因為烘烤麵包期間，機體上方的金屬會變得非常燙，請避免碰觸此部份。只能碰觸機身的控制鈕部位。
- 為避免發生火災，請定期清除集屑盤中的麵包屑。請確定集屑盤是否已正確地安裝。
- 若發現著火或冒煙等情形，請立即拔掉插頭。
- 如要清除黏在烤麵包機中的麵包薄片，請先切斷電源，讓機器先冷卻。請勿使用刀子或尖銳工具來清除麵包，以免損害加熱零件。
- 此烤麵包機僅供家庭使用，請勿用作其他商業或工業用途，同時也請勿在室外使用。
- 切勿將過大的食材及包覆錫箔紙的食材放入烤麵包機中，如此可能導致火災或電擊。
- 請勿將烤麵包機置放在高溫表面上。
- 溫熱架只能用來烘烤麵包捲或可頌麵包。請勿在溫熱架上放置任何其他食材，否則可能發生危險。

電磁場 (EMF)

本飛利浦產品符合電磁場 (Electromagnetic field，EMF) 所有相關標準。若正確處理及依照本使用手冊之說明進行操作，根據現有之科學文獻來看，使用本產品並無安全顧慮。

第一次使用前

1 請撕除所有貼紙，並用濕布擦拭烤麵包機的機體。

2 先不要放入麵包，讓烤麵包機空烤幾次。請將烤麵包機置於通風良好的地方，然後選擇最高的烘烤程度設定。

這樣可以清除累積在加熱板上的灰塵，以免在烤麵包時產生異味。

使用此電器

請勿讓孩童單獨操作烤麵包機。

1 您可將部分電源線纏繞到機器底部的托架，以調整電線長度。 (圖 2)

2 請將本產品放置在安穩平整的表面上，請遠離窗簾及其他易燃物。

3 將插頭插入插座。

烤麵包

1 在烤麵包機中放入一或二片麵包。 (圖 3)

2 若要選擇模式，只要按下模式鈕直到螢幕顯示即可。按模式鈕的次數需視先前所選的模式而定。 (圖 4)

3 請選擇理想的烘烤設定。 (圖 5)

若選擇較低的烘烤設定，可將麵包烘烤到稍微焦黃的程度，若選擇較高的烘烤設定，可將麵包烘烤到較為焦黃。

- 按下 - 按鈕一次或多次，選擇較低的烘烤設定，就可將麵包烘烤到稍微焦黃的程度。
- 按下 + 按鈕一次或多次，選擇較高的烘烤設定，就可將麵包烘烤到較為焦黃的程度。

◗ 螢幕中會顯示所選的設定。

4 壓下烤麵包撥桿，即可啟動烤麵包機。 (圖 6)

如果烤麵包機已接上主電源，烤麵包撥桿就會保持在按下的位置。

在烤麵包時，烤麵包機上方會變得很燙。請小心不要碰觸到此部份。

◗ 取消按鈕會亮起。
◗ 螢幕會顯示出烘烤時間並開始倒數。剩最後一分鐘時會以秒數顯示。 (圖 7)

注意：您可以隨時按下烤麵包機上方的「取消」按鈕，以停止烘烤並讓麵包跳起。 (圖 8)

5 必要時，在烤麵包過程中，您也可以隨時調整烘烤設定。 (圖 9)

在烤麵包過程中，您可以按下 + 按鈕來提高麵包焦度，或是按下 - 按鈕來降低麵包焦度。

◗ 螢幕上的烘烤時間和烘烤設定就會隨之調整。

注意：調整成焦度低的低烘烤設定時，麵包可能會立即彈起，因為已達所需的麵包焦度。

6 烘烤完成時，您會聽到嗶聲，而螢幕會閃爍幾次，然後麵包就會彈起。

7 請取出烤好的麵包。要取出較小的麵包時，您可將烤麵包撥桿稍微往上拉起。 (圖 10)

注意：如果麵包卡在烤麵包機裡面，請先拔掉插頭，讓麵包機完全冷卻後，再小心把麵包從中取出。請勿使用刀子或是其他尖銳金屬工具清除碎屑，也請不要碰觸烤麵包機的金屬部分。

烤冷凍麵包

1 按下模式鈕，選擇模式。 (圖 11)

按模式鈕的次數需視先前所選的模式而定。

2 請選擇理想的烘烤設定，然後壓下烤麵包撥桿，即可啟動烤麵包機。

重新加熱已烤好的麵包

1 按下模式鈕，選擇模式。 (圖 12)

按模式鈕的次數需視先前所選的模式而定。

2 壓下烤麵包撥桿，即可啟動烤麵包機。

注意：您不能調整烘烤設定。此模式只會執行固定的設定，以達到最佳效果。

單面烘烤

適合烘烤貝果和法國麵包

1 將貝果或法國麵包沿縱向切半並將長度控制在 13 公分以下。

2 將麵包放入烤麵包機中，要烤的一面朝向烤麵包機正面。 (圖 13)

3 按下模式鈕，選擇模式。 (圖 14)

按模式鈕的次數需視先前所選的模式而定。

4 請選擇理想的烘烤設定，然後壓下烤麵包撥桿，即可啟動烤麵包機。

溫熱麵包捲及可頌

1 壓下溫熱架撥桿，即可展開溫熱架。 (圖 15)

切勿將麵包捲直接放在烤麵包機頂部進行加熱。請使用溫熱架，以免損壞烤麵包機。

2 將麵包捲或可頌放在溫熱架上。

不要同時烘烤 2 片以上的麵包。

3 按下模式鈕，選擇模式。 (圖 16)

按模式鈕的次數需視先前所選的模式而定。

4 壓下烤麵包撥桿，即可啟動烤麵包機。

注意：您不能調整烘烤設定。此模式只會執行固定的設定，以達到最佳效果。

注意：若想要讓麵包捲或可頌麵包再熱一點，請將麵包翻面，然後再壓下烤麵包撥桿。

休眠模式

若烤麵包機閒置超過 5 分鐘，則會自動進入休眠模式。只要按下任何按鈕，烤麵包機就會恢復待命狀態。

清潔

切勿將本產品浸泡於水中。

1 將本產品的插頭拔掉。

2 先讓本產品冷卻。

3 請使用濕布來清潔本產品。不要使用具有磨蝕性的清潔劑。

4 清潔螢幕時，只要使用乾布輕輕擦拭即可。

5 將集屑盤拉出烤麵包機，再清除麵包屑。 (圖 17)

請勿讓本產品上下倒置並搖動烤麵包機來清除麵包屑。

環境保護

- 本產品壽命結束時請勿與一般家庭廢棄物一併丟棄。請將該產品放置於政府指定的回收站，此舉能為環保盡一份心力。 (圖 18)

保固與服務

若您需要相關資訊或有任何問題，請瀏覽飛利浦網站 www.philips.com，或連絡您當地的飛利浦客戶服務中心 (您可以在全球保證書上找到連絡電話)。如果您當地沒有客戶服務中心，請洽詢當地飛利浦經銷商，或與飛利浦小家電服務部門聯繫。

常見問題集

本章列出本產品的常見問題。如仍有疑問，請與您所在國家/地區的客戶服務中心聯繫。

問題	解答
1. 烤麵包機為何無法運轉？	插頭可能沒有正確插入電源插座中。
	可能是烤麵包機已進入休眠模式。請按下任一按鈕，查看是否已啟動休眠模式。
	可能是烤麵包機的電子系統故障。請將烤麵包機送回飛利浦或飛利浦合法授權的服務中心，以進行檢查、維修或是更換。
2. 如何取出卡在烤麵包機內的麵包？	拔除插頭並讓烤麵包機冷卻。小心地將麵包從烤麵包機中取出。取出麵包片時請注意不要損傷加熱元件。請勿使用金屬物品來取出麵包。
3. 我要如何避免麵包烤太焦或不夠焦的狀況發生？	如果麵包烤太焦的話，下次請選取較低的設定，如果不夠焦的話，請選取較高的設定。
4. 為何烤麵包機會冒煙？	您對放入的麵包選擇過高的烘烤設定。請按取消按鈕來停止烘烤。
5. 電源線損壞，我該怎麼做？	如果電線損壞，則必須交由飛利浦或飛利浦合法授權的服務中心，或是具有相同資格的技師來進行更換，以免發生危險。
6. 為何麵包有一面沒有烤到？	您可能是選到了「單面烘烤」模式。若要烘烤另一面，請將麵包放回烤麵包機中，並將沒烤到的那一面朝向烤麵包機正面。然後，請依照「單面烘烤」部分的說明操作。
7. 在加熱模式或重新加熱模式下，為何無法變更烘烤設定？	若要加熱麵包捲及可頌麵包，以及重新加熱土司麵包，烤麵包機只會執行固定的設定，以確保達到最佳效果。

問題	解答
8. 為何麵包捲或可頌麵包只有一面溫熱？	在溫熱架上，麵包捲或可頌麵包只有一面會受到加熱。請將麵包捲或可頌麵包翻面，讓麵包再次溫熱。請遵循「溫熱麵包捲及可頌」單元的指示。
9. 烤麵包機的螢幕會不斷閃爍或呈開啟狀態，我該怎麼做？	將電源插頭從插座上拔除，然後再重新插上。如果螢幕還是不斷閃爍，很可能是電子系統故障。此時，請將烤麵包機送回飛利浦或飛利浦合法授權的服務中心，以進行檢查、維修或是更換。
10. 可以用烤麵包機來烘烤三明治 (例如起司三明治) 嗎？	不可以，這台烤麵包機不適合用來烤三明治。

简体中文

一般说明 (图 1)

- A 烘烤架
- B 停止按钮
- C 烘烤杆
- D 显示屏
- E 烘烤程度设置指示器
- F 面包屑底盘
- G 烘烤程度设置（+ 和 -）
- H 模式按钮（用于选择不同的功能）
  1 普通烘烤
  2 解冻和烘烤
  3 单面烘烤（尤其适合硬面包圈和法国长面包）
  4 再加热
  5 加热圆面包或羊角面包
- I 加热架升起杆

注意事项

使用产品之前，请仔细阅读本用户手册，并妥善保管以供日后参考。

- 在将产品接通电源以前，首先确认产品底部所标示的电压与当地的电压相符。
- 产品只能使用带接地线的插座。
- 如果电源软线损坏，为避免危险，必须由制造厂或其维修部或类似的专职人员来更换。
- 切勿将产品或电源线浸入水或其他液体中。
- 使用后务必拔下产品的插头。
- 请将产品放置在儿童接触不到的地方。
- 切勿让电源线挂在放置本产品的桌边或工作台边。切勿使电源线与产品的热表面接触。
- 面包可能燃烧，因此面包片烘烤器不得在靠近窗帘及其他可燃材料的地方或在窗帘及其他可燃材料的下方使用。使用时必须有人看管。
- 不要接触烤面包机顶部的金属部分，因为这部分在烘烤过程中会变得非常热。只能接触控制按钮。
- 应经常清除面包屑底盘内的面包屑，以免着火。应确保面包屑底盘安装正确。
- 如果发现火焰或冒烟，请立即切断烤面包机电源。
- 如果面包片卡在烘烤槽内，请先切断产品电源，待产品完全冷却后，方可取出面包。禁止使用刀子或类似的锋利工具，以免损坏加热元件。
- 本产品仅限于家用。不可作为商业或工业之用以及用于户外。
- 请勿将过大的食物或金属箔纸包装的食物放入烤面包机中，以免着火或发生触电危险。
- 请勿将本烤面包机置于高温的表面上。
- 加热架仅适合于加热小圆面包或羊角面包。不要在加热架上放入其他食物，以免发生危险。

磁场 (EMF)

这款飞利浦产品符合关于电磁场 (EMF) 的所有相关标准。据目前的科学证明，如果正确使用并按照本用户手册中的说明进行操作，本产品是安全的。

初次使用之前

1 撕掉所有不干胶标签，并用湿布擦拭产品机身。

2 让烤面包机在没有面包在内的情况下完成几个烘烤程序。可以将烤面包机放在通风良好的房间中，然后选择最高的烘烤设置。

这样可将积聚在加热元件上的灰尘烧掉，以免在烘烤时产生难闻的气味。

使用本产品

止在无人看管的情况下使用本产品。

1 若要调整电源线的长度，您可将电源线绕在产品底部的电源线存储装置上。 (图 2)

2 将本产品置于稳固平坦的表面，远离窗帘和其他易燃物。

3 将插头插入插座。

烤面包片

1 将一片或两片面包放入烤面包机。 (图 3)

2 按下模式按钮选择 模式，直到 出现在显示屏上。根据先前选择的模式，您可以按一次或多次模式按钮。 (图 4)

3 选择所需的烘烤程度设置。 (图 5)

需要轻度烘烤的面包，可选择较低的烘烤程度设置；需要烘烤成褐黄色的面包，请选择较高的烘烤程度设置。

- 按一次或多次 - 按钮选择较低或较高的烘烤程度设置。
- 按一次或多次 + 按钮选择烘烤褐黄色面包的较高的烘烤程度设置。
- 显示屏将显示所选的设置。

4 按下烘烤杆，启动产品。 (图 6)

只有当产品接通电源时，烘烤杆才可被按下。

烤面包机的顶部将在烘烤时变热。请小心不要与其接触。

- 取消按钮上的指示灯亮起。
- 显示屏将显示烘烤时间并开始倒计时。最后一分钟以秒为单位显示。 (图 7)

注：可在任何时候按下烤面包机顶部的取消按钮，停止烘烤程序，使面包弹出。 (图 8)

5 如果需要，您可以在烘烤时调整烘烤程度设置 (图 9)

在烘烤过程中，您可以按 + 按钮获得较高的烘烤程度，也可以按 - 按钮获得较低的烘烤程度。

- 在显示屏上调整烘烤时间和烘烤程度设置。

注：当您为轻度烘烤选择较低的烘烤程度设置时，面包将立即弹出，因为已达到想要的烘烤程度。

6 烘烤完成后，将发出哔一声，显示屏闪烁几次并且面包弹出。

7 取出烤好的面包。要取出较小的面包，可以将烘烤杆再抬高一些。 (图 10)

注：如面包片卡在烤面包机中，请从插座拔出插头，待产品完全冷却，方可将面包片小心地从产品中取出。取出卡住的面包片时，禁止使用刀子或类似的锋利工具，并应避免接触产品的金属部件。

烤冷冻面包片

1 按下模式按钮选择 模式。 (图 11)

根据先前选择的模式，您可以按一次或多次模式按钮。

2 选择想要的烘烤程度设置并按下烘烤杆，从而启动产品（请参阅“烘烤面包”章节）。

热烘烤过的面包

1 按下模式按钮选择 模式。 (图 12)

根据先前选择的模式，您可以按一次或多次模式按钮。

2 按下烘烤杆，启动产品。

注：您无法调整烘烤程度设置。此模式以固定的设置运行，以便获得最佳效果。

面烘烤

烘烤硬面包圈和法国长面包特别理想。

1 纵向将硬面包圈或法国长面包切成两半，并将法国长面包切成不超过 13 厘米的段。

2 将面包放入烤面包机中，将要烤的一侧面向烤面包机。 (图 13)

3 按下模式按钮选择 模式。 (图 14)

根据先前选择的模式，您可以按一次或多次模式按钮。

4 选择想要的烘烤程度设置并按下烘烤杆，从而启动产品（请参阅“烘烤面包”章节）。

热圆面包或羊角面包

1 按下加热架升起杆，将加热架升起。 (图 15)

严禁将圆面包直接置于烤面包机的顶部加热。应始终将加热架升起以避免损坏烤面包机。

2 将圆面包或羊角面包置于烘烤架上。

一次最多只能加热 2 个面包。

3 按下模式按钮选择 模式。 (图 16)

根据先前选择的模式，您可以按一次或多次模式按钮。

4 按下烘烤杆，启动产品。

注：您无法调整烘烤程度设置。此模式以固定的设置运行，以便获得最佳效果。

注：如果要均匀地加热圆面包或羊角面包，请将它们翻转然后再次按下烘烤杆。

眠模式

如果超过 5 分钟未使用烤面包机，它将自动变为休眠模式。按下任一按钮重新启动烤面包机。

清洁

勿将产品浸入水中。

1 拔掉产品插头。

2 待本机冷却。

3 用一块湿布进行清洁。请勿使用磨蚀性清洁剂。

4 用一块干布清洁显示屏，不要施加任何压力。

5 将面包屑底盘拉出产品以清除面包屑。 (图 17)

请勿将产品倒置或摇动产品以倒出面包屑。

环保

- 弃置产品时，请不要将其与一般生活垃圾堆放在一起；应将其交给官方指定的回收中心。这样做有利于环保。 (图 18)

保修与服务

如果您需要详细信息或有任何问题，请浏览飞利浦网站，地址为 www.philips.com。您也可以与贵国的飞利浦顾客服务中心联系（您可以从全球保修卡中找到电话号码）。如果贵国没有飞利浦顾客服务中心，请与当地的飞利浦经销商或与飞利浦家庭小电器的维修中心联系。

常见问题

本章列出了关于本产品最常见的问题。如果您无法找到您的问题的答案，请联系您所在国家/地区的客户服务中心。

问题	回答
1. 为何烤面包机无法正常工作?	可能插头没有正确插入电源插座。
	可能休眠模式已激活。按下任何按钮检查休眠模式是否已激活。
	可能烤面包机的电子系统出现故障。请将烤面包机送往飞利浦或飞利浦授权的服务中心，由其检查、修理或更换。
2. 如何去除堵塞在烤面包机中的面包?	首先从电源插座中拔出插头，让产品冷却，然后从产品中小心地取出面包。在取出面包时，小心不要损坏加热元件。切勿使用金属物件取出面包。
3. 烘烤程度太重或太轻。如何避免这种情况?	如果烘烤程度太重，则下次选择较低的烘烤程度设置；如果烘烤程度太轻，则下次选择较高的烘烤程度设置。
4. 为什么烤面包机有冒烟现象?	依据您放进去烘烤的面包类型，您选择了过高的烘烤程度设置。请按取消按钮停止烘烤程序。
5. 电源线损坏。我该怎么办?	如果产品的电源线损坏，为避免危险，必须由制造厂或其维修部或厂方认可的专职人员来更换。
6. 为什么面包片的其中一面没有烘烤?	您选择了单面烘烤模式。如果想烘烤面包的另一面，可将面包置于烘烤槽中，将未烘烤的一面朝向烤面包机的正面。然后按照’“单面烘烤”章节中的说明进行操作。
7. 为什么在使用加热模式或翻热模式时无法更改烘烤程度设置?	若要加热圆面包和羊角面包以及翻热 烘烤过的面包，烤面包机将以固定设置运行，以确保最佳效果。
8. 为什么圆面包或羊角面包只有一面是热的?	在加热架上，只会加热圆面包或羊角面包的一面。请翻转圆面包或羊角面包并重新加热。按照“加热圆面包或羊角面包”一章中的说明进行操作。
9. 烤面包机的显示屏不断闪烁或持续开启。我该怎么办?	从电源插座上拔出插头然后重新插上。如果显示屏持续闪烁，则电子系统可能有故障。此时，请将烤面包机送往飞利浦或飞利浦授权的服务中心，由其检查、修理或更换。
10. 可以用烤面包机制作烘烤三明治（带奶酪的）吗?	不可以，本烤面包机不适合烘烤三明治。

PHILIPS

产品　：飞利浦面包烘烤器
型号　：HD2618
额定电压　：220V~
额定频率　：50Hz
额定输入功率：1000 W
生产日期　：请见产品底部
产地　：中国　/00

珠海经济特区飞利浦家庭电器有限公司
珠海市三灶镇琴石工业区 邮编:519040
电话：(0756) 7621898

全国顾客服务热线: 4008 800 008

本产品根据GB4706.1-1998及GB4706.14-1999制造

请妥善保管本使用说明书

发行日期：2006/10/31