⑤ 音量の調節

・本体の音量ボタンは、「＋」ボタンで音量が大きくなり「－」ボタンで音量が小さくなります。

・「－」ボタンを押し続けると音量が下がり続け、「＋」ボタンを押し続けると音量が上がり続けます。大音量に注意してください。

⑥ iPod/iPhoneの接続／取り外し

[iPod/iPhoneを接続する]
Dockコネクタ端子に iPod/iPhoneのDockコネクタを差し込みます(❶)。

[iPod/iPhoneを取り外す]
iPod/iPhoneを上に引き抜きます(❷)。

※無理な力を加えず角度を合わせてまっすぐに差し込んでください。角度が合っていない状態で無理に差し込むと故障の原因となります。

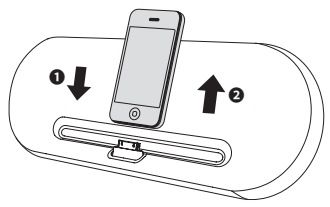

注意
●iPod/iPhoneの接続や取り外しはゆっくりと行ってください。
●長時間使用しない場合は、iPod/iPhoneを本製品から取り外してください。

⑦ iPod/iPhoneの充電の仕方

1 電源を入れた状態(④「電源の入れ方」)で iPod/iPhoneを本体に接続すると、充電を開始します。

2 充電完了後、iPod/iPhoneを長時間使用しない場合は、iPod/iPhoneを本製品から取り外してください。

⑧ iPod/iPhoneを使って音楽を聴く

iOS搭載機種と搭載していない機種では、操作方法や動作が異なります。

注意
●機種やソフトウェアのバージョンによって異なる動作や表示などを行う場合がありますが、基本的な音楽再生の利用には支障ありません。
●iPod/iPhone本体の操作方法などは各製品に付属している説明書などをお読みください。

iOS搭載機種

・iPod touch 1G～4G
・iPhone 2G
・iPhone 3G
・iPhone 3GS
・iPhone 4

1 iPod/iPhoneを操作してiPodアプリを起動します。

2 本体に接続した状態で、iPod/iPhoneを直接操作して音楽を聴くことができます。

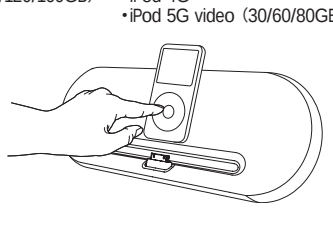

iOSを搭載していない機種

・iPod mini
・iPod nano 1G～6G
・iPod classic（80/120/160GB）
・iPod photo
・iPod 4G
・iPod 5G video（30/60/80GB）

本体に接続した状態で、iPodを直接操作して音楽を聴くことができます。

⑨ 外部機器を使って音楽を聴く

付属のオーディオケーブルを使ってiPod/iPhone以外の外部機器を接続することができます。

注意
●音量は、接続する外部機器に左右されます。出力の大きい外部機器に接続すると音量が大きく、出力の小さい外部機器に接続すると音量が小さくなります。使用する外部機器の出力に応じて、適切な音量に調節してください。
●外部機器の出力によっては、大音量が出ることがあります。接続する前に、あらかじめ外部機器の音量は小さくしてください。

[接続できる外部機器]
・3.5mmステレオミニプラグの出力端子を持つ製品(デジタルオーディオプレイヤー、テレビ、パソコンなど)

1 接続する外部機器の音量をあらかじめ小さくしておきます。
※iPod/iPhoneが接続されている場合は、あらかじめ取り外してください。

2 本製品のAUX IN端子に、付属のオーディオケーブルを差し込みます。

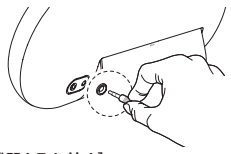

3 オーディオケーブルのもう一方を、接続する外部機器の出力端子に差し込みます。



4 本製品の電源を入れます。

5 接続した外部機器の演奏を開始し、外部機器と本製品の音量を調節します。

[外部機器を取り外す]
・本製品の電源をOFFにし、外部機器の演奏を停止し、電源を切ってからオーディオケーブルを取り外します。

⑩ 故障かな?と思ったら

故障かな?と思ったら、お調べください。

電源が入らない

【電源アダプタを使う場合】
▶電源アダプタはきちんと差し込まれていますか?
電源アダプタがコンセントと本体の両方にきちんと差し込まれていますか?確認してください。
▶電源アダプタが通電していますか?
電源アダプタが通電しているか確認してください。
▶電源コードが断線していませんか?
新しい電源アダプタをお買い求めください。
▶ON/OFFスイッチをONにしましたか?
本製品は上部にON/OFFスイッチがあります。

【乾電池を使う場合】
▶乾電池が切れていませんか?
新しい乾電池に取り替えてください。
▶乾電池が逆方向に入っていませんか?
電池ホルダーに書いてあるイラストを見て、正しい方向に入れてください。
▶乾電池がきちんとセットされていますか?
乾電池を電池ホルダーにきちんとセットしてください。

本体からの反応がない

▶本体の電源を入れなおしてください。
乾電池をすべて取り外し、電源プラグをコンセントから抜き、再度差し込んで本体の電源を入れなおしてください。

音が聞こえない

▶電源が入っていますか?
電源アダプタがきちんと差し込まれているか、コンセントが通電しているか、または使用可能な乾電池が正しくセットされているかを確認してください。
▶ON/OFFスイッチをONにしましたか?
本製品は上部にON/OFFスイッチがあります。
▶音量が最小になっていませんか?
本体の音量ボタンで音量を調節してください。

【iPod/iPhoneを使って聴く場合】
▶iPod/iPhoneが正しく接続されていますか?
iPod/iPhoneが本体のDockコネクタ端子にきちんと差し込まれていますか?確認してください。
▶iPod/iPhoneに正しいデータが入っていますか?
iPod/iPhoneで再生可能な正しいデータが入っているか確認してください。正しいデータ形式やデータの入れ方は、各製品に付属している説明書などをお読みください。

【外部機器を使って聴く場合】
▶iPod/iPhoneを取り外してください。
外部機器を使って音楽を聴くときは、必ずiPod/iPhoneを取り外してください。
▶オーディオケーブルが正しく接続されていますか?
オーディオケーブルが外部機器と本製品の両方にきちんと差し込まれていますか?確認してください。
▶外部機器から音声が出力されていますか?
外部機器から音声が出力されていないと、本製品から音が出ません。外部機器の音声出力の方法は、各製品に付属している説明書などをお読みください。
▶外部機器の音量が最小になっていませんか?
外部機器の音量を調節してください。

**以上の点検により、正常な状態に戻らない場合は、
お買い求めの販売店かフィリップスサポートセンターにお問い合わせ願います。**

⑪ 保証とアフターサービス

保証書と修理サービスについて(必ずお読みください)

〈保証書・表面に付属〉

保証期間	お買い上げ日から1年間

●保証書は、必ず「お買い上げ日・販売店名」等の記入をお確かめのうえ、販売店から受け取っていただき内容をよくお読みのあと大切に保管してください。

【補修用性能部品の最低保有期間】
●補修用性能部品の最低保有期間は製造打ち切り後6年です。
●性能部品とは、その製品の機能を維持するために必要な部品です。

【ご不明な点や修理に関するご相談は】
●修理に関するご相談ならびにご不明な点は、お買い上げの販売店または、フィリップスサポートセンターにお問い合わせください。

【修理を依頼されるときは】
●修理をご依頼される前に、この取扱説明書をよくお読みいただき、再度点検ください。尚、異常のあるときはご使用を中止し、お買い上げの販売店へご依頼ください。

【保証期間中は】
●製品に保証書を添えてお買い上げの販売店にご持参ください。保証書の記載内容により無料修理いたします。

【保証期間が過ぎているときは】
●修理によって商品の機能が維持できる場合は、ご希望により有料で修理させていただきます。

【海外での本製品の保証及びアフターサービスについて】
●本製品の保証は海外においても有効です。
●日本国以外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができますが、この場合多少日数を要することもあります。
●海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お困りの点がございましたら下記までご連絡ください。
Philips Consumer Lifestyle Service Department P.O.Box 20100 9200 CA DRACHTEN
The Netherlands Fax:+31 51 259 2785

【お客様の個人情報のお取り扱いについて】
●お受けしましたお客様の個人情報は、株式会社フィリップスエレクトロニクスジャパンのホームページ http://www.philips.co.jp/ に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

⑫ 無料修理規定

〈無料修理規定〉

1. 取扱説明書、本体貼付ラベル等の注意書に従った正常な使用状態で保証期間内に故障した場合には、無料修理します。
2. 保証期間内に故障して無料修理をお受けになる場合には、商品と保証書をご持参、ご提示のうえ、お買い上げの販売店にご依頼ください。なお、商品を直接メーカーへ送付した場合の送料等はお客様の負担となります。
3. ご贈答、ご転居でお買い上げの販売店に修理を依頼できない場合は、フィリップスサポートセンターにお問い合わせください。
4. 保証期間内でも次の場合には有料修理になります。
① 使用上の誤り及び不当な修理や改造による故障及び損傷。
② お買い上げ後の輸送、移動、落下等による故障及び損傷。
③ 火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障及び損傷。
④ 一般家庭以外(例えば、業務用の長時間使用)に使用された場合の故障及び損傷。
⑤ 保証書の提示がない場合。
⑥ 保証書にお買い上げ年月日、お客様名、販売店名の記入のない場合、或は字句を書き換えられた場合。

※保証書は、本書に明示した条件のもとにおいて無料修理をお約束するものです。従って保証書を発行している者(保証責任者)、及びそれ以外の事業者に対するお客様の法律上の権利を制限するものではありません。
保証期間経過後の修理についてご不明の場合は、お買い上げの販売店またはフィリップスサポートセンターにお問い合わせください。

※保証期間経過後の修理・補修用性能部品の保有期間について詳しくは取扱説明書の保証とアフターサービスの項目をご覧ください。

※お客様にご記入いただいた個人情報(保証書の控え)は保証期間内のサービス活動及びその後の安全点検活動のために利用させていただく場合がございます。ご了承ください。また個人情報は、株式会社フィリップスエレクトロニクスジャパンのホームページ http://www.philips.co.jp/ に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

EN

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Safety

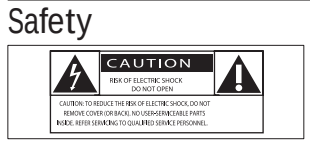

This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Important Safety Instructions

① Read these instructions.
② Keep these instructions.
③ Heed all warnings.
④ Follow all instructions.
⑤ Do not use this apparatus near water.
⑥ Clean only with dry cloth.
⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
⑨ Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

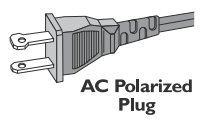

⑩ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
⑪ Only use attachments/accessories specified by the manufacturer.
⑫ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

⑬ Unplug this apparatus during lightning storms or when unused for long periods of time.
⑭ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
⑮ Battery usage CAUTION – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
- Install all batteries correctly, + and - as marked on the unit.
- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Remove batteries when the unit is not used for a long time.

⑯ Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
⑰ Apparatus shall not be exposed to dripping or splashing.
⑱ Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
⑲ This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.
⑳ Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

Warning
- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.

Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Notice for the USA
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The set complies with the FCC-Rules, Part 15 and with 21 CFR 1040.10. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications. This Class B digital apparatus complies with Canadian ICES-003.

Disposal of your old product and batteries

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health.

Your product contains batteries, which cannot be disposed of with normal household waste.

Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Please visit www.recycle.philips.com for additional information on a recycling center in your area.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Made for iPod iPhone

"Made for iPod®," "Made for iPhone®," and "Made for iPad®" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance. iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. iPad is a trademark of Apple Inc.

iPhone, iPod, iPod touch®, iPod classic®, iPod nano®, and iPod shuffle® are trademarks of Apple Inc., registered in the U.S. and other countries. iPad is a trademark of Apple Inc.

Note
- The type plate is located on the bottom of the apparatus.