PHILIPS

Shaver

2000 Series

フィリップス 電動シェーバー

品番 **S2881/00, S2882/00, S2885/00**

取扱説明書

©2025 Koninklijke Philips N.V.
記載されている製品名などの固有名詞は、Koninklijke Philips N.V.またはその他の会社の商標または登録商標です。
3000.149.6344.1 (07/25)

フィリップス 電動シェーバー 保証書

Certificate of purchase

この保証書は、「無料修理規定」記載内容で無料修理を行うことをお約束するものです。お買い上げの日から下記期間中に故障が発生した場合は、フィリップスサポートセンターにお問い合わせください。お客様にご記入いただいた個人情報（保証書の控え）は、株式会社フィリップス・ジャパンのホームページhttp://www.philips.co.jp/に掲載されている「プライバシーに関する通知」に基づき適切に管理いたします。

品　　名	電動シェーバー
品　　番	S2881/00, S2882/00,S2885/00
保証期間	お買い上げ日より2年
対象部分	本体、充電ケーブル（シェービングユニット、保護キャップを除く）
お買い上げ日	年　月　日
お客様	ご住所 〒
	ご芳名
	電話番号
販売店	販売店名・住所・電話番号

- 保証書は再発行しませんので、大切に保管してください。
- ご販売店様へ　この保証書はお客様へのアフターサービスの実施と責任を明確にするものです。贈答品、記念品の場合も含めて必ず記入捺印してお客様にお渡しください。

製品の使用方法や修理に関するお問い合わせ

フィリップスサポートセンター

0120(944)859

受付時間 9:00～18:00（年末年始除く）

Webからのお問い合わせ

MyPhilips登録のご案内

フィリップスでは、製品をより快適にご使用いただくために製品登録をおすすめしております。MyPhilipsでは製品の保証書や購入証明書の写真も保管でき、万が一購入証明書を紛失された場合にも安心です。

URL

http://www.philips.co.jp/myphilips-about

この印刷物は再生紙を使用しております。

フィリップス シェーバーをお買い上げいただき、まことにありがとうございます。長い間ご愛用いただくために、ご使用前にこの取扱説明書をよくお読みのうえ、正しくお使いください。

また、お読みになった後は、お使いになる方がいつでも見られるところに必ず保管してください。

●製品のご確認　製品をご確認ください。

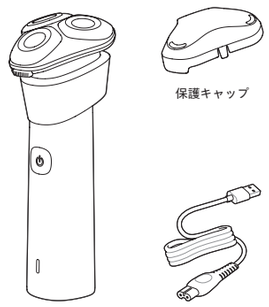

※改良の為、仕様を予告なく変更することがあります。

お買い上げのお客様へ　初めてご使用になる際は、ご使用前に充電してください。

目次

① 必ずお守りください
② 各部の名称
③ 充電表示ランプについて
④ 充電のしかた
⑤ シェービングのしかた（ドライ）
⑥ シェービングのしかた（ウェット）
⑦ お手入れ方法
⑧ 保護キャップの取り付けかた
⑨ 保管のしかた
⑩ 刃の交換
⑪ シェーバーを廃棄するとき
⑫ 故障かな?と思ったら
⑬ 保証とアフターサービス
⑭ 仕様
⑮ 無料修理規定
Guidance in English

① 必ずお守りください

安全上のご注意

- ここに示した注意事項は、安全に関する重要な内容ですので、必ず守ってください。
- 誤った取扱いをしたときに想定される内容を「危険」、「警告」、「注意」とに区分けしています。

○絵表示について

⚠ **危険**	人が死亡または重傷を負う可能性が大きい内容。
⚠ **警告**	人が死亡または重傷を負う可能性が想定される内容。
⚠ **注意**	人が傷害を負う可能性および物的損害のみの発生が想定される内容。

○絵表示の例

△記号は、「危険、警告、注意」を示します。図の中や近くに具体的な注意内容（左図の場合は高温注意）を示します。

⃠記号は、してはいけない「禁止」を示します。図の中や近くに具体的な禁止内容（左図の場合は分解禁止）を示します。

●記号は、必ずしていただく「強制」を示します。図の中や近くに具体的な強制内容（左図の場合は電源プラグをコンセントから抜くこと）を示します。

⚠ 危険

- 本製品は充電式電池を内蔵しています。本製品の充電、使用、保管は10 ℃から35 ℃の環境で行ってください。火中投入、加熱、高温での充電・使用・放置をしないでください。発熱・発火・破裂の原因になります。また電池の寿命にも影響を及ぼします。

⚠ 警告

- 本製品はヒゲ（あごヒゲ、口ヒゲ、もみあげなど）の長さを整えたり、シェービングするためのものです。本取扱説明書に記載されている以外の目的で使用しないでください。
- 製品を廃棄するとき以外は、絶対に本体を分解しないでください。また、改造、修理をしないでください。火災・感電・けがの原因になります。修理はフィリップスサポートセンターにお問い合わせください。
- 本体が異常に熱くなったり、異臭がしたり、充電時間が異常に長い等の異常・故障時には、直ちに使用を中止してください。そのまま使用すると火災・感電・けがに至るおそれがあります。
- 充電ケーブルを無理に曲げたり、引っ張ったり、ねじったり、たばねたり、重いものを載せたり、挟み込んだり、加工したりしないでください。充電ケーブルが破損し、火災・感電の原因となります。
- USBコネクタ部は確実にUSB充電アダプタに差し込んでください。スムーズに差し込めない場合、無理に押し込もうとしないでください。火災や感電の原因になります。
- 刃が破損または故障した場合は、本製品を使用しないでください。けがの原因になります。交換の際には必ずフィリップス社製の同型部品とお取替えください。
- 水場や浴室での充電は絶対にしないでください。ショート・感電の原因になります。
- 濡れた手で充電ケーブルを抜き差ししないでください。感電やけがをすることがあります。
- 充電ケーブルの接続前にコネクタ部が完全に乾いていることを確認してください。濡れた状態で差し込むとショート・感電の原因になります。
- お手入れの際は必ず本体から充電ケーブルを外してください。感電やけがをすることがあります。
- 電池が液漏れした場合は、液が目や皮膚に触れないように注意してください。万が一目に入った時は、こすらずに水道水で十分洗浄し医師の診察を受けてください。皮膚や衣類に付いた場合は水道水で十分洗い流してください。
- 乳幼児の手の届くところに本製品を置かないでください。またお子様が本製品で遊ぶことがないように監視してください。
- 補助を必要とする人（子どもを含む）に使用させないでください。またお体の不自由な人だけでは使用しないでください。

⚠ 注意

- 健康面で不安のある方や、ペースメーカー等の体内埋込型医療機器、家庭用医用電気機器を使用している場合は、使用前に医師又は機器メーカーに確認してください。
- 充電する場合は、定格出力電圧DC5 V、定格出力電流1 A以上で、タイププレートにPSEマークの表示がある安全技術基準に適合したUSB充電アダプタで充電してください。
- USB充電アダプタとの接続には変換コネクタや変換ケーブルは使用しないでください。本体の破損や火災の原因となります。
- ご使用前に刃に異常がないことを確認してください。

⚠ 注意

- 充電ケーブルは付属の専用充電ケーブルを使用してください。また付属の充電ケーブルで他の製品を充電しないでください。ショート、異常発熱による火災の原因になります。破損、故障した場合は、事故を避けるために必ずフィリップス社製の同型充電ケーブルをお求めください。
- 刃は強く押さえないでください。破損して皮膚を傷つけることがあります。
- 充電ケーブルを抜くときには、電源コード部を持たずに必ず先端のコネクタ部を持って引き抜いてください。感電やショートして発火することがあります。
- 充電時以外は、本体から充電ケーブルを抜いてください。けがややけど、絶縁劣化による感電・漏電・火災の原因となります。
- 電源コネクタ受部にピンやごみを付着させないでください。感電・ショート・発火の原因になります。
- 本製品を電子レンジやIH調理器具の近くに保管しないでください。故障や破損の原因になります。
- 本製品や部品を食器洗浄機で洗わないでください。故障や破損の原因になります。
- 皮膚に傷がある箇所には使用しないでください。また皮膚疾患や重度な炎症がある場合はご使用前に医師にご相談ください。
- 衛生上の理由から他の人と共用しないでください。

使用上のご注意

1. フィリップスシェーバーを初めてお使いの方は、剃りかたに慣れるまで2～3週間かかることがあります。
2. 本体のお手入れは、水またはぬるま湯で行ってください。60 ℃以上の熱湯では洗浄しないでください。研磨パッドや研磨剤を含んだ洗剤またはエアダスターは使用しないでください。
3. 外刃は、薄く仕上げてありますので、刃部を強く押さえたり、硬いものにあてないよう、ていねいに扱ってください。
4. シェービングユニットの掃除や着脱は、必ず電源をOffにしてから行ってください。
5. 切れ味が衰えてきたり、刃が破損した場合は、使用せず必ず新しい替刃に交換してください。
6. 直射日光の当たる場所には保管しないでください。夏場、車の中に放置しないでください。
7. シェーバー本体は防水加工をしておりますが、水や液体の中に浸けないでください。
8. シェービングユニットはご使用のたびに、ぬるま湯または水でお手入れをしてください。

② 各部の名称

本体 / 充電ケーブル / 保護キャップ

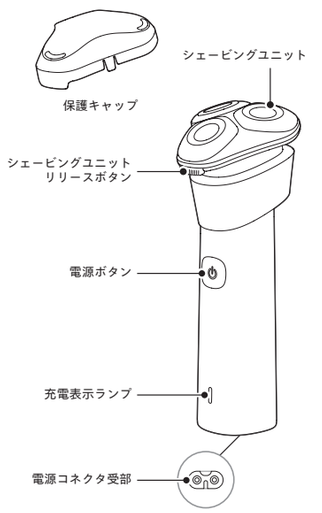

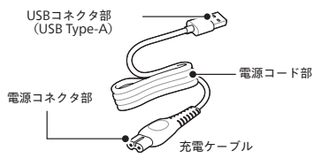

※USB充電アダプタは付属していません。充電の際は、USB充電アダプタ（定格出力電圧DC5 V、定格出力電流1 A以上でタイププレートにPSEマークの表示がある安全技術基準に適合したUSB充電アダプタ）をご準備ください。

シェービングユニット

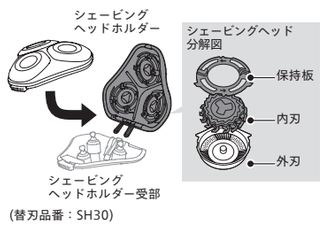

（替刃品番：SH30）

③ 充電表示ランプについて

初めてお使いになるときや、長い間ご使用にならなかったときは、LED表示が出るまでに時間がかかる場合があります。

主な表示（本体）

- 充電表示

充電中は充電表示ランプが緑色に点滅します。

- 充電完了表示

充電が完了すると、緑色の充電表示ランプが点灯します。満充電後、約1分経過すると充電表示ランプが消えます。

- 充電催促表示

動作中に充電残量が少なくなると、充電表示ランプがオレンジ色に点滅します。電源をOffにすると、充電表示ランプが数秒間オレンジ色に点滅した後、消灯します。

- プラグ解除お知らせ表示

充電アダプタに接続している時に電源ボタンを押すと充電表示ランプがすばやく点滅します。ご使用の際は、充電アダプタをシェーバー本体からはずしてご使用ください。

④ 充電のしかた

注意
- 定格出力電圧DC5 V、定格出力電流1 A以上で、タイププレートにPSEマークの表示がある安全技術基準に適合したUSB充電アダプタで充電してください。
- USB充電アダプタとの接続には変換コネクタや変換ケーブルは使用しないでください。
- 水場や浴室で充電をしないでください。
- 充電をしながらシェービングはできません。

初めてお使いになるときや、長い間お使いにならなかったとき、または充電残量が少なくなったときは、ご使用前に充電してください。充電時間は約1時間です。充電開始後数分間、充電表示ランプが点滅しないことがありますが、そのまま充電表示ランプが点滅し続けるまで、充電をしてください。

1. シェーバー本体の電源がOffになっていることを確認してください。
2. 充電ケーブルの電源コネクタ部をシェーバー本体の電源コネクタ受部に差し込みます。
3. 充電ケーブルのUSBコネクタ部をUSB充電アダプタに差し込みます。



4. ご家庭のコンセントにUSB充電アダプタの電源プラグ部を差し込みます。



5. 充電が完了すると充電表示ランプが点灯します。
※満充電後、約1分経過すると充電表示ランプが消えます。
6. 充電後はコンセントからUSB充電アダプタを取り外し（図①）、USB充電アダプタからUSBコネクタ部を引き抜きます（図②）。続いてシェーバー本体の電源コネクタ受部から、充電ケーブルを引き抜きます（図③）。



※通常の目安として満充電で1日約3分使用し、約11日間使用できますが、ご使用状況（使用時間・ヒゲの濃さなど）により変わります。

クイックチャージ
充電残量が0の状態で充電アダプタで充電すると、約5分間でシェービング1回分が急速充電されます。
※クイックチャージ中は充電表示ランプが緑色に高速点滅します。
※クイックチャージが完了すると通常の充電が行われます。その際、充電表示ランプが緑色にゆっくり点滅します。

注意
- 長期間使用しない場合は、充電池が過放電や液漏れして使えなくなることがあります。3～4カ月に一度は充電してください。
- 本製品を24時間以上コンセントに接続したままにしないでください。

⑤ シェービングのしかた（ドライ）

肌が乾いた状態でのシェービングのしかたです。
ご使用の際は本体から充電ケーブルを抜いてご使用ください。接続されていると作動しません。

注意
- ご使用の前に刃に異常がないことを確認してください。特に外刃の破れや変形がないか確認してください。（外刃に破れや変形があると肌を傷つける原因になります）。損傷した部品は必ずフィリップス社製の同型部品と交換をしてください。
- シェーバー本体は防水加工をしており、水場や浴室でも使用できますが、水や液体の中に浸けないでください（故障の原因となります）。

- モーターの始動時、微弱な振動がシェーバー本体に伝わりますが、問題はありません。
- ほこりなどで肌が汚れている場合、ふきとってからご使用ください。
- ヒゲ剃り以外の目的（頭髪など）には、使用しないでください。

1. 電源ボタンを押し、電源をOnにします。

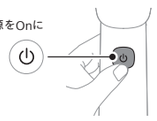

2. 刃を肌に軽く押しあて、円を描くように動かしながら剃ります。

3. 下あごの輪郭沿いや鼻の下など、刃が届きにくい部分をシェービングする場合は、シェービングユニットの先端部を使用してください。

4. シェービング後は電源ボタンを押し、電源をOffにします。

上手に剃るには	肌に強く押しつけるのではなく、軽く押しあてて自分から見て時計回りに回転させながら剃るのがコツです。

ほお
肌を伸ばし、ヒゲを立たせるように円を描くように小さく回転させながら剃ります。

あごの裏側
刃を肌に軽くあて、図のようにあごを上げて円を描くように小さく回転させながら剃ります。



ほおの奥から首筋
片方の手で肌を後ろに引っ張りながら剃ります。

鼻の下
鼻の下を伸ばし、円を描くように小さく回転させながら剃ります。

フィリップスのシェーバーを初めてお使いの方は、剃りかたに慣れるまで2～3週間かかることがあります。初めてのシェービングで思い通りの結果が得られないことや、少し肌にヒリヒリ感が残る場合がありますが、これは普通のことです。フィリップスのシェーバーに限らずシェービング方法を変える時には、肌もヒゲも新しいシェービング方法に慣れる時間が必要です。新しいシェーバーに肌を慣らす為、まずは3週間このシェーバーを使い続けることをお勧めします（最低でも1週間に3回以上）。この3週間は、あまりシェービング方法を変えたりせず、同じシェーバーで肌を慣らすことが大切です。

⑥ シェービングのしかた（ウェット）

シェービングフォームやシェービングジェルを使ったシェービングのしかたです。
剃った部分を実感しながら、なめらかなシェービングができます。

注意
- ご使用の前に刃に異常がないことを確認してください。特に外刃の破れや変形がないか確認してください。（外刃に破れや変形があると肌を傷つける原因になります）。損傷した部品は必ずフィリップス社製の同型部品と交換をしてください。
- シェーバー本体は防水加工をしており、水場や浴室でも使用できますが、水や液体の中に浸けないでください（故障の原因となります）。

- モーターの始動時、微弱な振動がシェーバー本体に伝わりますが、問題はありません。
- ヒゲ剃り以外の目的（頭髪など）には、使用しないでください。
- 石けんもお使いいただけますが、肌の上での滑りをよくするため、シェービングフォームやジェルの使用をお勧めします。

1. 顔を濡らし、市販のシェービングフォームまたはシェービングジェルを付けます。
2. シェービングヘッドを水で濡らし、肌の上でなめらかに動くようにします。

3. 電源ボタンを押し、電源をOnにします。
4. 刃を肌に軽く押しあて、円を描くように動かしながら剃ります。
シェービングフォームやシェービングジェルにより、鏡を見た時に剃った部分を確認しやすくなります。
※途中、よりなめらかにシェービングするために、シェービングヘッドを水で濡らすと効果的です。

5. 下あごの輪郭沿いや鼻の下など、刃が届きにくい部分をシェービングする場合は、シェービングユニットの先端部を使用してください。

6. シェービング後は電源ボタンを押し、電源をOffにします。
7. シェーバーをきれいに洗います（「⑦お手入れ方法」をご参照ください）。

【重要】

シェービング後は、シェービングフォームやシェービングジェルがしっかりと洗い流されているかを確認してください。お手入れが不十分な場合、臭いが出るばかりでなく、故障の原因にもなります。

⑦ お手入れ方法

シェービングユニットはご使用のたびに、ぬるま湯または水でお手入れをしてください。

水洗いによるお手入れ方法

注意
- お手入れの際は、電源をOffにしてから水洗いしてください。
- シェービングユニットは水洗いできますが、本体は水中に浸けないでください。
- シェービングユニットを乾燥させる時に、タオルやティッシュペーパーを使用しないでください。刃を傷める場合があります。

※ 研磨パッドや研磨剤を含んだ洗剤またはエアダスターは使用しないでください。
※ ぬるま湯（40 ℃前後）でのお手入れをおすすめします。臭いのもととなる皮脂や汗などが取れやすくなります。ただし、熱湯はお止めください。故障の原因となります。
※ お手入れ中にシェーバーの底から水が漏れてくる場合がありますが、異常ではありません。

シェービングユニットのお手入れ方法

1. シェービングユニット表面の汚れをぬるま湯または水で洗います。

2. シェービングユニットリリースボタンを押し、シェービングユニットを開きます。

3. シェービングヘッドホルダー受部の汚れをぬるま湯で洗い流します。
4. シェービングヘッドホルダーの内側の汚れをぬるま湯または水で洗い流します。

5. シェービングユニットの余分な水を切り、よく乾かします。

6. 乾いたことを確認したら、シェービングユニットを閉じてください。

シェービングユニットのお手入れ方法（分解＋水洗い）

※1カ月に1度、またはシェーバーの切れ味が落ちてきたら、シェービングヘッドを分解して水洗いすることをおすすめします。
※お手入れの際は、電源をOffにしてから分解や水洗いをしてください。

1. シェービングユニットリリースボタンを押して、シェービングユニットを開きます。

2. シェービングヘッドホルダー内側とシェービングヘッドホルダー受部の汚れを水で洗い流します。

3. 内刃と外刃を取り外します（詳しい手順については、「⑩刃の交換」をご参照ください）。
※内刃と外刃は1組になっているため、一度に2組以上の内刃と外刃をクリーニングしないでください。誤った外刃に内刃を組み合わせてしまうと、最適な性能に戻るまで数週間かかる場合があります。
4. 内刃を外刃から取り外し、流水で洗います。



5. 水を切ります。
6. 内刃と外刃をシェービングユニットに取り付けます（詳しい手順については、「⑩刃の交換」をご参照ください）。
7. シェービングヘッドホルダーの金具をシェービングヘッドホルダー受部のくぼみに差し込み、シェービングユニットを閉じます。

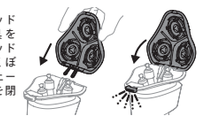

⑧ 保護キャップの取り付けかた

保護キャップを取り付ける前にシェーバーを完全に自然乾燥させてください。

- 保護キャップを図のように、シェービングユニットに取り付け、保護します。

⑨ 保管のしかた

製品を保管する際には、本体及び部品を完全に自然乾燥させてから、保護キャップを取り付け、室温10 ℃～35 ℃の場所で保管してください。

※保管時に充電ケーブルを本体に巻きつけないでください。
※直射日光の当たる場所には保管しないでください。
※夏場、車の中には放置しないでください。

⑩ 刃の交換

専用の替刃品番はSH30です。

※シェービング性能を維持するために、刃は2年ごとに交換することをおすすめします。
※交換する際は、必ずフィリップス社製の専用の替刃（品番：SH30）とお取り替えください。
※刃を交換する際は、電源をOffにしてください。

1. シェービングユニットリリースボタンを押し、シェービングユニットを開きます。

2. シェービングヘッドホルダーをシェービングユニットから引き抜きます。

3. 保持板を、反時計回りに回して（図①）
シェービングヘッドから外します（図②）。
他の保持板も同様に外します。



4. シェービングヘッドホルダーからシェービングヘッドの内刃と外刃を取り外し、新しい替刃に交換してください。その際に、使用済みの刃と新しい替刃が混ざらないようご注意ください。

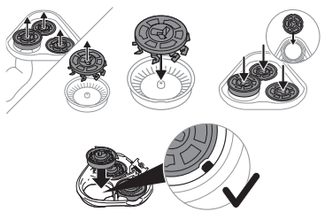

※外刃に切り込みがある場合には、外刃の切り込み部をシェービングヘッドホルダーの突起部に沿って外刃をシェービングヘッドにセットしてください。

5. 保持板をシェービングヘッドに戻し（図①）時計回りに回して（図②）シェービングヘッドホルダーにセットします。
他の保持板も同様にセットします。



6. シェービングヘッドホルダーの金具をシェービングヘッドホルダー受部のくぼみに差し込み、シェービングユニットを閉じます。

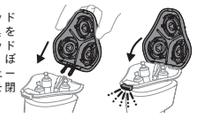

⑪ シェーバーを廃棄するとき

※お客様による充電池の修理交換はできません。

ニッケル水素電池のリサイクルについて

本製品はニッケル水素電池を使用しています。ニッケル水素電池はリサイクル可能な貴重な資源です。使用済みの製品を廃棄する際には、ニッケル水素電池を取り出してください。取り出したニッケル水素電池は各自治体の廃棄方法に従い廃棄するか、リサイクル協力店にお持ちください。

Ni-MH

警告
- 製品を廃棄するとき以外は、絶対に本体を分解しないでください。
- 安全上の理由から、一度分解した本体は絶対に再使用しないでください。
- 充電池は完全に放電してから、取り外してください。また、ショートの発生を防ぐために、作業時にはコインやヘアピン、指輪等の金属製の物体を充電池に近づけないようにしてください。
- 作業を行う際は、目、手、指などにけがのないよう注意してください。また、必ず手・本体が乾いた状態で作業を行ってください。
- 本体内部の金具は鋭いので、ご注意ください。
- 電池が液漏れした場合は、液が目や皮膚に触れないように注意してください。万が一、目に入った時は、こすらずに水道水で十分洗浄し医師の診察を受けてください。皮膚や衣服に付いた場合は水道水で十分洗い流してください。
- 取り外した充電池は、ショートしないように両端子をテープで覆ってください。

充電池の取り外し方

電源をOnにして、完全に動作しなくなるまで充電池を放電させてから、行ってください。

1. シェービングユニットリリースボタンを押して、シェービングユニットを開きます。
シェービングユニットをシェービングヘッドホルダー受部から引き抜きます。

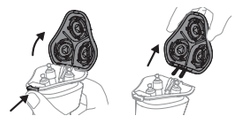

2. シェービングヘッドホルダー受部内のネジ2本を外します。



3. シェービングヘッドホルダー受部を上方向に引っ張り、取り外します。

4. 本体底部にあるネジを外します。

5. 本体底部の溝にマイナスドライバーを差し込み、モーターユニットカバーを押し出します。



6. マイナスドライバーをモーターユニットカバーの底部の溝に差し込み、モーターユニットを押し出します。

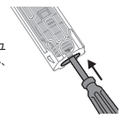

7. ペンチまたはハサミでワイヤーを切ります。



8. ドライバーを使いプリント基板を取り外します。

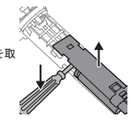

9. ペンチやハサミ、カッターなどで充電池のタブを壊し、充電池を取り外します。



⑫ 故障かな？と思ったら

故障かな?と思ったら、お調べください。

だんだん切れ味が悪くなった

- シェービングヘッド部が汚れていないか確認してください。
- シェービングヘッド部が損傷または摩耗していないか確認してください。
損傷または摩耗しているときは、シェービングヘッドを交換してください。
（替刃品番：SH30）
- シェービングヘッドに長いヒゲがからまっていないか確認してください。

充電しても使用時間が極端に短い

- シェーバーが完全に止まるまで作動させてから、もう一度充電してください。
それでも改善されないときは、充電池の寿命です。

シェーバーの電源ボタンを押しても作動しない

- シェーバーに充電ケーブルが接続されている場合は外してください。
- 充電されてない場合は約1時間充電をしてください。
- ロック機能がOnになっている場合はロックを解除してください。
- 刃が破損している場合は交換をしてください。

シェーバー本体のモーターは回転しているが、内刃が回転しない

- 外刃にキズ、ヘコミがある場合はシェービングヘッドを交換してください。（替刃品番：SH30）

充電できない

- シェーバー本体の電源コネクタ受部に充電ケーブルがきちんと差し込まれているか確認してください。
- 充電ケーブルが断線している場合は新しい充電ケーブルをお買い求めください。

以上の点検により、正常な状態に戻らない場合は、フィリップスサポートセンターにお問い合わせください。

⑬ 保証とアフターサービス

保証書と修理サービスについて（必ずお読みください。）

【保証書・表面左側に付属】
- 保証書は、必ず「お買い上げ日・販売店名」等の記入をお確かめのうえ、販売店から受け取っていただき内容をよくお読みのあと大切に保管してください。

保証期間	お買い上げ日から2年間
対象部分	本体、充電ケーブル（シェービングユニット、保護キャップを除く）

【補修用性能部品の保有期間】
- 補修用性能部品の保有期間は製造打ち切り後6年です。
- 性能部品とは、その製品の機能を維持するために必要な部品です。

【ご不明な点や修理に関するご相談は】
- 修理に関するご相談ならびにご不明な点は、フィリップスサポートセンターにお問い合わせください。

【修理を依頼されるときは】
- 修理をご依頼される前に、この取扱説明書をよくお読みいただき、再度点検ください。尚、異常のあるときはご使用を中止し、フィリップスサポートセンターにお問い合わせください。

【保証期間中は】
- 製品と保証書をご用意いただき、フィリップスサポートセンターにお問い合わせください。保証書の記載内容により無料修理いたします。

【保証期間が過ぎているときは】
- 修理によって製品の機能が維持できる場合は、補修用性能部品の保有期間内であれば、ご希望により有料で修理させていただきます。

【海外での本製品の保証及びアフターサービスについて】
- 本製品の保証は海外においても有効です。（同シリーズ製品の取り扱いがある国に限ります）
- 日本国以外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができますが、この場合多少日数を要することもあります。
- 海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お困りの点がございましたら下記までご連絡ください。
  Philips Service Department P.O.Box 20100 9200 Ca Drachten The Netherlands, http://www.philips.com/support

【お客様の個人情報のお取り扱いについて】
- お受けしましたお客様の個人情報は、株式会社フィリップス・ジャパンのホームページ http://www.philips.co.jp/ に掲載されている「プライバシーに関する通知」に基づき適切に管理いたします。

便利メモ

お買い上げ日	年　月　日
お買い上げ店名	電話番号　（　）

ご使用の時、このような症状はありませんか？

- 本体にさわると時々電気を感じる。
- こげくさい臭いがする。
- 充電ケーブルを動かすと通電したり、しなかったりする。
- その他の異常、故障がある。

長年ご愛用のシェーバーへの点検を！
愛情点検

このような症状の時は、故障や事故防止のため、電源をOffにし、充電アダプタをコンセントから外して、必ずフィリップスサポートセンターにお問い合わせください。

⑭ 仕様

品番	S2881/00	S2882/00	S2885/00
ハンドル品番	S2881	S2882	S2885
替刃品番	SH30		
本体寸法（高さ×幅×奥行）	163×63×58 mm		
本体質量	約157 g		
電源方式	充電式		
定格入力	DC5 V 1 A		
充電時間	約1時間		
使用時間	約35分		
使用充電池	ニッケル水素電池（Ni-MH）		

※改良の為、仕様を予告なく変更することがあります。

株式会社 フィリップス・ジャパン
〒106-0041 東京都港区麻布台 1-3-1 麻布台ヒルズ森JPタワー 15階

⑮ 無料修理規定

【無料修理規定】

1. 取扱説明書、本体貼付ラベル等の注意書に従った正常な使用状態で保証期間内に故障した場合には、無料修理します。
2. 保証期間内に故障して無料修理をお受けになる場合には、フィリップスサポートセンターにお問い合わせください。
3. ご贈答品の修理に関するご相談は、フィリップスサポートセンターにお問い合わせください。
4. 保証期間内でも次の場合には有料修理になります。
   ①使用上の誤り及び不当な修理や改造による故障及び損傷。
   ②お買い上げ後の輸送、移動、落下等による故障及び損傷。
   ③火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障及び損傷。
   ④一般家庭以外（例えば、業務用の長時間使用）に使用された場合の故障及び損傷。
   ⑤保証書の提示がない場合。
   ⑥保証書にお買い上げ年月日、お客様名、販売店名の記入のない場合、或は字句を書き換えられた場合。

※保証書は、本書に明示した条件のもとにおいて無料修理をお約束するものです。従って保証書を発行している者（保証責任者）、及びそれ以外の事業者に対するお客様の法律上の権利を制限するものではありません。
保証期間経過後の修理についてご不明の場合は、フィリップスサポートセンターにお問い合わせください。

※保証期間経過後の修理・補修用性能部品の保有期間について詳しくは取扱説明書の保証とアフターサービスの項目をご覧ください。

※お客様にご記入いただいた個人情報（保証書の控え）は保証期間内のサービス活動及びその後の安全点検活動のために利用させていただく場合がございます。ご了承ください。また個人情報は、株式会社フィリップス・ジャパンのホームページ http://www.philips.co.jp/ に掲載されている「プライバシーに関する通知」に基づき適切に管理いたします。

ENGLISH

S2881/00, S2882/00, S2885/00

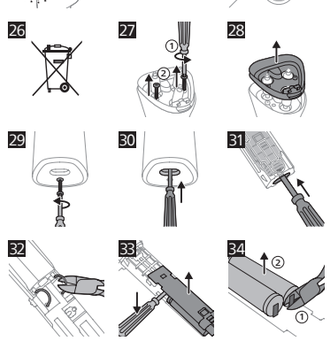

English

Important safety information

Only use the product for its intended household purpose. Read this important information carefully (Fig. 2) before you use the product and its batteries and accessories, and save it for future reference. Misuse can lead to hazards or serious injuries. The accessories supplied may vary for different products.

Warning

- To charge the product, only use a certified safety extra low voltage (SELV) supply unit with output rating 5 V, ≥ 1 A. For safe charging in a moist environment (e.g. in a bathroom), only use an IPX4 (splash-proof) supply unit. A suitable supply unit (e.g. Philips HQ87) is available via www.philips.com/support. If you need support finding the correct USB supply unit, contact the Consumer Care Center in your country (see the international warranty leaflet for contact details). Using a non-certified supply unit may cause hazards or serious injuries.
- Keep the USB cable, the USB supply unit and the charging stand (if provided) dry (Fig. 3).
- This appliance is waterproof (Fig. 4). It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the appliance can therefore only be used without cord.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not modify the supply unit.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.
- Do not use a damaged appliance. Replace damaged parts with new Philips parts.
- Because of hygiene, only one person should use the appliance.
- Unplug the appliance before cleaning it with water.
- Only use cold or lukewarm water to clean the appliance.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids to clean the appliance.
- Water may drip from the socket at the bottom of the appliance when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the appliance.
- Only use original Philips accessories or consumables.
- Charge, use and store the product at a temperature between 10 °C and 35 °C.
- Keep product and batteries away from fire and do not expose them to direct sunlight or high temperatures.
- If the product becomes abnormally hot or smelly, changes color or if charging takes longer than usual, stop using and charging the product and contact Philips.
- Do not place products and their batteries in microwave ovens or on induction cookers.
- Do not open, modify, pierce, damage or dismantle the product or battery to prevent batteries from heating up or releasing toxic or hazardous substances. Do not short-circuit, overcharge or reverse charge batteries.
- If batteries are damaged or leaking, avoid contact with the skin or eyes. If this occurs, immediately rinse well with water and seek medical care.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at **www.philips.com/welcome.**

General description (Fig. 1)

1 Protection cap
2 Shaving unit
3 Shaving unit release button
4 On/off button
5 Charging light
6 USB cable

Note: A suitable supply unit (e.g. Philips HQ87) is available via www.philips.com/support.

1

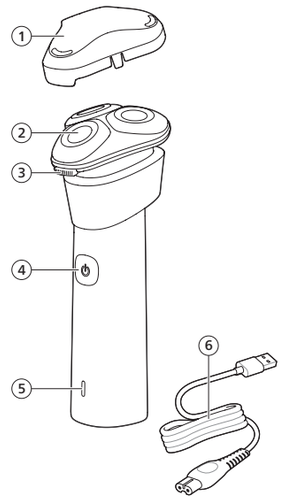

Charge indications

Battery low

When the battery is almost empty (when there are only 5 or fewer shaving minutes left), the charging light flashes orange (Fig. 5).
When you switch off the product, the charging light continues to flash orange for a few seconds.

Charging

When the shaver is charging, the charging light flashes green (Fig. 5).

Battery fully charged

When the battery is fully charged, the charging light lights up green continuously (Fig. 6).

Note: After approx. 1 minute, the charging light goes out to save energy.

Quick charge

When you start charging the empty battery, the charging light flashes green quickly. After approx. 5 minutes the charging light flashes green slowly. The shaver now contains enough energy for a 5-minute shave.

Charging

Charge the shaver when the charging light indicates that the battery is almost empty.
- Charging takes approx. 1 hour.
- Quick charge: After approx. 5 minutes of charging, the battery contains enough energy for one full shave.
- A fully charged shaver has a shaving time of up to 35 minutes.

Note: When you charge the shaver for the first time or after a long period of disuse, let it charge until the charging light lights up continuously.

Note: You cannot use the appliance while it is charging.

Charging with a USB supply unit

Warning: Keep the USB cable and the USB supply unit dry (Fig. 3).

1 Make sure that the appliance is switched off.
2 Insert the small plug of the USB cable into the socket in the bottom of the appliance.
3 Insert the USB plug into the USB supply unit (not provided) (Fig. 7).
4 Insert the USB supply unit into the wall socket (Fig. 8).
5 The charging light shows the charging status of the appliance (see 'Charge indications').
6 After charging, remove the USB supply unit from the wall socket, pull the USB plug out of the supply unit and then pull the small plug out of the appliance.

Using the appliance

Warning: Always check the appliance and all accessories before use. Do not use the appliance or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

Note: This appliance is waterproof (Fig. 4). It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the appliance can therefore only be used without cord.

Switching the appliance on and off

1 To switch on the appliance, press the on/off button once (Fig. 9).
2 To switch off the appliance, press the on/off button once (Fig. 9).

Shaving

For the best results on skin comfort, pre-trim your beard if you have not shaved for 3 days or longer. You can use this appliance either wet or dry, or even in the shower. For a wet shave, apply some water and shaving foam or gel to your skin and rinse the shaving heads under the tap with warm water before following the steps below.
1 Switch on the appliance (Fig. 9).
2 Move the shaver in circular movements over your skin to catch hair growing in all directions (Fig. 10). Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: Do not press too hard, as this can cause skin irritation.

Note: If you are shaving with gel or foam, rinse the shaving unit regularly during your shave to ensure that it continues to glide smoothly over your skin (Fig. 11).

3 Use the narrow sides of the shaving unit to shave in hard-to-reach areas such as along your jawline and under your nose.
4 Switch off and clean the appliance after each use (see 'Cleaning and maintenance').
5 Put the protection cap on the shaver after use to prevent the shaving heads from becoming damaged and dirty.

Note: Make sure you rinse all foam or shaving gel off the appliance.

Skin adaptation period

Your first shaves may not bring you the result you expect and your skin may even become slightly irritated. This is normal. Your skin and beard need time to adapt to any new shaving system. To allow your skin to adapt to this new appliance, we advise you to shave regularly (at least 3 times a week) and exclusively with this appliance for a period of 3 weeks.

Cleaning and maintenance

Cleaning the shaver

Clean the shaver after every shave for optimal shaving performance.
Water may drip from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.
1 Switch on the shaver.
2 Rinse the shaving unit with cold or lukewarm water (Fig. 11).
3 Switch off the shaver. Press the shaving unit release button to open the shaving unit (Fig. 12).
4 Rinse the shaving unit and hair chamber with lukewarm water (Fig. 13).
5 Rinse the outside of the shaving unit with lukewarm water.
6 Carefully shake off excess water and let the shaver air dry.

Caution: Never dry the shaving unit with a towel or tissue, as this may damage the shaving heads (Fig. 14).

7 Close the shaving unit.

Thorough cleaning

Clean the shaving heads thoroughly once a month for optimal performance.
1 Switch off the shaver.
2 Press the shaving unit release button to open the shaving unit. Pull the shaving unit off the shaver (Fig. 15).
3 Turn the retaining rings anticlockwise and remove them (Fig. 16). Place them aside in a safe place.
4 Remove and clean one shaving head at a time. Each shaving head consists of a cutter and a guard (Fig. 17).

Note: Do not clean more than one cutter and guard at a time, since they are all matching sets. If you accidentally mix up the cutters and guards, it may take several weeks before optimal shaving performance is restored.

5 Remove the cutter from the shaving guard and clean both parts under the tap (Fig. 18).
6 Put the cutter back into the guard (Fig. 19).
7 Put the shaving heads back into the shaving unit.

Note: Your shaver contains either shaving heads with projections or shaving heads with notches. In case of shaving heads with projections, make sure that the projections fit exactly into the recesses of the shaving head holder. In case of shaving heads with notches, make sure that the notches fit exactly onto the projections of the shaving head holder (Fig. 20).

8 Place the retaining rings back onto the shaving heads, and turn the retaining rings clockwise to reattach them (Fig. 21).

Note: Each retaining ring has two projections that fit exactly into the recesses of the shaving head holder. Turn the ring clockwise until your hear a click to indicate that the ring is fixed (Fig. 22).

9 Insert the hinge of the shaving unit into the slot in the top of the shaver. Then close the shaving unit (Fig. 23).

Replacement

Replacing the shaving heads

For maximum shaving performance, we advise you to replace the shaving heads every two years (Fig. 24). Replace damaged shaving heads immediately. Always replace the shaving heads with original Philips shaving heads (see 'Ordering accessories').
1 Switch off the shaver.
2 Press the shaving unit release button to open the shaving unit. Pull the shaving unit off the shaver (Fig. 15).
3 Turn the retaining rings anticlockwise and remove them (Fig. 16). Place them aside in a safe place.
4 Remove the shaving heads from the shaving unit. Discard the used shaving heads immediately to avoid mixing them with the new shaving heads (Fig. 25).
5 Place new shaving heads in the shaving unit.

Note: Your shaver contains either shaving heads with projections or shaving heads with notches. In case of shaving heads with projections, make sure that the projections fit exactly into the recesses of the shaving head holder. In case of shaving heads with notches, make sure that the notches fit exactly onto the projections of the shaving head holder (Fig. 20).

6 Place the retaining rings back onto the shaving heads, and turn the retaining rings clockwise to reattach them (Fig. 21).

Note: Each retaining ring has two projections that fit exactly into the recesses of the shaving head holder. Turn the ring clockwise until your hear a click to indicate that the ring is fixed (Fig. 22).

7 Insert the hinge of the shaving unit into the slot in the top of the shaver. Then close the shaving unit (Fig. 23).

Storage

Put the protection cap on the shaver after use to prevent the shaving heads from becoming damaged and dirty.

Note: Always let the shaver dry completely before storing.

Ordering accessories

To buy accessories or spare parts, visit **www.philips.com/parts-and-accessories** or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).
The following accessory is available:
- SH30 replacement Philips shaving heads

Support

For all product support, please visit **www.philips.com/support.**

Recycling

- This symbol means that electrical products and batteries shall not be disposed of with normal household waste (Fig. 26).
- Follow your country's rules for the separate collection of electrical products and batteries.

Removal of built-in rechargeable battery

The built-in rechargeable battery must only be removed by a qualified professional when the appliance is discarded. Before removing the battery, make sure that the appliance is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the appliance and when you dispose of the rechargeable battery.

When you handle batteries, make sure that your hands, the product and the batteries are dry.

To avoid accidental short-circuiting of batteries after removal, do not let battery terminals come into contact with metal objects (e.g. coins, hairpins, rings). Do not wrap batteries in aluminum foil. Tape battery terminals or put batteries in a plastic bag before you discard them.

Be careful, the battery strips are sharp.

1 Press the shaving unit release button to open the shaving unit. Pull the shaving unit off the shaver (Fig. 15).
2 Remove the two screws inside the hair chamber (Fig. 27).
3 Pull the hair chamber upwards to remove it (Fig. 28).
4 Remove the screw in the bottom of the shaver (Fig. 29).
5 Insert a flathead screwdriver into the slot in the bottom of the shaver, and push out the inner housing (Fig. 30).
6 Insert a flathead screwdriver into the slot in the bottom of the inner housing, and push out the power unit (Fig. 31).
7 Cut the wires with a pair of cutting pliers or scissors (Fig. 32).
8 Use a screwdriver to pry off the the printed circuit board (Fig. 33).
9 Break the battery tabs with a pair of cutting pliers, and remove the batteries (Fig. 34).