PHILIPS
Bodygroom

フィリップス ボディーグルーマー
品番 **BG7470/15**

取扱説明書

フィリップス ボディーグルーマーをお買い上げいただき、まことにありがとうございます。長い間ご愛用いただくために、ご使用前にこの取扱説明書をよくお読みのうえ、正しくお使いください。また、お読みになった後は、お使いになる方がいつでも見られるところに必ず保管してください。

●製品のご確認　製品をご確認ください。

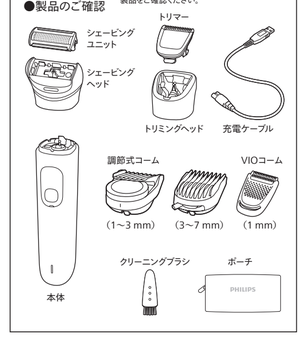

お買い上げのお客様へ　初めてご使用になる際は、ご使用前に充電してください。

目次

① 必ずお守りください
② 各部の名称
③ 充電のしかた
④ 基本的な使いかた
⑤ ムダ毛を整える
⑥ ムダ毛を全剃りする
⑦ ムダ毛の整えかた、剃りかたのコツ
⑧ お手入れ方法
⑨ 保管時の注意
⑩ 製品を廃棄するとき
⑪ 故障かな?と思ったら
⑫ 保証とアフターサービス
⑬ 仕様
⑭ 無料修理規定
Guidance in English

©2025 Koninklijke Philips N.V.
記載されている製品名などの固有名詞は、Koninklijke Philips N.V. またはその他の会社の商標または登録商標です。
3000.146.4138.2 (11/25)

フィリップス ボディーグルーマー 保証書

Certificate of purchase

この保証書は、「無料修理規定」記載内容で無料修理を行うことをお約束するものです。お買い上げの日から下記期間中に故障が発生した場合は、フィリップスサポートセンターにお問い合わせください。お客様にご記入いただいた個人情報（保証書の控え）は、株式会社フィリップス・ジャパンのホームページ http://www.philips.co.jp/ に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

品　名	ボディーグルーマー
品　番	BG7470/15
保証期間	お買い上げ日より2年
対象部分	本体、充電ケーブル（シェービングユニット、シェービングヘッド、トリマー、トリミングヘッド、コーム、ポーチ、クリーニングブラシを除く）
お買い上げ日	年　月　日
お客様	ご住所 〒
	ご芳名
	電話番号
販売店	販売店名・住所・電話番号

- 保証書は再発行しませんので、大切に保管してください。
- ご販売店様へ　この保証書はお客様へのアフターサービスの実施と責任を明確にするものです。贈答品、記念品の場合も含めて必ず記入捺印してお客様にお渡しください。

製品の使用方法や修理に関するお問い合わせ

フィリップスサポートセンター

0120(944)859

受付時間 9:00～18:00（年末年始除く）

Webからのお問い合わせ

MyPhilips 登録のご案内

フィリップスでは、製品をより快適にご使用いただくために製品登録をおすすめしております。MyPhilipsでは製品の保証書や購入証明書の写真も保管でき、万が一購入証明書を紛失された場合にも安心です。

URL　http://www.philips.co.jp/myphilips-about

この印刷物は再生紙を使用しております。

① 必ずお守りください

安全上のご注意

- ここに示した注意事項は、安全に関する重要な内容ですので、必ず守ってください。
- 誤った取扱いをしたときに想定される内容を「危険」、「警告」、「注意」に区分けしています。

○絵表示について

危険	人が死亡または重傷を負う可能性が大きい内容。
警告	人が死亡または重傷を負う可能性が想定される内容。
注意	人が傷害を負う可能性および物的損害のみの発生が想定される内容。

○絵表示の例

△記号は、「危険、警告、注意」を示します。図の中や近くに具体的な注意内容（左図の場合は高温注意）を示します。

⃠記号は、してはいけない「禁止」を示します。図の中や近くに具体的な禁止内容（左図の場合は分解禁止）を示します。

●記号は、必ずしていただく「強制」を示します。図の中や近くに具体的な強制内容（左図の場合は電源プラグをコンセントから抜くこと）を示します。

⚠危険

- 本製品は充電式電池を内蔵しています。本製品の充電、使用、保管は0 ℃から35 ℃の環境で行ってください。火中投入、加熱、高温での充電・使用・放置をしないでください。発熱・発火・破裂の原因になります。また電池の寿命にも影響を及ぼします。

⚠警告

- 本製品は、人の首から下のムダ毛を処理するためのものです。ヒゲを剃ったり頭髪を刈るなど、本取扱説明書に記載されている以外の目的で使用しないでください。
- 本体を改造しないでください。また、分解したり修理をしたりしないでください。火災、感電、けがの原因となります。修理はフィリップスサポートセンターにお問い合わせください。
- 本体が異常に熱くなったり異臭がしたり充電時間が異常に長い等の異常・故障時には、直ちに使用を中止してください。そのまま使用すると火災・感電・けがに至るおそれがあります。
- USBコネクタ部は確実にUSB充電アダプタに差し込んでください。スムーズに差し込みができない場合は無理に押し込もうとしないでください。火災や感電の原因になります。
- 水場や浴室での充電は絶対にしないでください。ショート・感電の原因になります。
- 電池が液漏れした場合は、液が目や皮膚に触れないように注意してください。万が一目に入った時は、こすらずに水道水で十分洗浄し医師の診察を受けてください。皮膚や衣類に付いた場合は水道水で十分洗い流してください。
- 充電ケーブルの接続前にコネクタ部が完全に乾いていることを確認してください。濡れた状態で差し込むとショート・感電の原因になります。

⚠警告

- お手入れの際は必ず本体から充電ケーブルを外してください。感電やけがをすることがあります。
- 濡れた手で充電ケーブルを抜き差ししないでください。感電やけがをすることがあります。
- 充電ケーブルを無理に曲げたり、引っ張ったり、ねじったり、たばねたり、重い物を載せたり、挟み込んだり、加工したりしないでください。充電ケーブルが破損し、火災・感電の原因となります。
- シェービングユニットやトリマーの刃やコームなどの部品が破損または故障した場合は、本製品を使用しないでください。けがの原因になります。交換の際にはお近くのフィリップス社製の同型部品にお取り替えください。
- 乳幼児の手の届くところに本製品を置かないでください。または子様がお製品で遊ぶことがないように監視してください。
- 補助を必要とする人（子どもを含む）に使用させないでください。また、お体の不自由な人だけでは使用しないでください。

⚠注意

- 健康面で不安のある方や、ペースメーカー等の体内埋込型医療機器、家庭用医用電気機器を使用している場合は、使用前に医師又は機器メーカーに確認してください。
- 充電する場合は、定格出力電圧DC5 V、定格出力電流1 A以上で、タイププレートにPSEマークの表示がある安全技術基準に適合したUSB充電アダプタで充電してください。
- USB充電アダプタとの接続には変換コネクタや変換ケーブルは使用しないでください。本体の破損や火災の原因となります。
- 充電ケーブルを抜くときは、電源コード部を持たずに必ず先端のコネクタ部を持って引き抜いてください。感電やショートして発火することがあります。
- 充電時以外は本体から充電ケーブルを抜いてください。けがややけど、絶縁劣化による感電・漏電・火災の原因となります。
- 充電ケーブルは付属の専用充電ケーブルを使用してください。また付属の充電ケーブルで他の製品を充電しないでください。ショート、異常発熱による火災の原因になります。破損、故障した場合は、事故を避けるために必ずフィリップス社製の同型充電ケーブルをお求めください。
- 電源コネクタ受部にピンやごみを付着させないでください。感電・ショート・発火の原因になります。
- ご使用の前にシェービングユニットやトリマーの刃やコームに異常がないことを確認してください。
- シェービングユニットやトリマーの刃は強く押きえないでください。破損して皮膚を傷つけることがあります。
- デリケートな部位（ワキやVIOなど）をトリミングする際は、必ずトリマーにコームを付けて使用してください。コームを付けずに使用すると肌荒れをおこしたり、皮膚を傷つけることがあります。
- 本製品や部品を食器洗浄機で洗わないでください。故障や破損の原因になります。
- 本製品を電子レンジやIH調理器具の近くに保管しないでください。故障や破損の原因になります。
- 衛生上の理由から他の人と共用しないでください。
- シェービングユニットやトリマーを乾燥させるときに、タオルやティッシュペーパーを使用しないでください。刃を傷めたり思わぬけがをすることがあります。

使用上のご注意

1. 本体や部品のお手入れは、水またはぬるま湯で行ってください。60 ℃以上の熱湯では洗浄しないでください。研磨パッドや研磨剤を含んだ洗剤やエアータスター及びペトロールやアセトンなどの刺激性の強い液体は使用しないでください。
2. シェービングユニットやトリマーの刃は、薄く仕上げてありますので、刃部を強く押きえたり、硬いものに当てないよう、ていねいに扱ってください。
3. シェービングユニットやトリマーの刃の清掃やコームの着脱は必ず電源をOffにしてから行ってください。
4. 切れ味が衰えてきたり、シェービングユニットやトリマーの刃やコームなどの部品が破損した場合は、使用せず必ず新しい同型部品に交換してください。
5. 本製品は毛が濡れた状態でも軟いた状態でも使用できますが、濡れた毛は肌にはひっきやすいため、身体が清潔で乾いた状態での使用をおすすめします。
6. 直射日光の当たる場所には保管しないでください。夏場、車の中に放置しないでください。
7. 本製品は、使用のたびに、掃除をしてください。
8. 本体は防水加工をしておりますが、水や液体の中に浸けないでください。

② 各部の名称

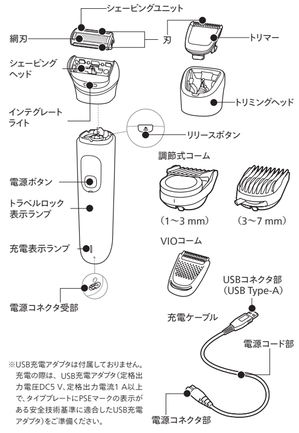

※USB充電アダプタは付属しておりません。充電の際は、USB充電アダプタ（定格出力電圧DC5 V、定格出力電流1 A以上で、タイププレートにPSEマークの表示がある安全技術基準に適合したUSB充電アダプタ）をご準備ください。

③ 充電のしかた

注意
- 定格出力電圧DC5 V、定格出力電流1 A以上で、タイププレートにPSEマークの表示がある安全技術基準に適合したUSB充電アダプタで充電してください。
- USB充電アダプタとの接続には変換コネクタや変換ケーブルは使用しないでください。
- 水場や浴室で充電しないでください。
- 接続の前に各コネクタ部が完全に乾いていることを確認してください。
- 濡れた手で充電ケーブルを抜き差ししないでください。
- 長期間使用しない場合は、充電池が過放電や液漏れして使えなくなることがあります。3～4カ月に一度は充電してください。

初めてお使いになるとき や、長い間ご使用にならなかったとき、または充電残量が少なくなったときは、ご使用前に充電してください。

※本製品はリチウムイオン充電池を使用しているため、ご使用のたびに充電をしても充電池の寿命に影響ありません。
※充電しながらのご使用はできません。

1. 充電表示ランプがオレンジ色に点滅したら、充電が少なくなっていますので、本製品を充電する必要があります。

2. 充電する際には、電源を必ずOffにしてください。
※Onの状態では充電できません。
3. 充電ケーブルの電源コネクタ部を本体の電源コネクタ受部に差し込みます。
4. 充電ケーブルのUSBコネクタ部をUSB充電アダプタに差し込みます。

5. ご家庭のコンセントにUSB充電アダプタの電源プラグ部を差し込みます。

6. 充電中は、充電表示ランプがゆっくりと点滅します。充電が完了したら、充電表示ランプが点灯します。
※充電完了後、約1分経過すると充電表示ランプが消えます。

クイックチャージ
充電残量が0の状態で充電すると、約5分間でお手入れ1回分が急速充電されます。
※クイックチャージ中は充電表示ランプが高速点滅します。

④ 基本的な使いかた

注意
- ご使用前にシェービングユニットやトリマーの刃やコームに異常がないことを確認してください。
- ヒゲを剃ったり頭髪を刈るなど、本取扱説明書に記載されている以外の目的で使用しないでください。
- 本体は防水加工をしており水場や浴室でも使用できますが、水や液体の中に浸けないでください(故障の原因となります)。

※使用後は電源をOffにし、ご使用のたびに掃除をしてください。

- ボディーグルーマーは、首から下の体毛(ワキ、腕、胸、腹、脚、スネ、VIOなど)の長さを整えたり、ボディーシェービングすることができます。
- 本製品は、濡れている状態でも軟いている状態でもお使いいただけます。

電源のOn/Off
動作していない状態で電源ボタンを1回押すとOn、もう1回押すとOffになります。

- **ムダ毛を整えたいとき**
  体毛の長さを整える時はトリマーにコームを取り付けます。

- **ムダ毛を全剃りしたいとき**
  体毛を残さずボディーシェービングしたい時はシェービングヘッドを使用します。

インテグレートライトのOn/Off

インテグレートライトは、本体の電源をOnにすると自動的に点灯します。本体が動作していない状態で電源ボタンを約1秒間押し続けると、インテグレートライトが消灯します。消灯したインテグレートライトを再度点灯させるには、電源を一度Offにした後に、再度本体の電源をOnにするとインテグレートライトが点灯します。
※電源ボタンを約5秒間押し続けるとトラベルロック機能がOnまたはOffになります。

トラベルロック機能のOn/Off

電源ボタンを約5秒間押し続けると本体の電源ボタンの下に鍵のアイコンが点滅し、トラベルロック機能がOnになります。トラベルロック機能をOffにするには、再度電源ボタンを約5秒間押し続けると鍵のアイコンが点滅し、トラベルロック機能がOffになります。

シェービングヘッドまたはトリミングヘッドの取り付け、取り外しかた

シェービングヘッドまたはトリミングヘッドの取り付け
シェービングヘッド、またはトリミングヘッドを本体に取り付けるには、シェービングヘッド、またはトリミングヘッドを本体上部に合わせ、カチッと音がするまで本体に軽く押し下げます。
※電源がOffになっていることを確認してください。

シェービングヘッドまたはトリミングヘッドの取り外し
シェービングヘッド、またはトリミングヘッドを本体から取り外すには、本体の背部にあるボタンを押して、シェービングヘッド、またはトリミングヘッドを本体から取り外します。

トリマーの取り付け、取り外しかた

トリマーの取り付け
トリマーの突起部分をトリミングヘッド前側の溝に差し込み（図①）、後ろ側を押して本体にはめ込みます（図②）。
※電源がOffになっていることを確認してください。

トリマーの取り外し
トリマーを上方向に持ち上げて本体から外してください。

コームの取り付け、取り外しかた

コームの取り付け
コームの前側のフックをトリマーの刃の先端に引っかけ（図①）、コームの後ろ側をカチッと音がするまで押し込みます（図②）。

コームの取り外し
コームの後ろ側の突起を注意しながら引き上げて、コーム前側のフックをトリマーの刃から外します。

注意
- コーム着脱は必ず電源をOffにしてから行ってください。
- コームの取り外しの際は、過度に力を加えないようご注意ください。
- コームの着脱の際は、コームが刃にあたらないようご注意ください。破損の原因になります。

⑤ ムダ毛を整える

注意
- デリケートな部位（ワキやVIOなど）をトリミングする際は、必ずトリマーにコームを付けて使用してください。コームを付けずに使用すると肌荒れをおこしたり、皮膚を傷つけることがあります。

コームを使用し、カット後の仕上がりの長さを約1 mm～7 mmの間でお好みの長さにそろえることができます。

1. カット後の仕上がりの長さに合わせたコームをトリマーに取り付けます。

2. 電源をOnにします。

3. 体毛の流れに逆らうように動かします。その際に、コームは常に皮膚に密着させ、強く押しつけず、すべらすように動かしてください。
※皮膚に強く押しつけないでください。破損または故障の原因となります。

ポイント
- カットの仕上がりが均一になるように、コームの平らな部分を常に皮膚に密着させ、強く押しつけず、すべらすように動かしてください。
- 体毛は部位によって毛の向きが異なります。毛の向きに合わせて、カットする方向（上下・左右）を変えてみてください。
- 皮膚や体毛は、乾いている方がよりスムーズにムダ毛を整えることができます。
- コームを装着せずにカットするときは、トリマーが触れた部分の毛がとても短く（約0.8 mm）カットされますので、ご注意ください。

使用箇所
ワキ、腕、胸、腹、脚、スネ、VIOなどのムダ毛部位にお使いいただけます。

⑥ ムダ毛を全剃りする

注意
- ご使用になる前に、シェービングユニットに破損や消耗がないかお才確認してください。けがの原因になりますので、シェービングユニットの網刃や刃に破損や消耗がある場合は、製品を使わないでください。交換の際には必ずフィリップス社製の同型部品にお取り替えください。

ボディーシェービングする際はシェービングヘッドを使います。シェービングユニットの網刃は皮膚に強く押し付けないでください。

1. シェービングヘッドを取り付けます。

2. 電源をOnにします。

3. 手で皮膚を伸ばしながら、体毛の流れに逆らうように動かします。その際に、ボディーグルーマーを常に皮膚に密着させ、すべらすように動かしてください。
※皮膚に強く押しつけないでください。破損または故障の原因となります。



ポイント
- 空いている方の手を使って皮膚を伸ばし、毛がまっすぐに立つようにします。
- シェービングユニットが皮膚にぴったり触れるようにしてください。
- デリケートな部分を初めて剃る際には、ボディーグルーマーをゆっくり動かして様子をみてください。肌が慣れるまでに、少し時間がかかります。
※直射日光の当たる場所には保管しないでください。
- 体毛の長さが10 mm以上ある場合には、先にムダ毛を整えておくとボディーシェービングがしやすくなります。
- コームを装着せずにカットするときは、シェービングユニットが触れた部分の毛がとても短く（約0.2 mm）カットされますのでご注意ください。

使用箇所
ワキ、腕、胸、腹、脚、スネ、VIOなどのムダ毛部位にお使いいただけます。

⑦ ムダ毛の整えかた、剃りかたのコツ

特によく使う、腕、ワキ、脚をきれいに整える方法です。

1. **腕**
   体の外側から内側に向かってムダ毛を整える、または剃ります。

2. **ワキ**
   腕を上げて、皮膚をなるべく伸ばした状態でムダ毛を整える、または剃ります。
   ボディーシェービングする方向を上下、左右に変えながら念入りに剃っていきます。

3. **脚**
   体毛の流れに逆らうように、足首の方から、ひざに向かってムダ毛を整える、または剃ります。

※イラストはイメージです。

⑧ お手入れ方法

警告
- お手入れの際は必ず本体から充電ケーブルを外してください。感電やけがをすることがあります。

注意
- 本製品は使用のたびに掃除をしてください。
- 本製品に潤滑剤を使う必要はありません。
- 研磨パッドや研磨材を含んだ洗剤、エアータスター及びペトロールやアセトンなどの刺激性の強い液体は絶対に使わないでください。
- 本体は水洗いできますが、水中に浸けないでください。
- 本製品や部品を食器洗浄機で洗わないでください。
- シェービングユニットやトリマーを乾燥させるときに、タオルやティッシュペーパーを使用しないでください。シェービングユニットやトリマーの刃を傷めたり思わぬけがをすることがあります。

部品の取り替え
シェービングユニットやコームが破損・摩耗した場合は、必ずフィリップス社製の同型部品とお取り替えください。

※シェービングユニットの刃・網刃は非常に壊れやすいので、取り扱いには充分ご注意ください。
※シェービングユニットの刃・網刃が損傷している場合には、すぐに交換してください。
※シェービングユニットの寿命は約1年が目安ですが、使用時間、回数により異なります。

1. 掃除をする前に、電源がOffになっていることを確認してください。
   ご使用のたびに、コームを取り外してください。

2. シェービングヘッドもしくはトリミングヘッドを本体から取り外します。

3. シェービングヘッドからシェービングユニット、またはトリミングヘッドからトリマーを取り外します。
   ※シェービングヘッドからシェービングユニットを取り外すには、シェービングユニットの刃の上下を持って引っ張ると簡単に外れます。

4. 取り外したシェービングユニットもしくはトリマーを、水またはぬるま湯で洗い流します。
   ※ぬるま湯（40 ℃前後）でのお手入れをおすすめします。長いのもとなる皮脂やゴミなどが取れやすくなります。60 ℃以上の熱湯でのお手入れはお止めください。故障の原因となります。

5. シェービングヘッド、もしくはトリミングヘッドに溜まった毛くずを、水またはぬるま湯で洗い流します。

6. シェービングヘッドとシェービングユニット、もしくはトリミングヘッドとトリマーを完全に自然乾燥させた後、元の状態に戻します。

7. トリミングヘッドの保管時のトリマーの保護のため、コームをトリマーに取り付けます。

8. シェービングヘッドもしくはトリミングヘッドを本体に取り付けます。

⑨ 保管時の注意

製品を保管する際には、本体及び部品を完全に自然乾燥させてから、室温10 ℃～35 ℃の場所で保管してください。トリマーにはコームを付けて保管してください。
ポーチは製品の収納保管にお役立てください。

※保管時に充電ケーブルを本体に差したままにしたり、本体に巻きつけないでください。
※直射日光の当たる場所には保管しないでください。
※夏場、車の中には放置しないでください。

⑩ 製品を廃棄するとき

※お客様による充電池の修理交換はできません。

製品を廃棄する際は、リチウムイオン充電池を取り出し、充電池を取り外した後の製品については、各自治体の廃棄方法に従い廃棄してください。

リチウムイオン充電池のリサイクルについて

本製品はリチウムイオン充電池を使用しています。リチウムイオン充電池はリサイクル可能な貴重な資源です。使用済みの製品を廃棄する際には、リチウムイオン充電池を必ず取り外してください。取り出したリチウムイオン充電池は各自治体の廃棄方法に従い廃棄するか、リサイクル協力店にお持ちください。リサイクル協力店の詳細は、一般社団法人JBRCのホームページをご参照ください。http://www.jbrc.com

Li-ion

注意
- 製品を廃棄するとき以外は、絶対に本体を分解しないでください。
- 安全上の理由から、一度分解した本体は絶対に再使用しないでください。
- 充電池は完全に放電してから、取り外してください。また、ショートの発生を防ぐために、作業時にはコインやヘアピン、指輪等の金属製の物体を充電池に近づけないようにしてください。
- 作業を行う際は、目、手、指などにけがのないよう注意してください。また、必ず手・本体が乾いた状態で作業を行ってください。
- 本体内部の金具は鋭いので、ご注意ください。
- 電池が液漏れした場合は、液が目や皮膚に触れないように注意してください。万が一目に入った時は、こすらずに水道水で十分洗浄し医師の診察を受けてください。皮膚や衣服に付いた場合は水道水で十分洗い流してください。
- 取り外した充電池は、ショートしないように絶縁テープを貼ってください。

充電池の取り外しかた

1. 本体からシェービングヘッドもしくはトリミングヘッドを取り外します。

2. 本体上部のシェービングヘッド取付部の溝に⊖ドライバーを差し込み、本体内部のパーツを持ち上げます。



3. 本体の電源ボタン側の空洞部に⊖ドライバーを差し込み、本体から内部ユニットのフタを持ち上げて取り外します。



4. ⊖ドライバーをグルーマーの駆動部の下に差し込み、内部ユニットを本体から引き抜きます。



5. ⊖ドライバーを使い、プリント基板が固定されている6つのスナップ留めを外します。



6. バッテリーを含むプリント基板を取り外します。



7. 工具を使用して、プリント基板からバッテリーを取り外します。



⑪ 故障かな?と思ったら

故障かな?と思ったら、お調べください。

充電しても使用時間が極端に短い

- シェービングユニットならびにトリマーの刃の掃除をしてください。
- 本製品が完全に止まるまで作動させてからもう一度充電してください。それでも故障されないときは、充電池の寿命です。

だんだん切れ味が悪くなった

- シェービングユニットならびにトリマーの刃が汚れていないか確認してください。
- シェービングユニットならびにトリマーの刃が損傷または摩耗していないか確認してください。破損または摩耗しているときは、シェービングユニットまたはトリマーを交換してください。
- シェービングユニットならびにトリマーの刃に長い毛がからまっていないか確認してください。

電源ボタンを押しても作動しない

- 充電がされていない場合は充電をしてください。
- シェービングユニットならびにトリマーの刃が動かなくなるほど汚れている場合はシェービングユニットまたはトリマーをお手入れしてください。
- シェービングユニットならびにトリマーの刃が正しく取り付けられているか確認してください。
- シェービングユニットならびにトリマーの刃が破損している場合は交換してください。

異常な音がする

- シェービングユニットならびにトリマーの刃が正しく取り付けられているか確認してください。
- コームが正しく取り付けられているか確認してください。問題がある場合はコームをいったん外してから、再度取り付けてください。
- シェービングユニットならびにトリマーの刃が損傷または摩耗していないか確認してください。損傷または摩耗しているときは、シェービングユニットまたはトリマーを交換してください。

充電できない

- 電源がOffの状態になっているか確認してください。充電する際には電源を必ずOffにしてから充電してください。
- 本体の電源コネクタ受部に充電ケーブルがきちんと差し込まれているか確認してください。
- 充電ケーブルが断線している場合は新しい充電ケーブルが必要です。フィリップスサポートセンターにお問い合わせください。
- 使用しているUSB充電アダプタが適合品（定格出力電圧DC5 V、定格出力電流1 A以上で、タイププレートにPSEマークの表示がある安全技術基準に適合したUSB充電アダプタ）か確認してください。

以上の点検により、正常な状態に戻らない場合は、フィリップスサポートセンターにお問い合わせください。

⑫ 保証とアフターサービス

保証書と修理サービスについて（必ずお読みください。）

【保証書・表面左側に付属】
- 保証書は、必ず「お買い上げ日・販売店名」等の記入をお確かめのうえ、販売店から受け取っていただき内容をよくお読みのあと大切に保管してください。

保証期間	お買い上げ日から2年間
対象部分	本体、充電ケーブル（シェービングユニット、シェービングヘッド、トリマー、トリミングヘッド、コーム、ポーチ、クリーニングブラシを除く）

【補修用性能部品の保有期間】
- 補修用性能部品の保有期間は製造打ち切り後 6 年です。
- 性能部品とは、その製品の機能を維持するために必要な部品です。

【ご不明な点や修理に関するご相談】
- 修理に関するご相談ならびにご不明な点は、フィリップスサポートセンターにお問い合わせください。

【修理を依頼されるときは】
- 修理をご依頼される前に、この取扱説明書をよくお読みいただき、再度点検ください。尚、異常があるときはご使用を中止し、フィリップスサポートセンターにお問い合わせください。

【保証期間中は】
- 製品と保証書をご用意いただき、フィリップスサポートセンターにお問い合わせください。保証の規定に従って無料修理いたします。

【保証期間が過ぎているときは】
- 修理によって製品の機能が維持できる場合は、補修用性能部品の保有期間内であれば、ご希望により有料で修理させていただきます。

【海外での本製品の保証及びアフターサービスについて】
- 本製品の保証は海外においても有効です。（同シリーズ製品の取り扱いがある国に限ります）
- 日本国以外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができますが、この場合多少日数を要することもあります。
- 海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お問いの点がございましたら下記までご連絡ください。
  Philips Consumer Lifestyle Service Department P.O.Box 20100 9200 Ca Drachten The Netherlands http://www.philips.com/support

【お客様の個人情報のお取り扱いについて】
- お受けしましたお客様の個人情報は、株式会社フィリップス・ジャパンのホームページ http://www.philips.co.jp/ に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

便利メモ

お買い上げ日	年　月　日		
お買い上げ店名	電話番号　（　）		

ご使用の時、このような症状はありませんか?

- 本体にさわると時々電気を感じる。
- こげくさい臭いがする。
- 充電ケーブルを動かすと通電したり、しなかったりする。
- その他の異常、故障がある。

長年ご使用の製品の点検を
愛情点検

このような症状の時は、故障や事故防止のため、電源をOffにし、充電アダプタをコンセントから外して、必ずフィリップスサポートセンターにお問い合わせください。

⑬ 仕様

品番	BG7470/15
ハンドル品番	BG7470
本体寸法（高さ×幅×奥行）	170×51×40 mm
本体質量	約144 g（コーム含まず）
電源方式	充電式
定格入力	DC 5 V 1 A
充電時間	約1時間
使用時間	約120分
使用充電池	リチウムイオン充電池（Li-ion）
替刃品番	BG2010/43

※改良の為、仕様を予告なく変更することがあります。

株式会社 フィリップス・ジャパン
〒106-0041 東京都港区麻布台1-3-1 麻布台ヒルズ森JPタワー 15階

⑭ 無料修理規定

【無料修理規定】

1. 取扱説明書、本体貼付ラベル等の注意書に従った正常な使用状態で保証期間内に故障した場合には、無料修理します。
2. 保証期間内に故障して無料修理をお受けになる場合には、フィリップスサポートセンターにお問い合わせください。
3. ご贈答品の修理に関するご相談は、フィリップスサポートセンターにお問い合わせください。
4. 保証期間内でも次の場合には有料修理になります。
   ①使用上の誤り及び不当な修理や改造による故障及び損傷。
   ②お買い上げ後の輸送、移動、落下等による故障及び損傷。
   ③火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障及び損傷。
   ④一般家庭以外（例えば、業務用の長時間使用）に使用された場合の故障及び損傷。
   ⑤保証書の提示がない場合。
   ⑥保証書に お買い上げ年月日、お客様名、販売店名の記入のない場合、或は字句を書き換えられた場合。

※保証書は、本書に明示した条件のもとにおいて無料修理をお約束するものです。従って保証書を発行している者（保証責任者）、及びそれ以外の事業者に対するお客様の法律上の権利を制限するものではありません。
保証期間経過後の修理についてご不明の場合は、フィリップスサポートセンターにお問い合わせください。
※保証期間経過後の修理・補修用性能部品の保有期間について詳しくは取扱説明書の保証とアフターサービスの項目をご覧ください。
※お客様にご記入いただいた個人情報（保証書の控え）は保証期間内のサービス活動及びその後の安全点検活動のために利用させていただく場合がございます。ご了承ください。また個人情報は、株式会社フィリップス・ジャパンのホームページ http://www.philips.co.jp/ に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

1

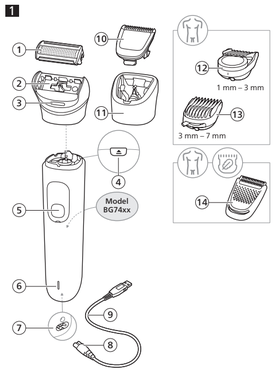

2 3 4

5 6 7

8 9 10



11 12 13

14 15 16

17 18 19

20 21 22

23 24 25

26 27 28

English

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

Warning

- To charge the product, only use a certified safety extra low voltage (SELV) supply unit with output rating 5 V, ≥ 1 A. For safe charging in a moist environment (e.g. in a bathroom), only use an IPX4 (splash-proof) supply unit. A suitable supply unit (e.g. Philips HQ87) is available via www.philips.com/support. If you need support finding the correct USB supply unit, contact the Consumer Care Center in your country (see the international warranty leaflet for contact details). Using a non-certified supply unit may cause hazards or serious injuries.
- Keep the USB cable and the USB supply unit dry (Fig. 2).
- This appliance is waterproof (Fig. 3). It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the appliance can therefore only be used without cord.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not modify the supply unit.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.
- Do not use a damaged appliance. Replace damaged parts with new Philips parts.
- Because of hygiene, only one person should use the appliance.
- Unplug the appliance before cleaning it with water.
- Only use cold or lukewarm water to clean the appliance.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids to clean the appliance.
- Only use original Philips accessories or consumables.
- Charge, use and store the product at a temperature between 10 °C and 35 °C.
- Keep product and batteries away from fire and do not expose them to direct sunlight or high temperatures.
- If the product becomes abnormally hot or smelly, changes color or if charging takes longer than usual, stop using and charging the product and contact Philips.
- Do not place products and their batteries in microwave ovens or on induction cookers.
- Do not open, modify, pierce, damage or dismantle the product or battery to prevent batteries from heating up or releasing toxic or hazardous substances. Do not short-circuit, overcharge or reverse charge batteries.
- If batteries are damaged or leaking, avoid contact with the skin or eyes. If this occurs, immediately rinse well with water and seek medical care.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Introduction

Congratulations on your purchase and welcome to Philips.
To fully benefit from the support that Philips offers, register your product at **www.philips.com/welcome**.

You can find the model number on the back of your product.

The full model number (e.g. BG1234/56) is located on the bottom of the packaging, your receipt or order confirmation.

IMPORTANT TO KNOW

- Charge the appliance fully before you use it for the first time.

- This appliance is waterproof (Fig. 3). It is suitable for use in the bath or shower and for cleaning under the tap.
- For safety reasons, the appliance can only be used without cord.
- You can use the appliance wet or dry to shave or trim hair on all parts of the body below the neckline. The appliance is not intended for shaving or trimming your face or head.
- While the appliance can be used both wet and dry, we recommend using it on clean, dry hair, as wet hair tends to stick to the body.
- Always check the shaving head, the trimming head and the cutting units before use to make sure they are clean, in good condition and not damaged or worn. A damaged part can cause skin irritation and reduced product performance.
- Always use the intimate comb when trimming sensitive areas.
- Whenever possible, stretch the skin with your free hand for easier shaving or trimming.
- Clean the appliance after each use (see 'Cleaning').

General description (Fig. 1)

1 Cutting unit of shaving head
2 Shaving head
3 Integrated light
4 Release button
5 On/off button
6 Battery status indicator
7 Socket for small plug
8 Small plug
9 USB cable

Note: The USB supply unit is not provided. A suitable USB supply unit (e.g. Philips HQ87) is available via www.philips.com/support.

10 Cutting unit of trimming head
11 Trimming head
12 Adjustable precision trimming comb 1 mm – 3 mm
13 Adjustable trimming comb 3 mm – 7 mm
14 Intimate comb
Not shown: storage pouch, cleaning brush

Charging

- Charging or using the appliance at temperatures below 10 °C or higher than 35 °C adversely affects the lifespan of the battery.
- If the appliance is subjected to a major change in temperature, pressure or humidity, let the appliance acclimatize for 30 minutes before use.

Battery status indicator

Battery status	Indicator mode
Almost empty	Flashing orange light
Charging	Flashing white light
Fully charged	Solid white light

Note: Approx. 60 seconds after the battery is fully charged, the battery status indicator switches off automatically.

Warning: Keep the USB cable and the USB supply unit dry (Fig. 2).

1 Make sure the appliance is switched off.
2 Insert the small plug of the USB cable into the socket in the bottom of the appliance.
3 Insert the USB plug into the USB supply unit (not provided) (Fig. 4).
4 Insert the USB supply unit into the wall socket (Fig. 5).
5 After charging, remove the USB supply unit from the wall socket and pull the small plug out of the appliance.

Quick charge

After approx. 5 minutes of charging, the appliance contains enough power for one trimming session.

Using the appliance

Always check the appliance and all accessories before use. Do not use the appliance or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

Because of hygiene, only one person should use the appliance.

Changing the heads

1 To detach the shaving head or the trimming head from the appliance, press the release button at the back of the handle and gently lift the head off the handle (Fig. 6).
2 To attach the shaving head or the trimming head onto the appliance, align the head with the top of the handle and gently press it down until it clicks into place (Fig. 7).

Switching the appliance on and off

To switch the appliance on or off, press the on/off button once.

Integrated light

The integrated light goes on automatically when you switch on the appliance to give you a better view while shaving or trimming.

You can turn the integrated light off or back on by pressing the on/off button for 1 second when the appliance is switched off.

Note: If you hold the on/off button for 5 seconds, this will activate the travel lock (see 'Travel lock').

Travel lock

1 To activate the travel lock, press and hold the on/off button for 5 seconds when the appliance is switched off. The lock icon will light up on the handle (Fig. 9).
2 To deactivate the travel lock, press and hold the on/off button for 5 seconds. The lock icon will switch off.

Shaving

- When shaving sensitive areas for the first time, you may experience some discomfort, irritation or reddening of the skin. This is normal as your skin needs time to adjust to shaving.
- For fast shaving, hold the appliance in such a way that both the front teeth and the cutting unit of shaving head touch the skin. This allows you to catch both short and long hairs in each stroke (Fig. 10).
- If your hair is longer than 10 mm, pre-trim your hair to a shorter length first for optimum shaving results.

Shaving body hair

Use the shaving head to shave body hair below the neckline.
1 Attach the shaving head onto the appliance.
2 Switch on the appliance.
3 Stretch your skin with your free hand. Place the shaving head in such a way so that both the front teeth and the cutting unit of shaving head touch the skin. Gently press the shaving head onto the skin and move it slowly and smoothly against the direction of hair growth (Fig. 11).

Do not press too hard. Too much pressure can distort the cutting unit of shaving head and cause skin irritation.

The shaving head is bi-directional, which means that you can shave by moving the appliance up and down. Shave against the direction of hair growth for optimal performance.

4 Switch off and clean the appliance after each use (see 'Cleaning').

Detaching and attaching the cutting unit of shaving head

Detach the cutting unit of shaving head for thorough cleaning or to replace a worn cutting unit (see 'Replacement').

The cutting unit of shaving head is a precision part. Handle it with care.

Hold the cutting unit of shaving head by its plastic housing only (Fig. 12).

1 To detach the cutting unit from the shaving head, hold the plastic housing of the cutting unit on both sides and gently pull it out of the shaving head (Fig. 12).
2 To attach the cutting unit onto the shaving head, align the cutting unit with the shaving head and snap it into place (Fig. 13).

Trimming

- Use the trimming head with a comb attached, especially on more sensitive body areas.
- While trimming, keep the trimming comb flat on the skin for highest comfort.
- When you trim for the first time, use the highest trimming setting of the adjustable comb to familiarize yourself with the appliance.
- Since hairs do not all grow in the same direction, you may want to try different trimming positions (i.e. upwards, downwards, or across). Practice is best for optimum results.
- Always make smooth and gentle movements and make sure that the surface of the comb stays in contact with your skin.

Trimming combs

Use the trimming head with a trimming comb to trim hair on your body to the desired length. The appliance comes with three combs:

Comb	mm	Intended use
Intimate comb	1 mm	Sensitive areas (e.g. pubic area, scrotum, armpits)
Adjustable comb	1 mm – 3 mm	Body below neckline
Adjustable comb	3 mm – 7 mm	Body below neckline

Attaching and detaching combs

1 To attach any type of comb onto the cutting unit of trimming head, slide the front part of the comb onto the teeth and press the notch at the back of the comb downwards until it clicks into place (Fig. 14).
2 To detach any type of comb from the cutting unit of trimming head, carefully push its back part off the appliance and then slide it off the cutting unit (Fig. 15).

Trimming with a trimming comb

Use the intimate comb to trim sensitive areas to a length of 1 mm, for extra protection of the skin.
Use an adjustable comb to trim your body hair to the desired length on less sensitive areas (Fig. 16). The settings on the comb correspond to the remaining hair length in millimeters.
1 Attach the trimming head to the appliance.
2 Attach a trimming comb onto the trimming head.
3 When trimming with an adjustable comb, use the hair length setting wheel or the slide switch on the comb to adjust the length (Fig. 17).
4 Switch on the appliance.
5 To trim in the most effective way, move the comb against the direction of hair growth. Make sure that the surface of the comb always stays in contact with the skin.
6 Switch off and clean the appliance after each use (see 'Cleaning').

Detaching and attaching the cutting unit of trimming head

Detach the cutting unit from the trimming head for thorough cleaning.
1 To detach the cutting unit from the trimming head, place your finger near the teeth of the cutting unit and push gently upwards until the cutting unit is released from the trimming head (Fig. 18).
2 To attach the cutting unit onto the trimming head, insert the plastic notch at the back of the cutting unit into the guiding slot in the trimming head and gently press the teeth of the cutting unit downwards until the cutting unit clicks into place (Fig. 19).

Cleaning

Switch off the appliance before removing or attaching attachments.

Only use cold or lukewarm water to clean the appliance.

Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Never dry the cutting units with a towel or tissue, as they may get caught in the teeth and cause damage.

Cleaning the shaving head

Do not clean the cutting unit of shaving head with the brush. The brush can be used for all other parts and attachments.

1 Switch off the appliance.
2 Detach the shaving head from the appliance.
3 Remove the cutting unit from the shaving head (see 'Detaching and attaching the cutting unit of shaving head'). Clean the hair chamber with the brush.
4 Rinse the cutting unit and the shaving head under the tap (Fig. 20).
5 Carefully shake off excess water and let all parts air dry completely.

Cleaning the trimming head

1 Switch off the appliance.
2 Detach the trimming comb and the trimming head from the appliance.
3 Remove the cutting unit from the trimming head (see 'Detaching and attaching the cutting unit of trimming head').
4 Clean the hair chamber, the cutting unit of trimming head, the trimming combs and the trimming head with the brush and rinse them under the tap (Fig. 21).
5 Carefully shake off excess water and let all parts air-dry completely.

Storage

Note: Do not place or store the appliance where it can fall or be pulled into a tub or sink, water or other liquid while plugged in.

- Make sure that the appliance is switched off and that the USB supply unit has been removed from the wall socket and from the appliance.
- Do not wrap the USB cable around the appliance when storing.
- Attach a comb onto the cutting unit of trimming head to protect it during storage.
- Store the appliance, the USB cable, the USB supply unit and all the accessories in the pouch supplied.
- Make sure that the appliance and the accessories are dry before you place them in the pouch.
- Place the pouch in a safe, dry location, where it will not be crushed, banged, or subject to damage.

Assistance

For all product support, please visit **www.philips.com/support**.

Ordering accessories

To buy accessories or spare parts, visit **www.philips.com/parts-and-accessories** or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).
The following accessories are available:
- Cutting unit of shaving head: model BG2010/43.

Replacement

Replacing the cutting unit of shaving head

For maximum shaving performance, we advise you to replace the cutting unit of shaving head every year (model BG2010/43).
If the the cutting unit is worn or damaged, do not use the appliance and replace it immediately. Always replace the cutting unit of shaving head with the original Philips accessory.
1 Switch off the appliance and disconnect it from the power outlet.
2 Remove the cutting unit from the shaving head by pulling it off the appliance.
3 Place the new cutting unit onto the shaving head by snapping it into place. You will hear a click.
4 After replacing the cutting unit, make sure that the shaving head is firmly attached before using the appliance.

Removal of built-in rechargeable battery

The built-in rechargeable battery must be removed when the appliance is discarded. Before removing the battery, make sure that the appliance is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the appliance and when you dispose of the rechargeable battery.

When you handle batteries, make sure that your hands, the product and the batteries are dry.

To avoid accidental short-circuiting of batteries after removal, do not let battery terminals come into contact with metal objects (e.g. coins, hairpins, rings). Do not wrap batteries in aluminum foil. Tape battery terminals or put batteries in a plastic bag before you discard them.

1 Detach the shaving head from the handle (Fig. 6).
2 Use a flathead screwdriver to lift up the head interface key (Fig. 22).
3 Insert a flathead screw into the cavity at the front of the handle. Then lift and remove the head interface module (Fig. 23).
4 Insert a flathead screwdriver underneath the driving spindle and pull out the inner tube from the handle (Fig. 24).
5 Use the flathead screwdriver to undo the six snap connections holding the printed circuit board in the frame (Fig. 25).
6 Remove the printed circuit board including the battery (Fig. 26).
7 Detach the battery from the printed circuit board (Fig. 27). You can now dispose of the rechargeable battery.

Recycling

- This symbol means that electrical products and batteries shall not be disposed of with normal household waste (Fig. 28).
- Follow your country's rules for the separate collection of electrical products and batteries.