


## Mount it

Ask a friend to help out. An extra hand to hold the unit makes mounting easier and quicker.

### A

- Cut the template to fit inside the cabinet.
- Align the template border marked "FRONT" along the front edge of your cabinet.
- Use adhesive tape to fix the template.
- Drill 1/4 inch holes, as marked **X** on the template.
- Remove the template when you finish drilling.

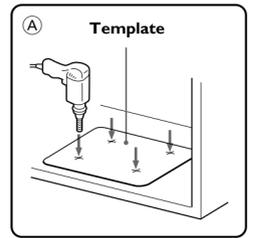

### Tip


- Clean the bottom of the cabinet surface and also empty your cabinet before mounting.
- Place the unit in a clean, safe place when drilling to avoid wood shavings dropping into the ventilation slots.
- Use a nail to start each drill hole.
- Drill from the bottom upwards if you do not have enough room inside the cabinet.
- Hold your drill firmly at 90° with the cabinet bottom and drill holes at low speed.
- Clear wood shavings.

### B

#### Using the spacers



On the spacers, there are 4 pairs of notch length options. Depending on the thickness of your cabinet bottom (with/ without an overhang), these notch lengths correspond to the 4 notch height in the space holders, and allow you to adjust to the best height to help you mount the unit.

- Measure the height of the cabinet bottom and/overhang.
- Turn the spacer counterclockwise to determine which of the 4 heights is most suitable: **Low** • **High**. Align to the arrow indication.
- Insert the spacers accordingly.

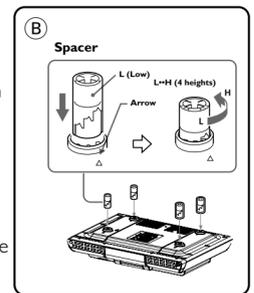

### C

- **Manually** fasten the 4 screws down into the spacer holder holes to mount your set. Start screwing at opposite corners of the unit for better support.

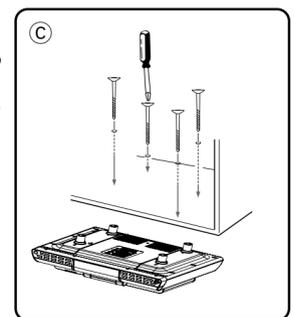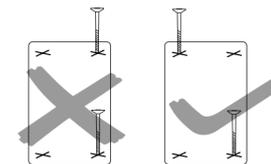

### Tip

- ▲ To prevent damage to your set, do not use an electric drill to secure screws when mounting!
- If the overhang is more than 1 1/4 inch, use longer screws (not included).

