
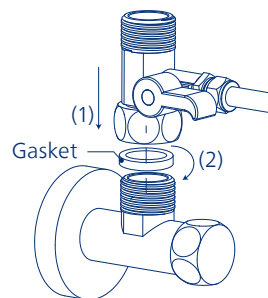




Step 1: Install the three-way ball valve

- Insert the nut onto the 3/8" PE pipe and insert the pipe into the convex connector.
- Install the three-way ball valve on the cold water valve.


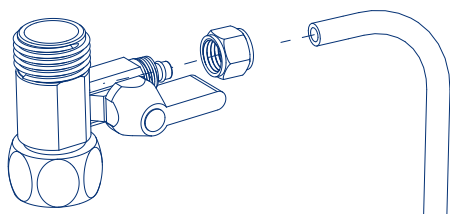


Step 2: Install the faucet

- A 29mm faucet hole is required.

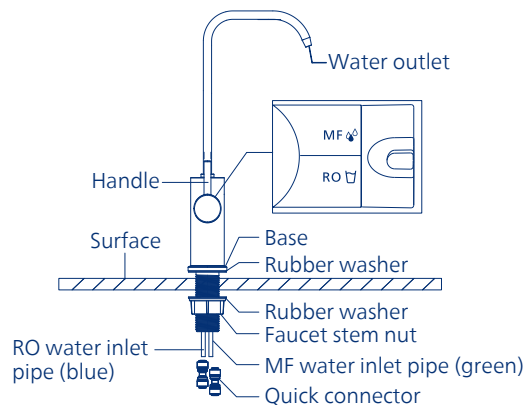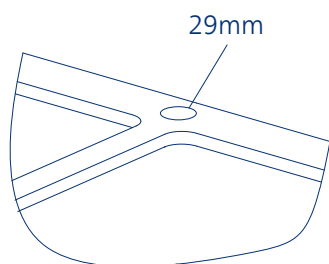

Step 3: Install the main unit

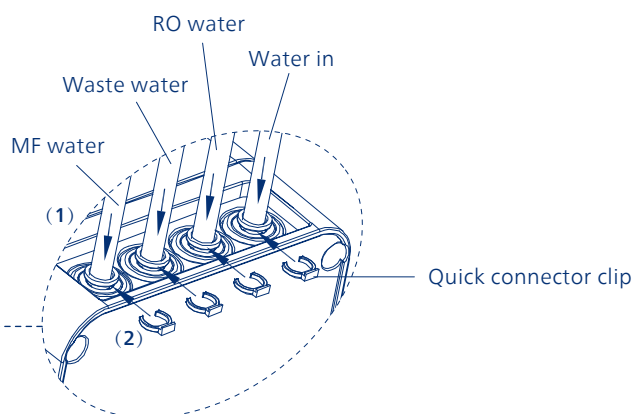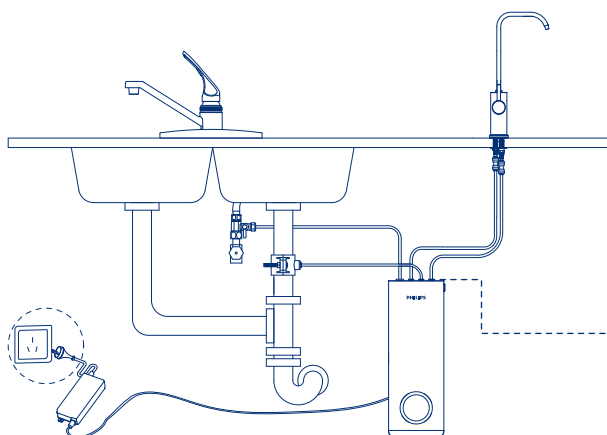

Step 4: Before the first-time use

After the automatic flush is completed, we recommend performing a manual flushing. The specific steps are as follows:

- Turn on the MF water and let it run for 15 minutes.
- Return the tap handle to the middle position and wait for 10 seconds.
- Turn on the RO water and let it run for another 20 minutes.

