


Quick start guide

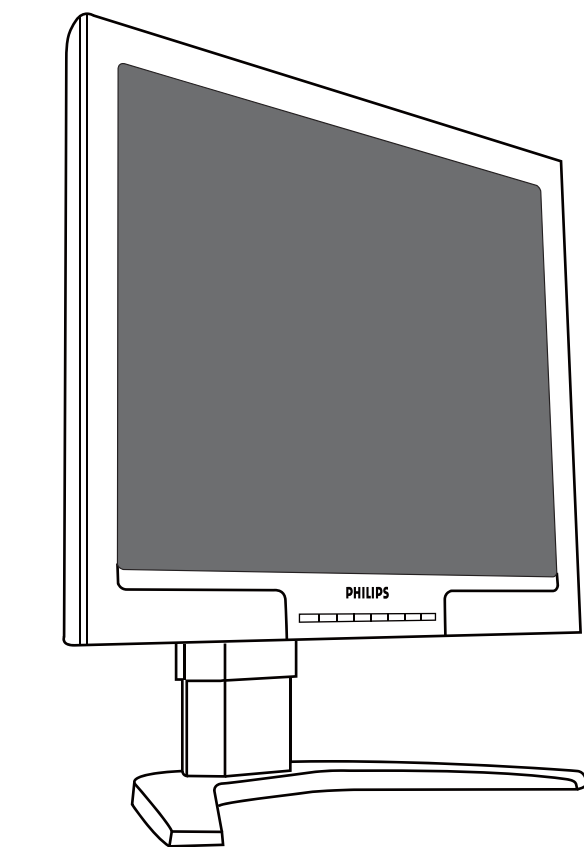

Display design may differ from that illustrated


PHILIPS

L25V2 551 B01E

Specifications are subject to change without notice.
© 2006 Koninklijke Philips Electronics N.V. All rights reserved.
PHILIPS


1 Connectivity

A Monitor Connections

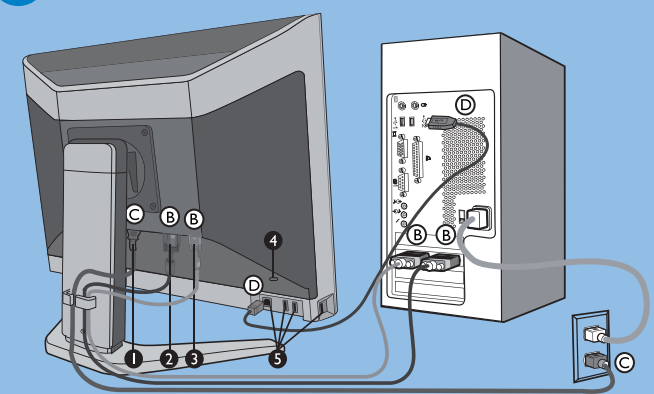


- AC power input
- DVI-I input
- VGA input
- Kensington anti-theft lock
- USB upstream and downstream

B VGA

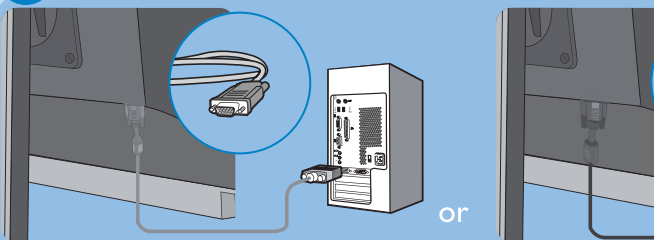


or

DVI

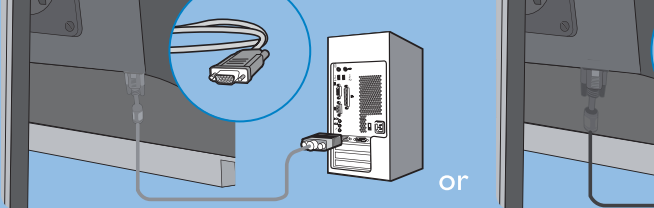


For best performance, use your DVI-I input and ensure that your display settings are set at 1600 x 1200 @60Hz

C Power

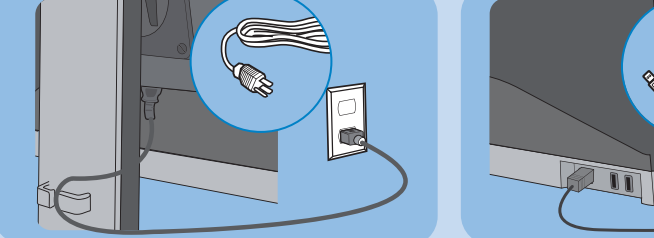


D USB

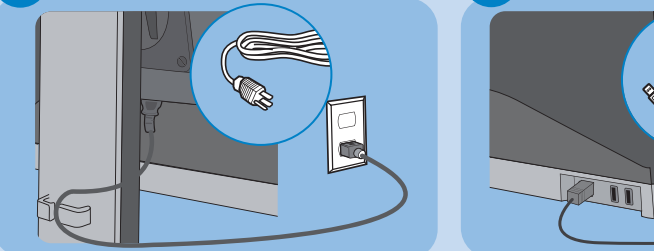


2 Installation

A Base install to Monitor

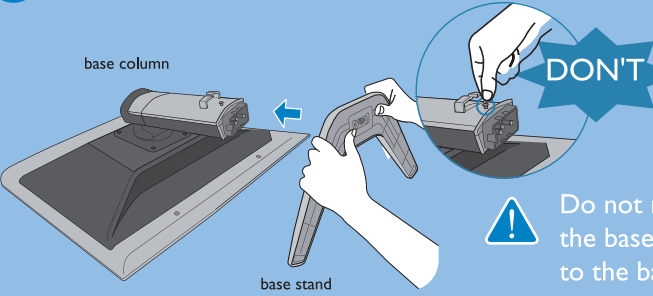

Place the monitor face down on a smooth surface taking care to avoid scratching or damaging the screen.


B Attach stand

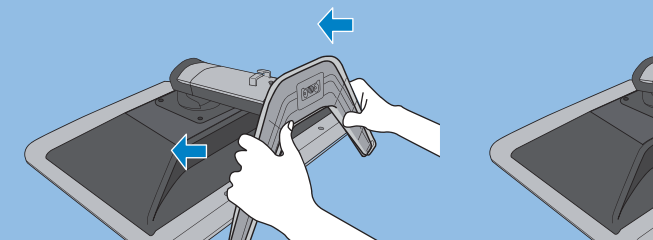


Hold the monitor base with both hands and firmly fix the base stand into four-pronged base attachments

Fastening base stand with the monitor

Warning

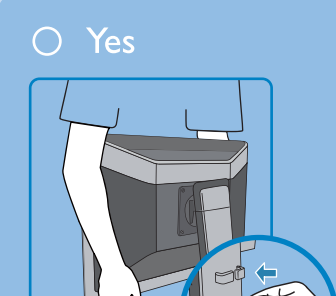









Insert the pin before lifting Monitor

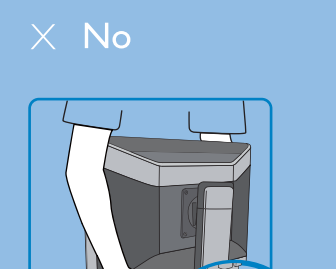


Base stand may eject without pin

- ▲ Please follow the instruction on the above illustrations, before lifting your monitor. Not following the recommended way may cause injury
- ▲ Using two hands to lift your monitor is strongly recommended


What's in the box

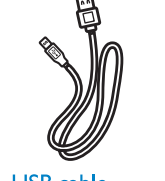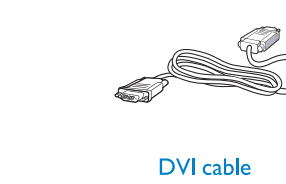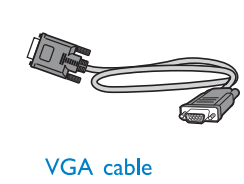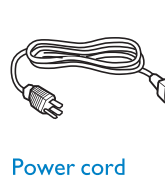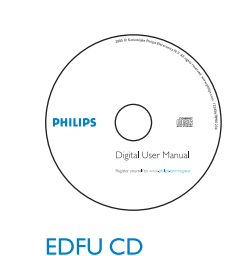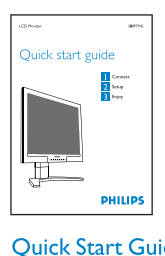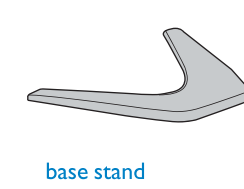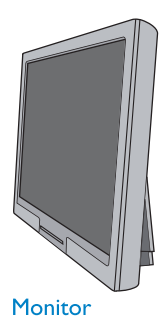

D Portrait display

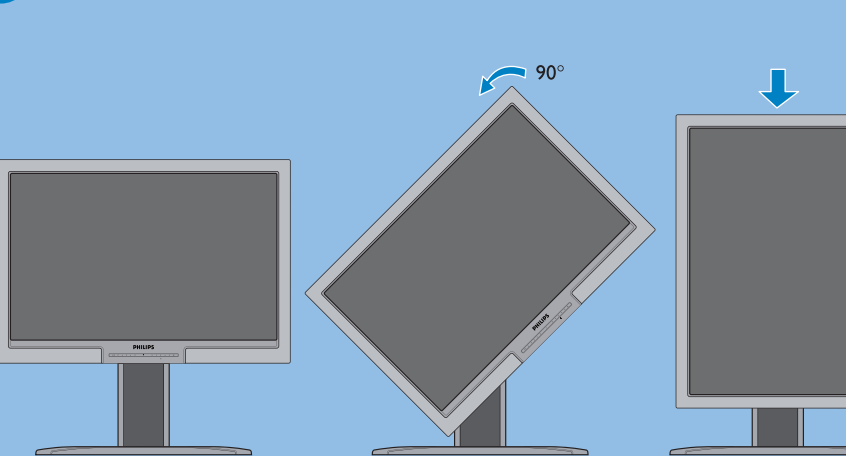


E Quick reference for control buttons

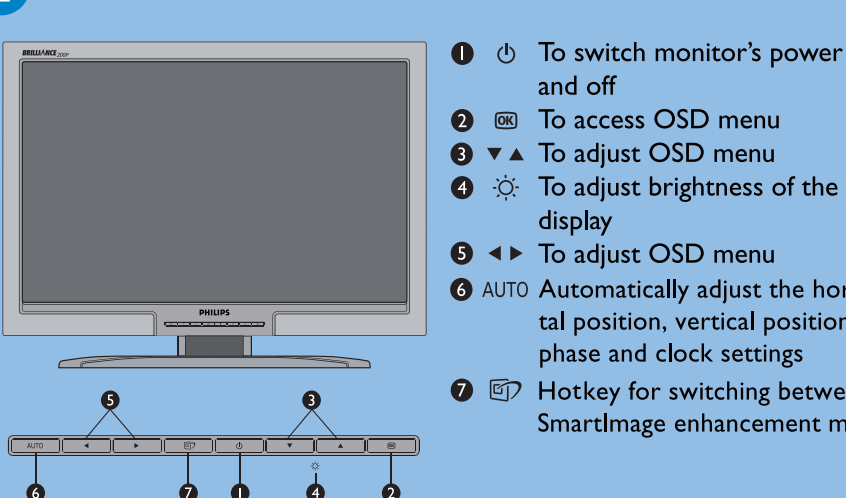


- 1. To switch monitor's power on and off
- 2. To access OSD menu
- 3. To adjust OSD menu
- 4. To adjust brightness of the display
- 5. To adjust OSD menu
- 6. AUTO Automatically adjust the horizontal position, vertical position, phase and clock settings
- 7. Hotkey for switching between SmartImage enhancement modes

Artwork: 200P7MG Quick Start Guide
Extend: 4pp + 4pp
Size: Open: 594W x 210Hmm Close: 148.5W x 210H (mm)
Material: 100gsm White, woodfree coated
Printing: Both side printing - 2C x 2C - Pantone 3005C + Black
Finishing: Folded sheet
Date prepared: 04 May, 2006

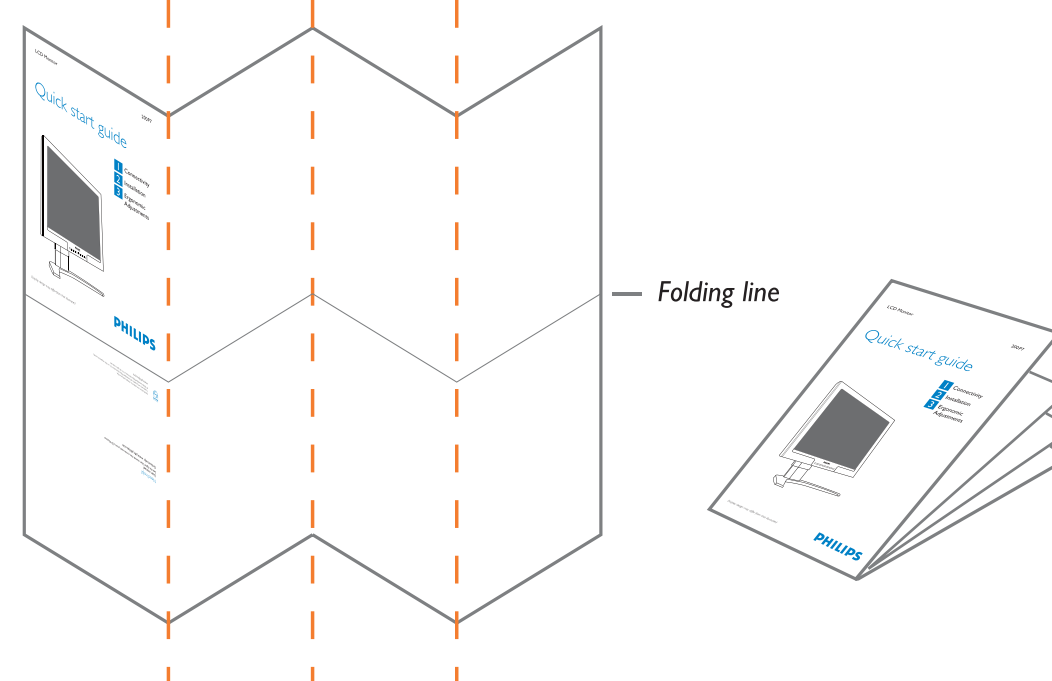Moniteur LCD / Monitor LCD / LCD-Monitor
Monitor LCD / LCD监视器 / LCD 显示器

Quick start guide


Guide de démarrage rapide / Guía rápida / Kurzanleitung / Guida rapida / 快速入门指南 / 快速入門指南

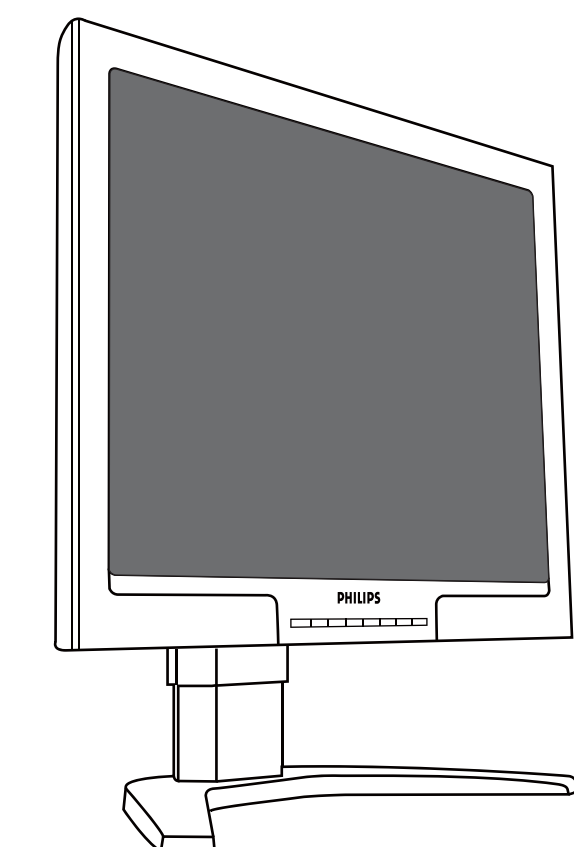Illustration not contractual
El diseño del reproduutor puede diferir con respecto al de la ilustración
Das Display-Design kann von der Abbildung abweichen
La visualizzazione può differire da quella presente nella figura
显示器设计可能与插图有所不同 顯示器插圖僅供參考


PHILIPS

1 Connectivité / Conectividad / Verbindungsfähigkeit / Connettività / 连接性 / 連接

A Connexions du moniteur / Conexiones de monitor / Monitoranschlüsse / Connessioni del monitor / 监视器连接 / 顯示器連接

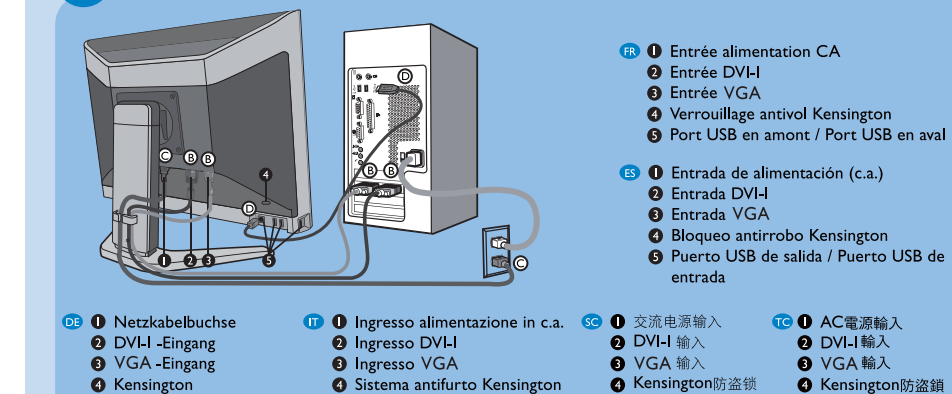


B VGA

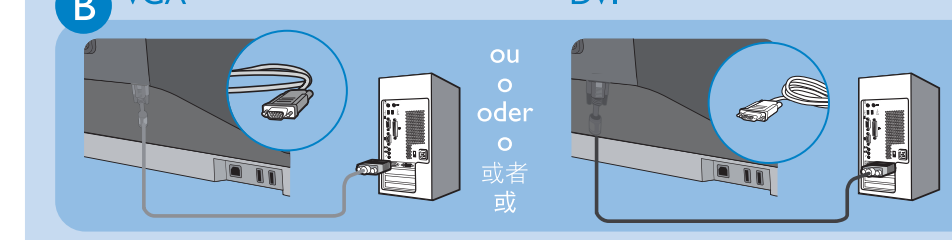


For best performance, use your DVI-I input and ensure that your display settings are set at 1600 x 1200 @60Hz

C Power

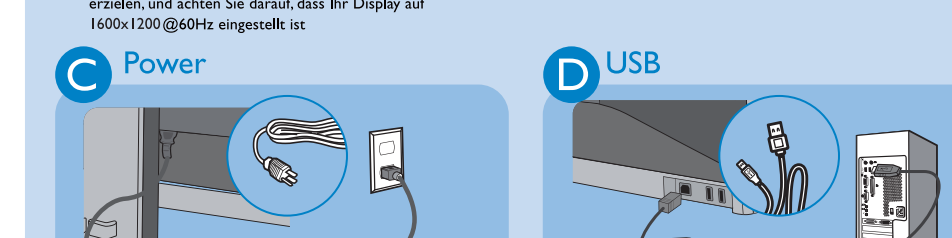


D USB

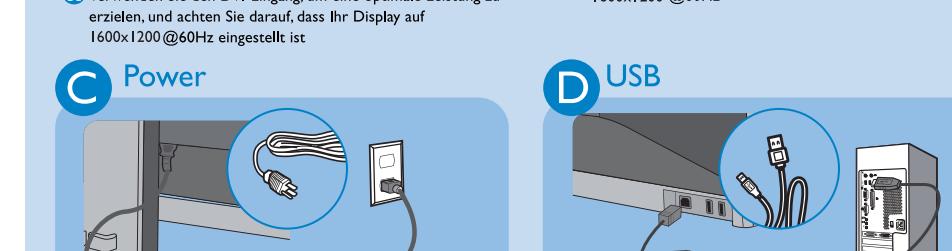

2 Installation / Instalación / Installation / Installazione / 安裝 / 安裝

A Pour installer la base / Per installare la base / Um den Monitorfuß zu montieren / Para instalar la base / 如何安裝底座 / 安裝底座步驟

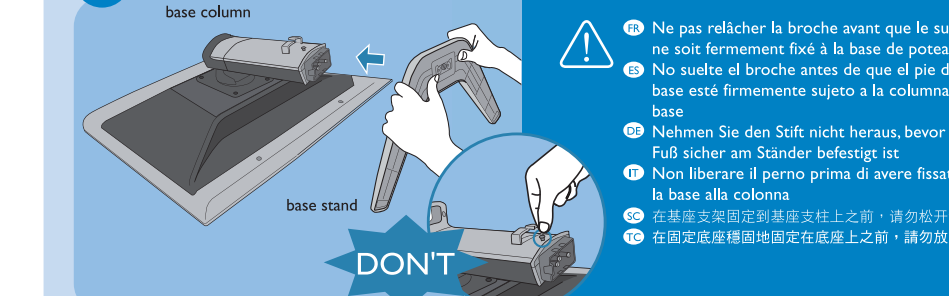

Place the monitor face down on a smooth surface taking care to avoid scratching or damaging the screen.


B fixer le support / conectar soporte / Ständer anbringen / attacco supporto / 連接支架 / 連接架




Hold the monitor base with both hands and firmly fix the base stand into four-pronged base attachments

Fastening base stand with the monitor

Warning

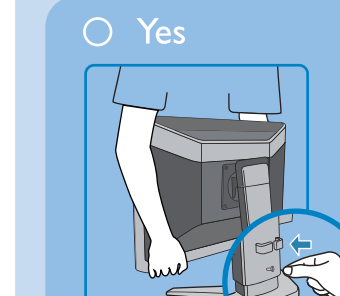

Insert the pin before lifting Monitor

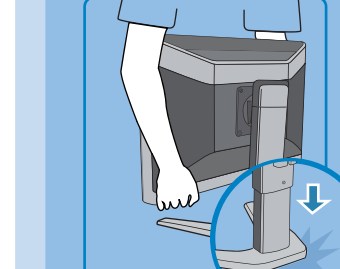


Base stand may eject without pin


- ▲ Please follow the instruction on the above illustrations, before lifting your monitor. Not following the recommended way may cause injury
- ▲ Using two hands to lift your monitor is strongly recommended

3 Réglages ergonomiques / Ajustes ergonómicos / Ergonomische Einstellmöglichkeiten / Regolazioni ergonomiche / 人体工学调整 / 人體工學調整


A Réglage de l'inclinaison / Inclinação / Kippen / Inclinazione / 倾斜 / 傾斜

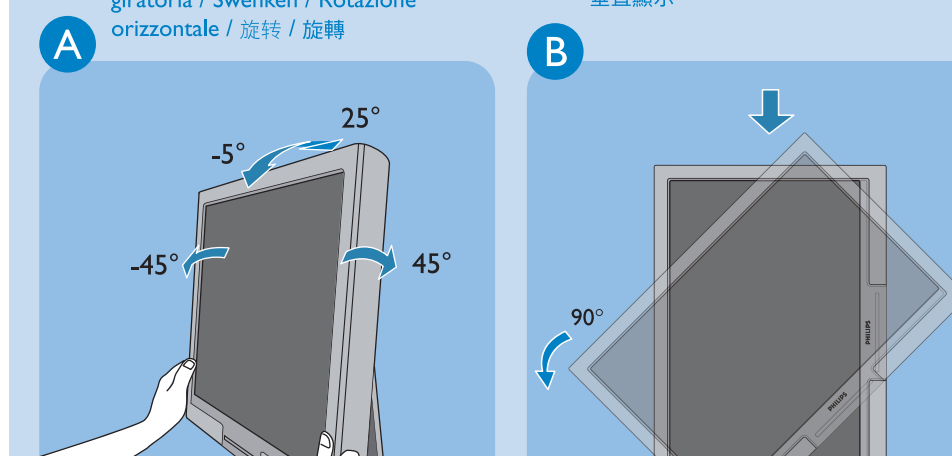


B Affichage format portrait / Posición vertical / Hochformatdarstellung / Display verticale/altezza / 垂直显示 / 垂直顯示

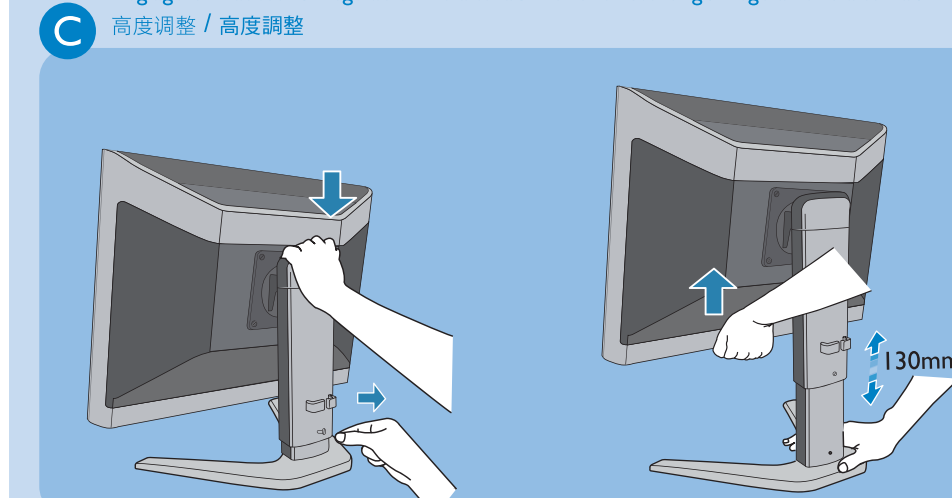





C Réglage en hauteur / Regulación de altura / Höheneinstellung / Regolazione altezza / 高度调整 / 高度調整

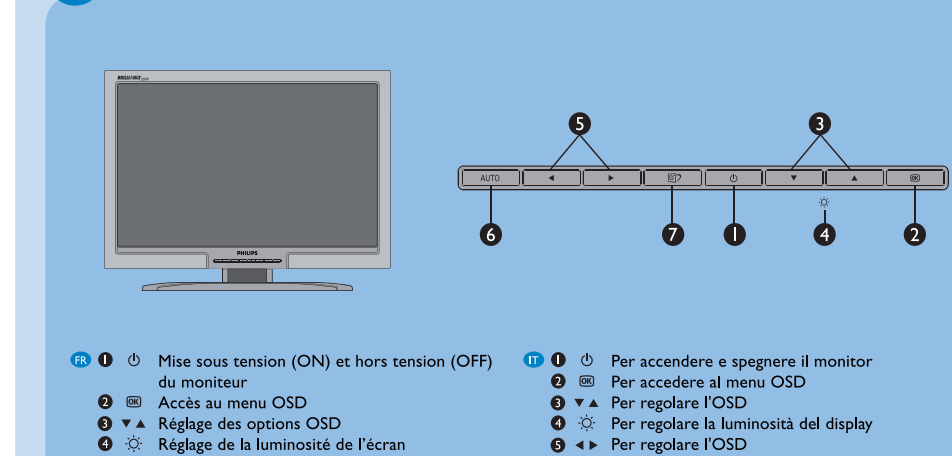

D Référence rapide pour les boutons de contrôle / Guida Rápida para los botones de control / Kurzanleitung für Bedientasten / Referimenti rapidi per i tasti di controllo / 控制按钮简介 / 快速参考控制按钮

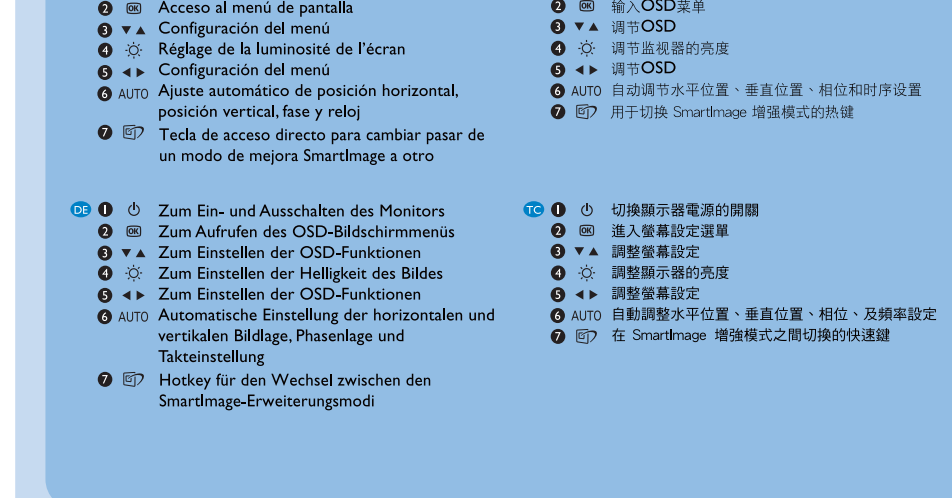

Contenu de la boîte / Contenido del embalaje / Lieferumfang / Contenuto della confezione / 包装盒内的物品清单 / 包裝盒內物品清單

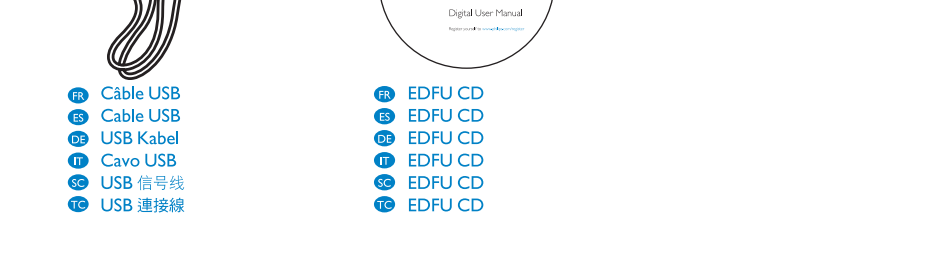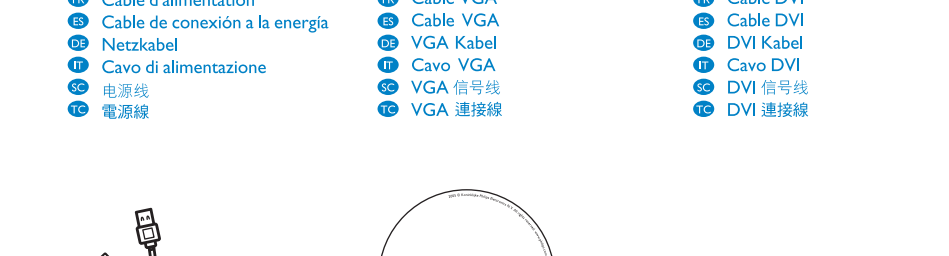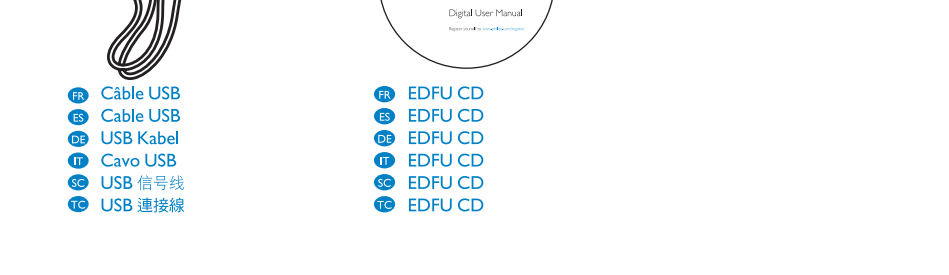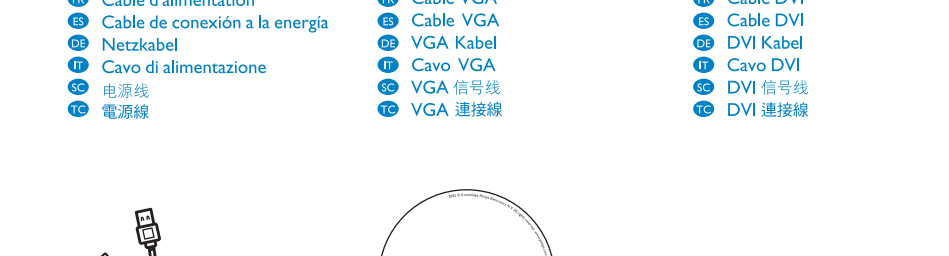

Manuel utilisateur
Voir le manuel utilisateur (CD-ROM) fourni avec le câble photo
Aide en ligne: www.philips.com

Manuel de uso
Consulte el manual de uso digital suministrado con el reproduutor
Ayuda en línea: www.philips.com

Benutzen Sie Hilfe!
Benutzen Sie Hilfe!
Sehen Sie in dem digitalen Benutzerhandbuch nach, das mit dem
Fernbediener geliefert wurde.
Online-Hilfe: www.philips.com

H7200PHQ2

Specifications are subject to change without notice.
Trademarks are property of Koninklijke Philips Electronics N.V. or their respective owners.
© 2006 Koninklijke Philips Electronics N.V. All rights reserved.
www.philips.com