



Philips
Steam floor cleaner

1300W

Extra flat nozzle
2 microfiber pads

FC7025/71

Truly clean floors with the power of steam

Triangular, flat nozzle for best cleaning results

Truly clean floors with the power of steam. SteamCleaner Active removes dust and dirt for hygienic cleaning results on all hard floors. Its triangular extra flat nozzle reach even in hard to reach places like corners or alongside plinths.

Hygienic cleaning results

- Steam kills up to 99.9% of bacteria and germs
- 1300W for powerful steam and fast heat up
- Steam dissolves dirt, dust and stains

100% chemical free cleaning

- Suitable for tap water
- No detergent needed, no residues left on surfaces
- 100% chemical free cleaning

Extra flat nozzle to reach everywhere

- Flat triangular nozzle for best reach

Easy to use and efficient

- Self standing
- Steam function stops when you pause
- 2 Microfiber pads included

PHILIPS

Highlights

Remove dirt easily

Dust and dirt is easily removed by SteamCleaner Active as steam dissolves and the microfiber pad lifts and traps dirt.

1300 W for powerful steam

1300 W

1300 W for a fast heat-up time. SteamCleaner Active is ready to use in less than 30 sec. The LED indication light turns from white to blue when Steam Plus is ready to steam.

Steam kills bacteria and germs

**Kills up to
99.9%
of bacteria**

Enjoy the most hygienic steam cleaning results with Philips SteamCleaner Active. Philips SteamCleaner Active kills up to 99.9% of germs and bacteria. Sanitize all floors without chemicals and only the use of water.

100% chemical free cleaning



SteamCleaner Active works with water only. It does not leave any kind of chemical residues on your floor.

Suitable for tap water




SteamCleaner Active is specially developed to clean using tap water. Its Active Calc Filter decalcifies water automatically. We advise to replace the Active Calc Filter at least every 6 months to prevent calcification and enjoy great performance over lifetime.

No detergent needed



No detergent needed, no residues left on surfaces

Flat triangular nozzle

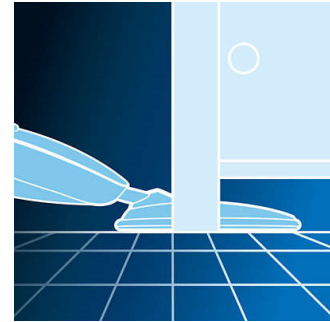

Its triangular extra flat nozzle reach even in hard to reach places like corners or alongside plinths. Multiple steam holes spread the steam evenly.

Washable microfiber pads



2 washable and durable microfiber pads are included. The soft microfiber material gently loosens, lifts, and absorbs dust and dirt. Removing dirt effectively and gently. The microfiber pads are machine-washable and easy to attach and remove.

Self standing

Convenient in use and efficient in storage.

Specifications

Nozzles and accessories

- Accessories included: 2 pads and 1 carpet glider
- Cleaning: Washable microfiber pad
- Steam nozzle: Carpet glider

Steam Management

- Steam temp. at nozzle: >100 °C
- Heating-up time: <30 s
- Watertank size: 450 ml
- Active calc filter

Design

- Color: Deep Turquoise

Weight and dimensions

- Dimensions microfiber pad: 27x11 cm
- Dimensions nozzle: 210 x 230 cm
- Weight (kg): <3 kg

Performance

- Input power (IEC): 1300 W

Usability

- Cord length: 6 m
- Removable stick assembly: Stick in / Stick Out
- Stand by mode: Auto steam shut-off
- Cord storage: On stick
- Non-Adjustable Stick: 100-120 cm



Issue date 2023-08-19

Version: 1.1.1

EAN: 87 10103 66477 2

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com