

Quick start guide




What's in the box

PHILIP

0

ō

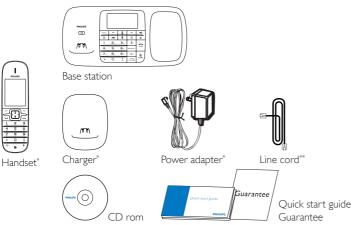

Note


- In multi-handset packs, there are additional handsets. chargers and power adapters.
- ** In some countries, you have to connect the line adapter to the line cord, then plug the line cord to the telephone socket.

Caution

• Use only the supplied batteries and power adapter.




Connect the base station and charger

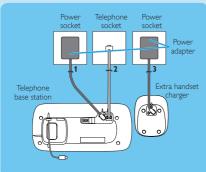

- 1 Connect each end of the power adapter to:
 - the DC input jack at the bottom of the base station;
 - the power socket on the wall.
- 2 Connect each end of the line cord to:
 - the telephone socket at the bottom of the base station;
 - the telephone socket on the wall.
- **3** For multi-handset version, connect each end of the power adapter to:
 - the DC input jack at the bottom of the extra handset charger.
 - the power socket on the wall.


Note Charge the batteries for 8 hours before first use.

Configure your phone

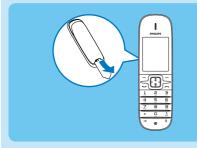

- 1 The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging.
- **2** When using your phone for the first time, you see a welcome message (country dependent).
- 3 Select your country, then press [OK] to confirm.
- 4 Set the date and time.
 - If the time is in 12-hour format, press * key to select **[AM]** or **[PM]**.

Charge your phone

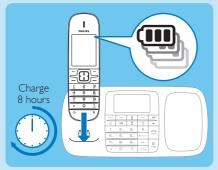

Place the handset on the base station to charge the handset. When the handset is placed correctly on the base station, you hear a docking sound.

➡ The handset starts charging.

Note Charge the batteries for 8 hours before first use.

Check the battery level




When the handset is off the base station/charger; the bars indicate the battery level (full, medium and low). When the handset is on the base station/charger; the bars flash until charging completes.



The empty battery icon flashes and you hear an alert tone. The battery is low and needs recharging.

Charge your mobile phone

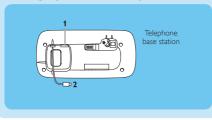

- 1 For iPhone users, connect the plug of your USB charging cable (not supplied) to the USB socket at the bottom of SE888.
- **2** For mobile phones with micro USB charging, connect the micro USB cable plug to the micro USB socket of the mobile phone.



Pair SE888 with your mobile phones

Make sure the Bluetooth function of the mobile phones is activated and in searching status. Then you can do the pairing in this way:

- 1 On the base station, press **MENU**.
- 2 Select [Bluetooth] > [Find Me].
- **3** Place the mobile phone close to the base station, then press **[OK]** to confirm.
- 4 On the mobile phone, select **SE888** and connect.
- **5** Enter the PIN code (0000) on the mobile phone if necessary.
 - When SE888 and the mobile phone are paired, ≱₁₂ or ≱₁₂ is displayed on the screen of the handset and base station.

Note

- When the Bluetooth device list is full, remove some mobile phone names before pairing can start.
- If the name of SE888 exists in your mobile phone, you have to remove it from your mobile phone. Then you can do the pairing again.

Тір

For PC pairing and PC phonebook download, install the PC software '**ThinkLink**' saved in the cd rom or at http://www.philips.com/support



Call

Quick call from land line

Press \smile / \triangleleft) on the handset or from on the base station and dial the phone number.

Dial before you call

- 1 Dial the phone number on the handset or base station.
- 2 Press (1) to select the land line or Bluetooth line (1/1/2) from which you want to make an outgoing call.
- 3 Then, you can either:
 - press → /
 /
 > on the handset; or
 - press for end on the base station and select a line or mobile phone to dial out the call.

Note Make sure that the Line settings are set to [Home] for land line or [Mobile 1]/[Mobile 2] for Bluetooth line. For information, see Line settings in the Phone settings chapter in the user manual.

Tip If you select [Auto] on the handset, the idle line is pre-selected for an outgoing call, with [Home] as the highest priority. Then [Mobile 1] and [Mobile 2]. If you select [Manual], select an icon among these three options.

Answer a call

- When there is an incoming call from the land line, press
 ✓ / ⊲) on the handset or the base station.
- When there is an incoming call from the Bluetooth line, press → /
 /
) on the handset or
 Builting on the base station.
- When there are incoming calls from the land line and Bluetooth line at the same time, press () on the handset/base station to select a call, then,
 - on the handset, press → / <>
 - on the base station, press for brick up one of the calls.

End a call

- Place the handset to the base station.

Adjust the volume during a call

Press $\overline{\mathbf{a}}/\overline{\mathbf{b}}$ on the handset or \mathbf{a}) / \mathbf{a} on the base station to change the volume during a call.

Add a contact in the phonebook

- 1 Press 🕫 on the handset or base station.
- 2 Select [Option] > [Add new], then press [OK] to confirm.
- 3 Enter the name then press [OK] to confirm.
- 4 Enter the number, then press [Save] to confirm.

Record an announcement

- 1 Press [Menu]
- 2 Select **co** > **[Announcement]**, then press **[OK]** to confirm.
- 3 Select **[Answer & rec.]** or **[Answer only]**, then press **[OK]** to confirm.
- 4 Select [Record new], then press [OK] to confirm.
- 5 Start recording close to the microphone after the beep.
- 6 Press [OK] to stop recording.
 - → You can listen to the newly recorded announcement on the handset.

Listen to messages recorded on the answering machine



Switch on/off the answering machine: Press ∪.
 Start/Stop listening to the recorded messages: Press ▶.
 Adjust the volume: Press ◆. / ◆.

🖲 Delete the current message: Press 🔂

Note For more information, see the Telephone answering machine section in the user manual.

Welcome to Philips

Register your product at www.philips.com/welcome

Need help?

User manual

Refer to the user manual that came with your new phone.

Online help

www.philips.com/support



Reproduction in whole or in part is prohibited without the written consent of the copyright owner. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. © 2011 Koninklijke Philips Electronics N.V. All rights reserved.



QSG_SE888_EN_V1.3 WK11285