Always there to help you

Register your product and get support at www.philips.com/welcome



BT2500



User manual



Contents

1	Safety	2
2	Your Portable Speaker	3
	Introduction	3 3 3
	What's in the box	3
3	Get started	4
	Charge the built-in battery	4
	Select a source or turn off	4
4	Use Bluetooth devices	5
	Connect a device	5 5 5
	Play audio via Bluetooth	
	Make a call	6
5	Listen to an external device	7
6	Adjust volume	8
7	Product information	9
	General information	9
	Bluetooth	9
	Amplifier	9
8	Troubleshooting	10
	General	10
	About Bluetooth device	10
9	Notice	11
	Disposal of your old product and	
	batteries	11
	Trademark notice	11
	Copyright	11

1 Safety


- Do not use this apparatus near water.
- Do not place near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- The product shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the product (e.g. liquid filled objects, lighted candles).
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Batteries contain chemical substances, so they should be disposed of properly.

!

Caution

- Removal of the built-in battery invalidates the warranty and may destroy the product.
- These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

Always bring your product to a professional to remove the built-in battery.



=

Note

 Rechargeable batteries have a limited number of charge cycles. Battery life and number of charge cycles vary by use and settings.

A

Warning

- Never remove the casing of this product.
- · Never lubricate any part of this product.
- · Never place this product on other electrical equipment.
- Keep this product away from direct sunlight, naked flames or heat.

2 Your Portable Speaker

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

With this speaker, you can

- listen to audio from an external device via Bluetooth connection.
- listen to audio from an external device through an audio input cable, and
- make phone calls.

What's in the box

Check and identify the contents of your package:

- Main unit
- USB cable
- Short user manual
- Safety sheet







3 Get started

Always follow the instructions in this chapter in sequence.


Charge the built-in battery

The speaker is powered by a built-in rechargeable battery.



Note

- · Before use, fully charge the built-in battery.
- · The micro USB socket is for charging only.

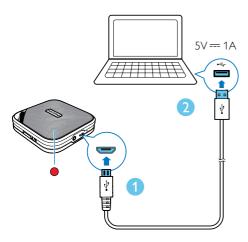

Connect the USB cable between

- the micro USB socket on the speaker, and
- a USB socket on your computer.

Battery indicator

The LED indicator on the top indicates the battery status.

Indicator	Battery	
Solid red	Under charging	
Off	Fully charged	
Blinking red in Bluetooth	Low power	
mode		

Select a source or turn off

Switch the slider to select a source or turn off this product.

- **3**: Listen to an external Bluetooth device through Bluetooth connection.
- **AUDIO IN**: Listen to an external device through an audio input cable.
- **OFF**:Turn off this product.

4 Use Bluetooth devices

With this speaker, you can listen to audio from a player and make a call through Bluetooth.



Note

- WOOX Innovations does not guarantee the compatibility with all Bluetooth devices.
- Before pairing a device with this product, read its user manual for Bluetooth compatibility. Make sure that the connected Bluetooth device supports the Advanced Audio Distribution Profile (A2DP) and the Audio Video Remote Control Profile (AVRCP).
- The product can memorize a maximum of 4 paired devices.
- Make sure that Bluetooth function is enabled on your device, and your device is set as visible to all other Bluetooth devices.
- The operational range between this product and a Bluetooth device is approximately 10 meters (30 feet).
- Any obstacle between this product and a Bluetooth device can reduce the operational range.
- Keep away from any other electronic device that may cause interference.

Connect a device



- 1 Switch the slider to **9**.
- On your device, search for Bluetooth devices.

- 3 In the device list, select PHILIPS BT2500.
 - If a message prompts for the permission for Bluetooth connection with PHILIPS BT2500, confirm it.
 - If a password is required, enter **0000** and then confirm.
 - → The speaker beeps when the Bluetooth connection is established.

Bluetooth indicator

The LED indicator on the top indicates the status of Bluetooth connection.

Indicator	Bluetooth connection
Blinking	Connecting or waiting for
blue	connection
Solid blue	Connected

Disconnect a device

- On your device, disable the Bluetooth connection with this product.
- Or, on this product, press and hold **C**PAIRING when it is not during a call.



Note

 Before connecting another Bluetooth device, disconnect the current device first.

Reconnect a device

- For a paired Bluetooth device on which the automatic reconnection is enabled, this product reconnects with it once it is detected.
- For a paired Bluetooth device that does not support the automatic reconnection, reconnect it with this product manually.

Play audio via Bluetooth

Play audio and control play on your Bluetooth device.



Note

 If there is an incoming call on the connected mobile phone, audio play pauses.

Make a call

Press to answer an incoming call. Press to end the current call. Press and hold to reject an incoming call. During a call, press and hold to transfer the phone call to your mobile. When there is another incoming call during a call, you can • press to end the current call and answer the another call. • press twice to reject the another call. • press and hold for two seconds

to hang on the current call and answer the another call.


5 Listen to an external device

You can also listen to an external audio device, for example, MP3 player, through this product.



Note

 Make sure that no device is streaming audio to the speaker via Bluetooth.

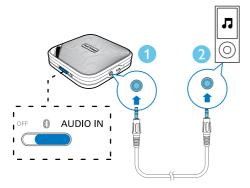

- 1 Switch the slider to AUDIO IN.
- 2 Connect an audio input cable with 3.5mm plug on both ends between
 - the AUDIO IN socket on this product, and
 - the headphone socket on the external device.
- Play audio on the external device (refer to its user manual).

6 Adjust volume

Rotate the volume knob to increase or decrease the volume.



7 Product information



• Product information is subject to change without prior notice.

General information

Power Supply (through	5V == 1 A
USB socket)	
Built-in Battery	Lithium battery (750
	mAh, 3.7 V)
Dimensions - Main Unit	
$(W \times H \times D)$	101 X 34 X 101 mm
Weight - Main Unit	0.22 kg

Bluetooth

Bluetooth specification	V3.0
Supported profiles	HFP, HSP, A2DP
Range	10 m (Free space)

Amplifier

Rated Output Power	3 W RMS
Signal to Noise Ratio	> 60 dBA
AUDIO IN	650 mV RMS,
	22 kOhm

8 Troubleshooting



Warning

· Never remove the casing of this product.

To keep the warranty valid, never try to repair the product yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www. philips.com/support). When you contact the Consumer Care, make sure that the product is nearby and the model number and serial number are available.

General

No power

Recharge your speaker.

No sound

- Adjust volume on this product.
- Adjust volume on the connected device.
- Make sure that your Bluetooth device is within the effective operational range.

No response from the speaker

Restart the speaker.

About Bluetooth device

The audio quality is poor after connection with a Bluetooth-enabled device.

 The Bluetooth reception is poor. Move the device closer to this product or remove any obstacle between them.

Cannot connect with the device.

- The Bluetooth function of the device is not enabled. Refer to the user manual of the device for how to enable the function.
- This product is already connected with another Bluetooth-enabled device.
 Disconnect that device and then try again.

The paired device connects and disconnects constantly.

- The Bluetooth reception is poor. Move the device closer to this product or remove any obstacle between them.
- For some devices, Bluetooth connection may be deactivated automatically as a power-saving feature. This does not indicate any malfunction of this product.

9 Notice

Any changes or modifications made to this device that are not expressly approved by WOOX Innovations may void the user's authority to operate the equipment.

Disposal of your old product and batteries

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health. Your product contains batteries, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Please visit www.recycle.philips.com for additional information on a recycling center in your area.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)
Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Trademark notice

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by WOOX Innovations is under license.

Copyright

2014 © WOOX Innovations Limited. All rights reserved.

Philips and the Philips' Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used by WOOX Innovations Limited under license from Koninklijke Philips N.V.' Specifications are subject to change without notice. WOOX reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.



Specifications are subject to change without notice.
2014 ©WOOX Innovations Limited.
All rights reserved.
Philips and the Philips' Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used by WOOX Innovations Limited under license from Koninklijke Philips N.V.

