

Register your product and get support at
www.philips.com / welcome



User Manual
MMS1400

PHILIPS

General Information

Safety Instructions

Please read carefully the Safety Mark on the Back side



This mark is intended to alert the users from the non isolated dangerous voltage within the product that may be of sufficient magnitude to constitute a risk of electric shock to persons



This mark is intended to alert the user for important operating and servicing instruction

Warnings

- Avoid sustained periods on high-volume use, and do not turn the volume to maximum level while using high output signal, such as Mobile Phone or DVD, etc., as this will cause distortion and may damage the loudspeaker cones.
- Please switch off the system from the wall socket, when not in use.
- Please unplug the system from the AC outlet when unused for a long time
- Do not open the cover or back panel to avoid electronic shock or any other accidents. No user-serviceable parts are inside.
- Only for indoor use.
- Plug the system to the AC outlet with the right voltage marked on the back panel of the Subwoofer.

Care and safety information

Avoid high temperatures, moisture, water and dust

- Apparatus should not be exposed to dripping or splashing of liquid.
- Do not place any sources of danger on the Subwoofer & Satellite (e.g. liquid filled objects, lighted candles).
- Do not install near heat sources.

Do not block any ventilation openings

- Place the apparatus in a location with adequate ventilation to prevent internal heat build up. Allow at least 100cm (4 inches) of free space all around the apparatus for adequate ventilation.
- At high volume the back cover of Subwoofer becomes hot. Do not touch it.

Care of the cabinet

- Use a soft cloth slightly moistened to clean the cabinet. Do not use a solution containing alcohol, spirits, ammonia or abrasives.


Accessories

	Qty.
1. 2 RCA to 3.5	1
2. User Manual	1
3. FM antenna wire	1

1


Connection

BACK PANEL

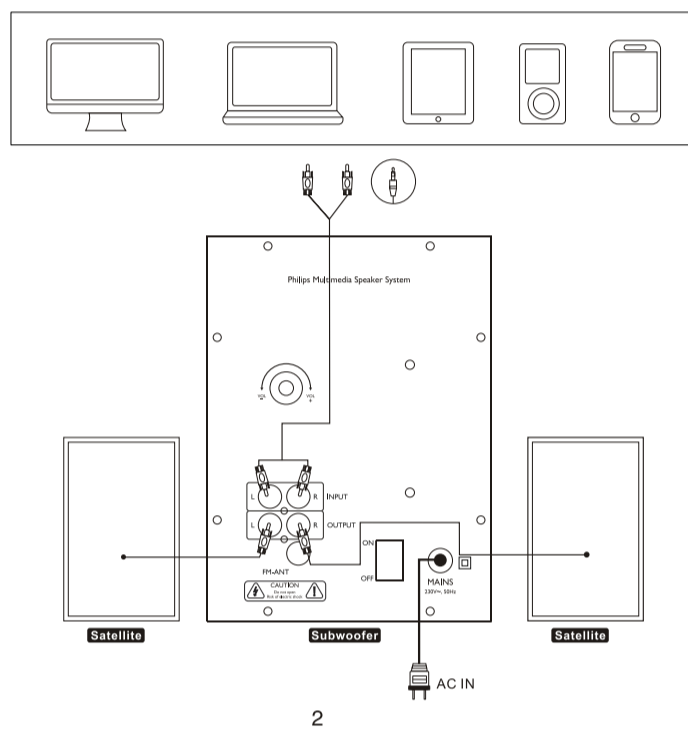

2

FRONT PANEL

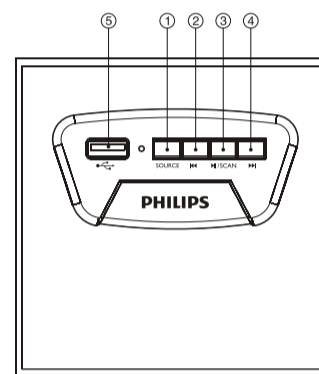

USB PORT / FM RADIO SPEAKER

1. SOURCE

To select the desired source AUX, USB and FM

2. </h4>

Previous track in USB or Previous stored station in FM and pressed for long time it will reduce volume.

3. /SCAN

Press for short time will pause the track from USB. Press for long time it works as scan in FM

4. </h4>

Next track in USB or Next stored station in FM and pressed for long time it will increase volume

5. </h4>

USB port

6. VOLUME +/-

Master volume control

3

Troubleshooting

WARNING

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock. If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy the problem by following hints mentioned in below table, Consult your dealer or PHILIPS APSC for help.

Problem	Solution
No power.	Check if the AC power cord is properly inserted into the AC mains socket.
No sound or distorted sound.	Adjust the volume. / Select the correct source to choose the equipment that you want to hear through the System.
Low hum or buzz sound.	Place the product as far away as possible from electrical devices that may be causing interference. / Check power supply voltage and consult electrician
The content of the USB flash drive cannot be read	The USB flash drive format is not compatible with the system. / Drive is formatted with a different file system which is not supported by this unit. (e.g. NTFS)
Slow operation of the USB Flash drive Cannot detect USB flash drive	Large file size of high memory USB flash drive takes longer time to read and play. Take out USB drive insert it again properly.
FM not properly tuned	Match with local frequency
FM reception not good	While listening radio turn off TV/DVD or other radiation source.

4

Warranty

This Philips 2.1 multimedia speakers system MMS1400 is covered under warranty against any defect arising out of faulty or defective material or workmanship for a period of 12 Months from the date of purchase.

Should a defect develop during the period of warranty, WOOX Innovations India Private Limited undertakes to repair the apparatus free of charge through an Authorised Philips service centre. If the purchaser shifts his residence to other town, the warranty will be valid at the nearest Authorised Philips service centre.

The Warranty is not valid in case :

- Proof of purchase is not accompanied with this warranty form;
- This warranty form is not completed immediately after purchase;
- The Apparatus is not used according to this manual;
- Defects are caused by improper or reckless use;
- Any repair work are done by person other than Authorised Philips service center;
- Any modification or alteration of any nature are made in the apparatus;
- The serial number is tampered;
- Defects due to causes beyond control like lightning, abnormal voltage, Acts of God or while in transit to the purchaser's residence;

Please fill the following for your reference and warranty validity:-

Serial No. _____ Bill No. _____

Date of Purchase: _____

Purchaser's Name: _____

Location & Tel No.: _____

Dealer's Name: _____

Location & Tel. No. _____

Dealer's Stamp & Signature: _____

WOOX Innovations India Private Limited, Building no. 9B,
9th Floor, DLF Cyber city, Sector 25, Gurgaon-122002, Haryana, India

5

Product Specifications*

Total System Power	9.6 W RMS	Speaker	2 Way, 2 Speakers
Satellite Power	2.7 W X 2 RMS	Speaker Size	3"
Subwoofer Power	4.2 W RMS	Impedance	4 Ohm
Separation	>35db	Frequency Range	150Hz to 20 KHz
SNR	>60db	Dimension	(WXHXD) 90x145x70
Audio Input Socket	RCA Type	Weight	0.2 Kg
Audio Output Socket	RCA Type	USB /SD	
Power Consumption	11W	Class Support	UMS (USB Mass Storage Class)
Subwoofer Speaker	1 Way	Capacity	upto 16 GB
Speaker Size	4"	Playability	MP3 Track
Impedance	4 Ohm		
Frequency Range	40 Hz to 150Hz		
Dimension	(WXHXD) 150x215x205		
Weight	1.4 Kg		

* Specification subject to change without prior notice. Measured under specific conditions.

Always there to help you
 Question? Contact Philips
 Visit us at www.india.philips.com
 Contact at: 1860 180 1111, 1800 102 2929
*Standard call rates apply
 Or customercare.india@philips.com

www.philips.com



6

7