

1 Switch **ON** your device.



2 Press and hold the device selection button (e.g. **TV**) for **5 seconds** until the red Setup light  blinks.



3 Look up the 4-digit code for your brand in the adjacent 'Shortlist of brands'.




Enter the 4-digit code using the digit buttons.



4 Press and hold the **POWER** button. Release it **immediately** as soon as the device switches off.

- This step normally takes between 5 and 60 seconds.

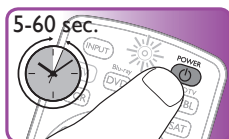

5 Switch **ON** the device. Try out the buttons you need for operating it.



If a button does not work as expected, **press and hold** that button. Release it **immediately** as soon as it works.

6 Press the device selection button **twice** to finish setup.



Press the appropriate device selection button to select the device you wish to operate.

For SRP2003WM: **TV**, **CBL** or **DVD**.
For SRP2006WM: **TV**, **DVD**, **DVR**, **CBL**, **VCR** or **SAT**.



Important

If you made a mistake:

- Press the device selection button **twice** to exit setup. The red Setup light  turns off.
- Restart from the beginning.

Shortlist of brands

Brand	4-digit code
BUSH	0445
DAEWOO	0692
FUNAI	1056
ILO	1341
INSIGNIA	1368
JVC	1464
LG	1628
NEC	1950
OLEVIA	2067
PANASONIC	2153
PHILIPS MAGNAVOX	3715
PHILIPS	2195
PIONEER	2212
RCA	2351
SAMSUNG	2448
SEARS	2514
SHARP	2550
SONY	2679
TOSHIBA	3021
VIZIO	3211
ZENITH	3356

- If your brand is missing in this shortlist, look at the complete BRAND LIST at the end of the user manual.



- Use '9999' as 4-digit code in case you cannot find your brand in the BRAND LIST in the user manual.



Note that '9999' may result in a long setup (up to 15 minutes).

© 2010 Koninklijke Philips Electronics N.V.

All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner. The information presented in this document does not form part of any quotation or contract. It is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication thereof does not convey nor imply any license under patent- or other industrial or intellectual property rights.

Document order number:
December 2010
www.philips.com

3139 235 5280 2 / SRC2063WM/17

RTP/RR/5110