

Quick Start Guide



- Step A **Connect**
- Step B **Setup**
- Step C **Enjoy**

What's in the Box?

You should find these items upon opening the box.

Table stand

Studs (x2) used to attach speakers to main unit

Smart remote control (with battery)



Wall mount bracket and screws (x4)

AV cable

Coaxial cable (orange)

SCART adaptor

User manual

Quick Start Guide

Step A Connect

Tips

- See the User Manual for how to mount the main unit and speakers onto wall.
- See “Connect AV devices” for more AV connection options.
- For connection and operation of your AV devices, see the respective user manuals.

1

Attach speakers to the main unit.

2

Slide the table stand onto the bottom of the main unit.

3





Place the main unit and speakers.

4

Connect AV devices

5

Connect power:

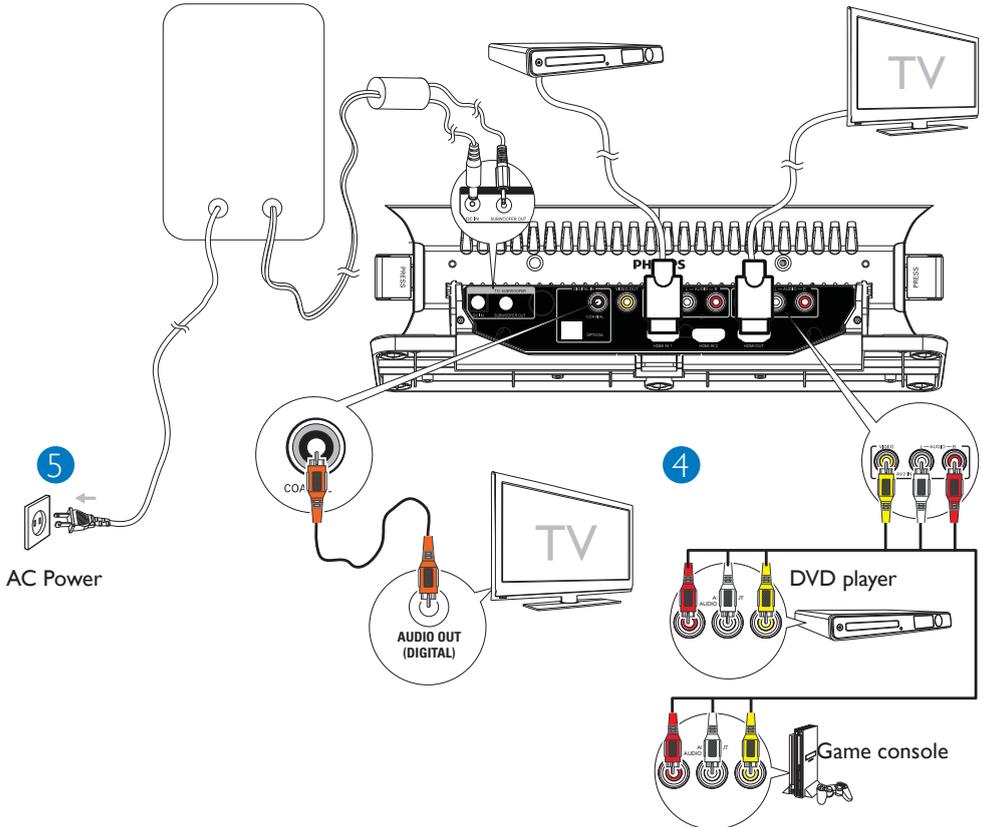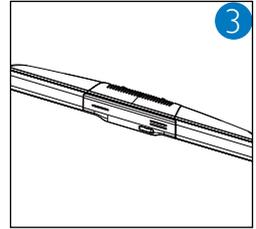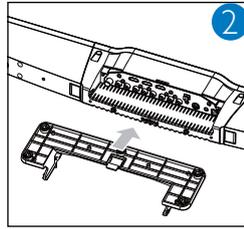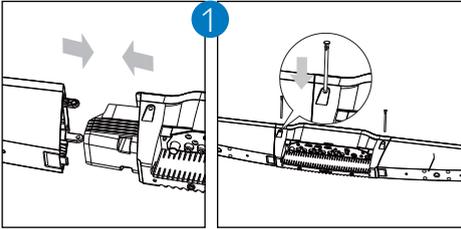

Step B Setup

Set clock

IMPORTANT!

– To set clock in the Eco Power Standby mode, first press and hold  for more than 2 seconds to switch to the standby mode.

1

In the standby mode, press and hold **CLOCK** to enter the clock setting mode.
→ **Clock** is displayed and the hour digits begin to blink.

2

Press **+VOL** - to set the hour.

3

Press **CLOCK** to confirm.
→ The minute digits begin to blink.

4

Press **+VOL** - to set the minute.

5

Press **CLOCK** to confirm the clock setting.

Step C Enjoy

Play from USB

1

Flip open the cover on the front panel.

2

Insert the USB plug of a USB device into the  socket.

3

Press **USB** to select the USB source.

4

Press **ALB/PRESET/▲▼** to select a folder.

5

Press **◀/▶** to select a file.

6

Press **▶||** to start play.

Step C Enjoy

Play connected AV devices

1

Press **AV**, **HDMI**, or **COAX/OPT** to select an AV source.

Listen to radio

1

Ensure that you have connected and fully extended the supplied FM antenna.

2

Press **RADIO**.


3

Press and hold **◀▶** for over 3 seconds.

→ The FM tuner tunes to a station with strong reception automatically.

4

Repeat steps 3 to find more stations.

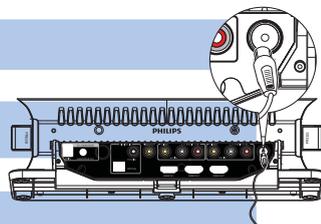

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.



© Royal Philips Consumer Lifestyle N.V.
2009

All rights reserved.

<http://www.philips.com>

