

Philips  
CD Soundmachine

• Pink

AZ202C



## Enjoy your music wherever you go

Enjoy music on the go. Stylish, portable and designed for ease of use, this Philips CD soundmachine's cool simplicity lets you enjoy your music wherever you are. Let great style and great sound bring the groove to your every move

### **Enjoy your music from different sources**

- Play CD, CD-R and CD-RW
- FM/MW tuner for radio enjoyment
- MP3 Link for portable music playback

### **Easy to use**

- CD Shuffle/Repeat for personalised music enjoyment
- 20-track CD programmable

### **Rich and clear sound**

- Dynamic Bass Boost for deep and dramatic sound

# PHILIPS

# Specifications

## Audio Playback

- Loader Type: Top
- Playback Media: CD, CD-R, CD-RW
- Disc Playback Modes: Fast Forward/Reverse, Next/Previous Track Search, Repeat Play, Shuffle Play
- Programmable Tracks: 20

## Tuner/Reception/Transmission

- Tuner Bands: FM, MW
- Antenna: FM Antenna

## Sound

- Output power (RMS): 2 x 1 W
- Sound Enhancement: Dynamic Bass Boost
- Sound System: Stereo
- Speaker diameter: 2.5"
- Volume Control: rotary

## Connectivity

- 3.5 mm stereo line in: (MP3 Link)

### Rewritable



## Power

- Mains power: 220 V - 240 V
- Battery type: LR14
- Battery voltage: 1.5 V
- Number of batteries: 6

## Accessories

- Included accessories: AC Power Cord, User Manual, Warranty certificate

## Dimensions

- Packaging dimensions (W x H x D): 324 x 284 x 139 mm
- Product dimensions (W x H x D): 297 x 112 x 264 mm
- Weight: 1.7 kg
- Weight incl. Packaging: 2.1 kg


# Highlights

## Dynamic Bass Boost



Dynamic Bass Boost maximises your music enjoyment by emphasising the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

## CD Shuffle/Repeat

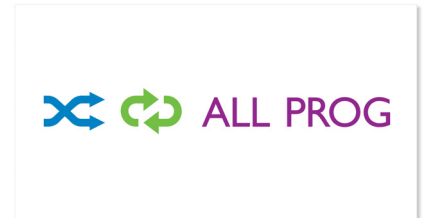

The "Shuffle/Repeat" function helps you to get rid of the boredom of hearing your music played in the same order all the time. After loading your favourite songs to the player, all you have to do is to select one of the modes - "Shuffle" or "Repeat" for your tunes to be played in different modes order. Enjoy the different and unique music experience every time you hook up to your player.

## MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favourite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player into the audio system.



Issue date 2013-05-10

Version: 1.0.3

12 NC: 8670 000 71967  
EAN: 87 12581 58251 7

© 2013 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)