



BTD2336




EN Short User Manual CN 简明用户手册

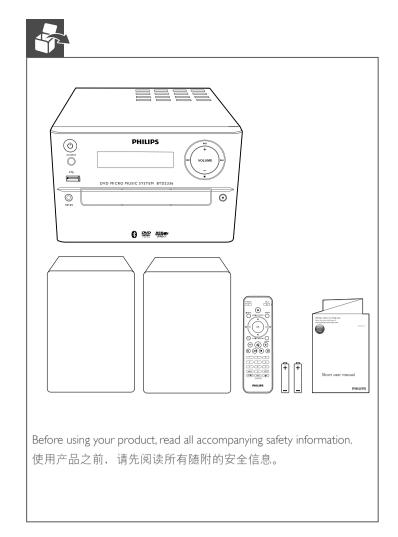


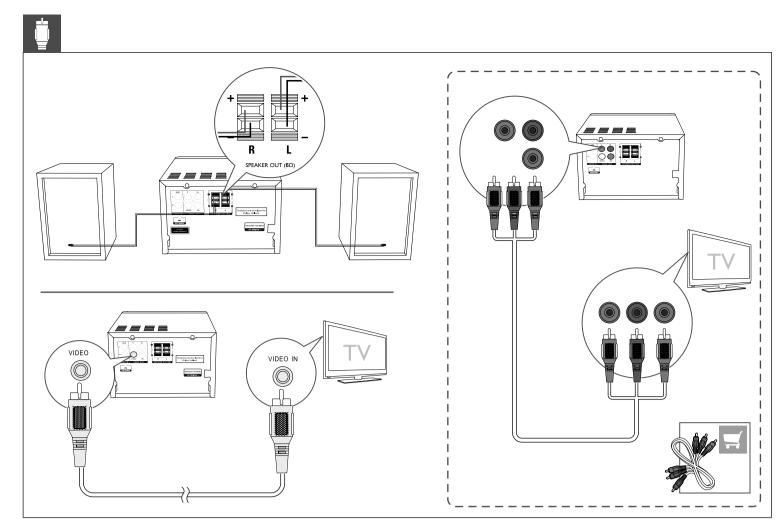



# **PHILIPS**



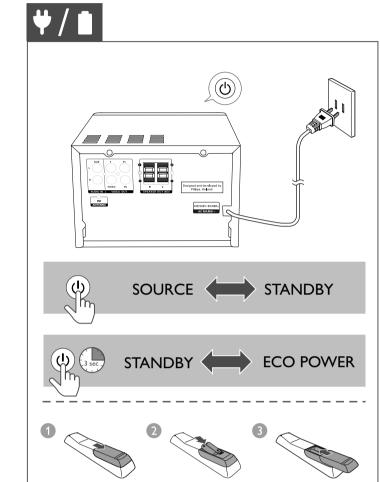

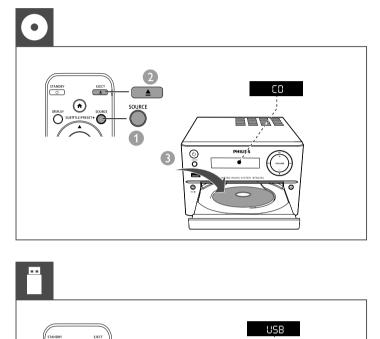

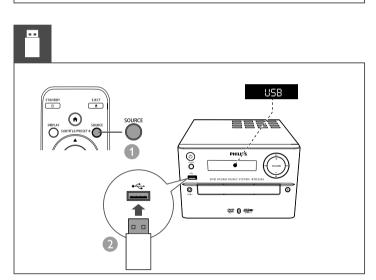


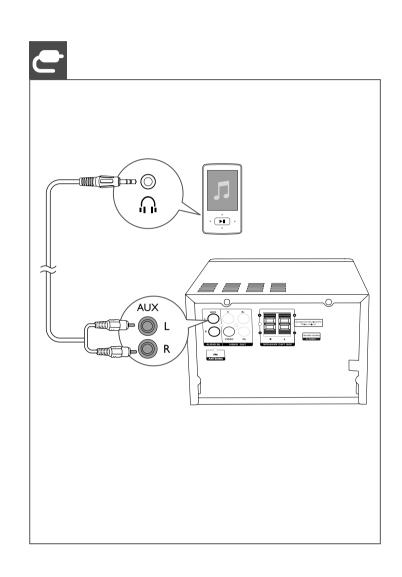






BTD2336\_93\_Short User Manual\_V1.0



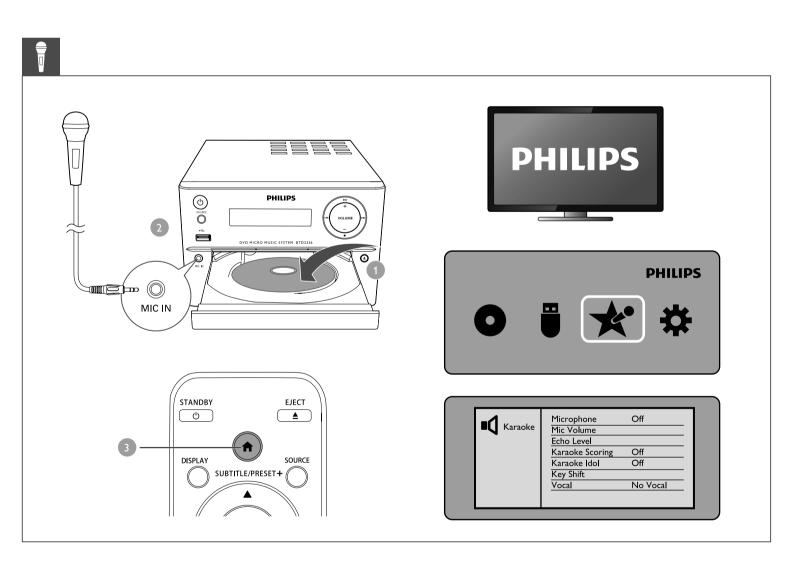


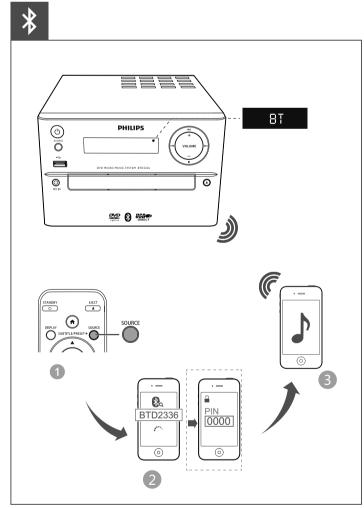


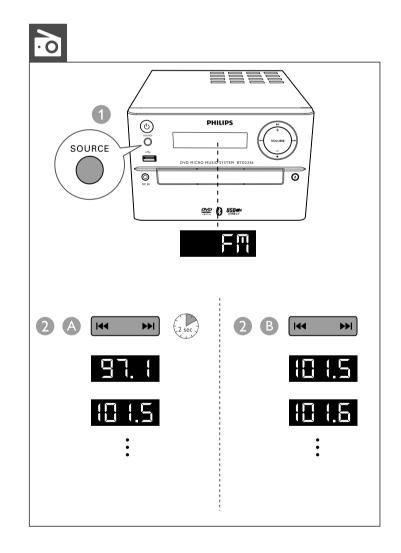


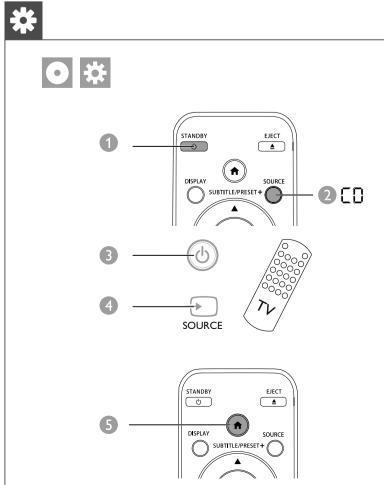





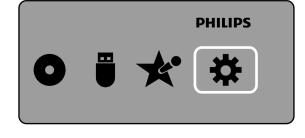

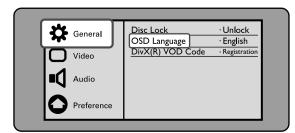

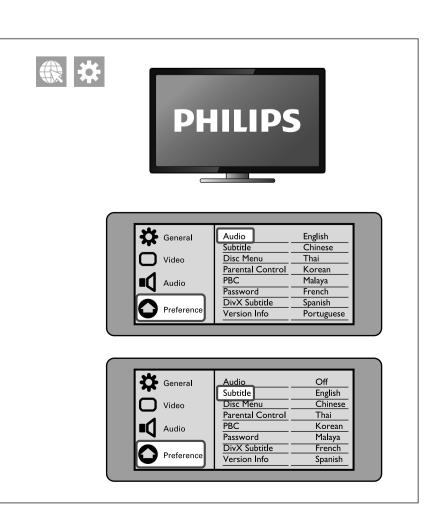

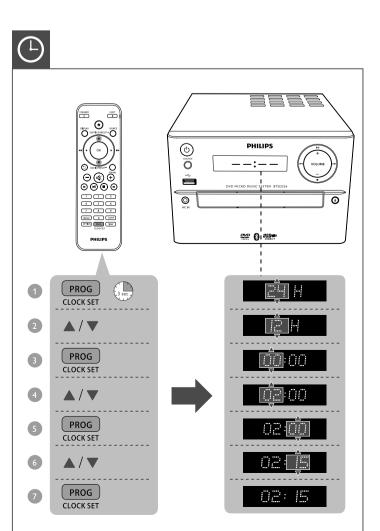

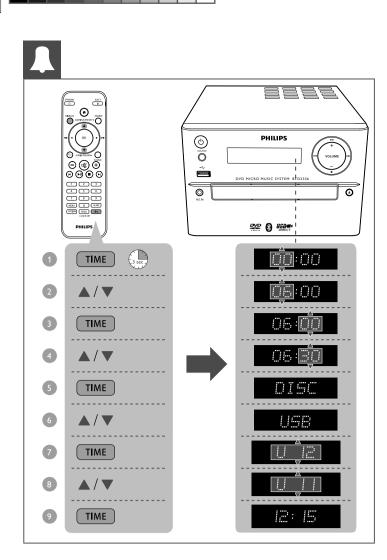





To download the full user manual, visit www.philips.com/support. 如需下载完整的用户手册,请前往www.philips.com/support.

### Supported disc formats

- Digital Video Discs (DVDs)
- Video CDs (VCDs)SuperVideo CDs (SVCDs)
- Digital Video Discs + Rewritable (DVD+RW) Compact Discs (CDs)Picture (Kodak, JPEG) files on CDR(W)
- DivX(R) disc on CD-R(W):
- DivX 3.11, 4.x and 5.x

# USB playability information

## Compatible USB devices:

- USB flash memory (USB2.0 or USB1.1) USB flash players (USB2.0 or USB1.1)
- memory cards (requires an additional card reader to work with this unit) Control play



<b>A</b> / <b>V</b>	Select a folder,
<b>4/ (44/ &gt;&gt;</b> )	Fast backward/forward.
<b>I</b> ◀/▶ <b>I</b>	Skip to the previous or next title/chapter/track/file.
►II	Pause or resume play.
	Stop play.
+/-	Increase or decrease volume.
<b>账</b> (mute)	Mute or restore sound.
SOUND	Enrich sound effect with DSC: balanced, clear, powerful, warm, and bright.
DISPLAY	View playback information.
Play options	
rpp.C1	town Die Deels Control on Inff

[PBC]	turn PlayBack Control on/off.
[Aspect Ratio]	select a picture display format to fit the TV screen.
[Angle]	switch between camera angles.
[Microphone]	turn on or off the microphone sound output.
[Karaoke Setup]	set different volumes of karaoke disc.
[Vocal]	select various Karaoke audio modes, or turn off original vocal.
[Zoom]	during video play, zoom in/out to pan through the image.
[Repeat]	choose a repeat play option or turn off the repeat function.
[GOTO]	during video play, specify a position to start play by entering the desired time or number:
[Slow Backward] & [Slow Forward]	during video play, select a slow backward/forward speed.

# Important

# Safety

## Important Safety Instructions

- Follow all instructions. Heed all warnings.
- Do not use this device near water
- · Clean only with dry cloth. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other devices (including amplifiers) that produce heat.Protect the power cord from being walked on or pinched, particularly at plugs, convenience
- receptacles, and the point where they exit from the device.
- Only use attachments/accessories specified by the manufacturer.
  Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with
- the device. When a cart is used, use caution when moving the cart/device combination to avoid injury from tip-over.



- Unplug this device during lightning storms or when unused for long periods of time.
  Refer all servicing to qualified service personnel. Servicing is required when the device has been
- damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Battery usage CAUTION To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:

  • Install all batteries correctly, + and - as marked on the unit.
- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Batteries (packed or installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Remove batteries when the unit is not used for a long time.
- The device shall not be exposed to dripping or splashing.
  Do not place any sources of danger on the device (e.g. liquid filled objects, lighted candles).
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable. Risk of overheating! Never install this apparatus in a confined space. Always leave a space of at least
- four inches around this apparatus for ventilation. Ensure curtains or other objects never cover the ventilation slots on this apparatus.



Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

### Warning

- Never remove the casing of this device.
- Never lubricate any part of this device.
- Never place this device on other electrical equipment · Keep this device away from direct sunlight, naked flames or heat
- Never look into the laser beam inside this device. · Ensure that you always have easy access to the power cord, plug, or adaptor to disconnect this device from

### 2 Notice

Any changes or modifications made to this device that are not expressly approved by WOOX Innovations may void the user's authority to operate the equipment.

## Disposal of your old product and batteries

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and

Your product contains batteries, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health. Please visit www.recycle.philips.com for additional information on a recycling center in your area.

Environmental information All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

### Be responsible Respect copyrights

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes. Philips and the Philips' Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used by WOOX Innovations Limited under license from Koninklijke Philips N.V."

### Bluetooth

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by WOOX Innovations is under license

## DOLBY.

Manufactured under license from Dolby Laboratories "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.



## 'DVD Video' is a trademark of DVD Format/Logo Licensing Corporation.

DIVX

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video, Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivXVOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its

subsidiaries and are used under license. This apparatus includes this label:







The type plate is located on the back of the device.

#### 3 Product information



• Product information is subject to change without prior notice.

# **Specifications**

Amplifier		
Maximum Output Power	20 W	
Frequency Response	60 Hz - 16 kHZ; ±3 dB	
Signal to Noise Ratio	≥70 dB	
Total Harmonic Distortion	<1%	
Aux Input	2000 mV	

Adx Input	2000 1117	
Speakers		
Speaker Impedance	6 ohm	
Speaker Driver	3.0" full range speaker	
6 01.0	. 04 18/ 44/	

Sensitivity	>01 db/11/ vv
Bluetooth	
Bluetooth version	V2.1 + EDR
Frequency band	2.4GHz ~ 2.48GHz ISM Band
Range	10m (free space)

Tuner (FM)	Tuner (FM)		
Tuning Range	87.5-108 MHz		
Tuning grid	50 KHz		
Sensitivity - Mono, 26dB S/N Ratio - Stereo, 46dB S/N Ratio	<22 dBf <45 dBf		
Search Selectivity	<30 dBf		
Total Harmonic Distortion	<3%		
Signal to Noise Ratio	>45 dB		

Search Selectivity	<30 dBf	
Total Harmonic Distortion	<3%	
Signal to Noise Ratio	>45 dB	
USB		
USB Direct Version	2.0 full speed	

Disc		
Laser Type	Semiconductor	
Disc Diameter	12 cm/8 cm	
Video Decoding	MPEG-1 / MPEG-2 / DivX	
Video DAC	12 Bits	
Signal System	PAL / NTSC	
Video Format	4:3 / 16:9	
Video S/N	>57 dB	
Audio DAC	24 Bits / 96 kHz	
Total Harmonic Distortion	<1% (1 kHz)	
Frequency Response	4 Hz - 20 kHz (44.1 kHz) 4 Hz - 22 kHz (48 kHz) 4 Hz - 24 kHz (96 kHz)	
Frequency Response	60 Hz - 16 kHZ; ±3 dB	
S/N Ratio	>70 dBA	

General information		
AC power	100-240 V, 50/60 Hz	
Operation Power Consumption	20 W	
Eco Standby Power Consumption	<0.5 W	
Dimensions - Main Unit (W x H x D) - Speaker Box (W x H x D)	180 × 121 × 239 mm 150 × 238 × 125 mm	
Weight - Main Unit - Speaker Box	1.5 kg 0.98 × 2 kg	

## ZH-CN

- 支持的光盘格式

  - 数字视频光盘 (DVD)
  - Video CD (VCD)

  - 超级 VCD (SVCD)数字视频光盘 + 可重写 (DVD+RW)

  - 压缩光盘 (CD)CDR(W) 上的图片(Kodak, JPEG)文件CD-R(W) 上的 DivX(R) 光盘
- DivX 3.11、4.x 和 5.x
- USB 播放性能信息
- 兼容的 USB 设备: • USB 闪存(USB2.0 或 USB1.1)
- USB 闪存播放机(USB2.0 或 USB1.1)
   存储卡(需要额外的读卡器才能用于本装置)

# 控制播放

<b>▲</b> /▼	选择文件夹
<b>4/ ( 44 / &gt;&gt;</b> )	快退/快进。
<b>        </b>	跳至上一或下一标题/章节/曲目/文件。
►II	暂停或继续播放。
	停止播放。
+/-	增大或减小音量。
*	静音或恢复声音。
SOUND	通过 DSC 丰富音效:均衡、清晰、强劲、暖调和响亮。
DISPLAY	查看播放信息。

#### 播放选项

[PBC]	打开/关闭播放控制。
[Aspect Ratio]	选择适合电视屏幕的画面显示格式。
[Angle]	在不同的摄像机角度之间切换。
[Microphone]	打开或关闭麦克风声音输出。
[Karaoke Setup]	为卡拉 OK 光盘设置不同音量。
[Vocal]	选择各种卡拉 OK 音频模式,或关闭原声。
[Zoom]	播放视频期间,放大/缩小以在图像上进行平移。
[Repeat]	选择重复播放选项或关闭重复功能。
[GOTO]	播放视频期间,通过输入所需的时间或数字,指定开始播 放的位置。

播放视频期间,选择较慢的后退/前进速度。 [Slow Backward] & [Slow Forward]

## 注意事项

### 安全

### 重要安全说明

- 遵循所有说明。 注意所有警告。
- 不要在靠近水的地方使用本设备。

- 不要任罪从小別地方後用で展開。
   只能使用干布进行清洁。
   不要堵塞任何通风口。 按照制造商的说明进行安装。
   不要在任何热源附近安装,如散热器、蓄热器、炉具或其它发热设备(包括功放器)。
   防止电源线被踩踏或挤夹,特别是在插头、电源插座和设备电源线出口位置。
- 仅使用制造商指定的附件/配件。
- 仅使用制造商指定或随设备销售的手推车、支座、三脚架、支架或桌台。 使用手推车 时,请小心移动载有产品的手推车/设备,以避免翻倒造成伤害。



- 在雷电天气期间或长期不用的情况下,请拔下本设备的电源插头。
- 所有维修均应由合格的维修人员来执行。本设备有任何损坏时,如电源线或插头损坏,液体泼溅到或物体跌落到设备上,设备淋雨或受潮,无法正常运行,或者跌落,均 需要进行维修。
- 电池使用注意事项 为防止电池泄漏而造成人身伤害、财产损失或装置损坏,请: 按照装置上标明的+极和-极,正确安装所有电池。请勿混合使用电池(旧电池与新电池或碳电池与碱性电池,等等)。
- 不可将电池(电池组或安装的电池)置于高温环境,如阳光直射处、明火或类似环
- 若打算长期不用本装置,应取出电池。
- 切勿将设备暴露在漏水或溅水环境下。
- 不要将任何危险源放在本设备上(例如装有液体的物体、点燃的蜡烛)。
   将电源插头或产品耦合器用作断开设备时,该断开设备应可以随时使用。
   小心过热!切勿将本产品安装在封闭的空间内。务必在本产品周围留出至少4英寸的空
- 间以便通风。 确保窗帘或其它物体不会遮挡本产品上的通风槽。 • 仅于海拔2000米以下地区使用该产品。



# 注意

• 不按此处说明的操作流程来使用控件或进行调整可能导致危险的激光辐射或其它不安全的操作。

- 警告 • 切勿拆下本设备的外壳。
- 切勿润滑本设备的任何部件 • 切勿将本设备放在其他电器设备上面。
- 应让本设备远离阳光直射、明火或高温。 切勿直视本设备内部的激光束。 • 确保始终可轻易地接触到电源线、电源插头或适配器,以便于将本设备从电源上断开。

# 注意

如果用户未经 WOOX Innovations 的明确许可而擅自对此设备进行更改或修改,则可能导

# 致其无权操作此设备。

旧产品和电池的处理 本产品采用可回收利用的高性能材料和组件制造而成。 切勿将本产品与其它生活垃圾一起处理。请自行了解当地关于分类收集电子、电气产品及 电池的规定。 正确弃置这些产品有助于避免对环境和人体健康造成潜在的负面影响。 本产品所含的电池不能与一般的生活垃圾一同弃置。

成潜在的负面影响。 关于您所在地区回收中心的更多信息,请访问 www.recycle.philips.com。 已省去所有不必要的包装。 我们努力使包装易于分为三种材料:纸板(盒)、泡沫塑料(缓冲物)和聚乙烯(袋、保护性泡沫片)。

请自行了解当地关于分类收集电池的规定。正确弃置电池有助于避免对环境和人类健康造

您的系统包含可回收利用的材料(如果由专业公司拆卸)。 请遵守当地有关包装材料、废



5溴二苯酚 (PBDE)

(+9 0

编cadr

Чg, ury)

部件名称 Name of the Parts

电池和旧设备的处理的规定。

进行受版权保护材料(包括计算机程序、文件、广播和录音)的未授权复制可能会侵犯版 权并构成犯罪。 不得将此设备用于这些目的。

0

0

0

0

0

0

0

0

0

0

0

0

0

0

0

0

₩)

s) (遥控器, 连接线)

ssories note cont

#### 飞利浦及飞利浦盾牌标志是 Koninklijke Philips N.V. 的注册商标 经 Koninklijke Philips N.V. 许可, 由 WOOX Innovations Limited 使用

## **Bluetooth**

蓝牙® 字样和徽标均为 Bluetooth SIG, Inc. 所有,WOOX Innovations 对这些字样和徽标

### 的任何使用均属合法。 DOLBY.

在杜比实验室许可下制造。 Dolby 和双 D 标志为杜比实验室的注册商标。



"DVD Video"是 DVD Format/Logo Licensing Corporation 的商标。

DIVX 关于 DIVX 视频: DivX® 是由 Rovi Corporation 的子公司 DivX, LLC 创建的一种数字视频格式。 这是通过 DivX Certified® 官方认证的可播放 DivX 视频的设备。 有关更多信息以 及将文件转换为 DivX 视频的软件工具,请访问 divx.com。

关于 DIVX 随选视频: 这款 DivX Certified® 设备必须注册,才能播放付费的 DivX 视频点播(VOD)影片。 要获得注册码,请在设备设置菜单中找到 DivX VOD 部分。 有关如何完 成注册的更多信息,请转到 vod.divx.com。 DivX®、DivX Certified® 及相关徽标是 Rovi Corporation 或其子公司的商标,并在授权 本装置包括此标签:



铭牌(铭牌上的信息包括工作电压,消耗功率)位于主机背部,使用前请先了解铭牌上的相关信

## 3 产品信息



• 产品信息如有更改,恕不另行通知。

# 规格

功放器	
最大输出功率	20 瓦
频率响应	60 赫兹 - 16 千赫: ±3 dB
信噪比	≥70 dB
总谐波失真	<1%
Aux 输入	2000 毫伏

扬声器	
扬声器阻抗	6 欧姆
	3.0 英寸全频扬声器
灵敏度	>84 dB/m/W

蓝牙	
蓝牙版本	V2.1 + EDR
频段	2.4GHz ~ 2.48GHz ISM 频段
范围	10 米(开阔空间)
	TO THE CONTROL OF

#### 调谐器 (FM) 调谐范围

调谐范围	87.5-108 兆赫	
调谐栅	50 千赫	
灵敏度 - 单声道,26dB 信噪比 - 立体声,46dB 信噪比	<22 dBf <45 dBf	
搜索选择	<30 dBf	
总谐波失真	<3%	
信噪比	>45 dB	

2.0 全速

≤500 毫安

## USB USB 直放版本

USB 5 伏电源

\\ \psi		
光盘		
激光类型	半导体	
光盘直径	12 厘米/8 厘米	
视频解码	MPEG-1 / MPEG-2 / DivX	
视频 DAC	12 位	
 信号系统	PAL / NTSC	_
视频格式	4:3 / 16:9	
Video S/N	> 57 dB	
音频 DAC	24 位/96 千赫	
总谐波失真	<1% (1 kHz)	
频率响应	4 赫兹 - 20 千赫(44.1 千赫) 4 赫兹 - 22 千赫(48 千赫) 4 赫兹 - 24 千赫(96 千赫)	
频率响应	60 赫兹 - 16 千赫: ±3 dB	

信噪比	>70 dBA	
一般信息		
交流电源	100-240 伏,50/60 赫兹	
操作功耗	20 瓦	
环保节能待机功耗	< 0.5 瓦	
尺寸 - 主装置(宽 x 高 x 厚) - 音箱(宽 x 高 x 厚)	180 x 121 x 239 毫米 150 x 238 x 125 毫米	
重量 - 主装置 - 音箱	1.5 千克 0.98×2 千克	

期限 使用 

(生外泄或突变 [ 损害的期限。 s to the period(10 years) r含有的有毒有害物质或元素在正常使用的 r晶不会对环境造成严重污染或对其人身、 to

s or ha the during will not (10) the logo ained ents]

