

1. Use the earphones with care, they can produce an excessive sound pressure, a headphone can cause hearing loss.
2. Replacing the battery by an incorrect type creates a risk of explosion. Dispose of used batteries according to the instructions.
3. The adapter shall be installed near the equipment and shall be easily accessible.
4. The device complies with RF specifications when it is used at a distance of 0 mm from your limbs.
5. To avoid the risk of hearing loss, do not listen at high volumes for long periods of time.

MMD Hong Kong Holding Limited
 1006-07, C-Bons International Center, 108 Wai Yip Street,
 Kwun Tong, Kowloon, Hong Kong
 TP Vision Europe BV
 Prins Bernhardplein 200, 1097 JB Amsterdam The
 Netherlands

3 Integrated answering machine (for XL495)

Playing recorded messages



- ① Press to activate or deactivate the answering machine in standby mode.
- ② To delete the current message, press .
- ③ To adjust the volume, press .
- ④ To play the next message, press .
- ⑤ To play the previous message/replay the current message, press .
- ⑥ To start/stop play, press .

Note

- For more information, see section. Answering machine user manual.

Record an announcement

- 1 Press [Menu].
- 2 Select [Answering machine] > [Announcement].
- 3 Follow on-screen instructions.

DECT technology

Frequency band: 1881.792-1897.344MHz
 Max. power: 22.5 dBm
 Modulation Mode: GFSK
 Antenna Type: dipole
 Antenna Gain: 0dBi
 Operating temperature range of tested equipment: -10°C to 40°C

i



Refer to the user guide included with your new phone or download the latest version from the website www.philips.com/support.



This symbol on a product indicates that the device is compliant with the European Directive 2012/19/EU.
 2019 © MMD Hong Kong Holding Limited. All rights reserved.
 This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited. MMD Hong Kong Holding Limited is the warrantor in relation to this product.
 Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.



QSG_XL490-495
 FR_FR_V3.0

Register your product and get support on our website
www.philips.com/support

XL490
 XL495



Quick Start Guide

PHILIPS

Important Safety Instructions

Warning

- The electrical network is rated as dangerous. The only way to turn off the charger is to unplug the power at the outlet. You must therefore ensure that the electrical outlet is always easily accessible.
- Refer to the safety information before using the product.
- Hereby, MMD Hong Kong Holding Limited declares that this product is in compliance with the essential requirements and other relevant provisions of Directive RED 2014/53/EU. The Declaration of conformity is available on the website: www.philips.fr.

- Use only the power supply type listed in the user instructions.
- Use only the battery type listed in the user instructions.
- Do not allow the product to come into contact with liquids.
- Risk of explosion if an incorrect battery type is inserted in the device.
- Dispose of used batteries according to the instructions.
- When the handset rings or when the handsfree is activated, keep the handset away from your ear to avoid hearing damage.

Head, trunk and limb SAR value

- Philips handsets: < 0.1W/kg

Information on the safety of users and non-users:



Compliance with specific usage restrictions on certain places (hospitals, planes, petrol stations, schools...).

Precautions to be taken by electronic implants wearers (cardiac stimulators, insulin pumps, neurostimulators...), concerning in particular the distance between the radio equipment and the implant (15 centimeters in the case of the strongest sources of exposure such as mobile phones).

Information on the behaviors to follow to reduce exposure to radiation emitted by equipment:


Use your device in good reception conditions to reduce the amount of radiation received. Make reasoned use of radio equipment, such as mobile phones by children and teens, for example by avoiding night-time communications and limiting the frequency and duration of calls. Keep radio equipment away from the womb of pregnant women. Keep radio equipment away from teenagers' lower abdomens.



1 Connection

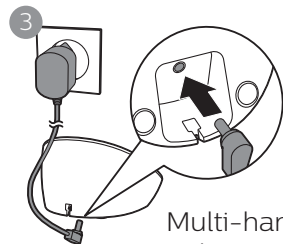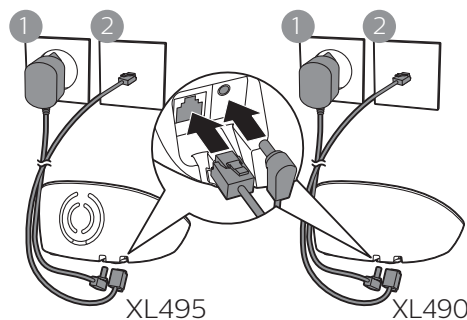


2 Get started


Phone setup

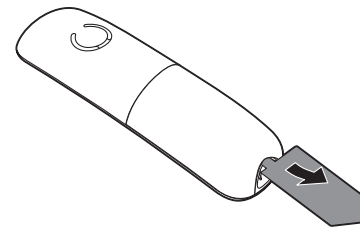

- 1 Set the country and language if prompted.
- 2 Set the date and time.
 - If the time is in 12-hour format, press  /  keys to select [am] or [pm] (country dependent).

Charge your phone

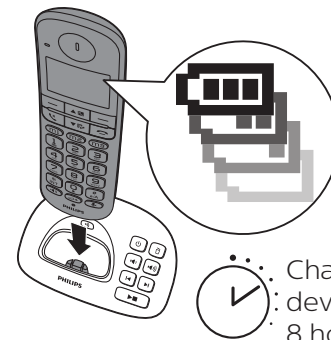

 > 70%






 70% - 40%

 40% - 10%

 Flashing: low battery

Scrolling: charging in progress.



Make a call

- To make a call, press  or  and dial the number.
- To answer a call, press  or  when the phone rings.
- To end a call, press .

Adjust the earpiece volume

Press  or  to adjust the volume during a call.

Direct keys setup

- 1 Enter the number then press and hold m1, m2 or m3 keys.
- 2 Follow on-screen instructions.
- 3 To quickly make a call using a preset number on a direct key, press m1, m2 or m3 in standby mode, then press  or  to dial the number.

Add a contact in the phonebook

- 1 Press [Menu].
- 2 Select [Phonebook] > [Add new].
- 3 Follow on-screen instructions.