



Philips  
CD Soundmachine

- DVD
- 4W

AZ5741

## Enjoy your movies, music and photos

You can now enjoy your favorite movies, music and even photos from portable USB device on the TV with this all-in-one Philips DVD Soundmachine AZ5741. It plays DVDs, MP3/WMA-CD, Picture CDs and radio.

### Everything you need

- Play DVD, (S)VCD, MP3-CD, CD(RW) and Picture CD
- USB Direct for MP3/WMA music playback
- FM tuner for radio enjoyment

### Easy to use

- Handy remote control for extra convenience
- On Screen Display for easy navigation

### Rich and clear sound

- Dynamic Bass Boost for deep and dramatic sound

# PHILIPS

# Specifications

## Video Playback

- Playback Media: DVD-Video, DVD+R/+RW, Picture CD, Video CD/SVCD
- Disc Playback Modes: A-B Repeat, Fast Backward, Fast Forward, OSD, Pause, PBC, Zoom

## Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- Programmable Tracks: 20
- Disc Playback Modes: Fast Forward/Backward, Next/Previous Track Search, Repeat Play, Shuffle Play, 20-Track Programmable
- Loader Type: Top
- USB Direct Modes: Fast Backward/Fast Forward, Play/Pause, Previous/Next, Program Play, Repeat, Shuffle

## Tuner/Reception/Transmission

- Antenna: FM Antenna
- Tuner Bands: FM

## Sound

- Output power (RMS): 4W
- Speaker diameter: 4"
- Sound System: Stereo
- Volume Control: rotary

## Loudspeakers

- Built-in speakers: 2

- Finishing: Metal
- Loudspeaker types: Loudspeakers

## Connectivity

- AV output: Ext 3.5 mm jack x1
- Headphone: 3.5 mm
- USB: USB host

## Convenience

- Display Digits: 7
- Display Type: LCD

## Accessories

- Included accessories: Remote Control, AC Power Cord, Audio/Video cable, User Manual, Warranty Leaflet

## Dimensions

- Product dimensions (WxDxH): 401 x 243 x 172 mm
- Packaging dimensions (WxDxH): 453 x 196 x 275 mm
- Product weight: 3.1 kg
- Weight incl. Packaging: 3.9 kg


## Power

- Mains power: 220 - 240V and 110 - 127V, 50/60Hz AC voltage selectable



# Highlights

## PlayDVD,VCD,MP3-CD,CD(RW)&Pict

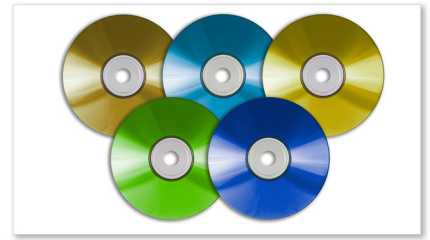

The Philips player is compatible with most DVD and CD discs available in the market. DVD, (S)VCD, MP3-CD, CD(RW) and Picture CD - all of them can play on the player. SVCD stands for "Super VideoCD". The quality of a SVCD is much better than a VCD, especially much more sharpen picture than a VCD because of the higher resolution. CD(RW) is a shorthand term for a CD drive that can accept the common rewritable CD format.

## USB Direct



With the USB Direct mode, simply plug in your USB device to the USB port on your Philips device and your digital music will be played directly from the Philips device.

## Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.



Issue date 2013-05-10

Version: 1.0.1

12 NC: 8670 000 88293  
EAN: 87 12581 63886 3

© 2013 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)

\* Music with Digital Right Management not supported.